
Assembly overview

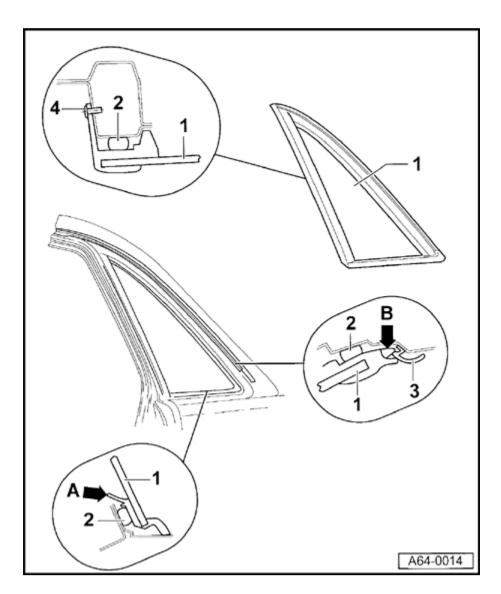

Removing rear seat bottom and seat back => Repair Manual, Body-Interior, Repair Group 72.

- Unclip rear shelf.

Removing C-pillar trim => Repair Manual, Body-Interior, Repair Group 70

Side window

* Removing => page <u>64-22</u>


Bend cover clip up (arrow -A-) and secure on glass so that it will not be damaged during removal by cutting cord.

2 - Adhesive bead

* Dimensions for applying adhesive bead => page <u>64-26</u>

3 - Roof trim molding

* When installing window, PVC molding lug must be inserted under roof trim molding

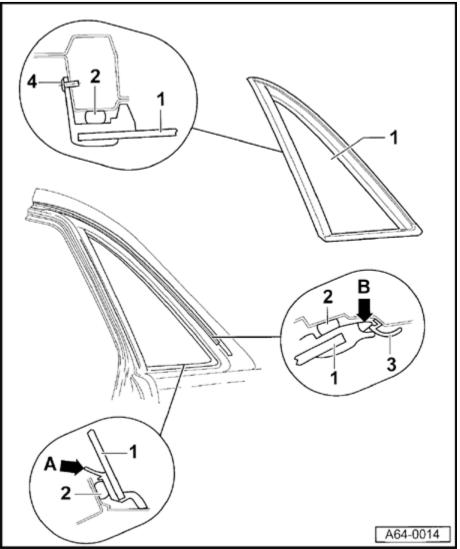

4 - Hollow rivet

- Before removing window, drill off hollow rivets and remove.