


**Instrument Cluster. Oil Level Thermal Sensor. Function Selector Switch II**

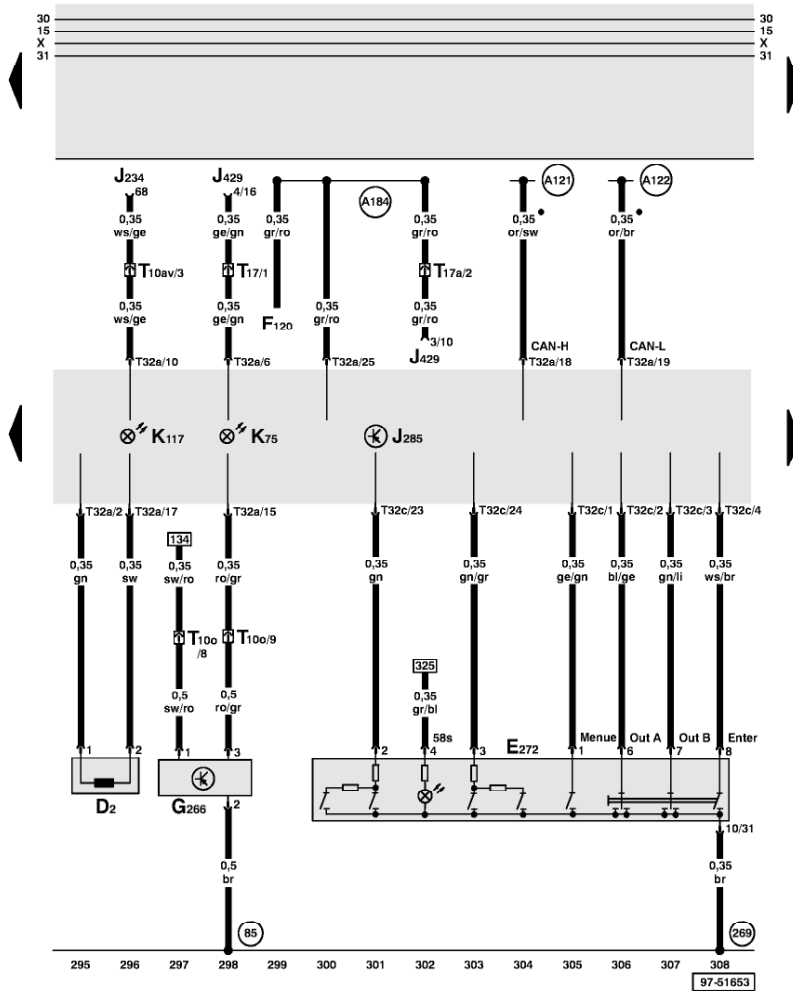

- D2 - Induction coil of antitheft immobilizer
- E272 - Board Computer Function Selector Switch II, in console
- F120 - Hood Alarm Switch
- G266 - Oil Level Thermal Sensor (SRI)
- J234 - Airbag Control Module
- J285 - Control Module with indicator unit in instrument panel insert
- J429 - Control module for central locking
- K75 - Airbag Malfunction Indicator Lamp (MIL)
- K117 - Warning light for anti-theft immobilizer sensor
- T10o - Connector 10 pin, brown, connector station electronic box plenum chamber
- T10av - Connector 10 pin, yellow, connector station A pillar, right
- T17 - Connector 17 pin, orange, connector station A pillar, right
- T17a - Connector 17 pin, brown, connector station A pillar, right
- T32a - Connector 32 pin, green, on instrument cluster
- T32c - Connector 32 pin, grey, on instrument cluster
- (85) - Ground connection -1-, in engine compartment wiring harness
- (269) - Ground connector (sensor ground) -1-, in instrument panel wiring harness
- (A121) - Connection (high bus) in instrument panel wiring harness
- (A122) - Connection (low bus) in instrument panel wiring harness
- (A184) - Front Hood Contact Switch Connection (in instrument panel wiring harness)

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = violet  
 ge = yellow  
 or = orange

• - CAN-Bus (Data-Bus)