



## Right Cylinder Head Cover, Removing and Installing

### Removing


- Remove engine cover -arrows-.

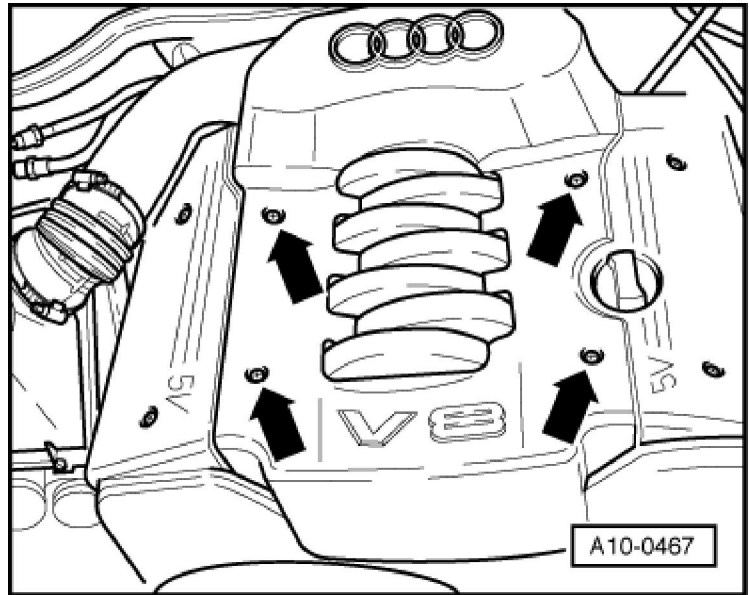


- Remove air intake tube -arrows- between air filter and throttle valve part.

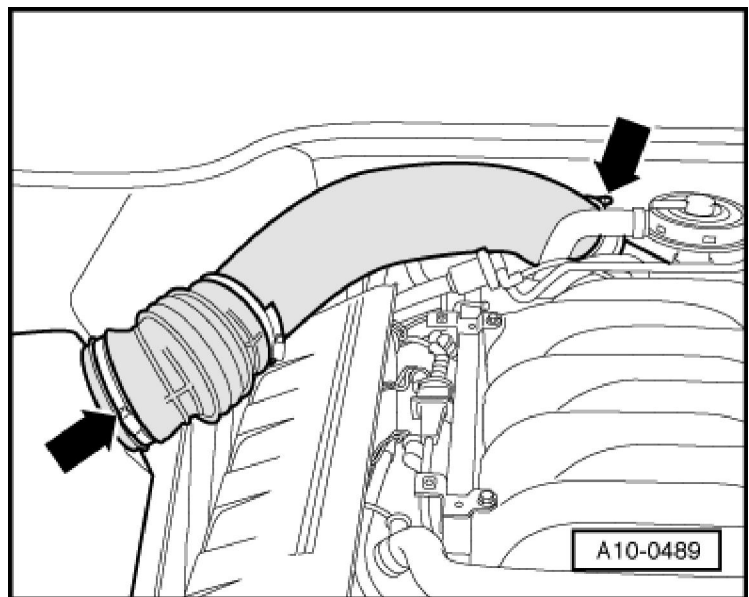

- Disconnect fuel supply and fuel return lines -1-.
- Disconnect hose -2-.

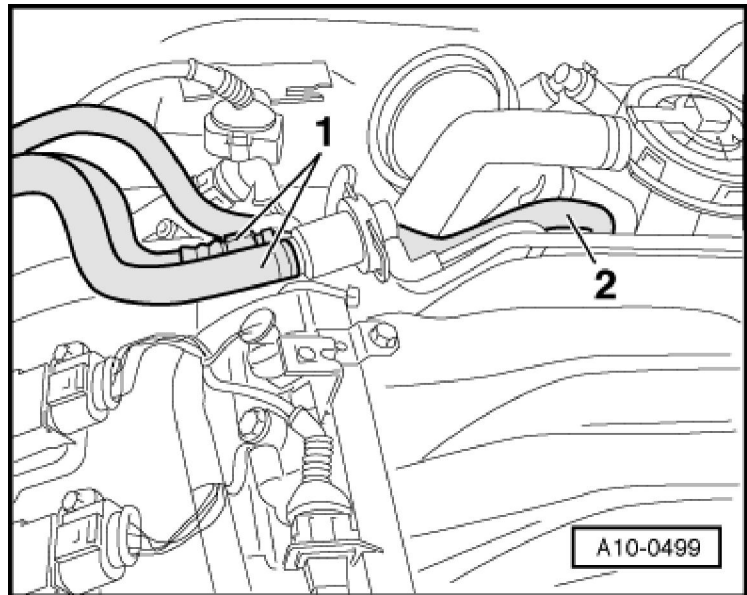

- Disconnect connector -1- from ignition coils.
- Remove bracket -2-.
- Remove ignition coils -3-.
- Remove hose of crankshaft housing ventilation.

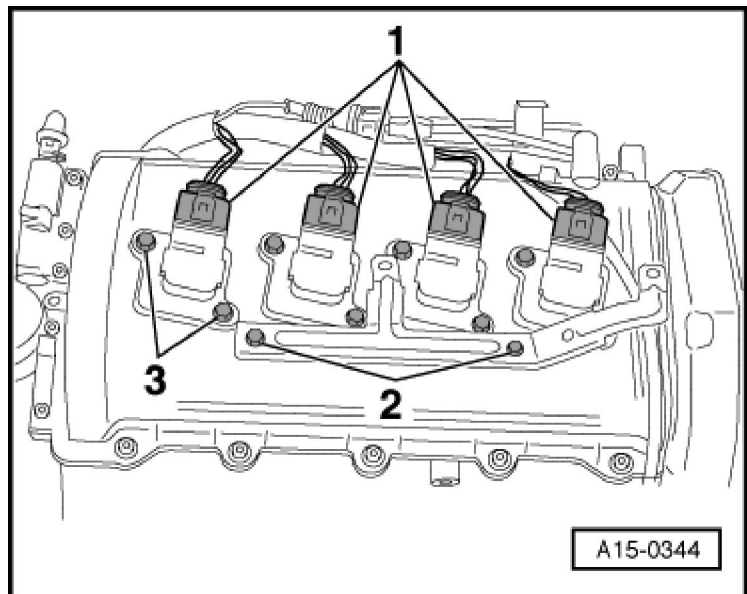

- Remove bolts for cylinder head cover in sequence -12 to 1-.
- Remove cylinder head cover.


### Installing

Installation is in reverse order of removal, noting the following:




#### Note

- t *Replace cylinder head cover gaskets and ignition coils if damaged.*
- t *Replace bolts for cylinder head cover if gasket is damaged.*
- t *Clean sealing surfaces, must be free of oil and grease.*

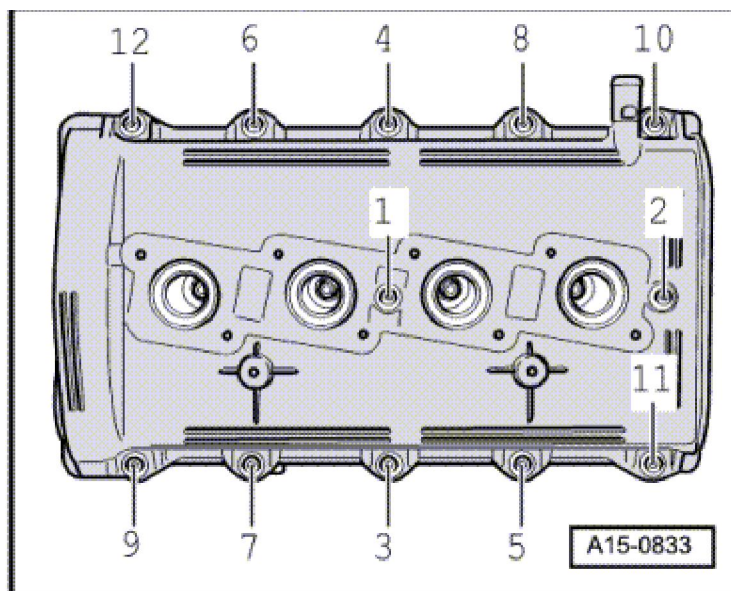


- Apply small amount of sealant at transitions - arrows- of upper sealing surface of cylinder head.

t Sealant [Electronic Parts Catalog "ETKA"](#)

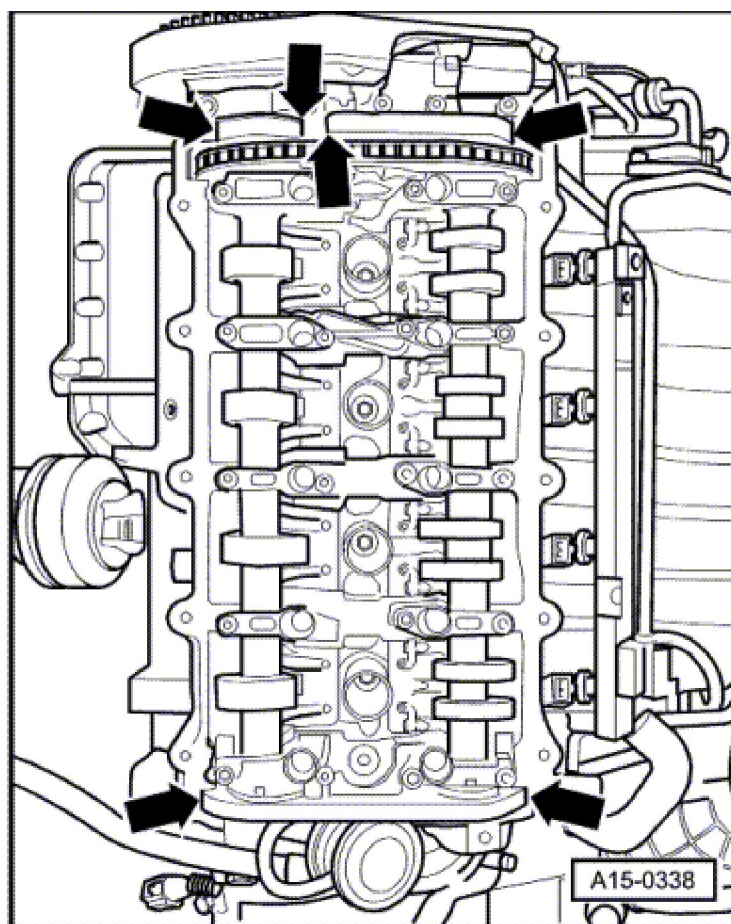

- Tighten cylinder head cover in sequence -12 to 1-.

**Tightening Specifications**

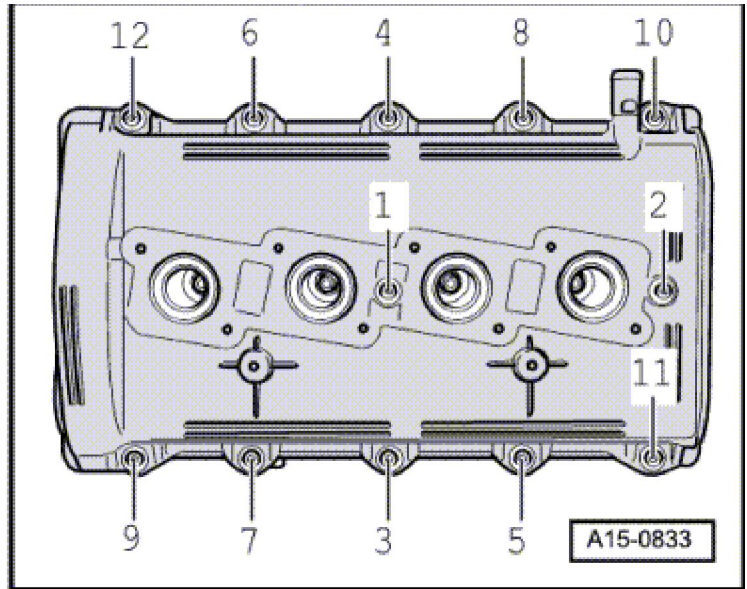

Component	Nm
Cylinder head cover to cylinder head	10