

Rear Vent and Rear Air Duct Connection

- Remove the rear vent -1- with an angled screwdriver (90°, 6 -10 mm in-house development) from the rear center console.
- Disconnect the connector for the cigarette lighter, lighting, vent, and rear seat heater.
- Remove the rear air duct connecting piece -2- from the air duct -3-.

