
ELECTRICAL Electrical Equipment - A8 & S8

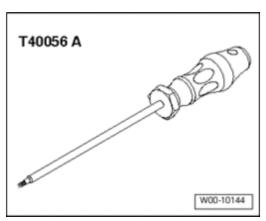


<u>Fig. 382: T8 Screwdriver T40056 A</u> Courtesy of VOLKSWAGEN UNITED STATES, INC.

• T8 screwdriver T40056 A

Removing

CAUTION: Follow safety precautions when working on knee airbag --> 69 - PASSENGER PROTECTION - AIRBAGS, SEAT BELTS.

- Remove drivers storage compartment --> <u>68 INTERIOR EQUIPMENT</u>.
- o Adjust steering wheel downward and to rear as far as possible, use entire adjustment range of steering column adjustment for this.

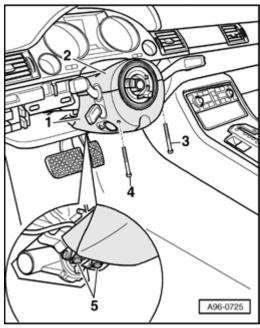

<u>Fig. 383: Upper/Lower Trim, Bolts & TORX Bolt</u> Courtesy of VOLKSWAGEN UNITED STATES, INC.

ELECTRICAL Electrical Equipment - A8 & S8

- o Remove bolts 3 and 4 using T8 screwdriver T40056 A.
- o Remove TORX bolt 5 -.
- o Disconnect upper trim 2 for steering column switch from lower trim 1 and remove both sections.
- o Disconnect electrical harness connector at lower trim.

NOTE:

Steering wheel has been removed in illustration.

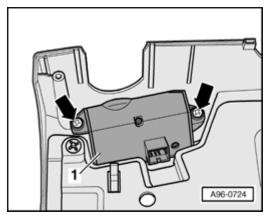


Fig. 384: Steering Column Adjustment Switch E167 & Screws Courtesy of VOLKSWAGEN UNITED STATES, INC.

- o Remove screws arrows -.
- o Remove Steering Column Adjustment Switch E167 **item 1** upward from bottom trim.

Installing

Install in reverse order of removal, observing the following:

• Install drivers storage compartment --> <u>68 - INTERIOR EQUIPMENT</u>.

Tightening Specifications


Component	Nm
Steering Column Adjustment Switch E167 to	2.5
bottom trim	
Trim for steering column switch	1
Lower trim to steering column	2.5

Access/Start Authorization Button or Driver Identification Control Module, Removing and Installing

Access/Start Authorization Button or Driver Identification Control Module, Removing and Installing

Removing


ELECTRICAL Electrical Equipment - A8 & S8

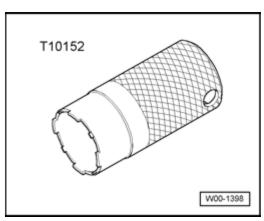

<u>Fig. 349: Wrench T10152</u> Courtesy of VOLKSWAGEN UNITED STATES, INC.

• Wrench T10152

Removing

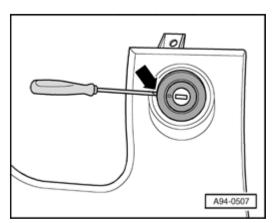

<u>Fig. 350: Using Small Screwdriver To Pry Off Trim Ring At Access/Start Authorization Switch</u> Courtesy of VOLKSWAGEN UNITED STATES, INC.

o Switch off ignition and remove ignition key.

CAUTION: Follow safety precautions when working on knee airbag --> 69 - PASSENGER PROTECTION - AIRBAGS, SEAT BELTS .

- Remove drivers storage compartment --> 68 INTERIOR EQUIPMENT.
- o Use small screwdriver to pry off trim ring at Access/Start Authorization Switch arrow -.

ELECTRICAL Electrical Equipment - A8 & S8

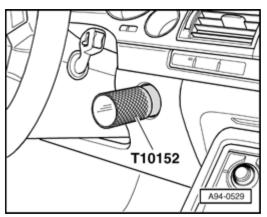


Fig. 351: Removing Nut At Access/Start Authorization Switch E415 Using Socket Tool T10152 Courtesy of VOLKSWAGEN UNITED STATES, INC.

- o Remove nut at Access/Start Authorization Switch E415 using Socket tool T10152.
- o Take switch to rear out of drivers storage compartment.

Installing

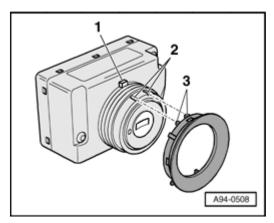


Fig. 352: Lugs & Recesses
Courtesy of VOLKSWAGEN UNITED STATES, INC.

Install in reverse order of removal, observing the following:


- Observe installation position of Access/Start Authorization Switch E415 with respect to drivers storage compartment.
- Lug 1 facing upwards
- o Hand-tighten nut using Socket tool T10152.
- o Observe installation position of trim ring at Access/Start Authorization Switch.
- Lugs 3 must engage in recesses 2 at switch.

ELECTRICAL Electrical Equipment - A8 & S8

o Install drivers storage compartment --> 68 - INTERIOR EQUIPMENT.

Access/Start Authorization Switch, Connector Assignment

Access/Start Authorization Switch, Connector Assignment

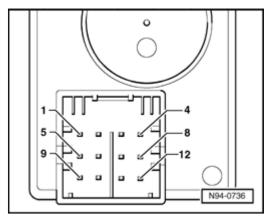

<u>Fig. 353: Access/Start Authorization Switch, Connector Assignment</u> Courtesy of VOLKSWAGEN UNITED STATES, INC.

- 1. Switch matrix S2
- 2. Withdrawal lock magnet AZS
- 3. Terminal 31
- 4. Immobilizer SCLK
- 5. Switching matrix S1
- 6. Switching matrix S6
- 7. Switching matrix S3
- 8. Immobilizer Data 2
- 9. 12 V
- 10. Switching matrix S5
- 11. Switching matrix S4
- 12. Immobilizer Data 1

PARKING AID

Parking Aid

Observe notes on contact corrosion --> **Contact Corrosion**.

- --> Parking Aid, Component Overview
- --> Parking Aid Control Module, Removing and Installing