


Basic equipment

from model year 2005

Fuse holder, left dash panel

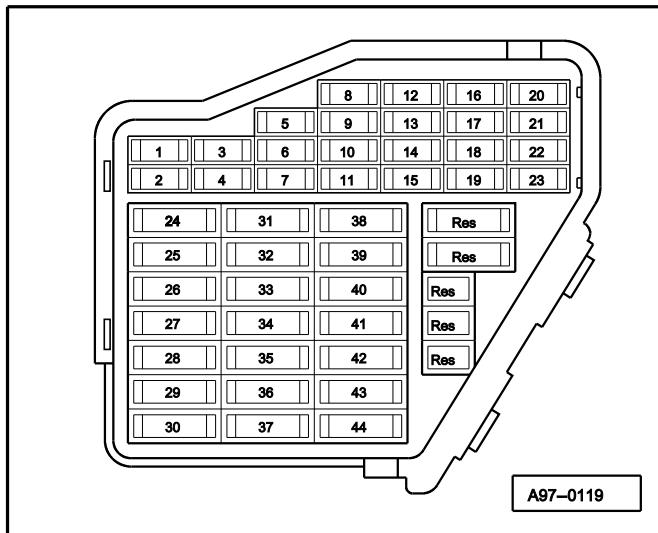

Fuse colours

30 A - green

25 A - white

20 A - yellow

15 A - blue

10 A - red

7,5 A - brown

5 A - beige

1 A - black

SB - Fuses in fuse holder left dash panel

SC - Fuses in fuse holder right dash panel


SD - Fuses in fuse holder left in luggage compartment

SF - Fuses in fuse holder right in luggage compartment




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Fuse holder right dash panel

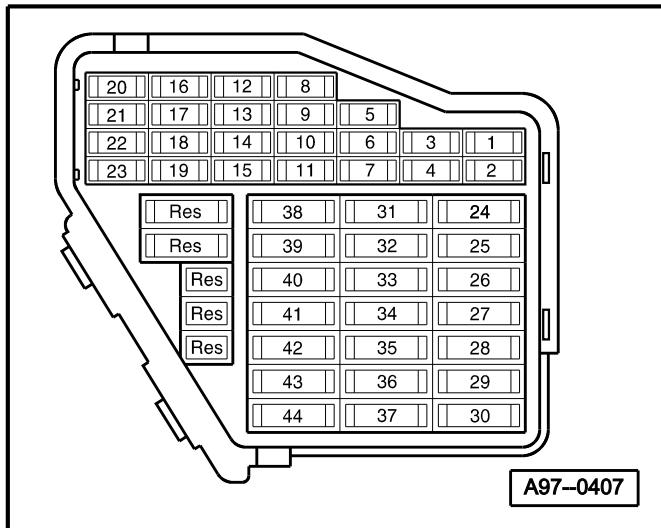


Relay and fuse carrie behind left dash panel

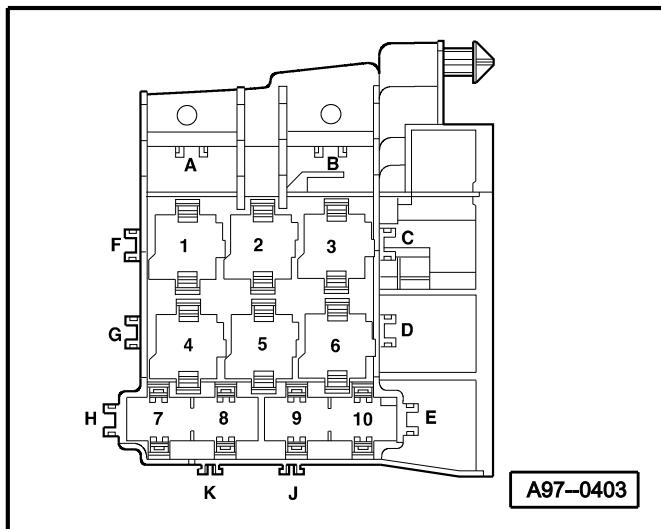

Relay positions

- 2 - Dual tone horn relay (J4)
- 3 - Terminal 15 voltage supply relay (J329)

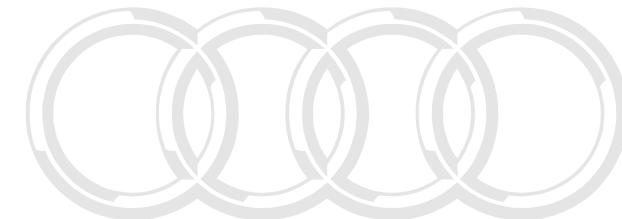


Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


6 - Terminal 75 voltage supply relay 1 (J680)

A - ABS control unit fuse 1 (S123)

B - Levelling system fuse (S110)

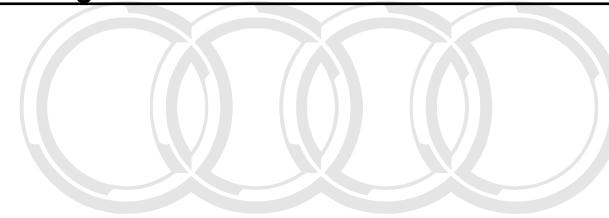
Relay carrier, in front right footwell

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

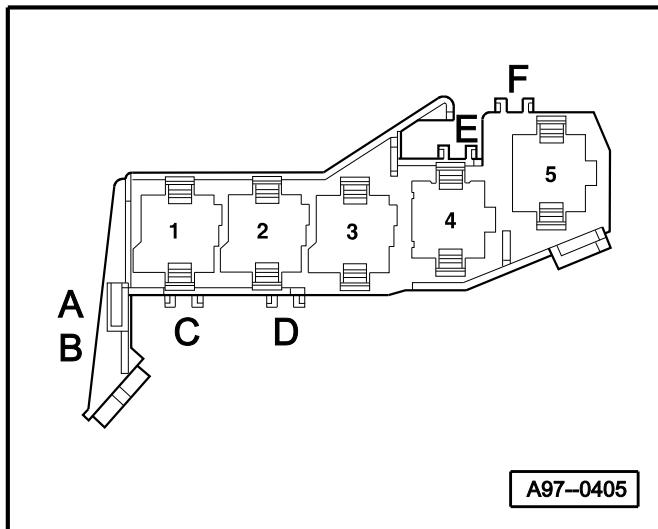**Relay positions**


4 - Fuel pump relay (J17)

5 - Headlight washer system relay (J39)

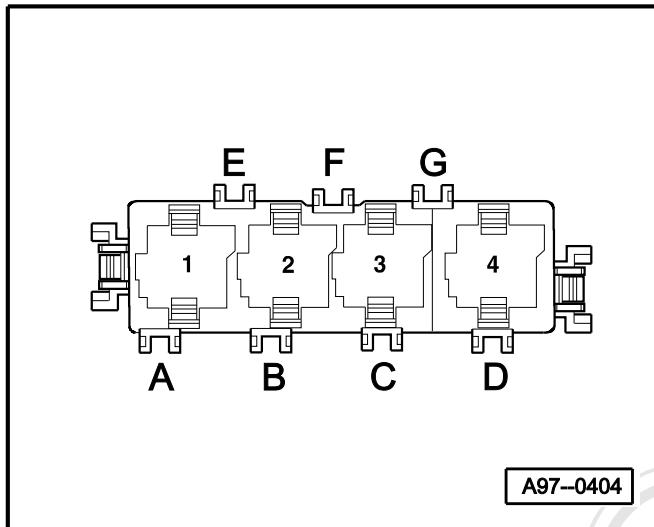Relay carrier electronics box in plenum chamber

Relay positions

- 2 - Terminal 30 voltage supply relay (317), diesel engines
- 2 - Motronic current supply relay (J271), petrol engines

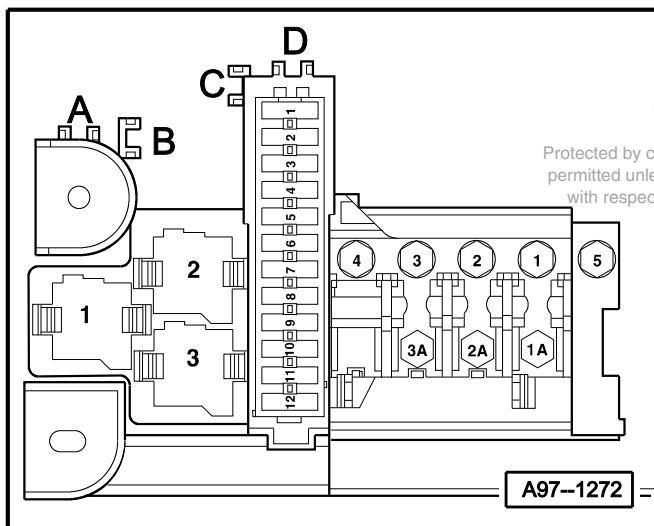Relay and fuse carrier right in luggage compartment



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Relay positions

1 - Heated rear window relay (J9)

3 - Electric fuel pump 2 relay (J49)

A - Heated rear window fuse (S41)

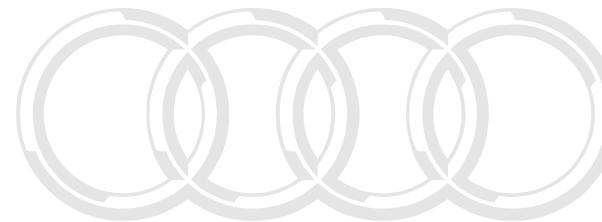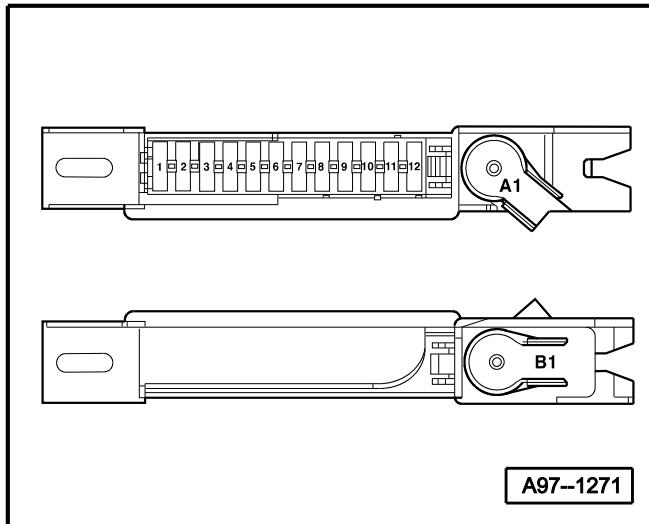
Fuse holder on left in luggage compartment**Audi**

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Fuse locations

A1 - Terminal 30 screw point (battery)

 B1 - Terminal 30 screw point



Earth connections

- 35 Earth point, under front passenger seat
- 43 Earth point, lower part of right A-pillar
- 44 Earth point, lower part of left A-pillar
- 366 Earth connection 1, in main wiring harness
- 368 Earth connection 3, in main wiring harness
- 370 Earth connection 5, in main wiring harness
- 373 Earth connection 8, in main wiring harness
- 375 Earth connection 10, in main wiring harness
- 379 Earth connection 14, in main wiring harness
- 383 Earth connection 18, in main wiring harness
- 606 Earth point, under the centre console near gear stick
- 654 Earth point, right D-pillar



Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

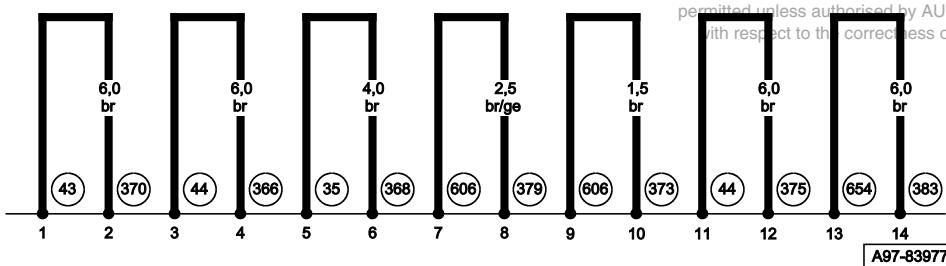

- | | |
|----|----------|
| ro | = red |
| br | = brown |
| gn | = green |
| bl | = blue |
| gr | = grey |
| li | = purple |
| ge | = yellow |
| or | = orange |
| rs | = pink |




Audi


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Earth connections

- 34 Earth point, under driver seat
- 35 Earth point, under front passenger seat
- 43 Earth point, lower part of right A-pillar
- 367 Earth connection 2, in main wiring harness
- 371 Earth connection 6, in main wiring harness
- 378 Earth connection 13, in main wiring harness
- 387 Earth connection 22, in main wiring harness
- 391 Earth connection 26, in main wiring harness
- 392 Earth connection 27, in main wiring harness
- 393 Earth connection 28, in main wiring harness
- 611 Earth connection, on fuel tank filler neck
- 653 Earth point, left D-pillar
- 675 Earth point 2, on right in luggage compartment
- 676 Earth point 2, on left in luggage compartment

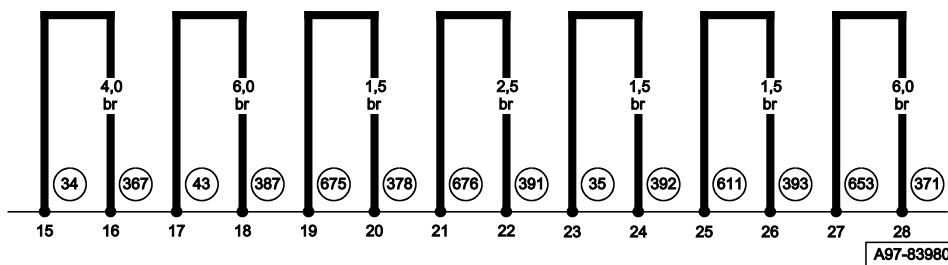


ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

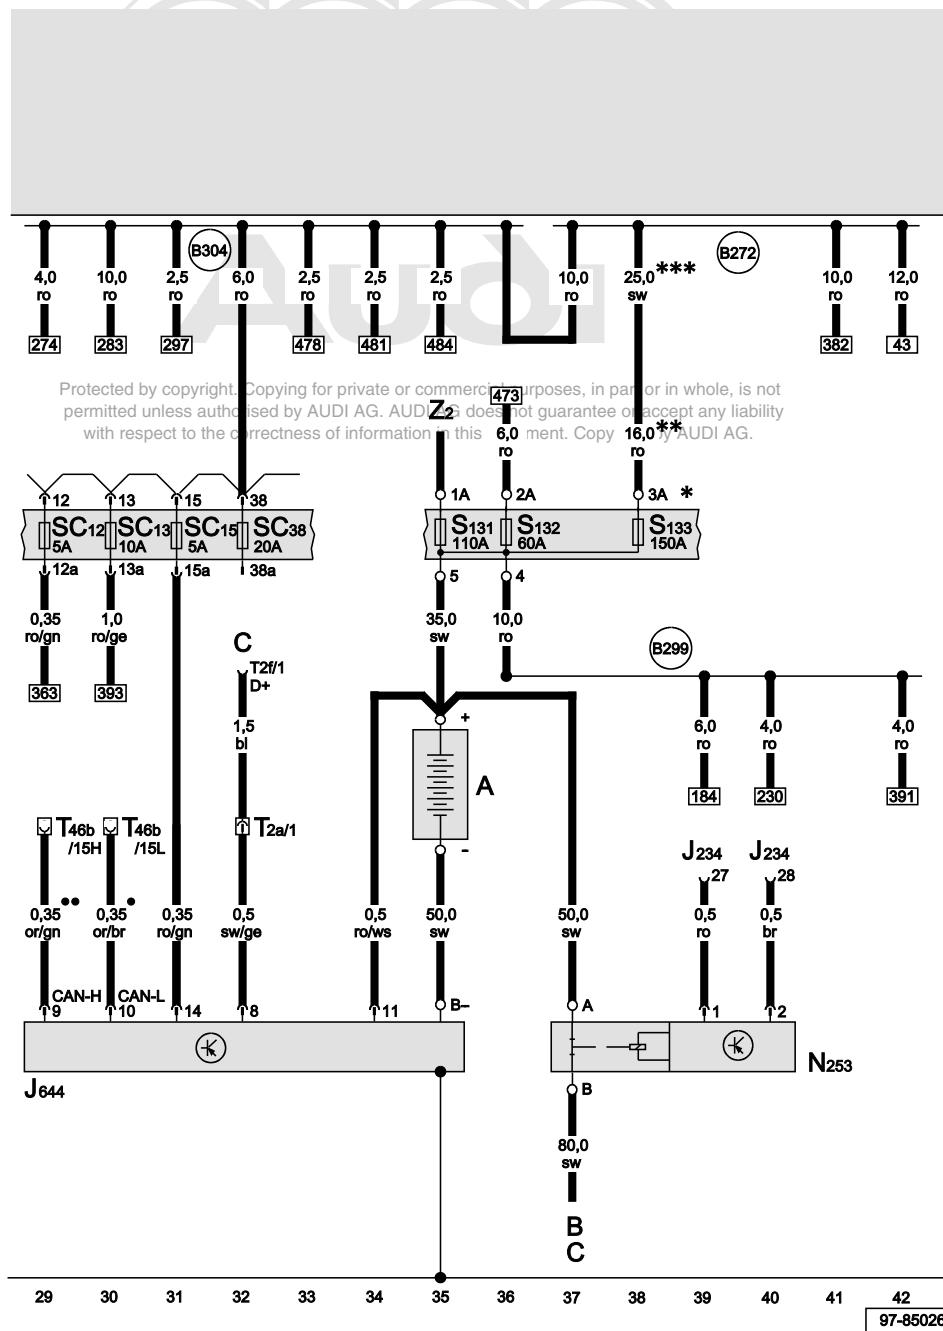

Battery, energy management control unit, battery isolation igniter, fuses

- A Battery
- B Starter
- C Alternator
- J234 Airbag control unit
- J644 Energy management control unit
- N253 Battery isolation igniter
- S131 Fuse 1, 110 A, in luggage compartment, rear right
- S132 Fuse 2, 60 A, in luggage compartment, rear right
- S133 Fuse 3, 150 A, in luggage compartment, rear right
- SC12 Fuse 12 on fuse holder
- SC13 Fuse 13 on fuse holder
- SC15 Fuse 15 on fuse holder
- SC38 Fuse 38 on fuse holder
- T2a 2-pin connector, black, in front right engine compartment
- T2f 2-pin connector, black, on alternator
- T46b 46-pin connector, black, CAN separating connector right
- Z2 Heated windscreens
- (B272) Positive connection (30), in main wiring harness
- (B299) Positive connection 3 (30), in main wiring harness
- (B304) Positive connection 8 (30), in main wiring harness
- CAN bus (data wire)
- * In luggage compartment, rear right
- ** models with petrol engines
- *** models with diesel engines

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

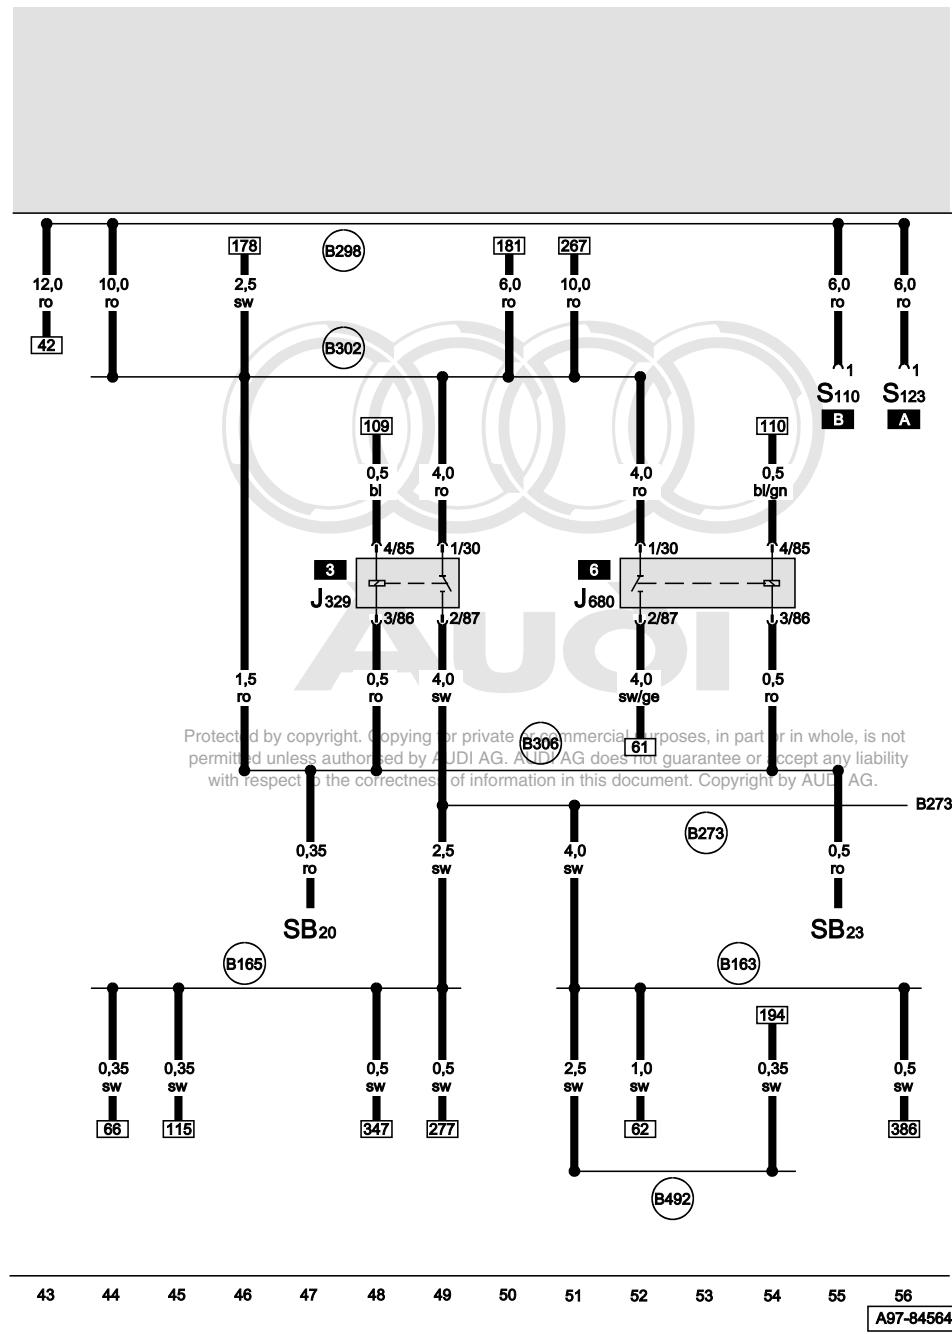**Terminal 15 voltage supply relay, terminal 75 voltage supply relay 1**

J329 Terminal 15 voltage supply relay

J680 Terminal 75 voltage supply relay 1

S110 Levelling system fuse

S123 ABS control unit fuse 1

SB20 Fuse 20 on fuse holder

SB23 Fuse 23 on fuse holder

(B163) Positive connection 1 (15), in interior wiring harness

(B165) Positive connection 2 (15), in interior wiring harness

(B273) Positive connection (15), in main wiring harness


(B298) Positive connection 2 (30), in main wiring harness

(B302) Positive connection 6 (30), in main wiring harness

(B306) Positive connection 10 (30), in main wiring harness

(B492) Positive connection 3 (15), in interior wiring harness

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

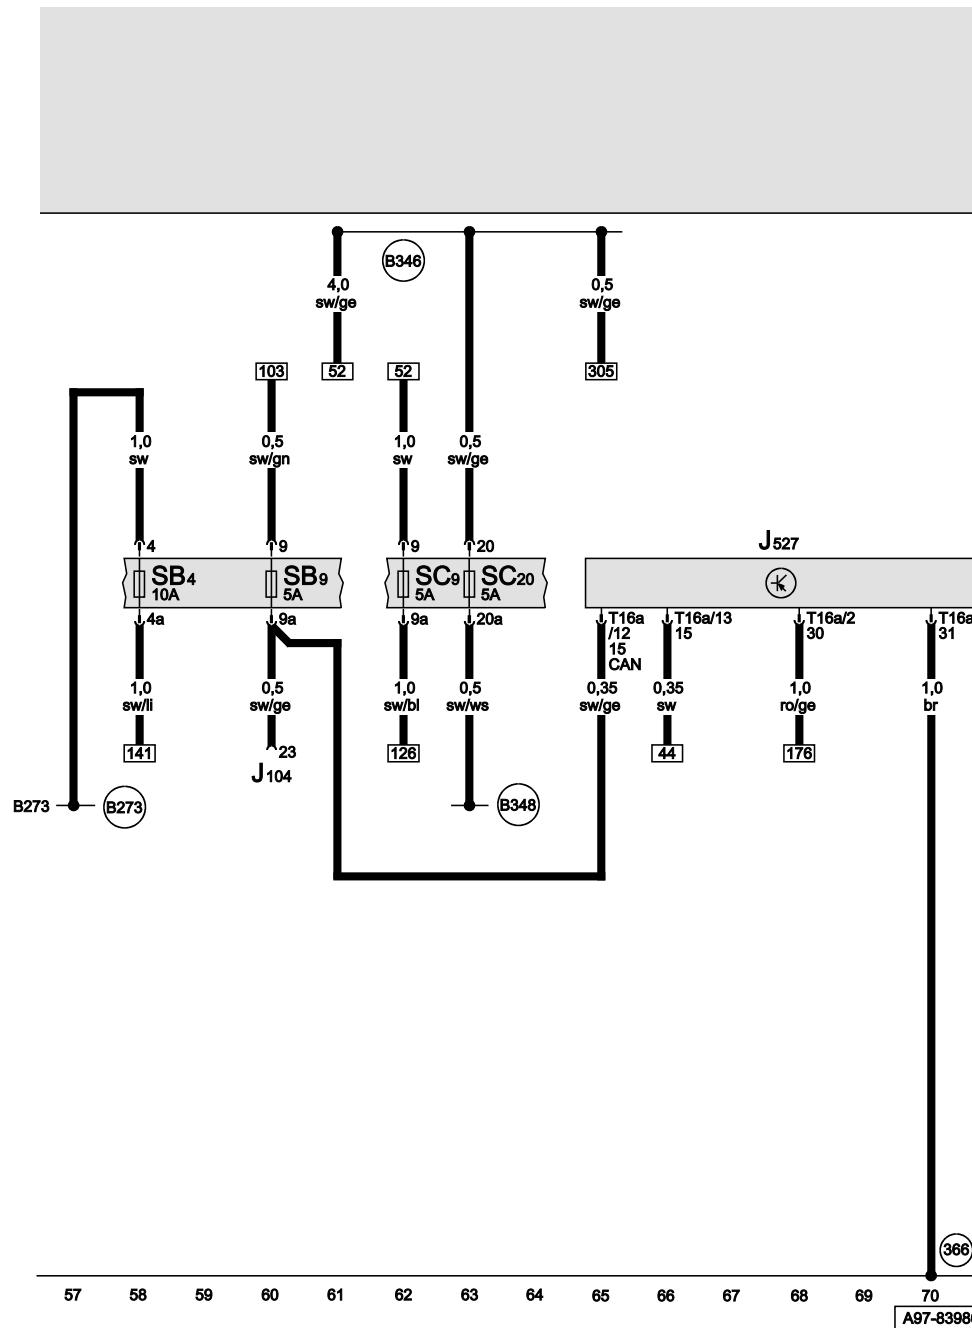

Steering column electronics control unit, steering column voltage supply

- J104 ABS control unit with EDL
- J527 Steering column electronics control unit
- SB4 Fuse 4 on fuse holder
- SB9 Fuse 9 on fuse holder
- SC9 Fuse 9 on fuse holder
- SC20 Fuse 20 on fuse holder
- T16a 16-pin connector, on steering column electronics control unit

366 Earth connection 1, in main wiring harness

B273 Positive connection (15), in main wiring harness


B346 Connection 1 (75), in main wiring harness

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of the individual parts.

B348 Connection 1 (75a), in main wiring harness

Turn signal switch, intermittent wiper switch, horn plate, steering angle sender, steering column electronics control unit

- E2 Turn signal switch
- E5 Headlight flasher switch
- E22 Intermittent wiper switch
- G85 Steering angle sender
- H Horn plate
- J527 Steering column electronics control unit
- T2g 2-pin connector, behind steering column switch trim (horn)

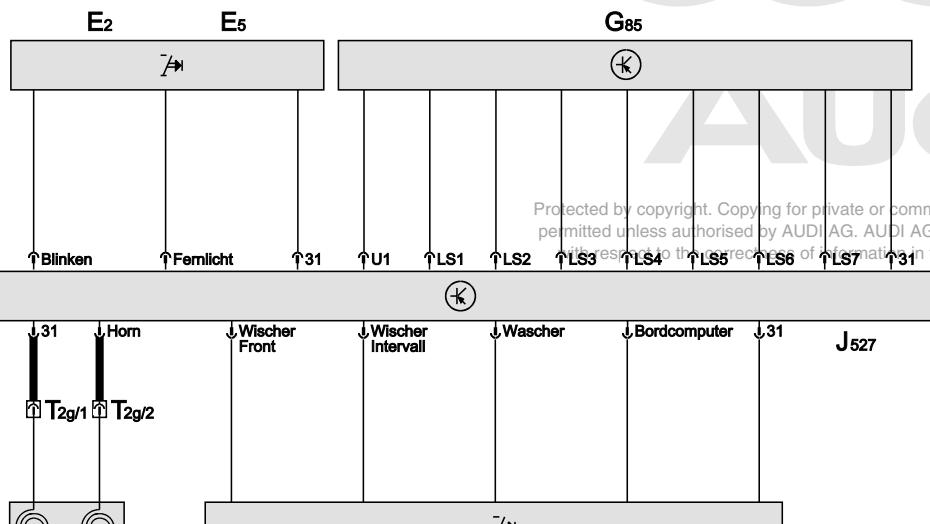

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink


71 72 73 74 75 76 77 78 79 80 81 82 83 84

A97-83989




Steering column electronics control unit, cruise control system switch

- E45 Cruise control system switch
- J527 Steering column electronics control unit
- J623 Engine control unit
- T16a 16-pin connector, on steering column electronics control unit
- T17c 17-pin connector, brown, in electronics box in plenum chamber
- T46a 46-pin connector, black, CAN separating connector left
 - CAN bus (data wire)

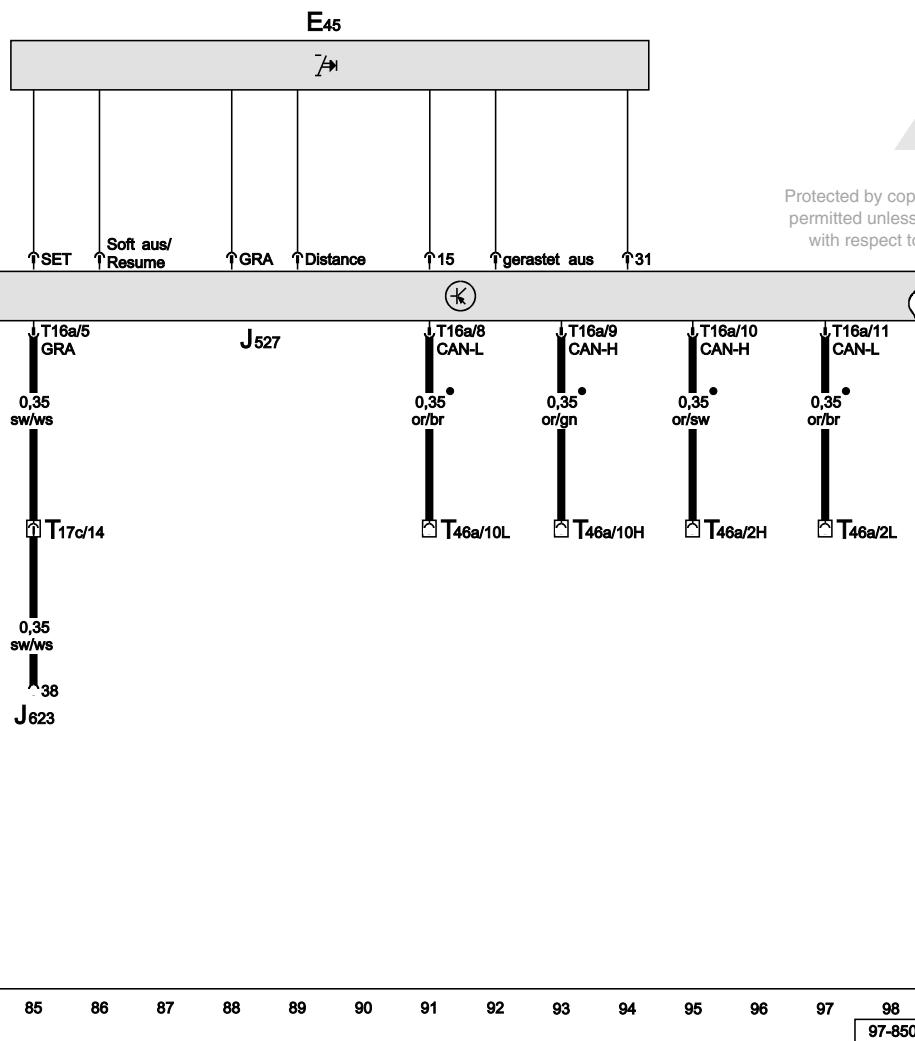

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

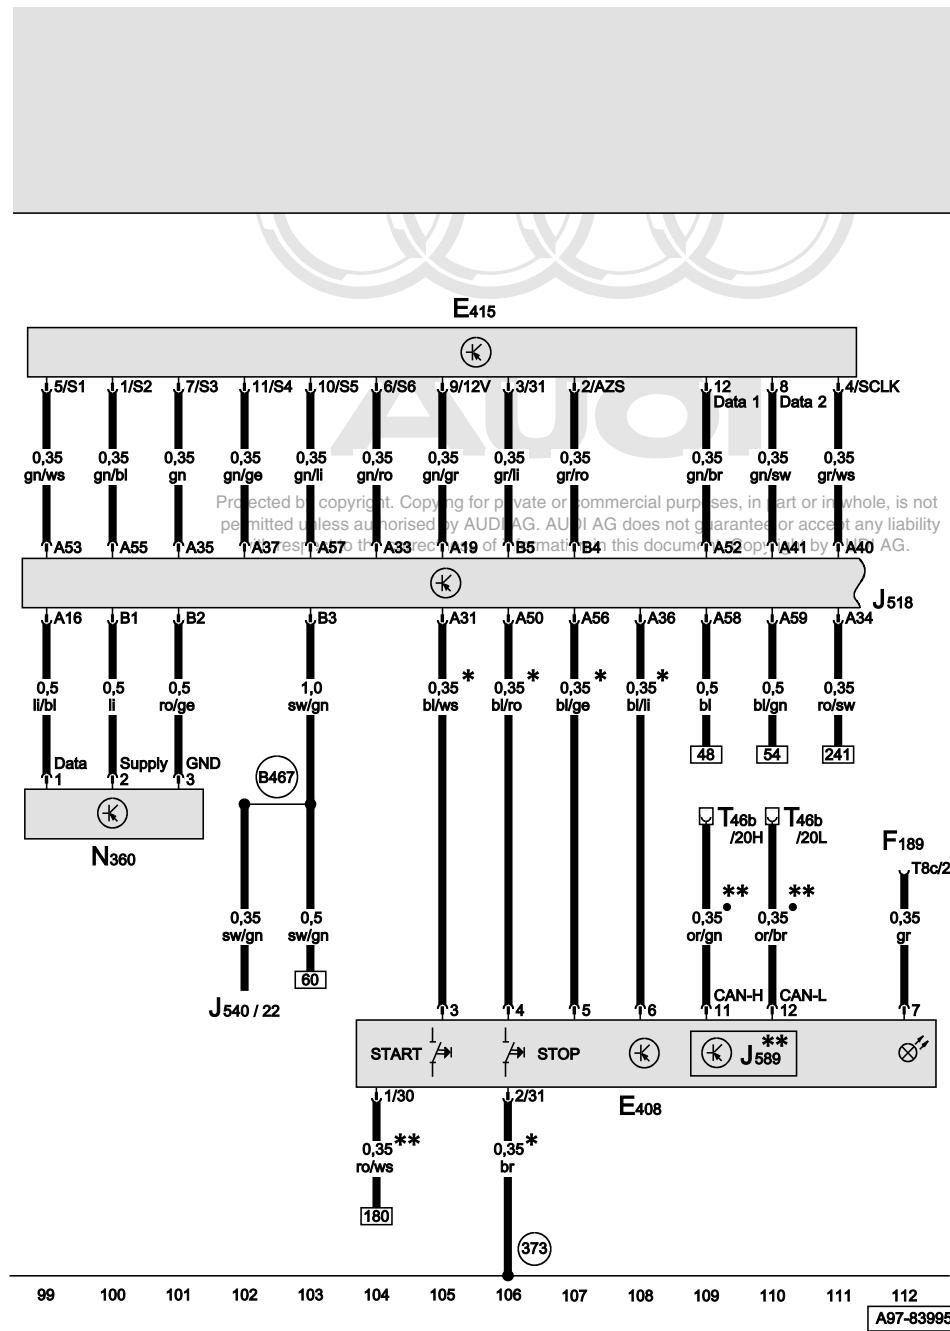

Entry and start authorisation control unit, entry and start authorisation switch, steering column lock control element, entry and start authorisation button

- E408 Entry and start authorisation button
- E415 Entry and start authorisation switch
- F189 Tiptronic switch
- J518 Entry and start authorisation control unit
- J540 Electric park and handbrake control unit
- J589 Driver identification control unit
- N360 Steering column lock control element
- T8c 8-pin connector, black, in centre console on selector lever console
- T46b 46-pin connector, black, CAN separating connector right
- 373 Earth connection 8, in main wiring harness
- B467 Connection 3 in main wiring harness
 - CAN bus (data wire)
 - * models with entry and start authorisation (Kessy)
 - ** models with driver identification (Finger print)

 ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

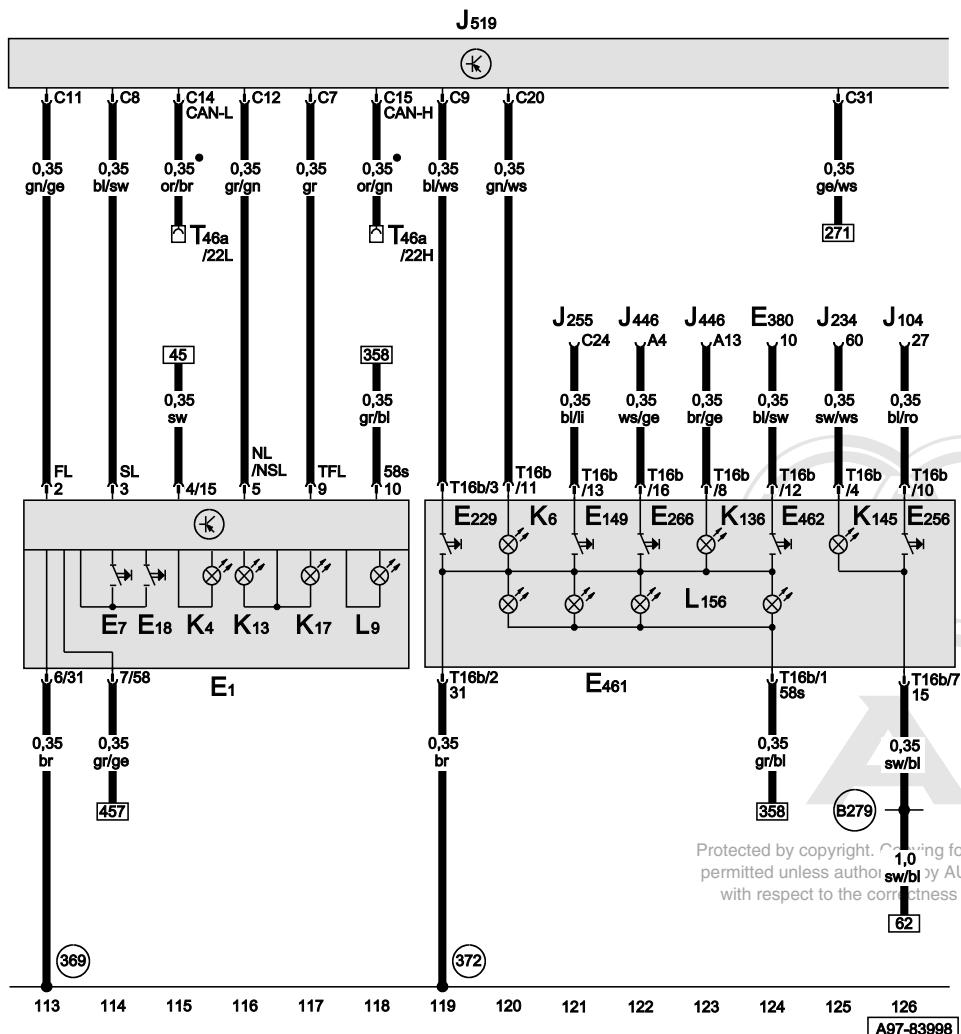

Onboard supply control unit, light switch, hazard warning lights button, operating unit in front of centre console

- E1 Light switch
- E7 Fog light switch
- E18 Rear fog light switch
- E149 Rear roller blind switch
- E229 Hazard warning lights button
- E256 TCS and ESP button
- E266 Parking aid button
- E380 Multimedia system operating unit
- E461 Operating unit in front of centre console
- E462 Open and close button for front display
- J104 ABS control unit
- J234 Airbag control unit
- J255 Climatronic control unit
- J446 Parking aid control unit
- J519 Onboard supply control unit
- K4 Side light warning lamp
- K6 Hazard warning light system warning lamp
- K13 Rear fog light warning lamp
- K17 Fog light warning lamp
- K136 Parking aid warning lamp
- K145 Front passenger side airbag deactivated warning lamp
- L9 Light switch illumination bulb
- L156 Switch illumination bulb
- T16b 16-pin connector, black, on operating unit in front of centre console
- T46a 46-pin connector, black, CAN separating connector left
- 369 Earth connection 4, in main wiring harness
- 372 Earth connection 7, in main wiring harness
- B279 Positive connection 3 (15a), in main wiring harness
- CAN bus (data wire)

ws = white

sw = black

ro = red

br = brown

gn = green

bl = blue

gr = grey

li = purple


 
ge = yellow

or = orange

rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


A97-83998

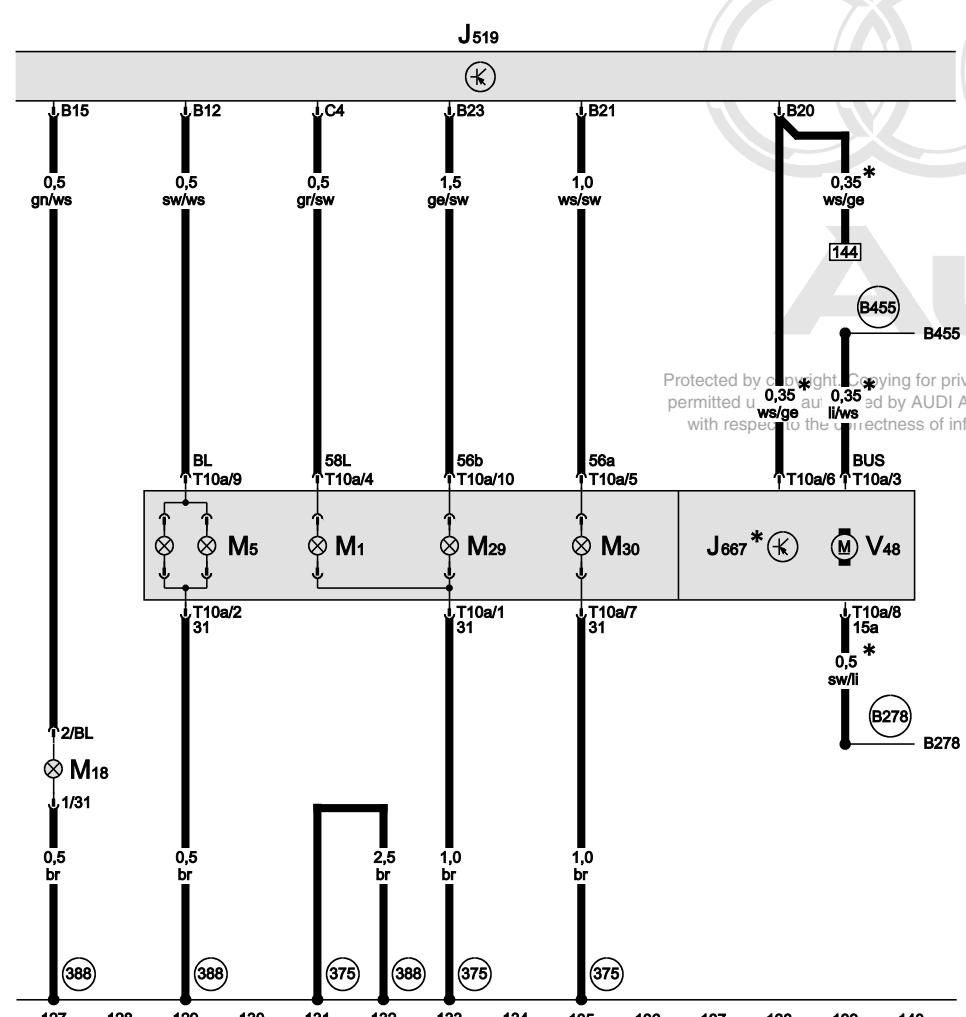

Onboard supply control unit, power output module for left headlight, left side light bulb, front left turn signal bulb, left side mounted turn signal bulb, left headlight dipped beam bulb, left headlight main beam bulb, left headlight range control motor

- J519 Onboard supply control unit
- J667 Power output module for left headlight
- M1 Left side light bulb
- M5 Front left turn signal bulb
- M18 Left side mounted turn signal bulb
- M29 Left dipped beam bulb
- M30 Left main beam bulb
- T10a 10-pin connector, black, on left of headlight
- V48 Left headlight range control motor
- 375 Earth connection 10, in main wiring harness
- 388 Earth connection 23, in main wiring harness
- B278 Positive connection 2 (15a), in main wiring harness
- B455 Connection (HRC), in main wiring harness

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

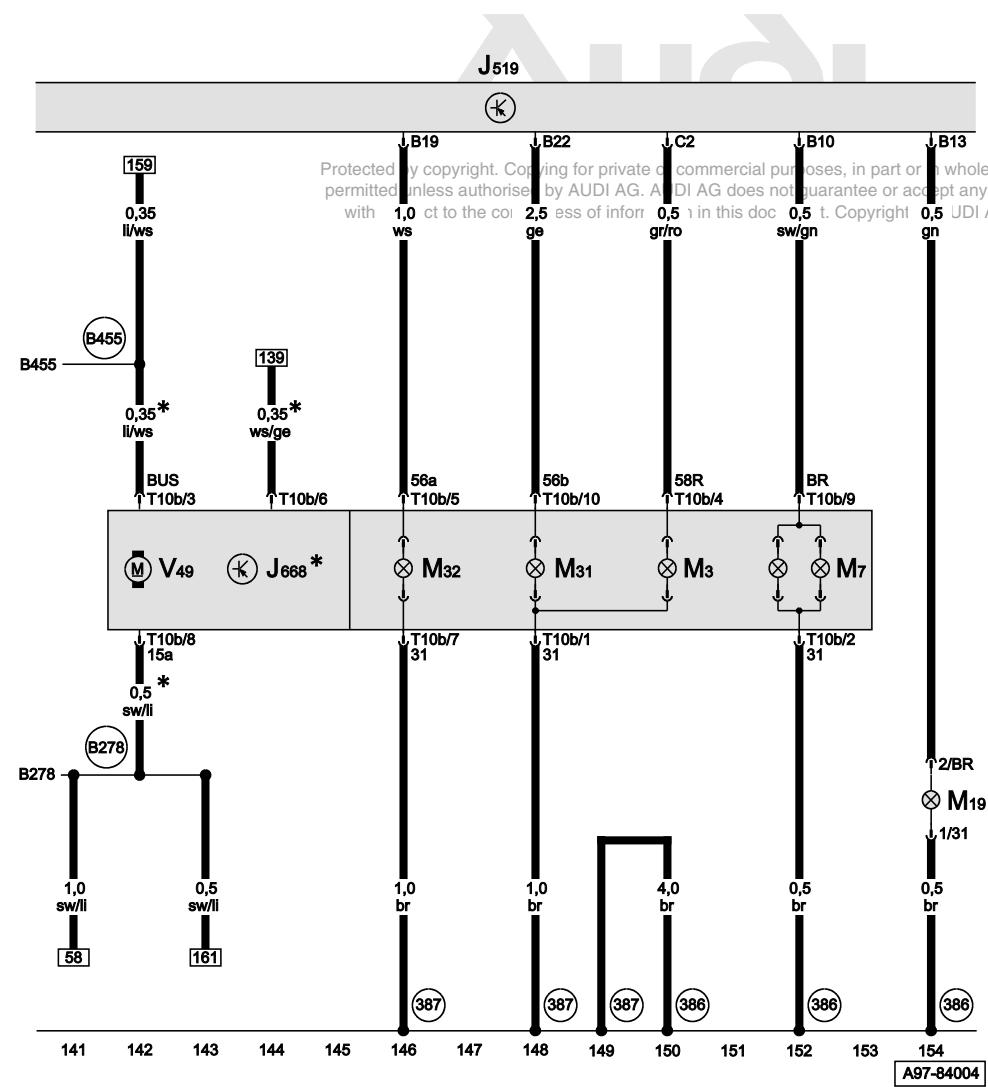

Onboard supply control unit, power output module for right headlight, right side light bulb, front right turn signal bulb, right side mounted turn signal bulb, right headlight dipped beam bulb, right headlight main beam bulb, right headlight range control motor

- J519 Onboard supply control unit
- J668 Power output module for right headlight
- M3 Right side light bulb
- M7 Front right turn signal bulb
- M19 Right side mounted turn signal bulb
- M31 Right dipped beam bulb
- M32 Right main beam bulb
- T10b 10-pin connector, black, on right of headlight
- V49 Right headlight range control motor

386 Earth connection 21, in main wiring harness


 
387 Earth connection 22, in main wiring harness

B278 Positive connection 2 (15a), in main wiring harness

B455 Connection (HRC), in main wiring harness

* only GDL headlight with automatic dynamic headlight range control

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

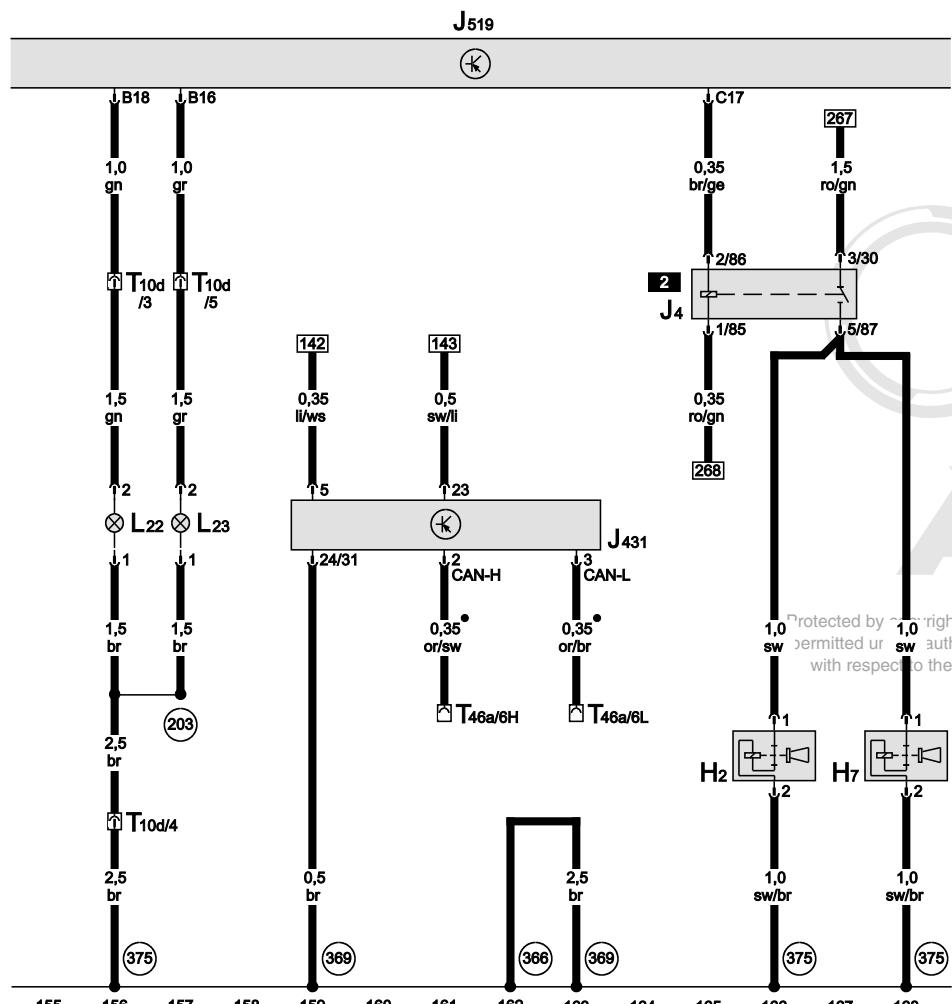

Onboard supply control unit, left and right fog light bulb, headlight range control, control unit, treble tone horn, bass tone horn


- H2 Treble tone horn
- H7 Bass tone horn
- J4 Dual tone horn relay
- J431 Headlight range control, control unit
- J519 Onboard supply control unit
- L22 Left fog light bulb
- L23 Right fog light bulb
- T10d 10-pin connector, black, in front left engine compartment
- T46a 46-pin connector, black, CAN separating connector left
- 203 Earth connection, in front fog light wiring harness
- 366 Earth connection 1, in main wiring harness
- 369 Earth connection 4, in main wiring harness
- 375 Earth connection 10, in main wiring harness
- CAN bus (data wire)

Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted without authorisation by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

A97-84007

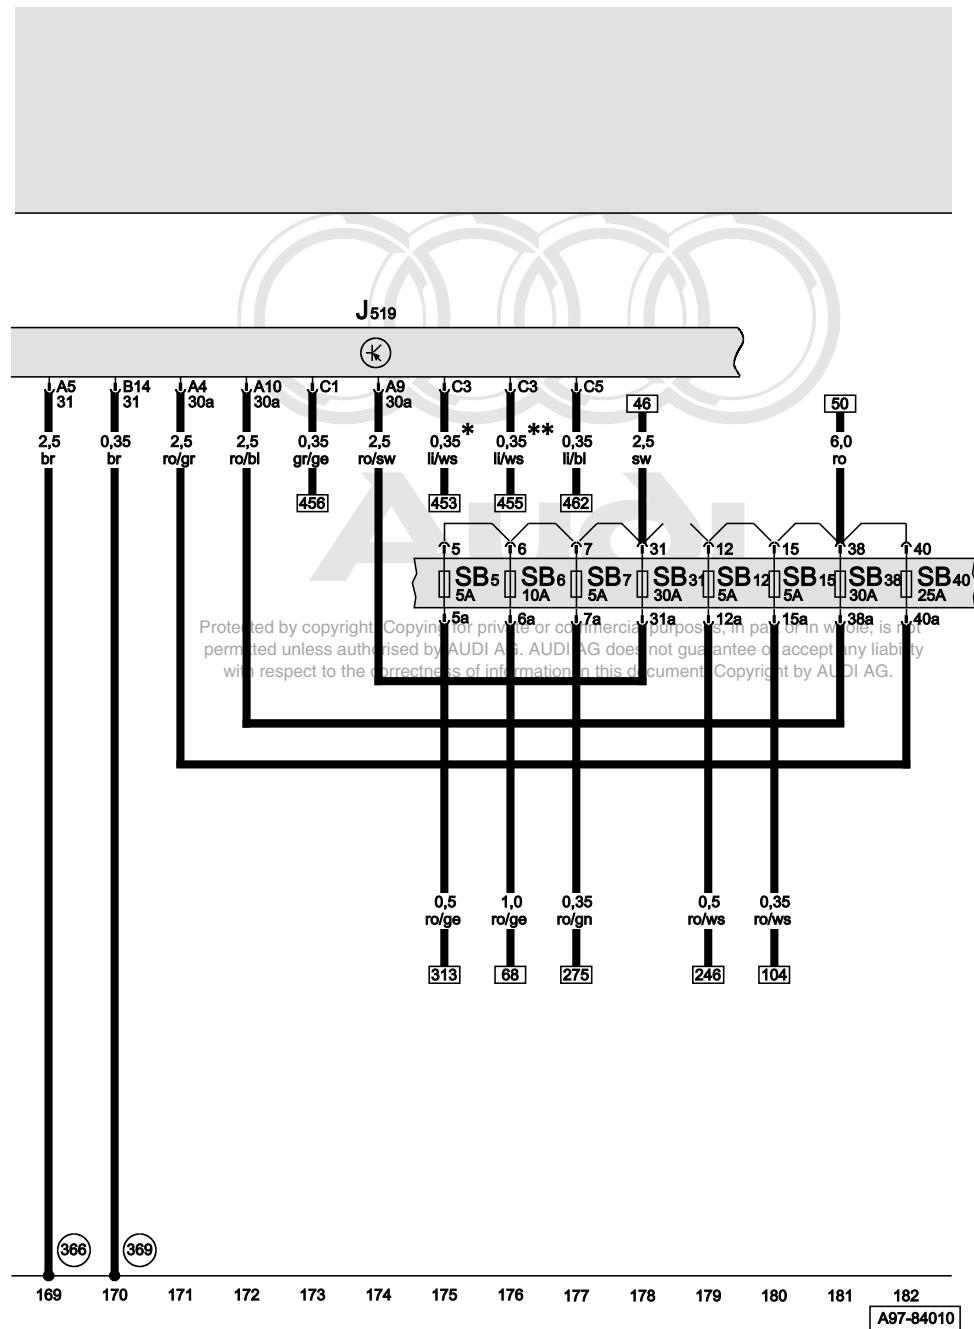
Voltage supply onboard power supply control unit, fuses

J519 Onboard supply control unit

SB5 Fuse 5 on fuse holder

SB6 Fuse 6 on fuse holder

SB7 Fuse 7 on fuse holder

SB12 Fuse 12 on fuse holder

SB15 Fuse 15 on fuse holder

SB31 Fuse 31 on fuse holder

SB38 Fuse 38 on fuse holder

SB40 Fuse 40 on fuse holder

366 Earth connection 1, in main wiring harness

369 Earth connection 4, in main wiring harness

* models without light equipment

** models with light equipment

Convenience system central control unit


J393 Convenience system central control unit
 J529 Anti-theft and tilt system control unit
 J605 Rear lid control unit
 SF5 Fuse 5 on fuse holder
 SF6 Fuse 6 on fuse holder
 SF7 Fuse 7 on fuse holder
 SF8 Fuse 8 on fuse holder
 T46b 46-pin connector, black, CAN separating connector right
 V254 Rear lid electric release motor

51 Earth point, on right in luggage compartment

393 Earth connection 28, in main wiring harness

B316 Positive connection 2 (30a), in main wiring harness

• CAN bus (data wire)

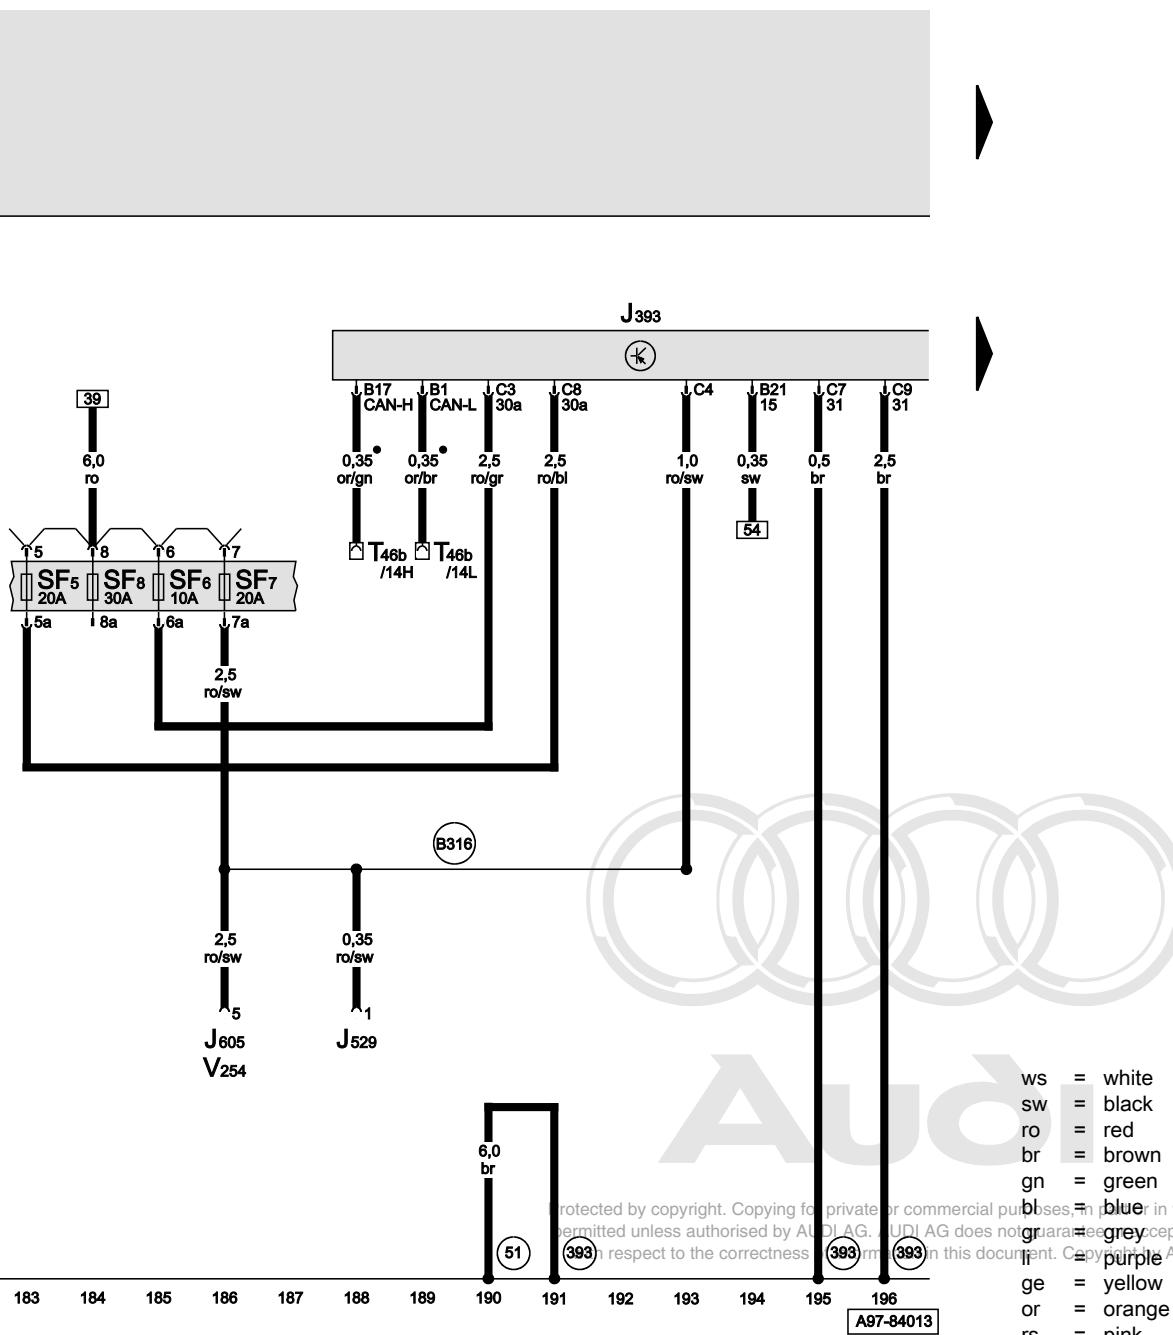

ws = white

sw = black

ro = red

br = brown

gn = green

bl = blue

gr = grey


 
ge = yellow

or = orange

rs = pink

Protected by copyright. Copying for private or commercial purposes, in whole or in part, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee the correctness of this document. Copyright © AUDI AG.

A97-84013

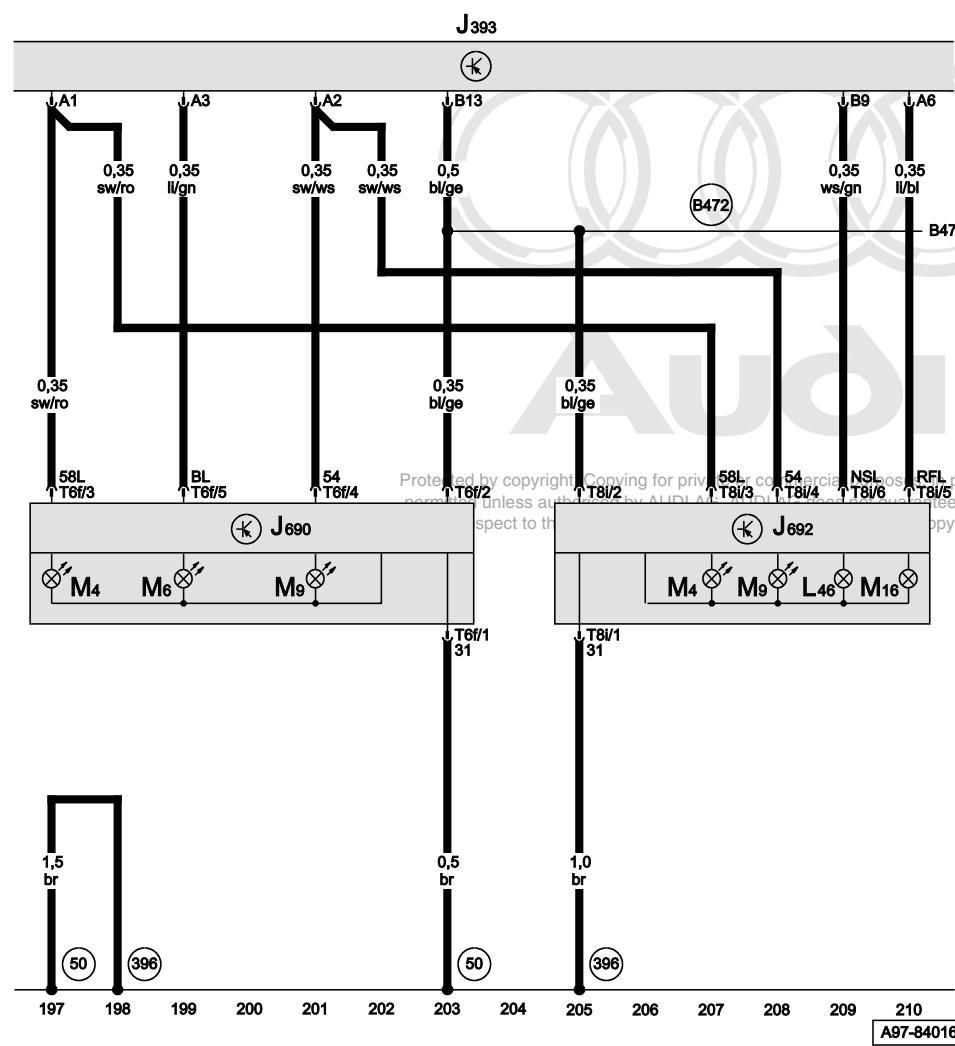

Convenience system central control unit, left tail light bulb, rear left turn signal bulb, left brake light bulb, left reversing light bulb, rear left fog light bulb

- J393 Convenience system central control unit
- J690 Left tail light control unit
- J692 Tail light control unit for lights on left in rear lid
- L46 Rear left fog light bulb
- M4 Left tail light bulb
- M6 Rear left turn signal bulb
- M9 Left brake light bulb
- M16 Left reversing light bulb
- T6f 6-pin connector, black, connector 1, on left rear fog light
- T8i 8-pin connector, black, connector 2, on left rear fog light, rear lid
- 50 Earth point, on left in luggage compartment
- 396 Earth connection 31, in main wiring harness
- B472 Connection 8 in main wiring harness

Convenience system central control unit, right tail light bulb, right brake light bulb, rear right turn signal bulb, right reversing light bulb, rear right fog light bulb


J393 Convenience system central control unit
 J691 Right tail light control unit
 J693 Tail light control unit for lights on right in rear lid
 L47 Rear right fog light bulb
 M2 Right tail light bulb
 M8 Rear right turn signal bulb
 M10 Right brake light bulb
 M17 Right reversing light bulb
 T6h 6-pin connector, black, connector 1, on right rear fog light
 T8k 8-pin connector, black, connector 2, on right rear fog light, rear lid

51 Earth point, on right in luggage compartment

376 376 Earth connection 11 in main wiring harness
 copyright. Copying for private or commercial purposes, in part or in whole, is not
 authorised by AUDI AG. AUDI AG does not guarantee the correctness of the information
 with respect to the correctness of information in this document. Copyright by AUDI AG.



393 Earth connection 28, in main wiring harness

B472 Connection 8 in main wiring harness

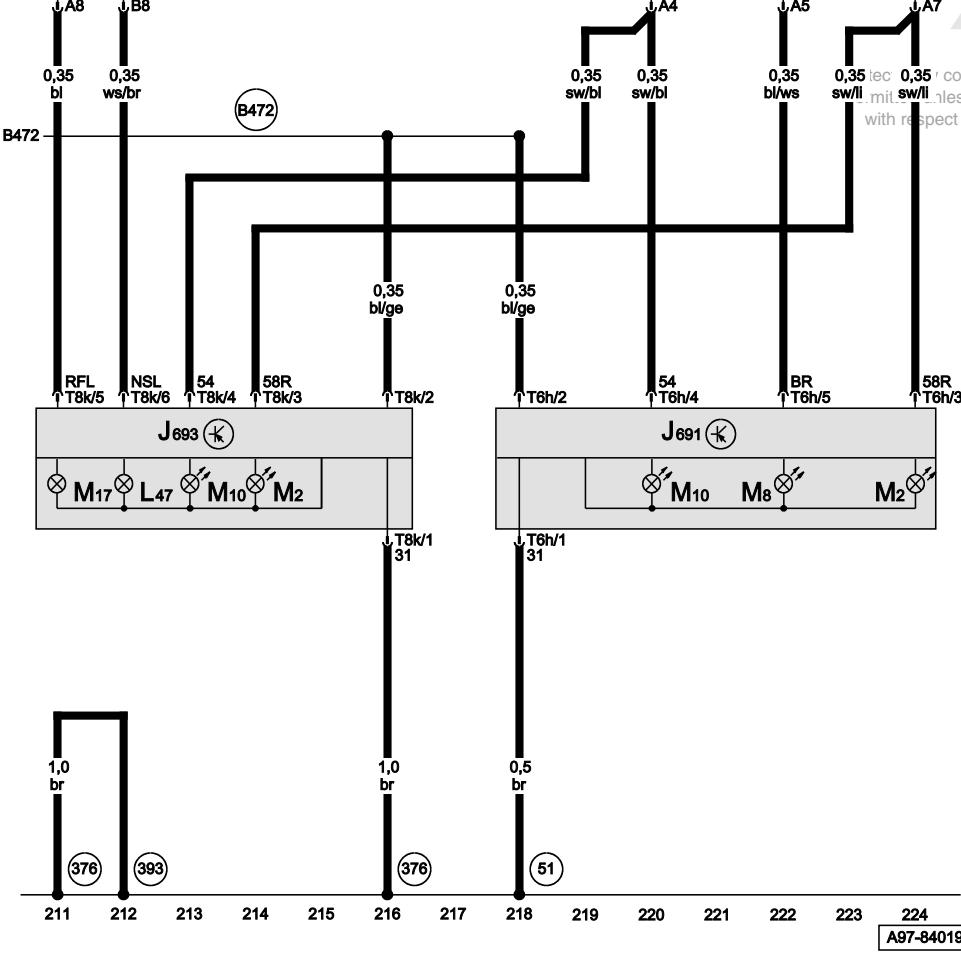

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

 A97-84019

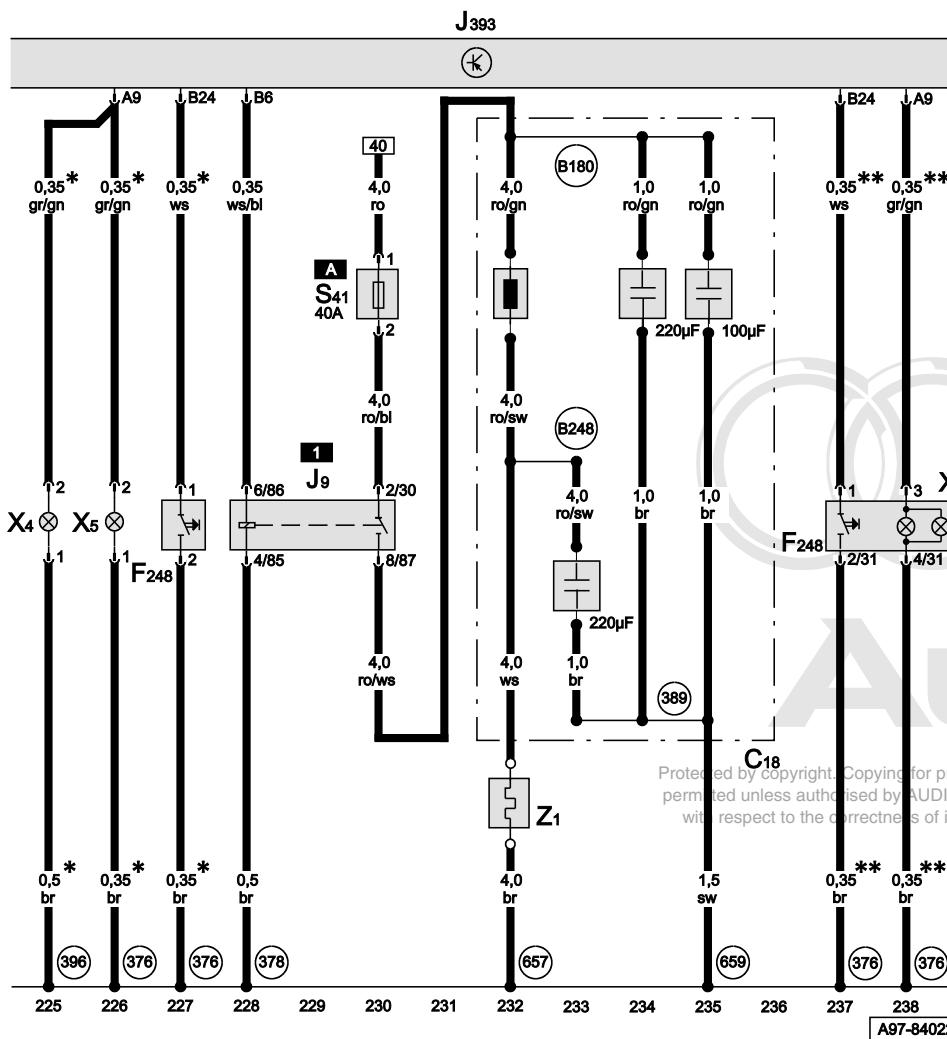

Convenience system central control unit, number plate light, heated rear window, release button for rear lid lock cylinder

- C18 Window aerial suppression filter
- F248 Release button for rear lid lock cylinder
- J9 Heated rear window relay
- J393 Convenience system central control unit
- S41 Heated rear window fuse
- X Number plate light
- X4 Number plate left light
- X5 Number plate right light
- Z1 Heated rear window
- 376 Earth connection 11, in main wiring harness
- 378 Earth connection 13, in main wiring harness
- 389 Earth connection 24, in main wiring harness
- 396 Earth connection 31, in main wiring harness
- 657 Earth point 1, on left near rear window
- 659 Earth point 1, on right near rear window
- B180 Connection (heated rear window), in interior wiring harness
- B248 Connection 2 (heated rear window), in interior wiring harness


 
* not Japan

** only Japan

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

A97-84022

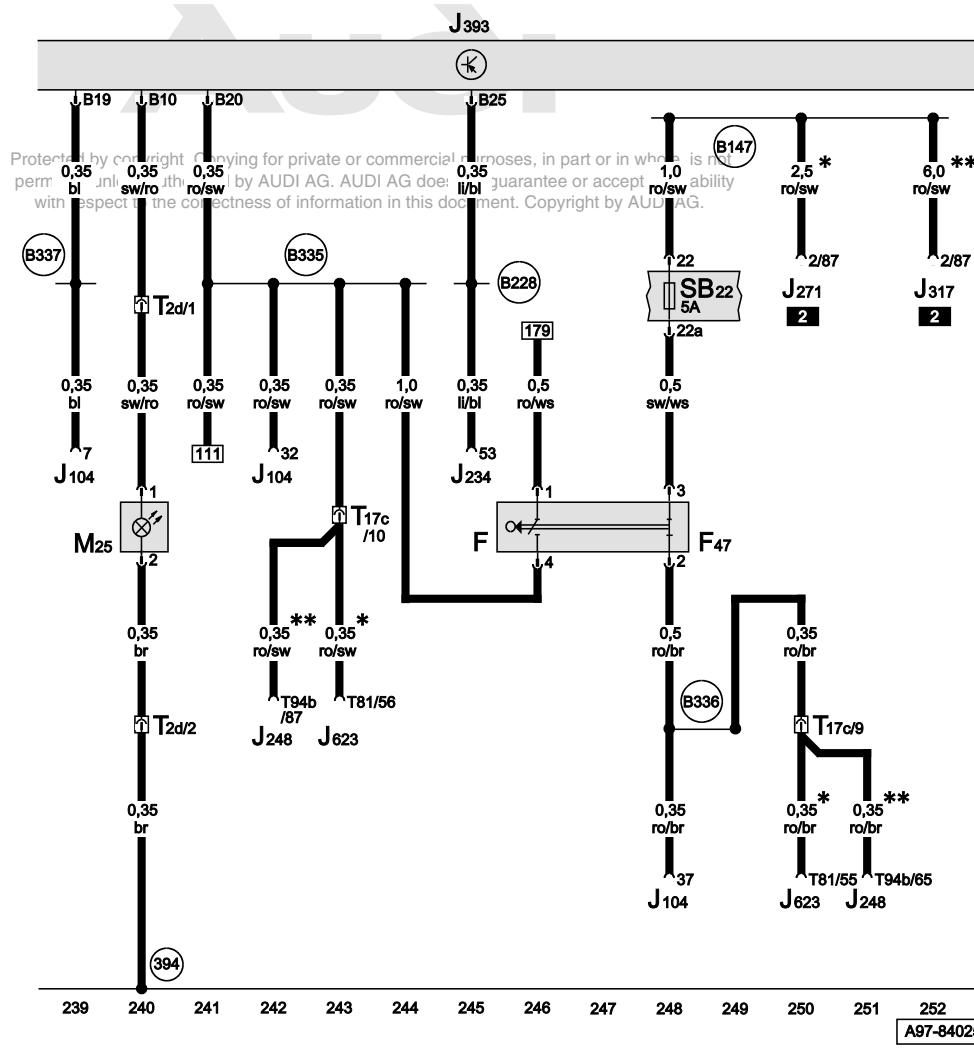

Convenience system central control unit, brake light switch, high level brake light bulb

- F Brake light switch
- F47 Brake pedal switch
- J104 ABS control unit
- J234 Airbag control unit
- J248 Diesel direct injection system control unit
- J271 Motronic current supply relay
- J317 Terminal 30 voltage supply relay
- J393 Convenience system central control unit
- J623 Engine control unit
- M25 High level brake light bulb
- SB22 Fuse 22 on fuse holder
- T2d 2-pin connector, black, high level brake light right of D-pillar
- T17c 17-pin connector, brown, in electronics box in plenum chamber
- T81 81-pin connector, black, on engine control unit
- T94b 94-pin connector, black, connector B, on diesel direct injection system control unit

394 Earth connection 29, in main wiring harness

B147 Positive connection 2 (87), in interior wiring harness

B228 Connection (crash signal), in interior wiring harness

B335 Connection 1 (54), in main wiring harness

B336 Connection 2 (54), in main wiring harness


 
B337 Connection 3 (54), in main wiring harness

* models with petrol engines

** models with diesel engines

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

A97-84025

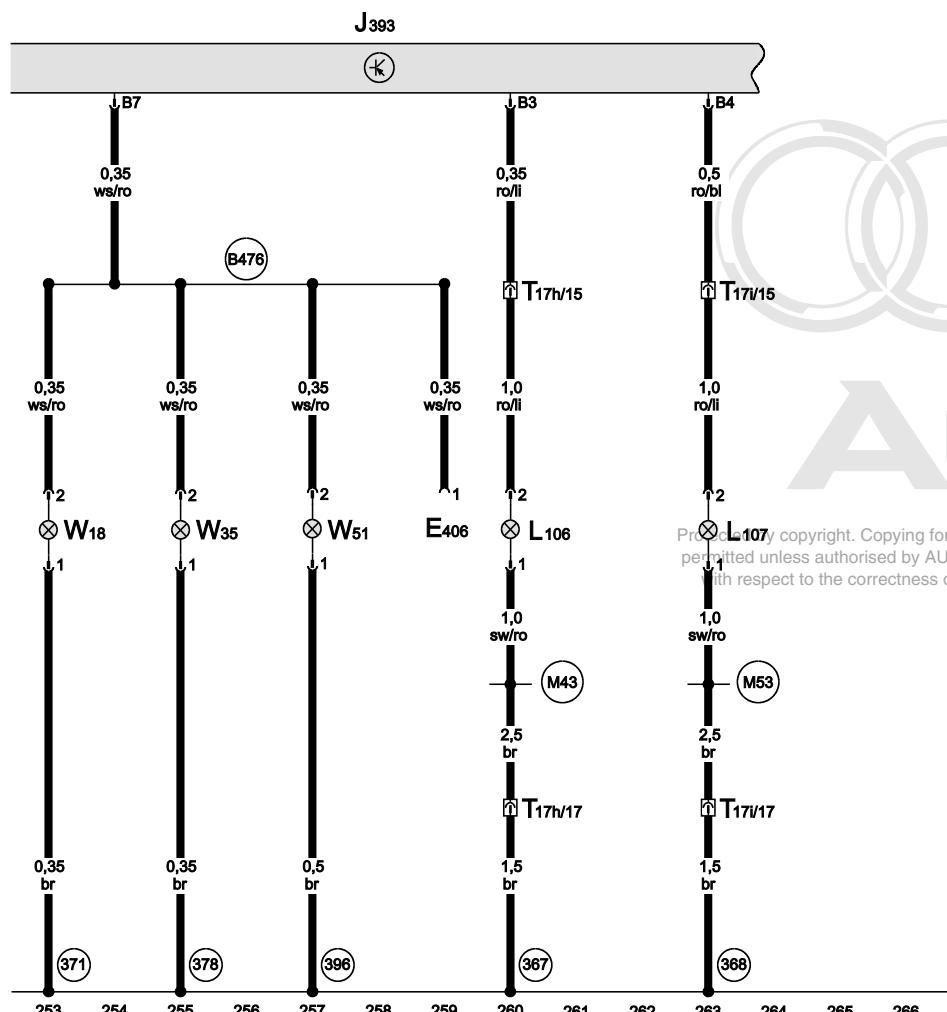

Convenience system central control unit, luggage compartment light, rear lid light, rear footwell illumination


E406 Button to close rear lid in luggage compartment
 J393 Convenience system central control unit
 L106 Rear left footwell illumination bulb
 L107 Rear right footwell illumination bulb
 T17h 17-pin connector, grey, under driver seat
 T17i 17-pin connector, grey, under front passenger seat
 W18 Luggage compartment light on left
 W35 Right luggage compartment light
 W51 Rear lid light

- 367 Earth connection 2, in main wiring harness
- 368 Earth connection 3, in main wiring harness
- 371 Earth connection 6, in main wiring harness
- 378 Earth connection 13, in main wiring harness
- 396 Earth connection 31, in main wiring harness
- B476 Connection 12 in main wiring harness
- M43 Connection 3, in driver seat wiring harness
- M53 Connection 3, in front passenger seat wiring harness

© AUDI AG. Copying for private or commercial purposes, in part or in whole, is only permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

A97-84028

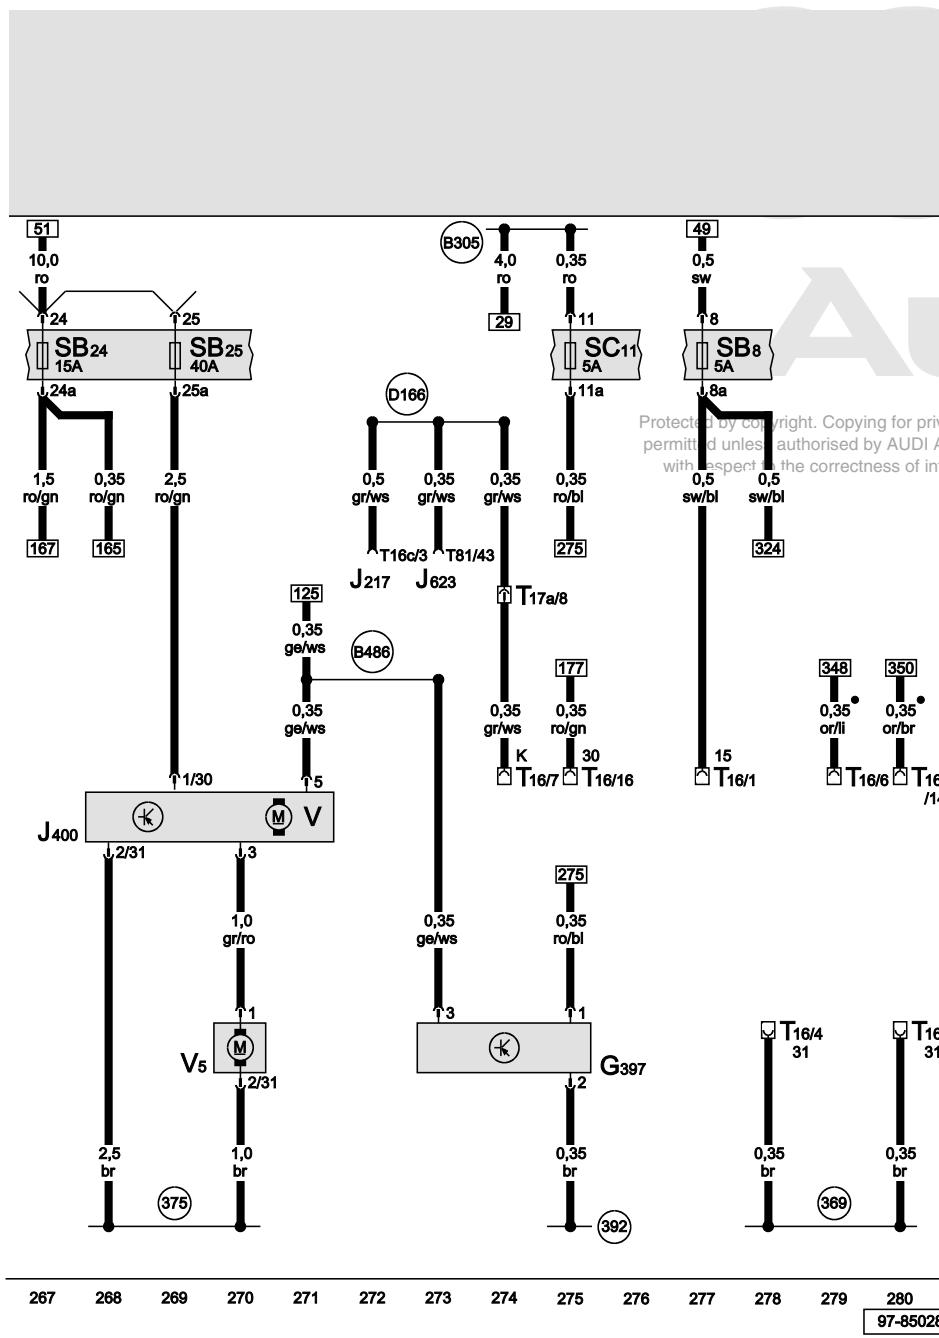

Wiper motor control unit, windscreen wiper motor, washer pump, diagnostic connector, rain and light detector sensor


- G397 Rain and light detector sensor
 J217 Automatic gearbox control unit
 J400 Wiper motor control unit
 J623 Engine control unit
 SB8 Fuse 8 on fuse holder
 SB24 Fuse 24 on fuse holder
 SB25 Fuse 25 on fuse holder
 SC11 Fuse 11 on fuse holder
 T16 16-pin connector, black, diagnostic connection
 T16c 16-pin connector, black, on automatic gearbox control unit
 T17a 17-pin connector, black, in electronics box in plenum chamber
 T81 81-pin connector, black, on engine control unit
 V Windscreen wiper motor
 V5 Washer pump
- Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept liability with respect to the correctness of information in this document. Copyright by AUDI AG.
- 369 Earth connection 4, in main wiring harness
 375 Earth connection 10, in main wiring harness
 392 Earth connection 27, in main wiring harness
 B305 Positive connection 9 (30), in main wiring harness
 B486 Connection 22 in main wiring harness
 D166 Connection (K-diagnosis wiring), in engine compartment wiring harness
 • CAN bus (data wire)

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink



97-85028

Onboard supply control unit 2, servotronic

- J520 Onboard supply control unit 2
 N119 Servotronic solenoid valve
 SC24 Fuse 24 on fuse holder
 T46b 46-pin connector, black, CAN separating connector right
 368 Earth connection 3, in main wiring harness
 • CAN bus (data wire)

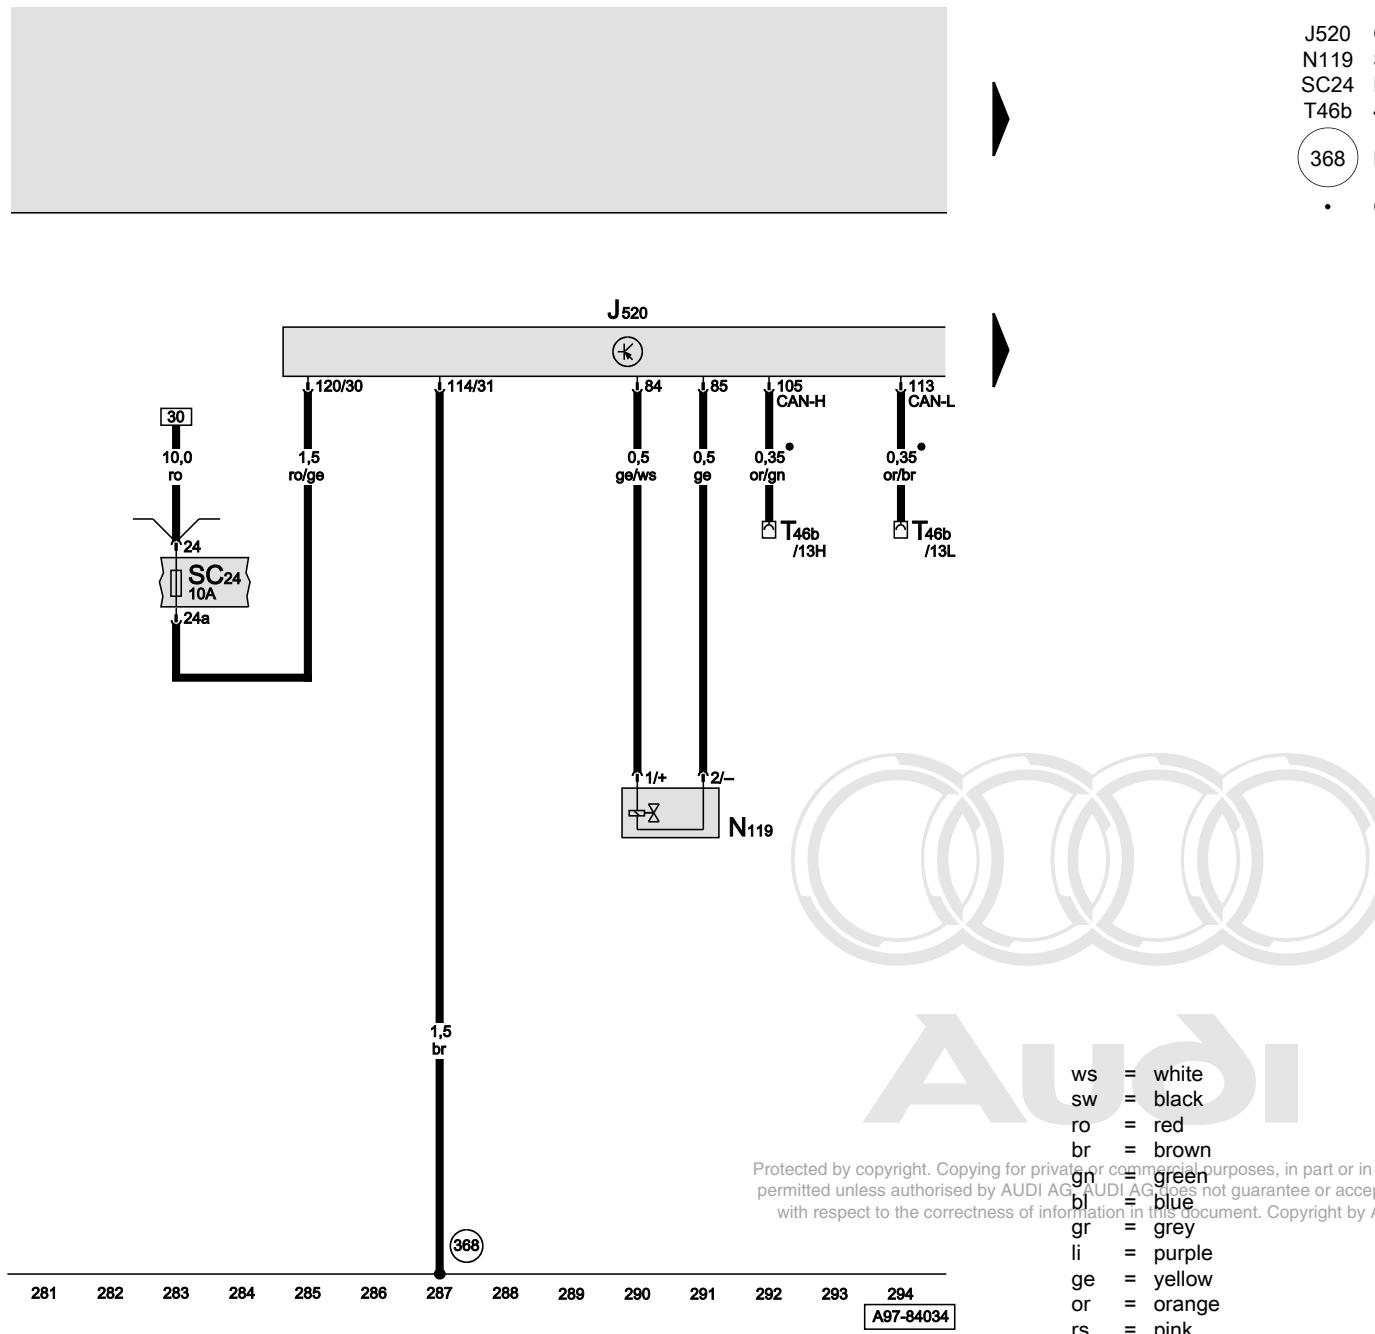

 ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

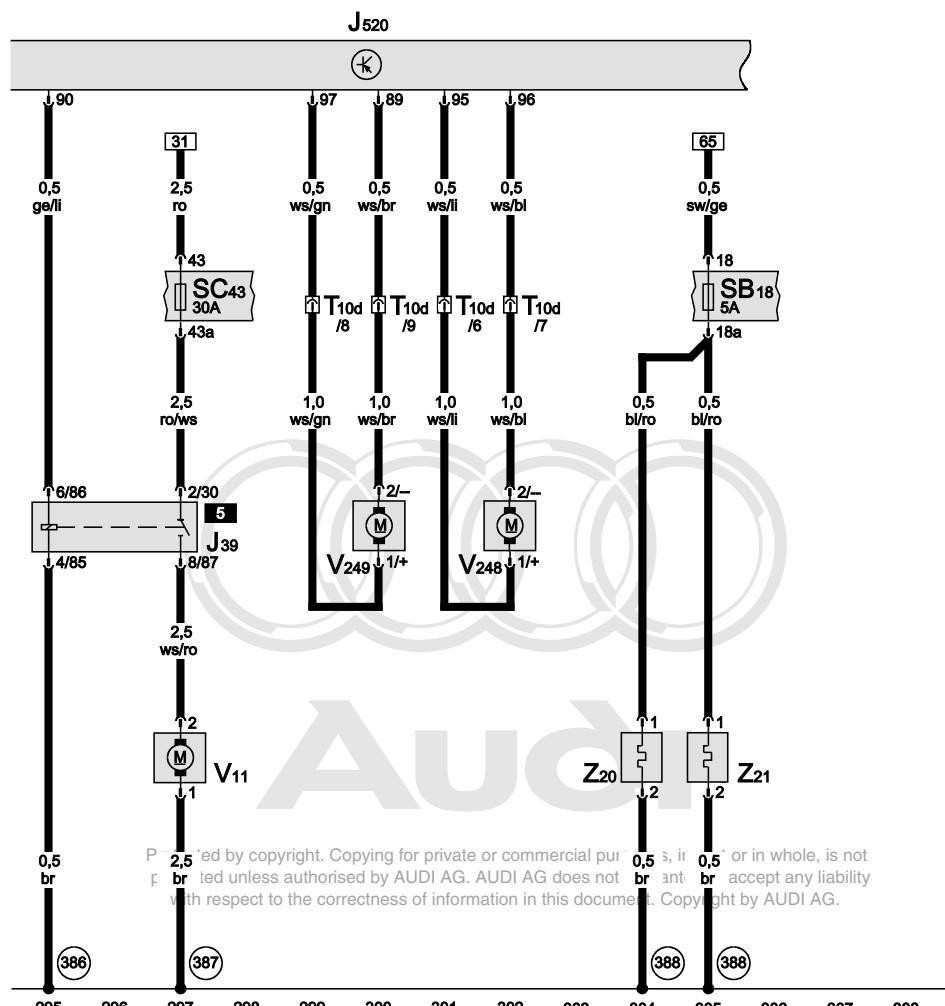

Onboard supply control unit 2, headlight washer system pump, left and right headlight washer system pop-up washer jet motor, headlight washer system relay, washer jet heater element

J39 Headlight washer system relay
 J520 Onboard supply control unit 2
 SB18 Fuse 18 on fuse holder
 SC43 Fuse 43 on fuse holder

T10d 10-pin connector, black, in front left engine compartment
 V11 Headlight washer system pump
 V248 Left headlight washer system pop-up washer jet motor
 V249 Right headlight washer system pop-up washer jet motor
 Z20 Left washer jet heater element
 Z21 Right washer jet heater element

386 Earth connection 21, in main wiring harness


387 Earth connection 22, in main wiring harness

388 Earth connection 23, in main wiring harness

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink



Protected by copyright. Copying for private or commercial purposes, in whole or in part, is not permitted unless authorised by AUDI AG. AUDI AG does not accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

A97-84037

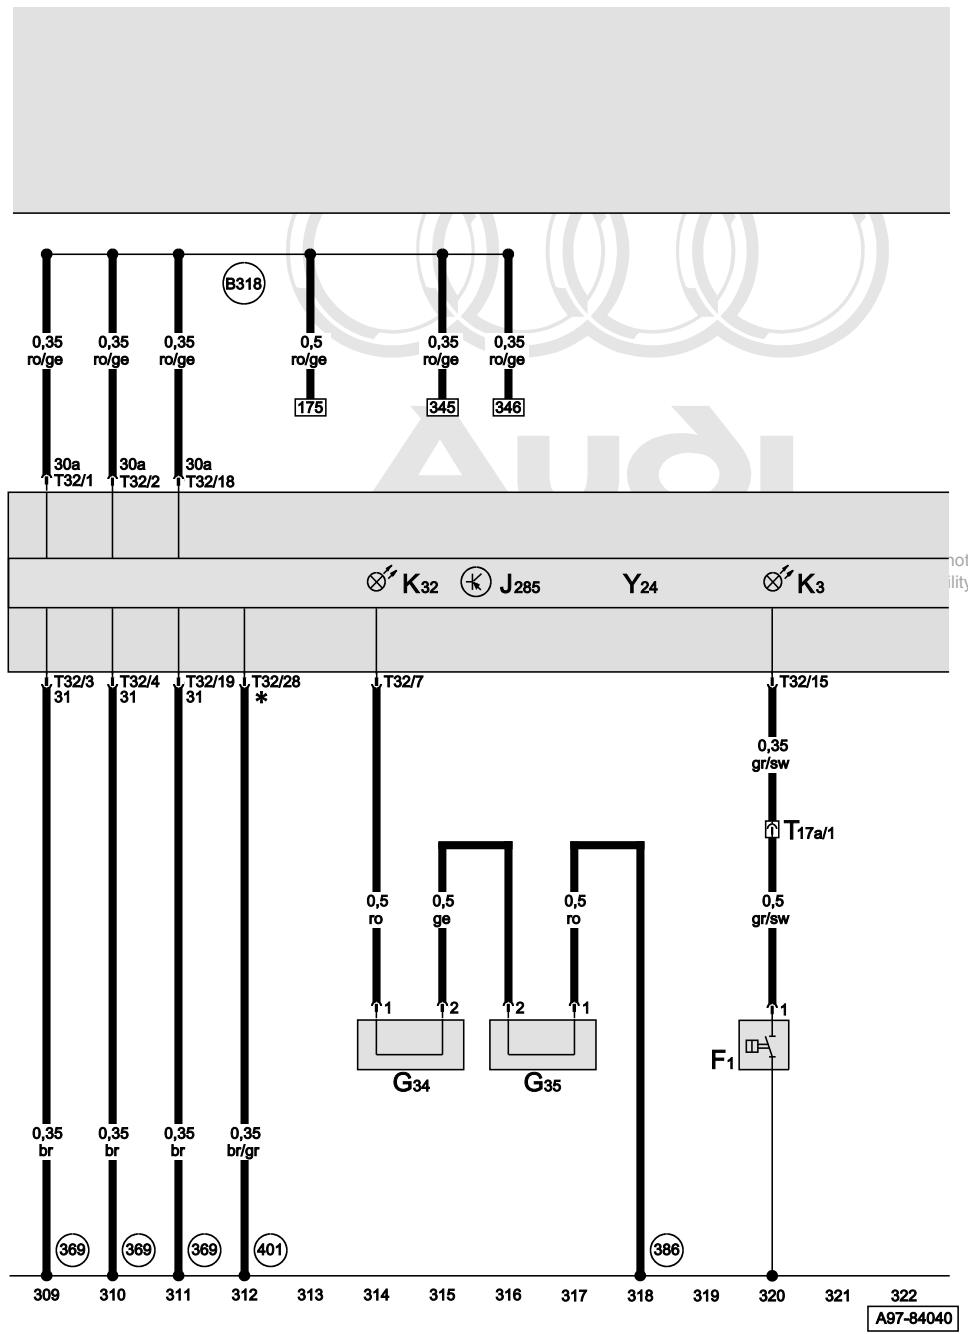

Control unit in dash panel insert, front brake pad wear
sender, oil pressure switch

 A97-84040

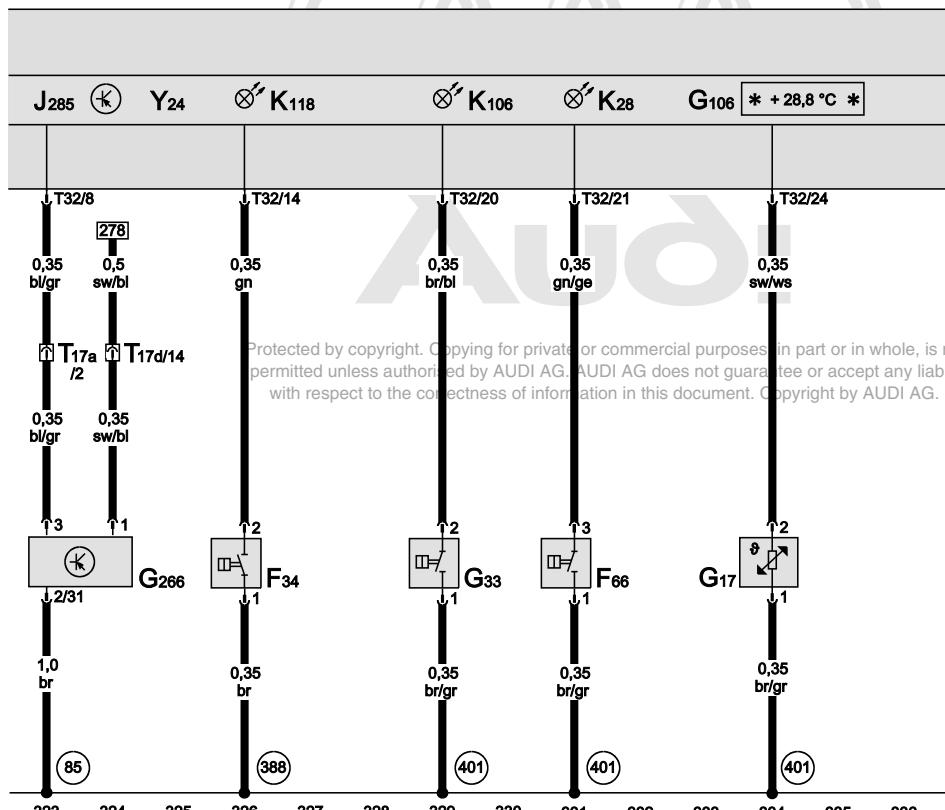


Control unit in dash panel insert, oil level and oil temperature sender, brake fluid level warning contact, windscreen washer fluid level sender, coolant shortage indicator switch, ambient temperature sensor

- F34 Brake fluid level warning contact
- F66 Coolant shortage indicator switch
- G17 Ambient temperature sensor
- G33 Windscreen washer fluid level sender
- G106 Ambient temperature indicator
- G266 Oil level and oil temperature sender
- J285 Control unit in dash panel insert
- K28 Coolant temperature and coolant shortage warning lamp
- K106 Washer fluid low warning lamp
- K118 Brake system warning lamp
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T17d 17-pin connector, blue, in electronics box in plenum chamber
- T32 32-pin connector, blue, on dash panel insert
- Y24 Display in dash panel insert

- 85 Earth connection 1, in engine compartment wiring harness
- 388 Earth connection 23, in main wiring harness
- 401 Earth connection (sender earth), in interior wiring harness


ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

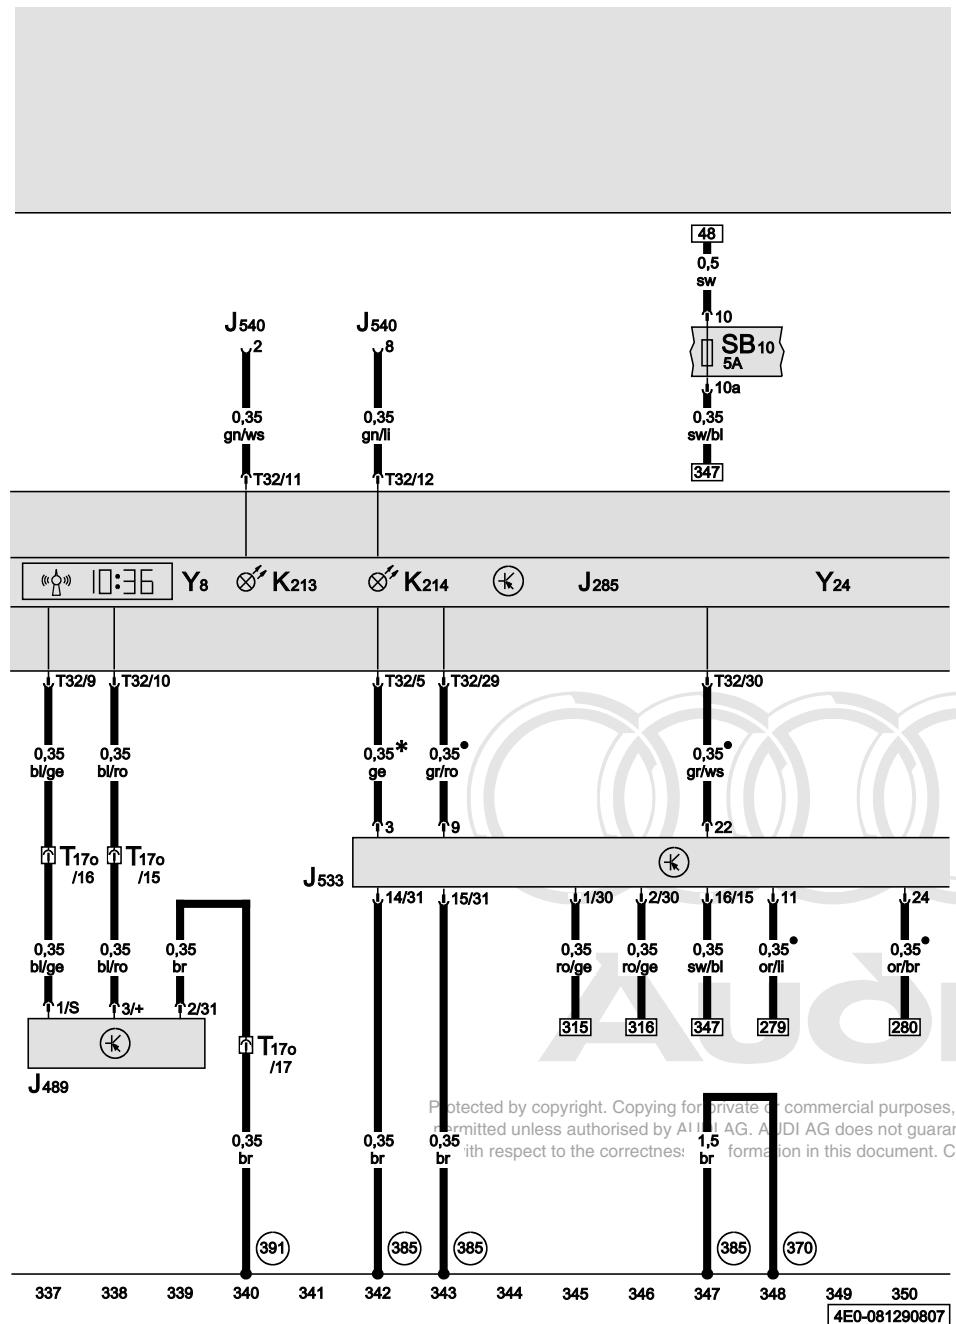

Control unit in dash panel insert, radio controlled clock, electromechanical parking brake control unit, radio controlled clock receiver, data bus diagnostic interface

- J285 Control unit in dash panel insert
- J489 Radio controlled clock receiver
- J533 Data bus diagnostic interface
- J540 Electric park and handbrake control unit
- K213 Electric park and handbrake warning lamp
- K214 Electric parking brake and handbrake fault warning lamp
- SB10 Fuse 10 on fuse holder
- T17o 17-pin connector, black, in luggage compartment
- T32 32-pin connector, blue, on dash panel insert
- Y8 Radio controlled clock
- Y24 Display in dash panel insert
- 370 Earth connection 5, in main wiring harness
- 385 Earth connection 20, in main wiring harness
- 391 Earth connection 26, in main wiring harness
- CAN bus (data wire)
- * Wake Up wire (exciter wire)

ws = white
 SW = black
 ro = red
 brAG = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

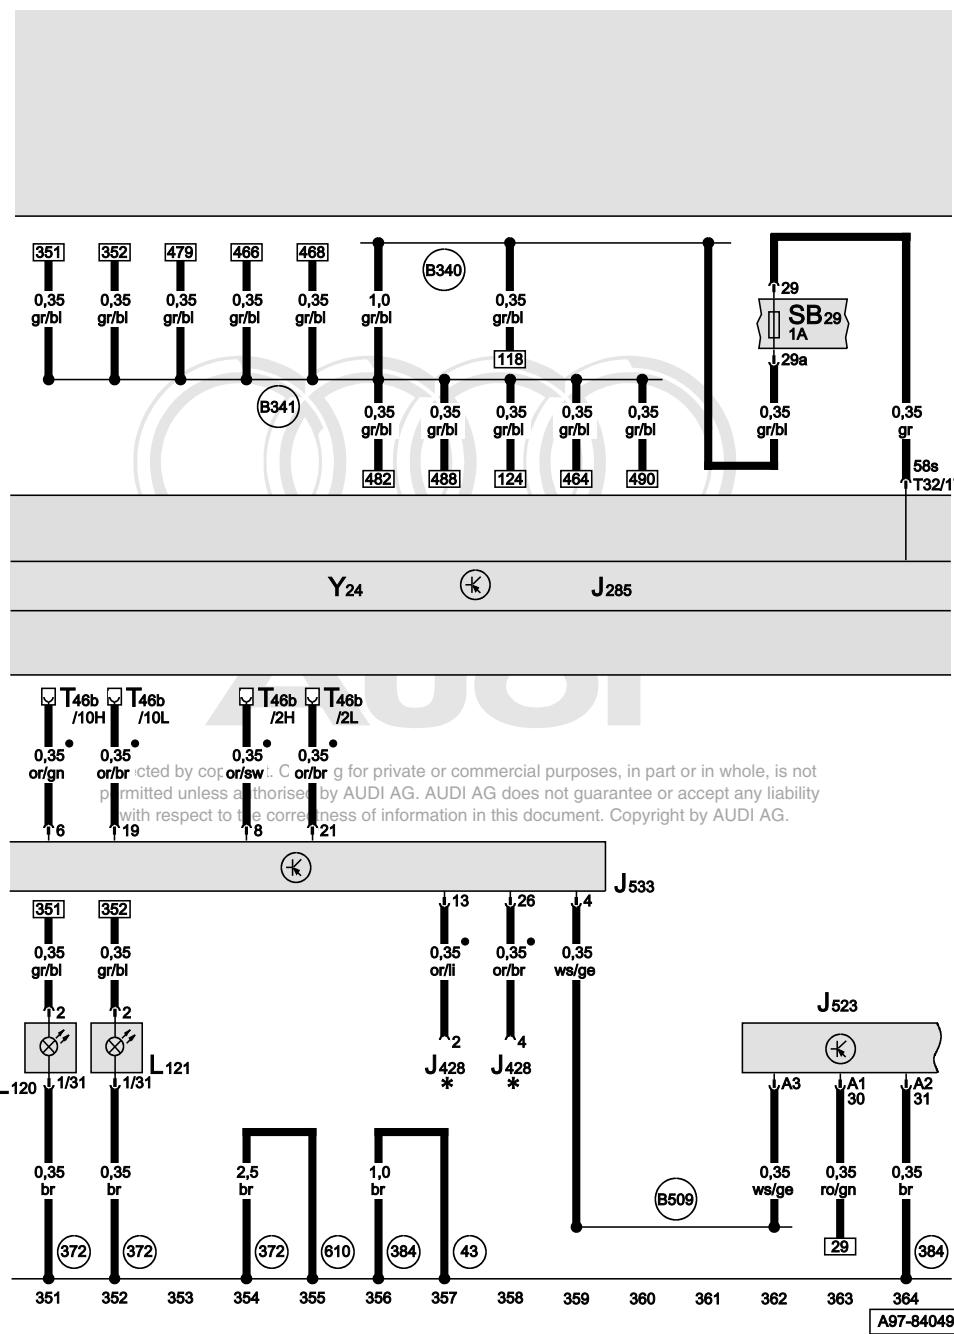


Control unit in dash panel insert, data bus diagnostic interface, front information display and operating unit control unit, storage compartment illumination bulb

- J285 Control unit in dash panel insert
- J428 Adaptive cruise control unit
- J523 Front information display and operating unit control unit
- J533 Data bus diagnostic interface
- L120 Storage compartment illumination bulb
- L121 Cup holder illumination bulb
- SB29 Fuse 29 on fuse holder
- T32 32-pin connector, blue, on dash panel insert
- T46b 46-pin connector, black, CAN separating connector right
- Y24 Display in dash panel insert
- (43) Earth point, lower part of right A-pillar
- (372) Earth connection 7, in main wiring harness
- (384) Earth connection 19, in main wiring harness
- (610) Earth point (audio), under centre console, front
- (B340) Connection 1 (58s), in main wiring harness
- (B341) Connection 2 (58s), in main wiring harness
- (B509) Connection 3 (diagnosis), in main wiring harness (ring brake diagnosis)
 - CAN bus (data wire)
 - * models with adaptive cruise only

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

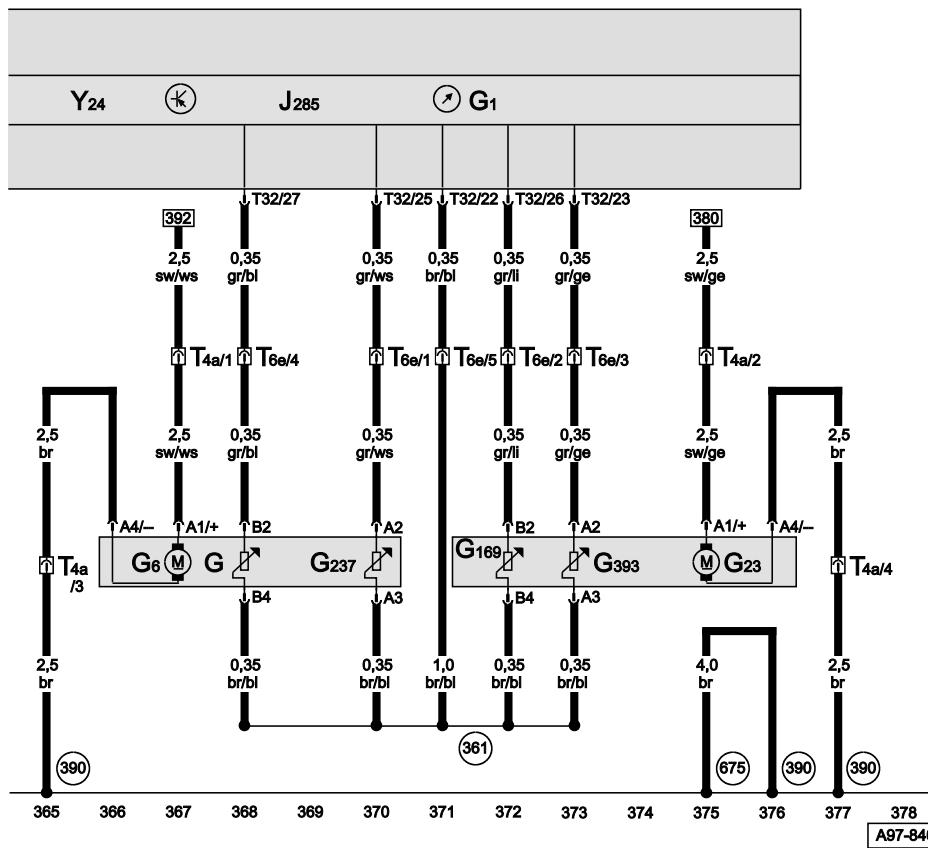


Control unit in dash panel insert, fuel gauge sender, fuel system pressurisation pump, fuel pump, fuel gauge

- | | |
|------|--|
| G | Fuel gauge sender |
| G1 | Fuel gauge |
| G6 | Fuel system pressurisation pump |
| G23 | Fuel pump |
| G169 | Fuel gauge sender 2 |
| G237 | Fuel gauge sender 3 |
| G393 | Fuel gauge sender 4 |
| J285 | Control unit in dash panel insert |
| T4a | 4-pin connector, under right cover on vehicle floor |
| T6e | 6-pin connector, under right cover on vehicle floor |
| T32 | 32-pin connector, blue, on dash panel insert |
| Y24 | Display in dash panel insert |
| 361 | Earth connection (fuel gauge sender), in main wiring harness |
| 390 | Earth connection 25, in main wiring harness |
| 675 | Earth point 2, on right in luggage compartment |

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink


A97-84052

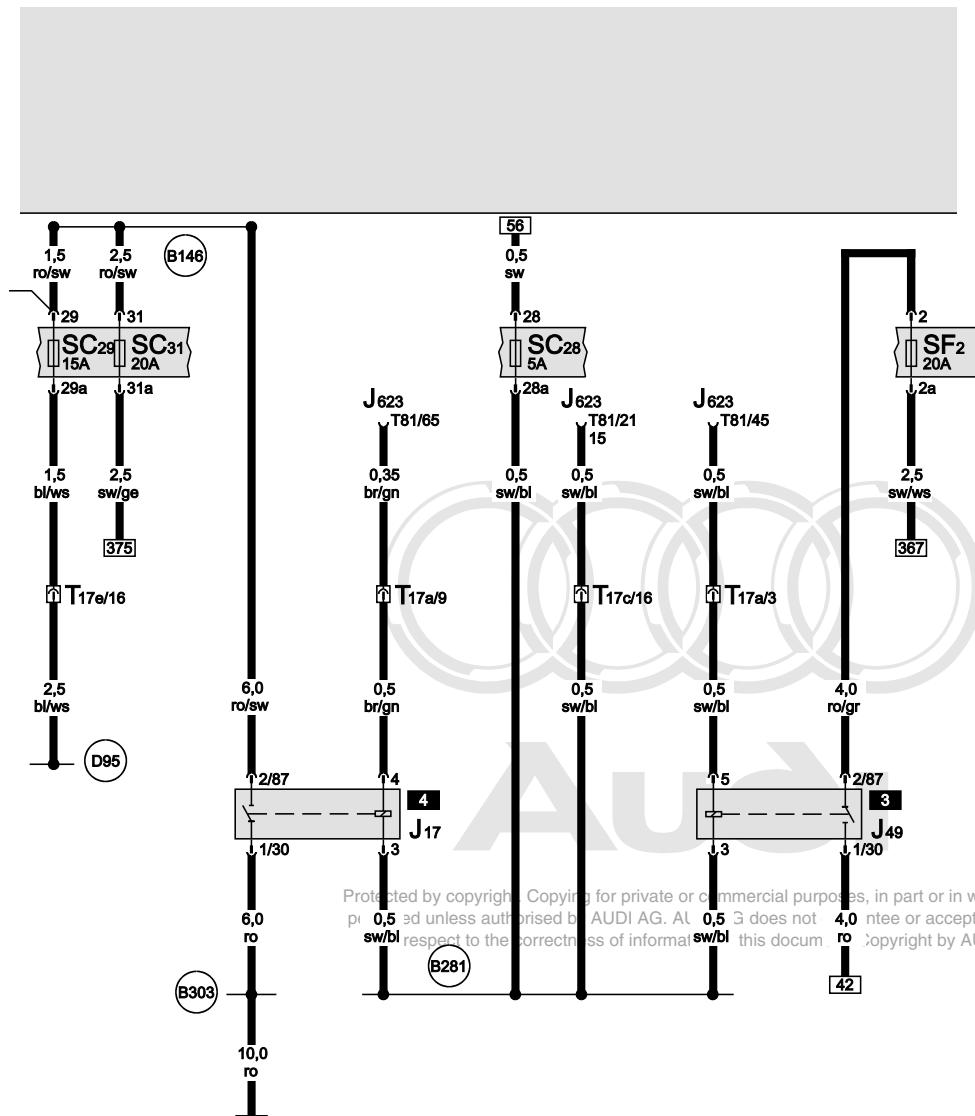

Fuel pump relay, electric fuel pump 2 relay

- J17 Fuel pump relay
- J49 Electric fuel pump 2 relay
- J623 Engine control unit
- SC28 Fuse 28 on fuse holder
- SC29 Fuse 29 on fuse holder
- SC31 Fuse 31 on fuse holder
- SF2 Fuse 2 on fuse holder
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T17c 17-pin connector, brown, in electronics box in plenum chamber
- T17e 17-pin connector, red, in electronics box in plenum chamber
- T81 81-pin connector, black, on engine control unit
- B146 Positive connection 1 (87), in interior wiring harness
- B281 Positive connection 5 (15a), in main wiring harness
- B303 Positive connection 7 (30), in main wiring harness
- D95 Connection (injectors), in engine compartment wiring harness


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

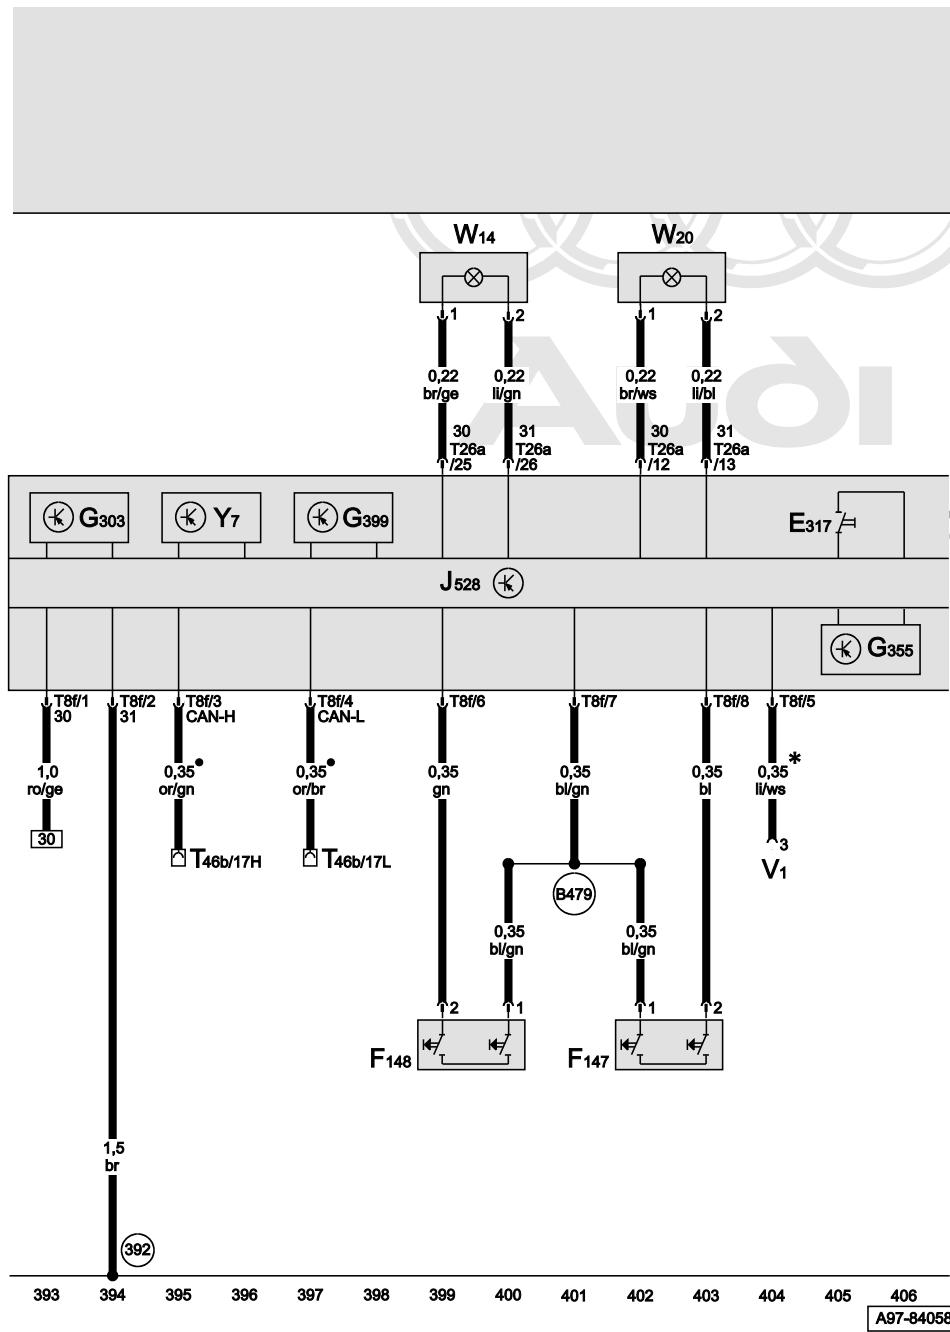


Roof electronics control unit, illuminated vanity mirror, interior monitor send and receive module 1, automatic anti-dazzle interior mirror, light sensor, humidity sender, interior light switch

- E317 Interior light switch
- F147 Driver vanity mirror contact switch
- F148 Front passenger vanity mirror contact switch
- G303 Interior monitor send and receive module 1
- G355 Humidity sender
- G399 Light detector sensor
- J528 Roof electronics control unit
- T8f 8-pin connector, black, near front interior light
- T26a 26-pin connector, on front roof console
- T46b 46-pin connector, black, CAN separating connector right
- V1 Sliding sunroof motor
- W14 Front passenger side illuminated vanity mirror
- W20 Driver side illuminated vanity mirror
- Y7 Automatic anti-dazzle interior mirror
- 392 Earth connection 27, in main wiring harness
- B479 Connection 15 in main wiring harness
- CAN bus (data wire)
- * models with sunroof

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

 **Roof electronics control unit, interior light, front interior light button, reading light button**

- E326 Front interior light button
- E457 Driver side reading light button
- E458 Front passenger side reading light button
- J528 Roof electronics control unit
- T26a 26-pin connector, on front roof console
- W13 Front passenger side reading light
- W16 Left interior light
- W17 Right interior light
- W19 Driver side reading light

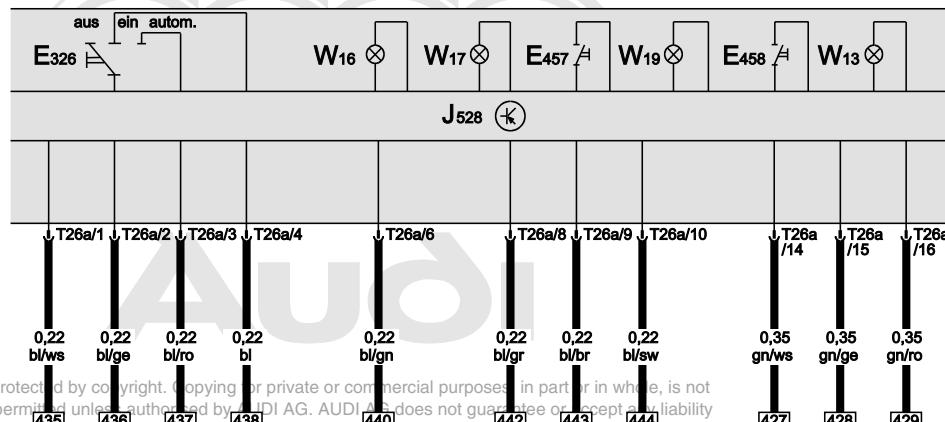


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- ge = yellow
- or = orange
- rs = pink

Roof electronics control unit, rear operating unit for roof module, rear switch for rear roller blind



- E383 Rear left roller blind button
- E384 Rear right roller blind button
- E385 Rear switch for rear roller blind
- E467 Rear operating unit for roof module
- J528 Roof electronics control unit
- T26a 26-pin connector, on front roof console
- T26b 26-pin connector, on rear roof console

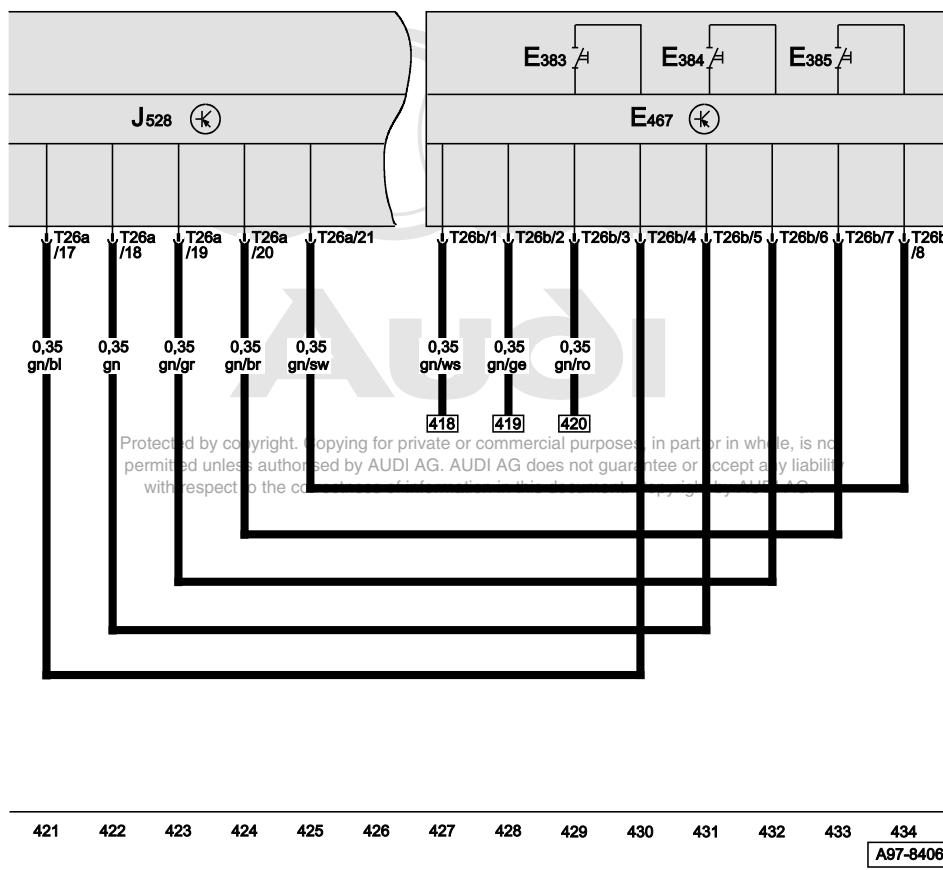

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

Rear operating unit for roof module, rear reading light, rear interior light

- E327 Rear interior light button
- E454 Rear left reading light switch
- E455 Rear right reading light switch 1
- E467 Rear operating unit for roof module
- T26b 26-pin connector, on rear roof console
- W11 Rear left reading light
- W12 Rear right reading light
- W47 Rear left interior light
- W48 Rear right interior light

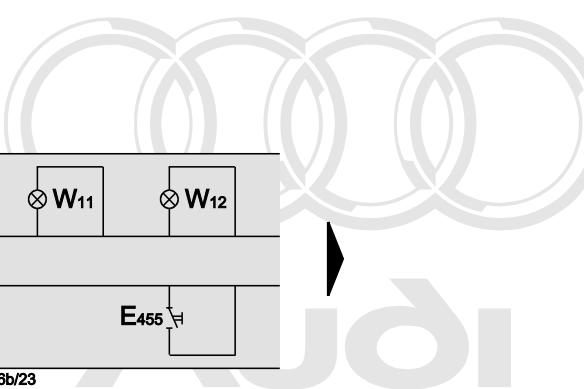
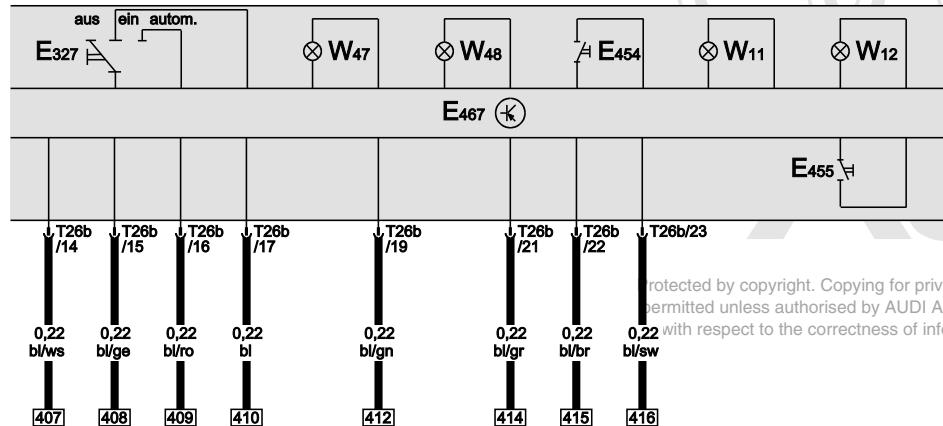


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

435 436 437 438 439 440 441 442 443 444 445 446 447 448

 A97-84067

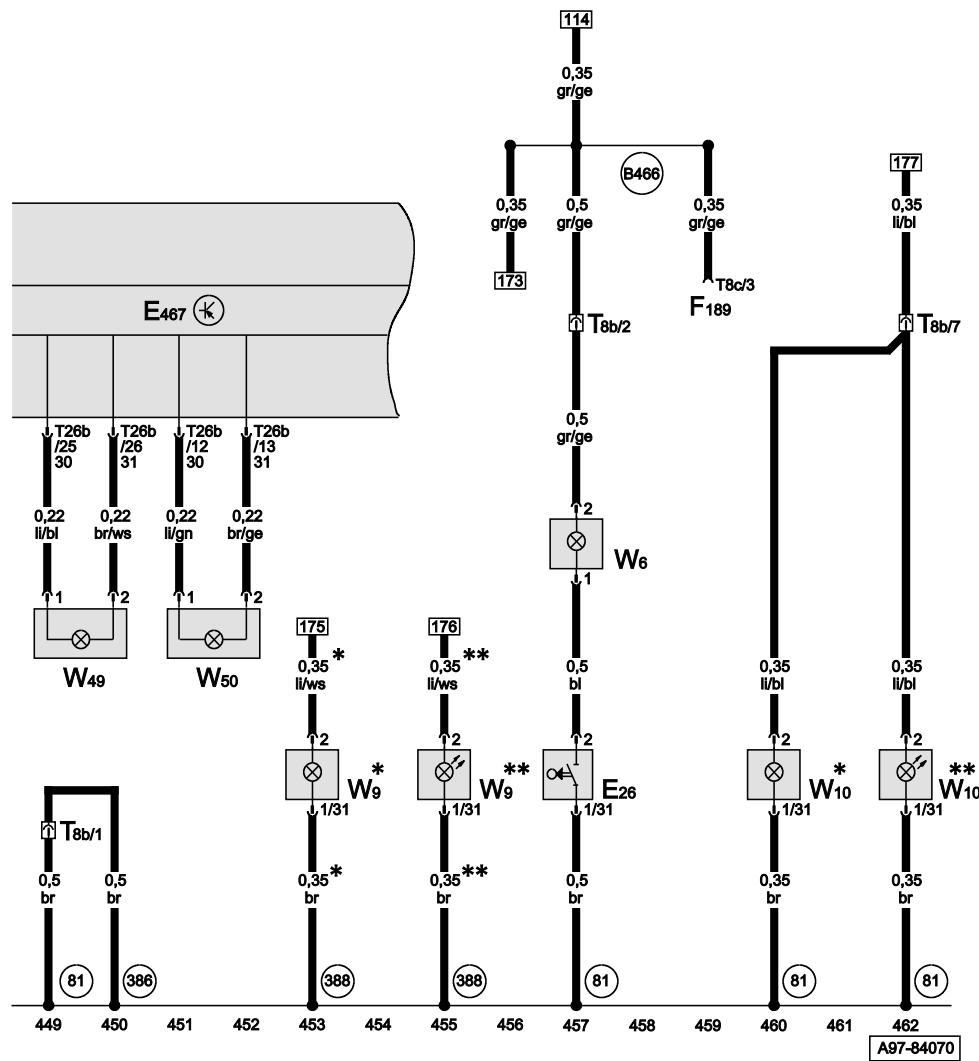

Rear operating unit for roof module, rear illuminated vanity mirror, glove compartment light, left and right footwell light

E26 Glove compartment light switch
 E467 Rear operating unit for roof module
 F189 Tiptronic switch
 T8b 8-pin connector, black, behind right dash panel
 T8c 8-pin connector, black, in centre console on selector lever console
 T26b 26-pin connector, on rear roof console

W6 Glove compartment light
 W9 Left footwell light
 W10 Right footwell light
 W49 Rear left illuminated vanity mirror
 W50 Rear right illuminated vanity mirror

81 Earth connection 1, in dash panel wiring harness (glove box)

386 Earth connection 21, in main wiring harness

388 Earth connection 23, in main wiring harness

B466 Connection 2 in main wiring harness


* models without light equipment

** models with light equipment





Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.
 ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

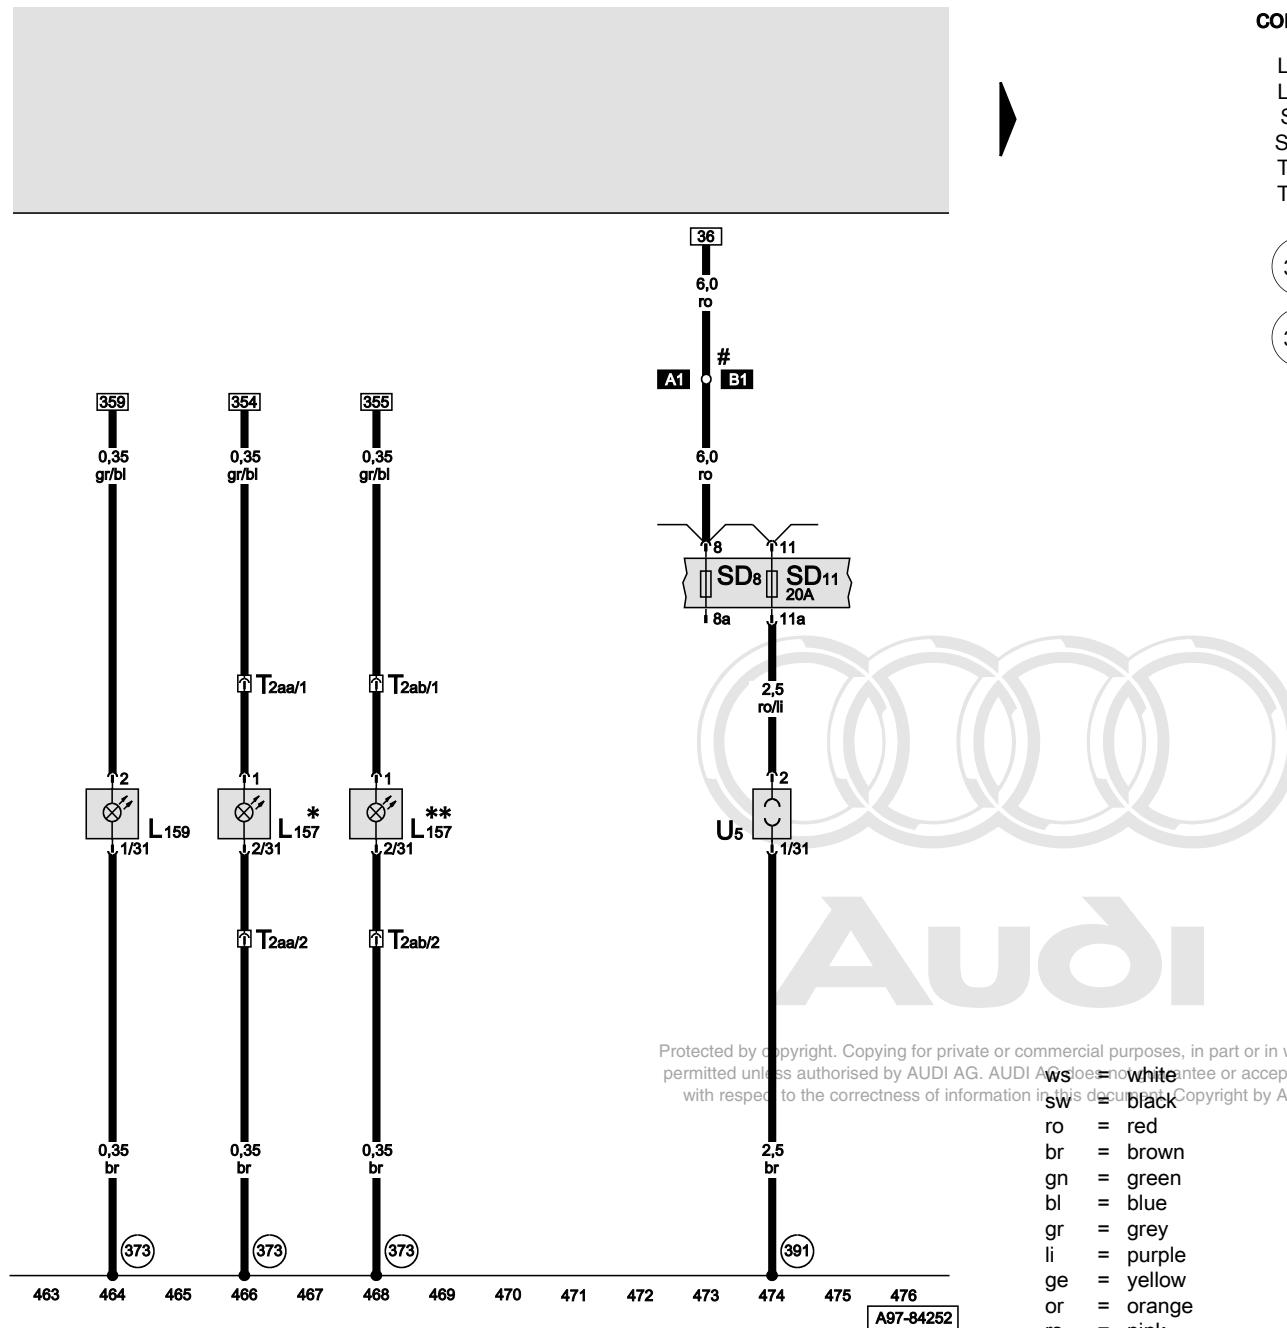

Illuminated centre armrest, centre console rear storage compartment illumination bulb, 12 V socket

 - L157 Illuminated centre armrest
 - L159 Centre console rear storage compartment illumination bulb
 - SD8 Fuse 8 on fuse holder
 - SD11 Fuse 11 on fuse holder
 - T2aa 2-pin connector, rear below the rear footwell vent
 - T2ab 2-pin connector, rear below the rear footwell vent
 - U5 12 V socket
 - 373 Earth connection 8, in main wiring harness
 - 391 Earth connection 26, in main wiring harness
- * below shelf, left
** below shelf, right
Screw connection, on rear left fuse holder

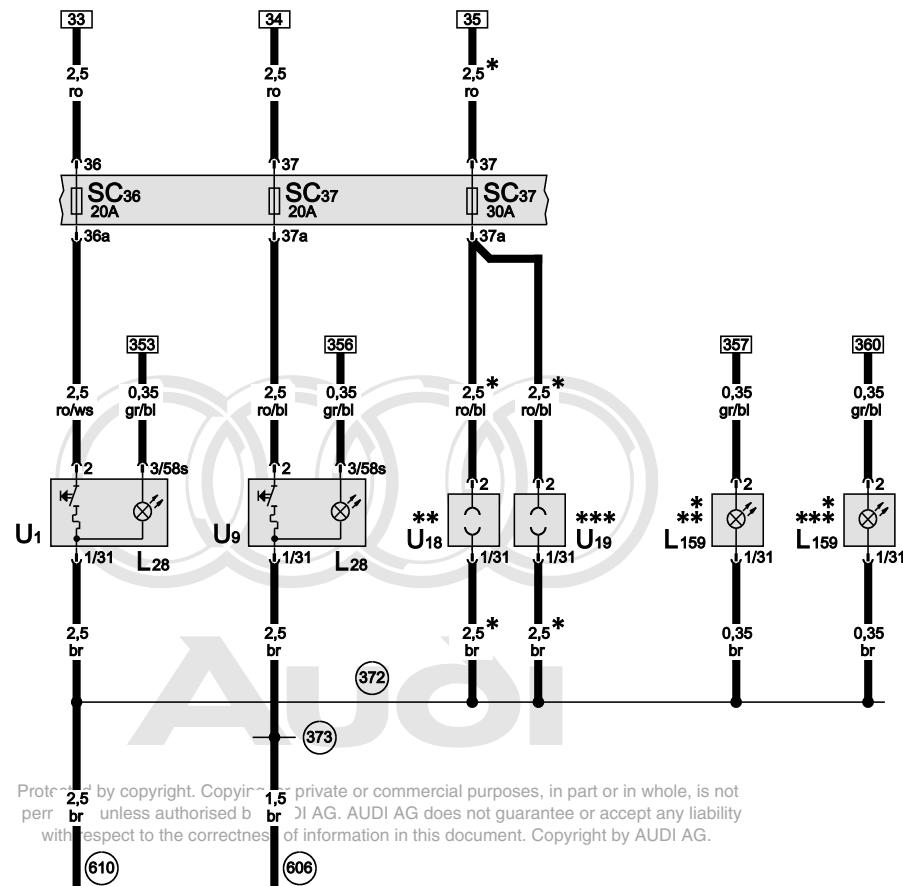

Cigarette lighter, rear cigarette lighter

L28 Cigarette lighter illumination bulb
L159 Centre console rear storage compartment illumination bulb

SC36 Fuse 36 on fuse holder

SC37 Fuse 37 on fuse holder

U1 Cigarette lighter

U9 Rear cigarette lighter

U18 12 V socket 2

U19 12 V socket 3

(372) Earth connection 7, in main wiring harness

(373) Earth connection 8, in main wiring harness

(606) Earth point, under the centre console near gear stick

(610) Earth point (audio), under centre console, front

* centre console, long version


** in left storage compartment

*** in right storage compartment

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

Audi A8 3.0 I - Fuel injection engine (162 kW/ 160 kW - Motronic - 6-cylinder) engine code ASN/ BBJ
from model year 2005

Fuse holder, left dash panel

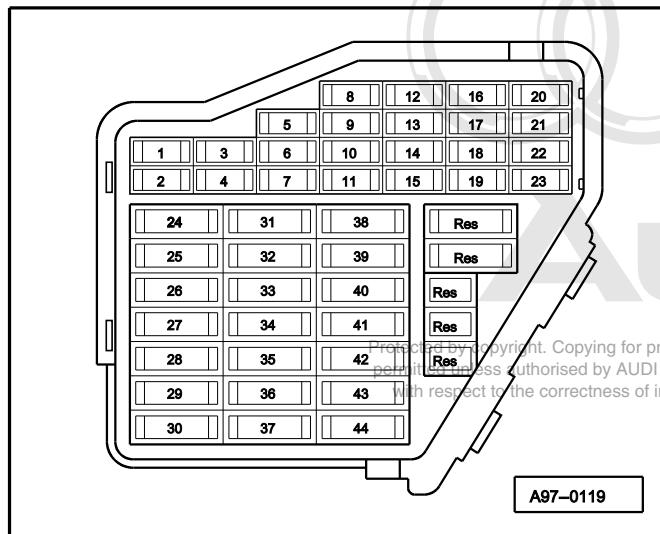

Fuse colours

30 A - green

25 A - white

20 A - yellow

15 A - blue

10 A - red

7,5 A - brown

5 A - beige

1 A - black

SB - Fuses in fuse holder left dash panel


SC - Fuses in fuse holder right dash panel

SD - Fuses in fuse holder left in luggage compartment


SF - Fuses in fuse holder right in luggage compartment

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Fuse holder right dash panel

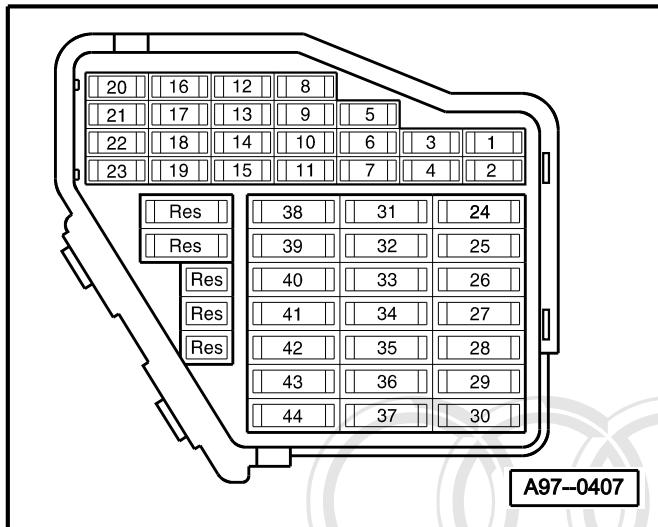

Relay carrier electronics box in plenum chamber


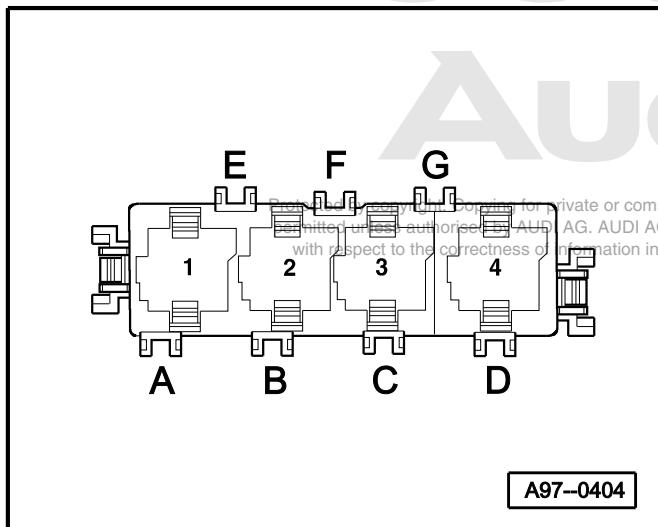


Relay positions

- 1 - Secondary air pump relay (J299)
- 2 - Motronic current supply relay (J271)

B - Secondary air pump fuse (S130)

Relay and fuse carrie behind left dash panel

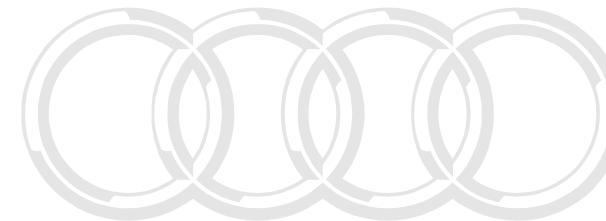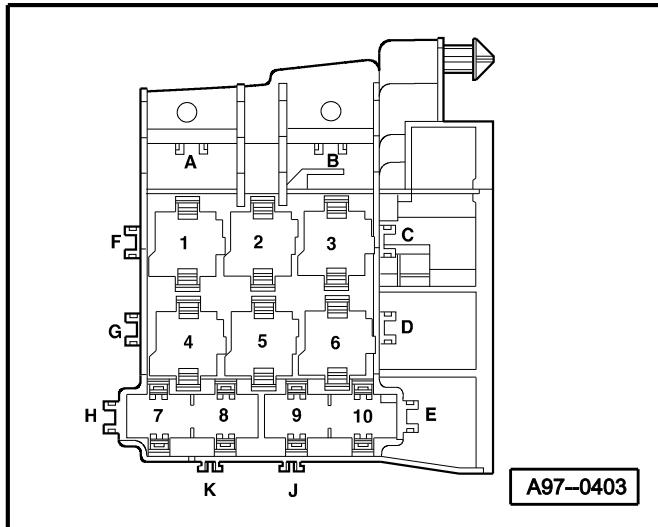


Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Relay positions


3 - Terminal 15 voltage supply relay (J329)

relay carrier front passenger footwell

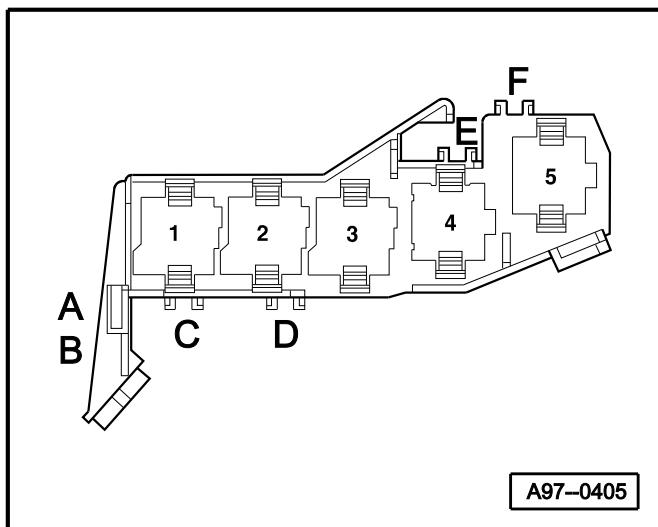

Relay positions

- 1.1 - Brake servo relay (J569)
- 1.2 - Continued coolant circulation relay (J151)
- 2 - Starter motor relay (J53)
- 3 - Starter motor relay 2 (J695)
- 4 - Fuel pump relay (J17)

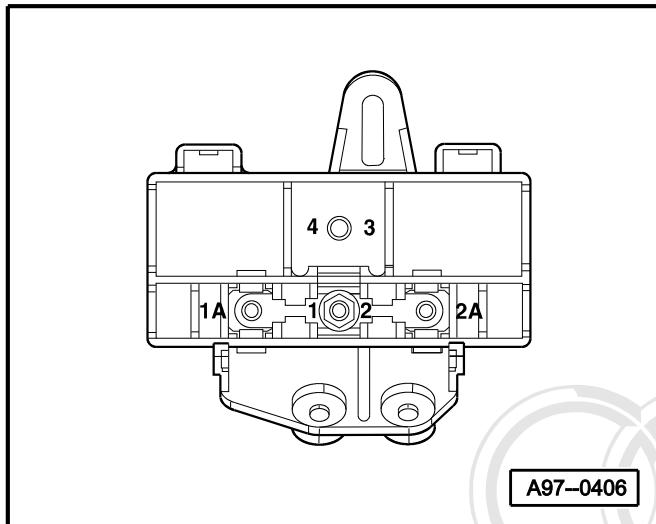Assignment main fuse carrier right A-pillar


Fuse locations

- 1 - Radiator fan single fuse (S42, 60 A)
- 1A - Radiator fan screw point 1
- 2 - Radiator fan fuse for 2nd speed (S104, 60 A)
- 2A - Radiator fan screw point 2
- 3 - Terminal 30 screw point (battery)
- 4 - Terminal 30 screw point (starter)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Relay and fuse carrier right in luggage compartment

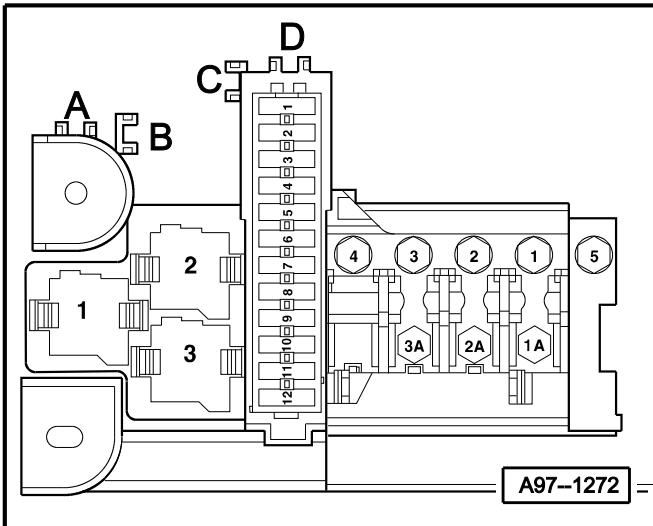


Relay positions

3 - Electric fuel pump 2 relay (J49)



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

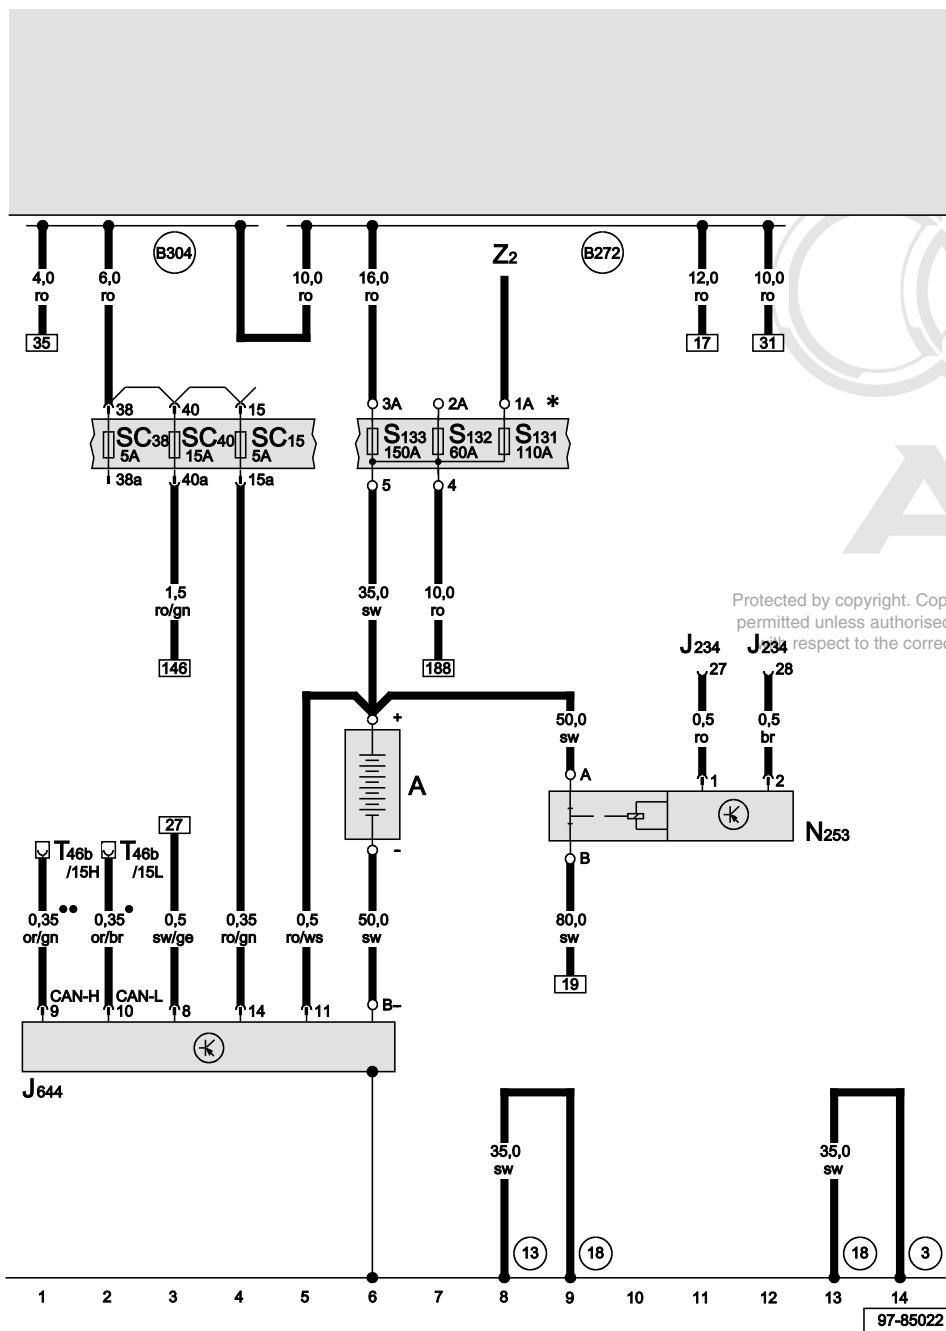

Battery, energy management control unit, battery isolation igniter


A Battery
 J234 Airbag control unit
 J644 Energy management control unit
 N253 Battery isolation igniter
 S131 Fuse 1, 110 A, in luggage compartment, rear right
 S132 Fuse 2, 60 A, in luggage compartment, rear right
 S133 Fuse 3, 150 A, in luggage compartment, rear right
 SC15 Fuse 15 on fuse holder
 SC38 Fuse 38 on fuse holder
 SC40 Fuse 40 on fuse holder
 T46b 46-pin connector, black, CAN separating connector right
 Z2 Heated windscreen

- 3 Earth strap, engine - body
- 13 Earth point, on right in engine compartment
- 18 Earth point on engine block

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- B272 Positive connection (30), in main wiring harness
- B304 Positive connection 8 (30), in main wiring harness
- CAN bus (data wire)
 - * In luggage compartment, rear right

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

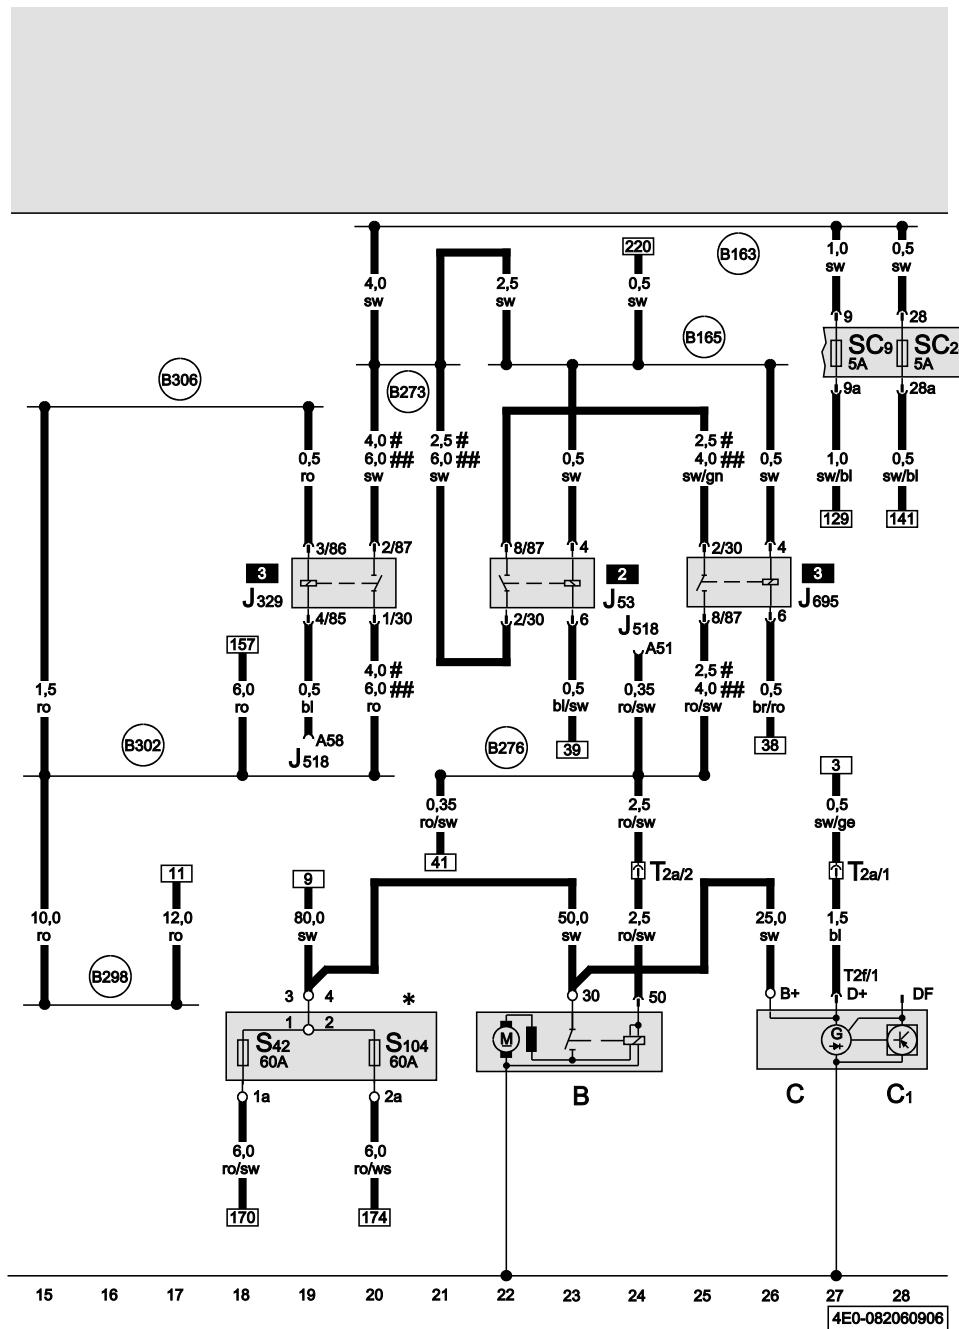

Starter, alternator, terminal 15 voltage supply relay, starter motor relay


- B Starter
- C Alternator
- C1 Voltage regulator
- J53 Starter motor relay
- J329 Terminal 15 voltage supply relay
- J518 Entry and start authorisation control unit
- J695 Starter motor relay 2
- S42 Radiator fan single fuse
- S104 Radiator fan fuse for 2nd speed
- SC9 Fuse 9 on fuse holder
- SC28 Fuse 28 on fuse holder
- T2a 2-pin connector, black, in front right engine compartment
- T2f 2-pin connector, black, on alternator

- (B163) Positive connection 1 (15), in interior wiring harness
- (B165) Positive connection 2 (15), in interior wiring harness
- (B273) Positive connection (15), in main wiring harness
- (B276) Positive connection (50), in main wiring harness
- (B298) Positive connection 2 (30), in main wiring harness
- (B302) Positive connection 6 (30), in main wiring harness
- (B306) Positive connection 10 (30), in main wiring harness

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- * Main fuse carrier right A-pillar
- # up to April 2006
- ## from May 2006


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

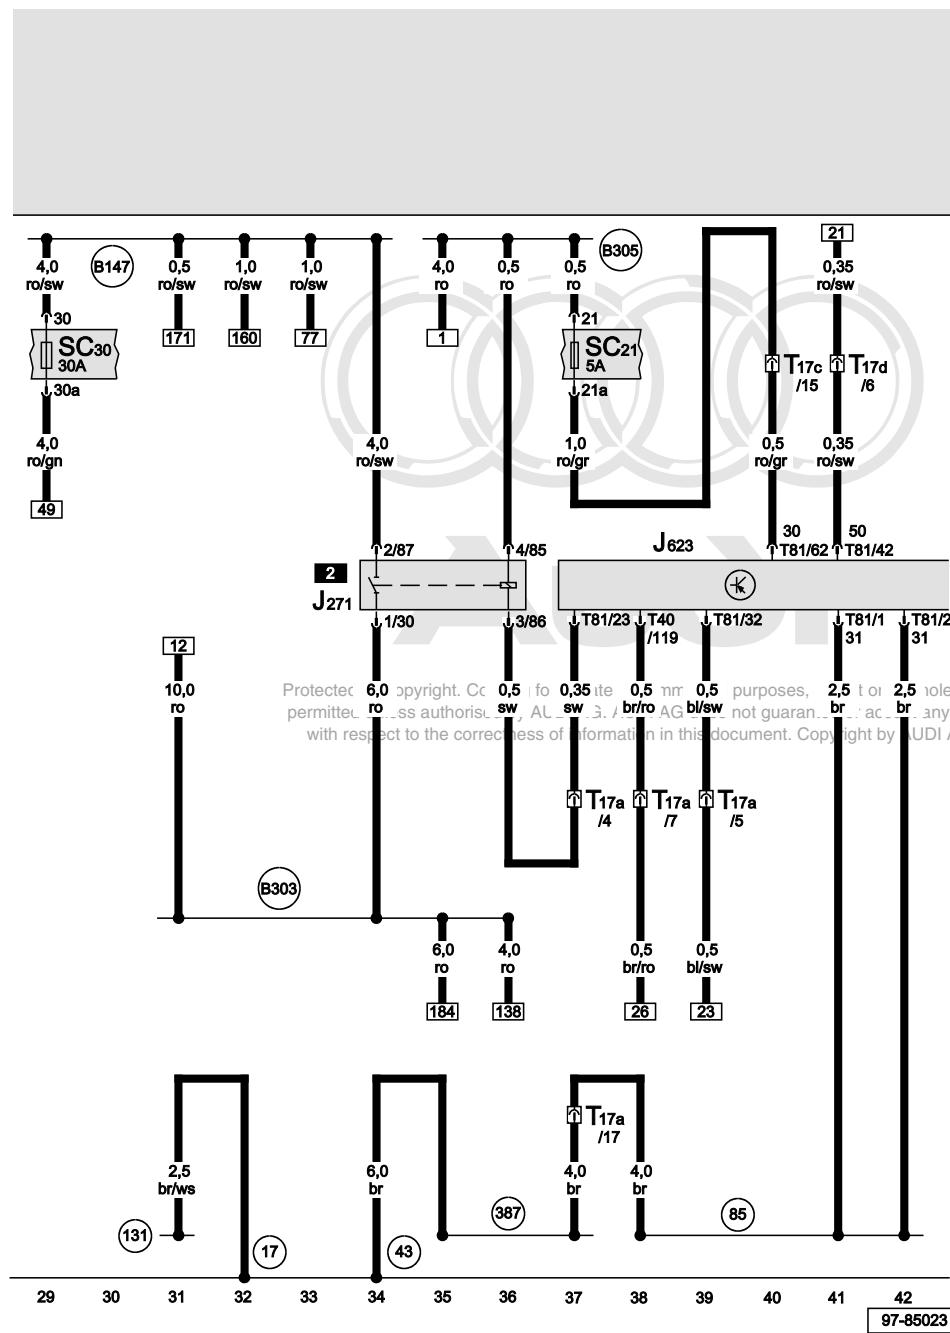

Engine control unit, Motronic current supply relay


- J271 Motronic current supply relay
- J623 Engine control unit
- SC21 Fuse 21 on fuse holder
- SC30 Fuse 30 on fuse holder
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T17c 17-pin connector, brown, in electronics box in plenum chamber
- T17d 17-pin connector, blue, in electronics box in plenum chamber
- T40 40-pin connector, black, on engine control unit
- T81 81-pin connector, black, on engine control unit
- 17 Earth point, on intake manifold
- 43 Earth point, lower part of right A-pillar
- 85 Earth connection 1, in engine compartment wiring harness
- 131 Earth connection 2, in engine compartment wiring harness
- 387 Earth connection 22, in main wiring harness
- B147 Positive connection 2 (87), in interior wiring harness
- B303 Positive connection 7 (30), in main wiring harness
- B305 Positive connection 9 (30), in main wiring harness

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

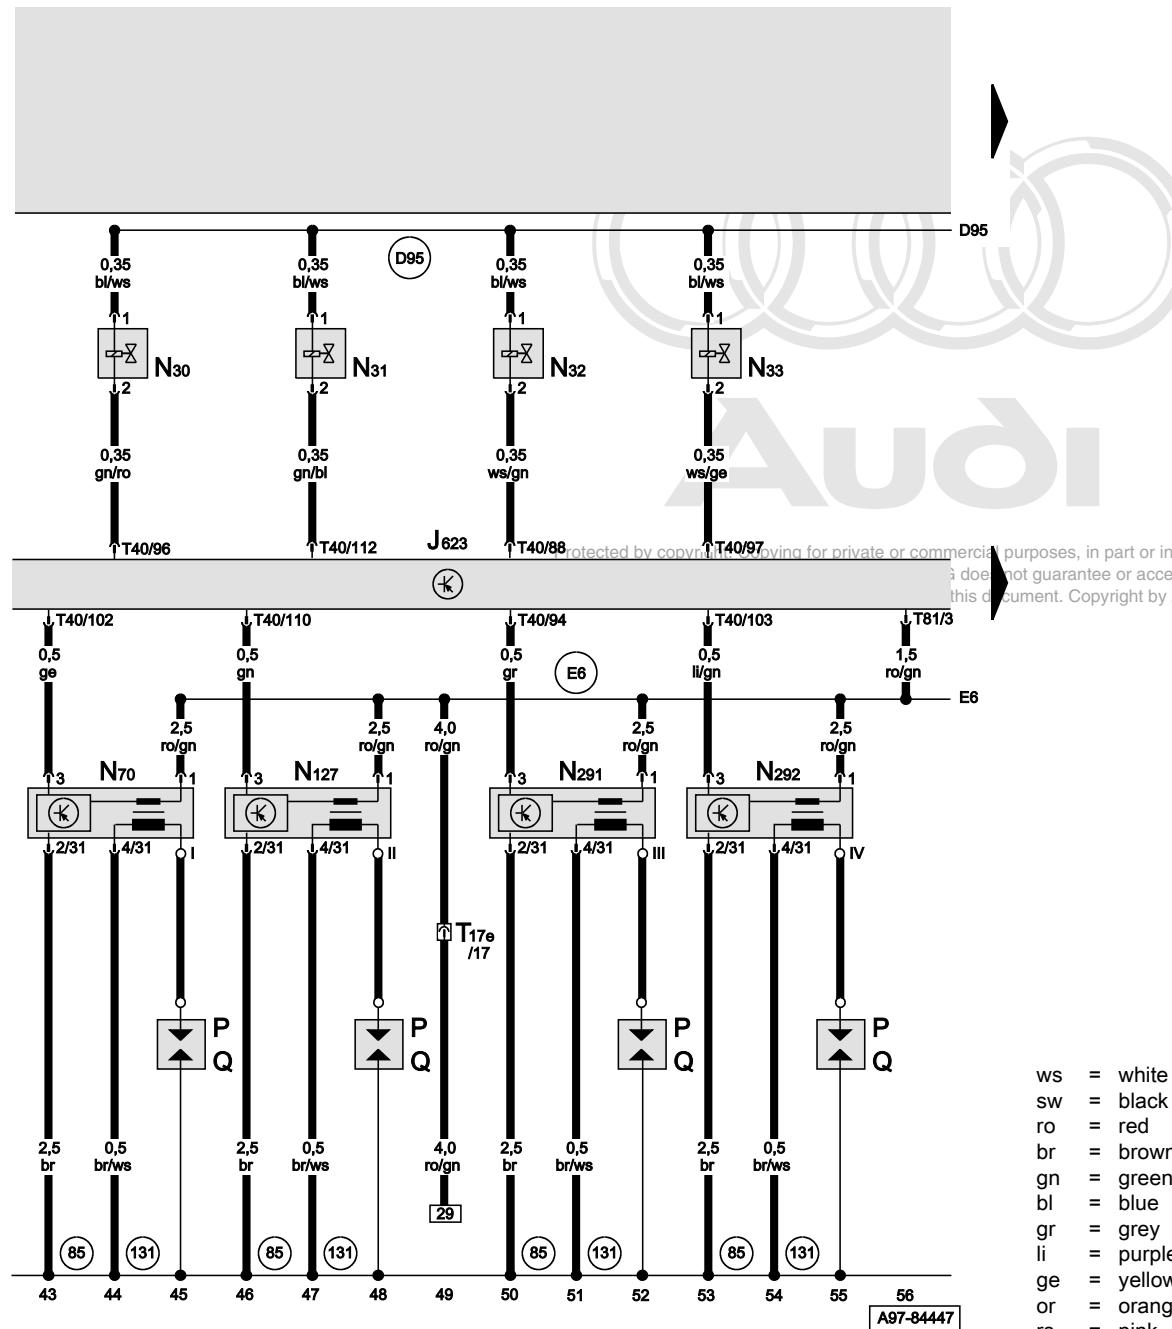

Engine control unit, injector, cylinder 1 - 4, ignition coil 1 - 4 with output stage

- J623 Engine control unit
- N30 Injector, cylinder 1
- N31 Injector, cylinder 2
- N32 Injector, cylinder 3
- N33 Injector, cylinder 4
- N70 Ignition coil 1 with output stage
- N127 Ignition coil 2 with output stage
- N291 Ignition coil 3 with output stage
- N292 Ignition coil 4 with output stage
- P Spark plug connector
- Q Spark plugs
- T17e 17-pin connector, red, in electronics box in plenum chamber
- T40 40-pin connector, black, on engine control unit
- T81 81-pin connector, black, on engine control unit
- 85 Earth connection 1, in engine compartment wiring harness
- 131 Earth connection 2, in engine compartment wiring harness
- D95 Connection (injectors), in engine compartment wiring harness
- E6 Positive connection 1 (15), in Motronic wiring harness

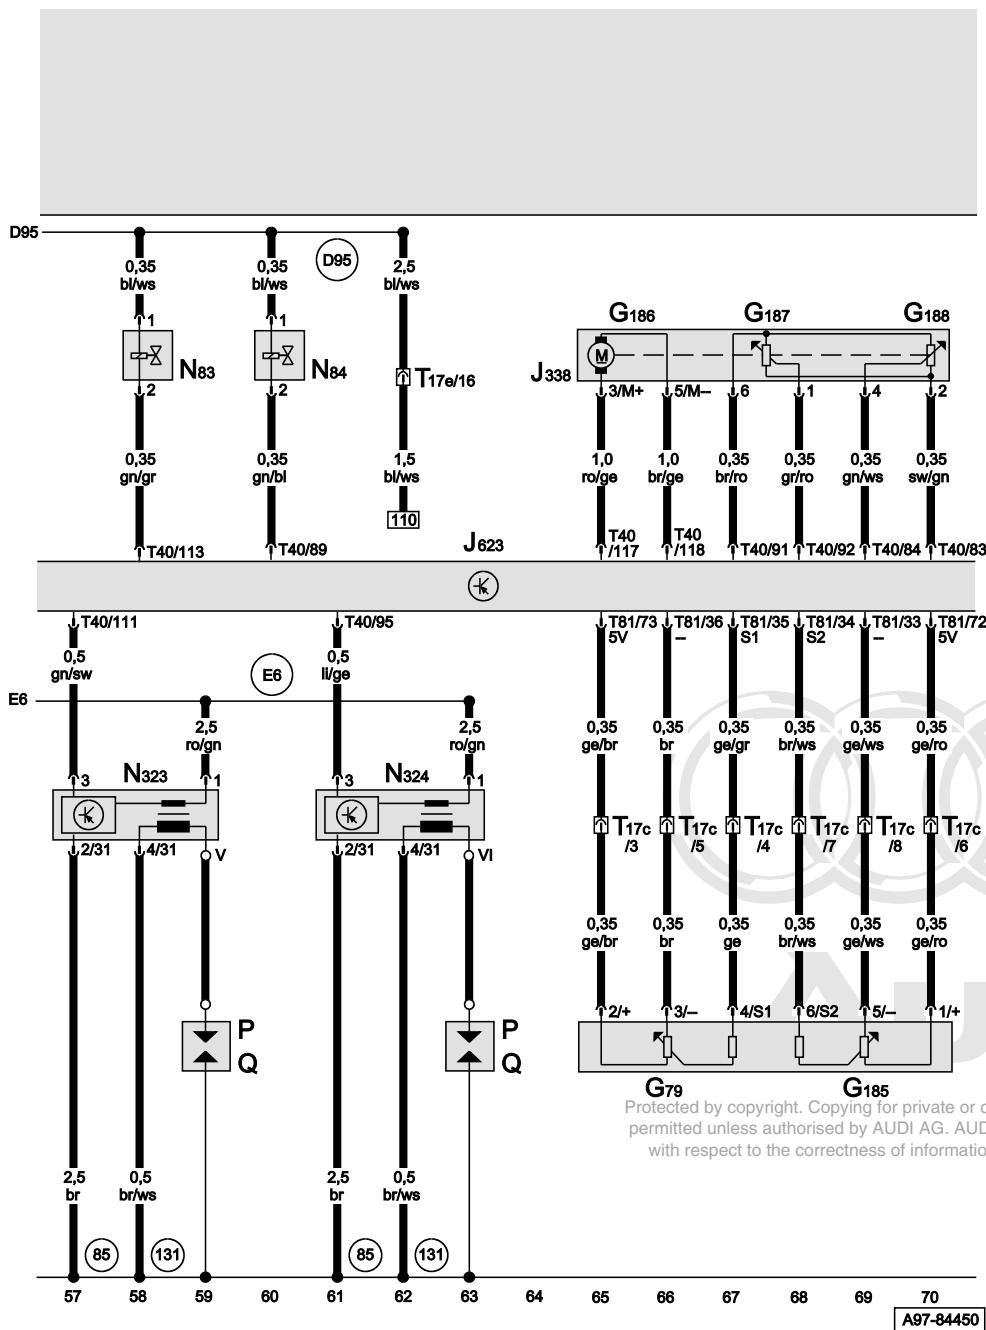

Engine control unit, injector, cylinder 5 and 6, ignition coil 5 and 6 with output stage, throttle valve module, accelerator position sender

- G79 Accelerator position sender
- G185 Accelerator position sender 2
- G186 Throttle valve drive (electric power control)
- G187 Throttle valve drive angle sender 1 for electric throttle
- G188 Throttle valve drive angle sender 2 for electric throttle
- J338 Throttle valve module
- J623 Engine control unit
- N83 Injector, cylinder 5
- N84 Injector, cylinder 6
- N323 Ignition coil 5 with output stage
- N324 Ignition coil 6 with output stage
- P Spark plug connector
- Q Spark plugs
- T17c 17-pin connector, brown, in electronics box in plenum chamber
- T17e 17-pin connector, red, in electronics box in plenum chamber
- T40 40-pin connector, black, on engine control unit
- T81 81-pin connector, black, on engine control unit
- 85 Earth connection 1, in engine compartment wiring harness
- 131 Earth connection 2, in engine compartment wiring harness
- D95 Connection (injectors), in engine compartment wiring harness
- E6 Positive connection 1 (15), in Motronic wiring harness

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. © AUDI AG.

ws = white

sw = black

gn = green

bl = blue


gr = grey

li = purple

ge = yellow

or = orange

rs = pink

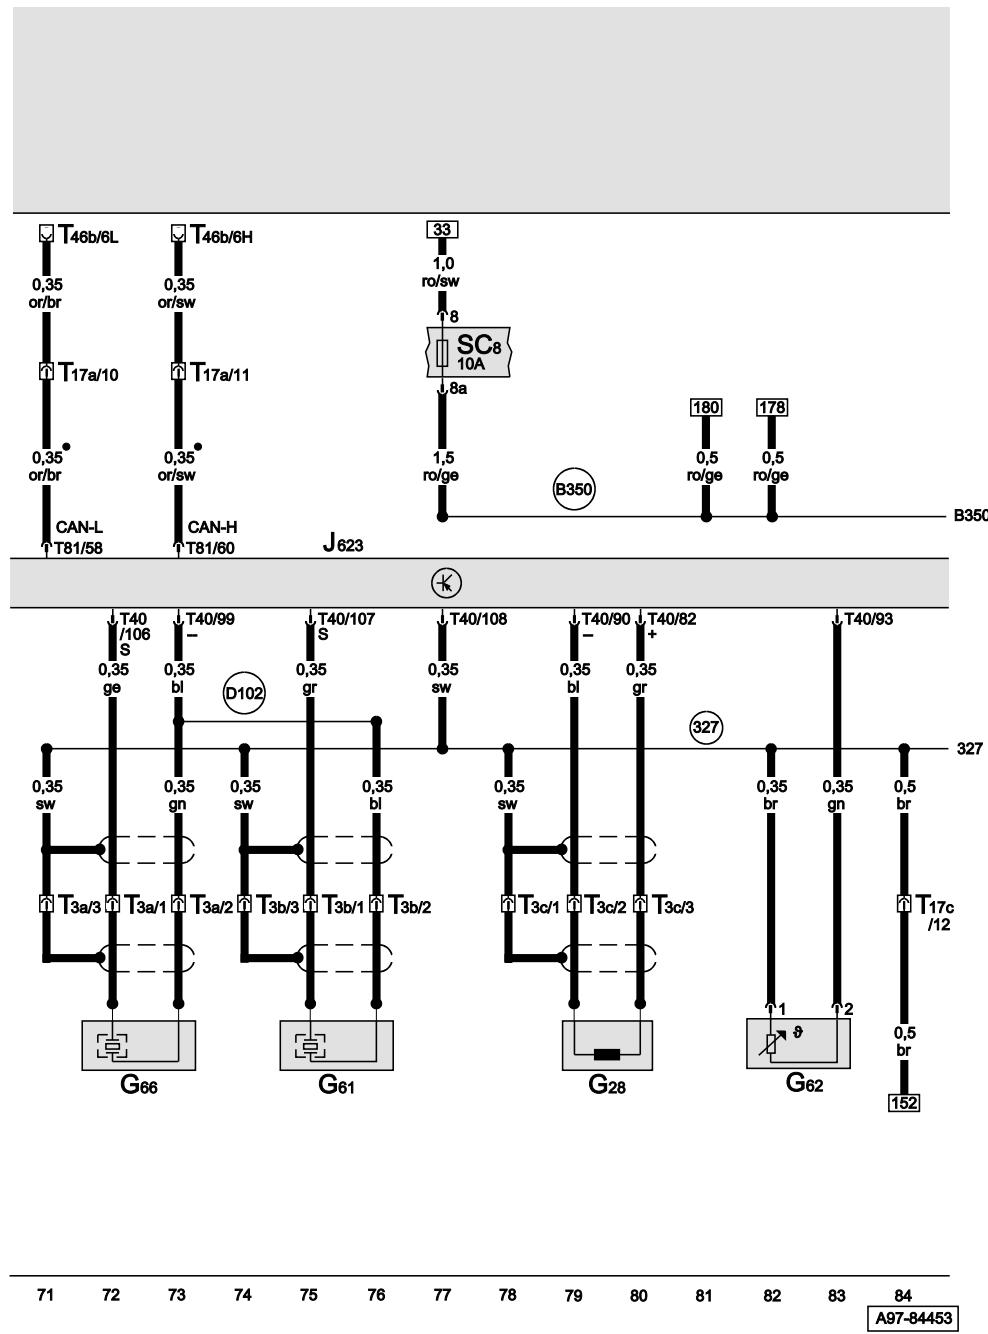

Engine control unit, knock sensor 1, knock sensor 2, engine speed sender


- G28 Engine speed sender
- G61 Knock sensor 1
- G62 Coolant temperature sender
- G66 Knock sensor 2
- J623 Engine control unit
- SC8 Fuse 8 on fuse holder
- T3a 3-pin connector, blue, on knock sensor 2
- T3b 3-pin connector, blue, on knock sensor 1
- T3c 3-pin connector, grey, on engine speed sender
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T17c 17-pin connector, brown, in electronics box in plenum chamber
- T40 40-pin connector, black, on engine control unit
- T46b 46-pin connector, black, CAN bus separating connector right
- T81 81-pin connector, black, on engine control unit
- 327 Earth connection (sender earth), in engine compartment wiring harness
- B350 Positive connection 1 (87a), in main wiring harness
- D102 Connection 2, in engine compartment wiring harness
 - CAN bus (data wire)



ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

ro = red by copyright. Copying for private or commercial purposes, in part or in whole, is not allowed unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


Engine control unit, Hall sender, inlet camshaft control valve

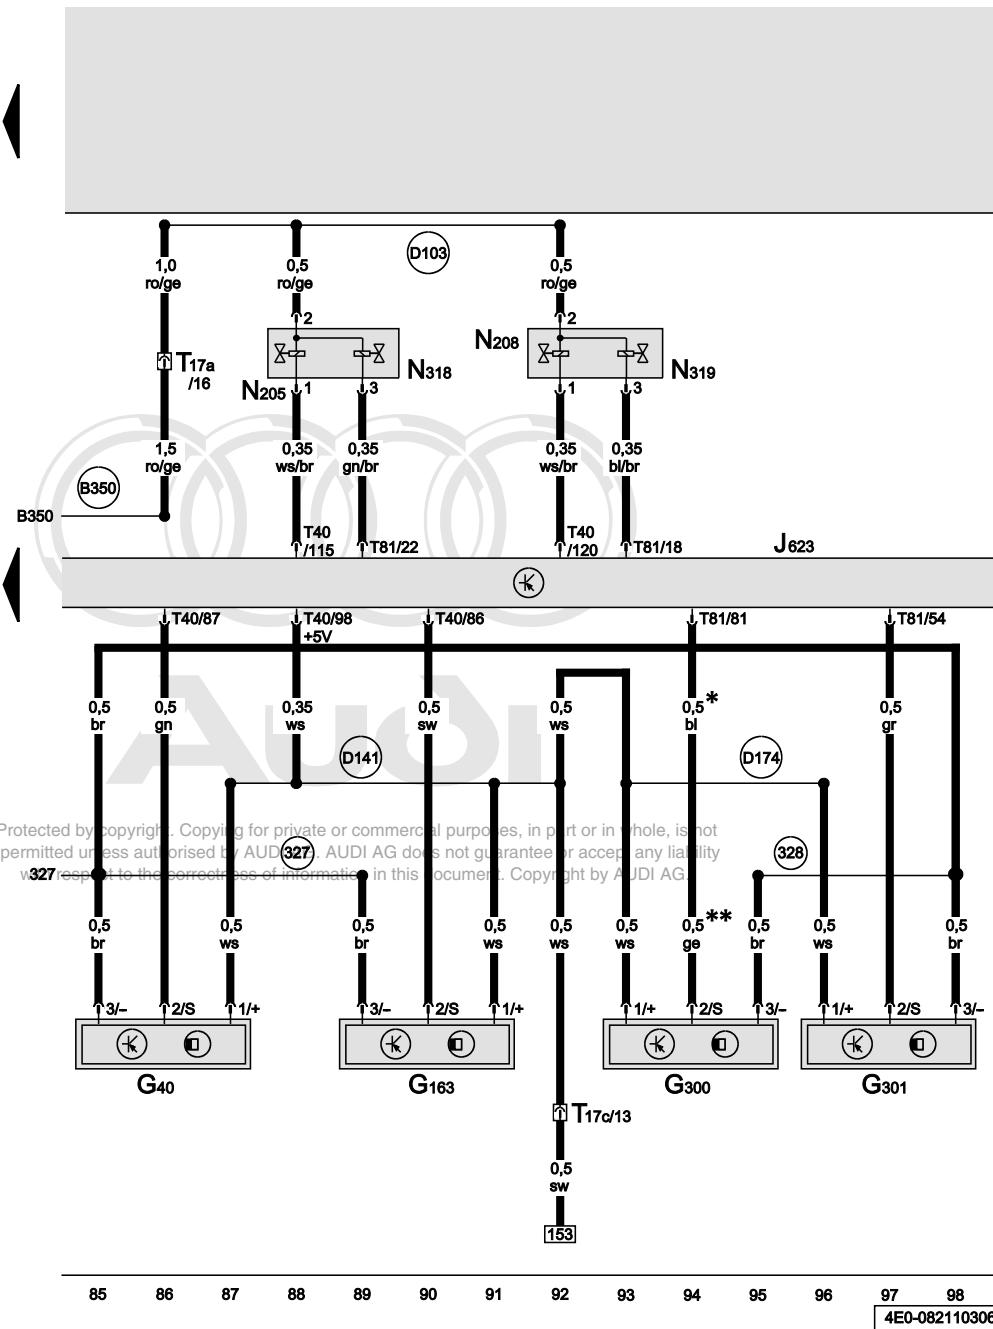

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG.
v.327 respect to the correctness of information in this document. Copyright by AUDI AG


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

 4E0-082110306




Engine control unit, lambda probe, lambda probe 2

- G39 Lambda probe
 G108 Lambda probe 2
 J623 Engine control unit
 SC5 Fuse 5 on fuse holder
 SC6 Fuse 6 on fuse holder
 SC7 Fuse 7 on fuse holder
 SC29 Fuse 29 on fuse holder
 SC31 Fuse 31 on fuse holder
 T6s 6-pin connector, black, for lambda probe
 T6u 6-pin connector, brown, for lambda probe 2
 T17e 17-pin connector, red, in electronics box in plenum chamber
 T81 81-pin connector, black, on engine control unit
 Z19 Lambda probe heater
 Z28 Lambda probe 2 heater
- B146 Positive connection 1 (87), in interior wiring harness

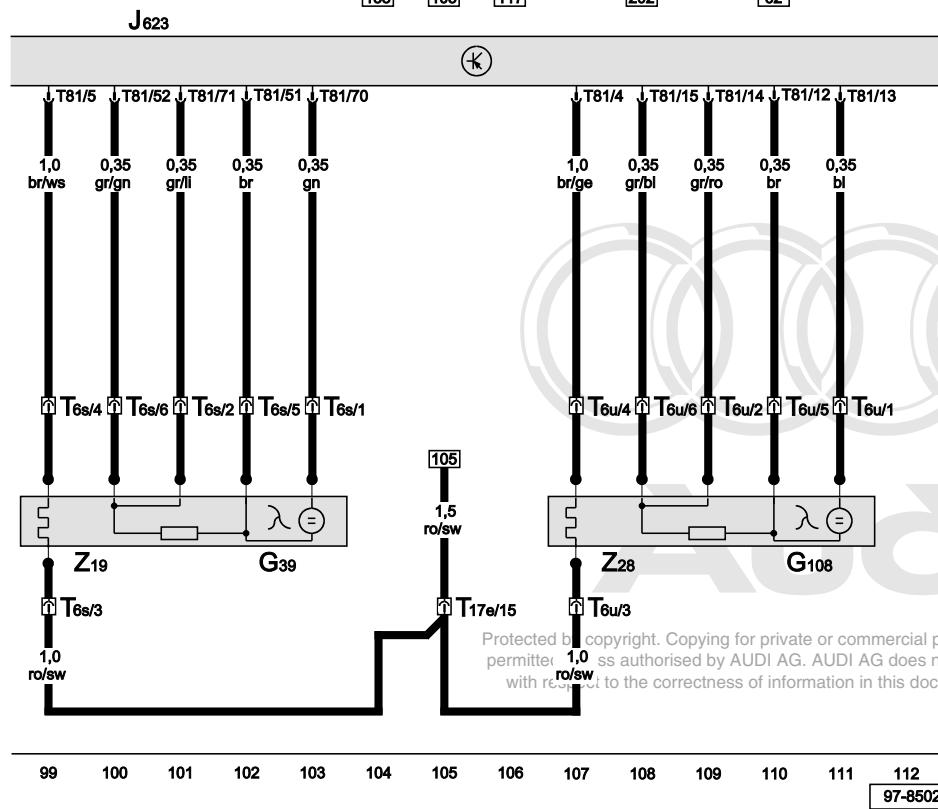

ws = white
 sw = black
 ro = red
 br = brown
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

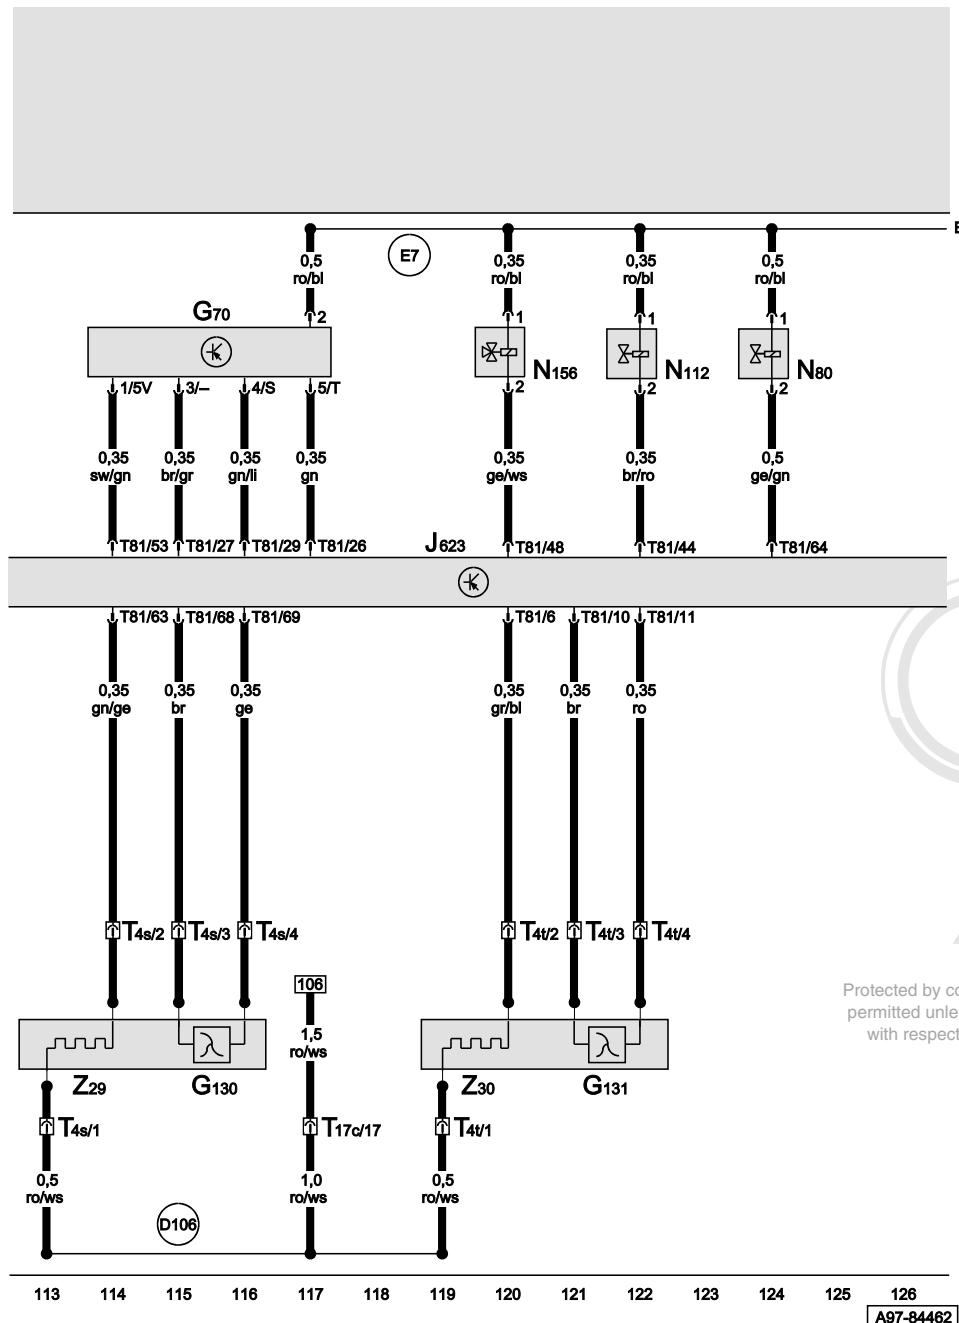


Engine control unit, lambda probe after catalytic converter,
air mass meter, variable intake manifold change-over valve,
secondary air inlet valve, active charcoal filter system
solenoid valve 1

- G70 Air mass meter
- G130 Lambda probe after catalytic converter
- G131 Lambda probe 2 after catalytic converter
- J623 Engine control unit
- N80 Activated charcoal filter system solenoid valve 1
- N112 Secondary air inlet valve
- N156 Variable intake manifold change-over valve
- T4s 4-pin connector, green, for lambda probe 1 after catalytic converter
- T4t 4-pin connector, brown, for lambda probe 2 after catalytic converter
- T17c 17-pin connector, brown, in electronics box in plenum chamber
- T81 81-pin connector, black, on engine control unit
- Z29 Lambda probe 1 heater after catalytic converter
- Z30 Lambda probe 2 heater after catalytic converter
- (D106) Connection 4, in engine compartment wiring harness
- (E7) Connection (87a), in Motronic wiring harness

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

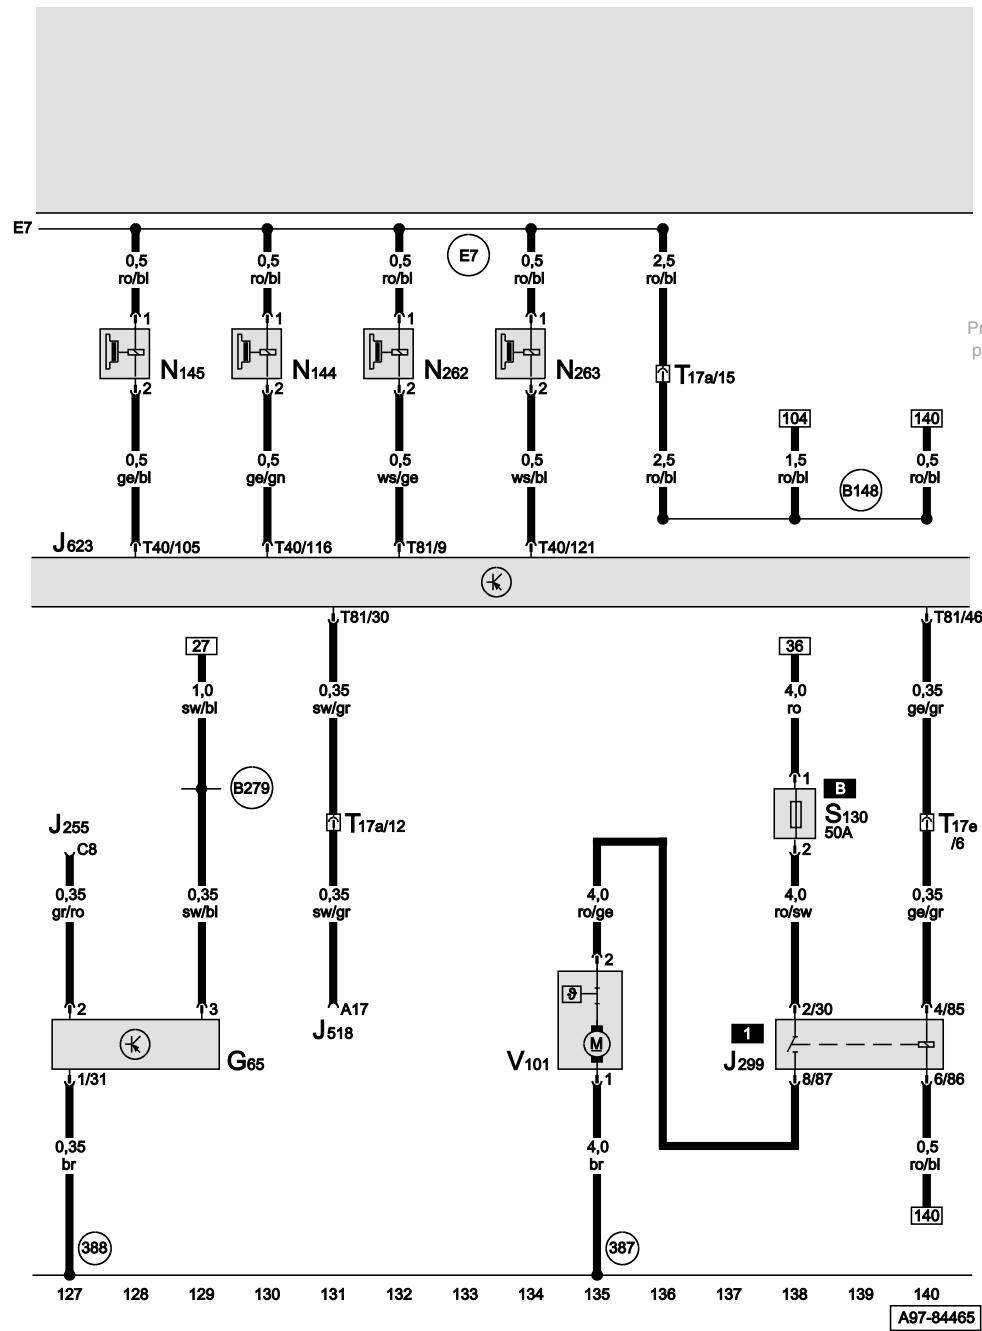


Protected by copyright. Copying for private, individual study purposes, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- G65 High pressure sender
 J255 Climatronic control unit
 J299 Secondary air pump relay
 J518 Entry and start authorisation control unit
 J623 Engine control unit
 N144 Left electrohydraulic engine mounting solenoid valve
 N145 Right electrohydraulic engine mounting solenoid valve
 N262 Gearbox mounting valve 1
 N263 Gearbox mounting valve 2
 S130 Secondary air pump fuse
 T17a 17-pin connector, black, in electronics box in plenum chamber
 T17e 17-pin connector, red, in electronics box in plenum chamber
 T40 40-pin connector, black, on engine control unit
 T81 81-pin connector, black, on engine control unit
 V101 Secondary air pump motor
 (387) Earth connection 22, in main wiring harness
 (388) Earth connection 23, in main wiring harness
 (B148) Positive connection 3 (87), in interior wiring harness
 (B279) Positive connection 3 (15a), in main wiring harness
 (E7) Connection (87a), in Motronic wiring harness

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink


A97-84465

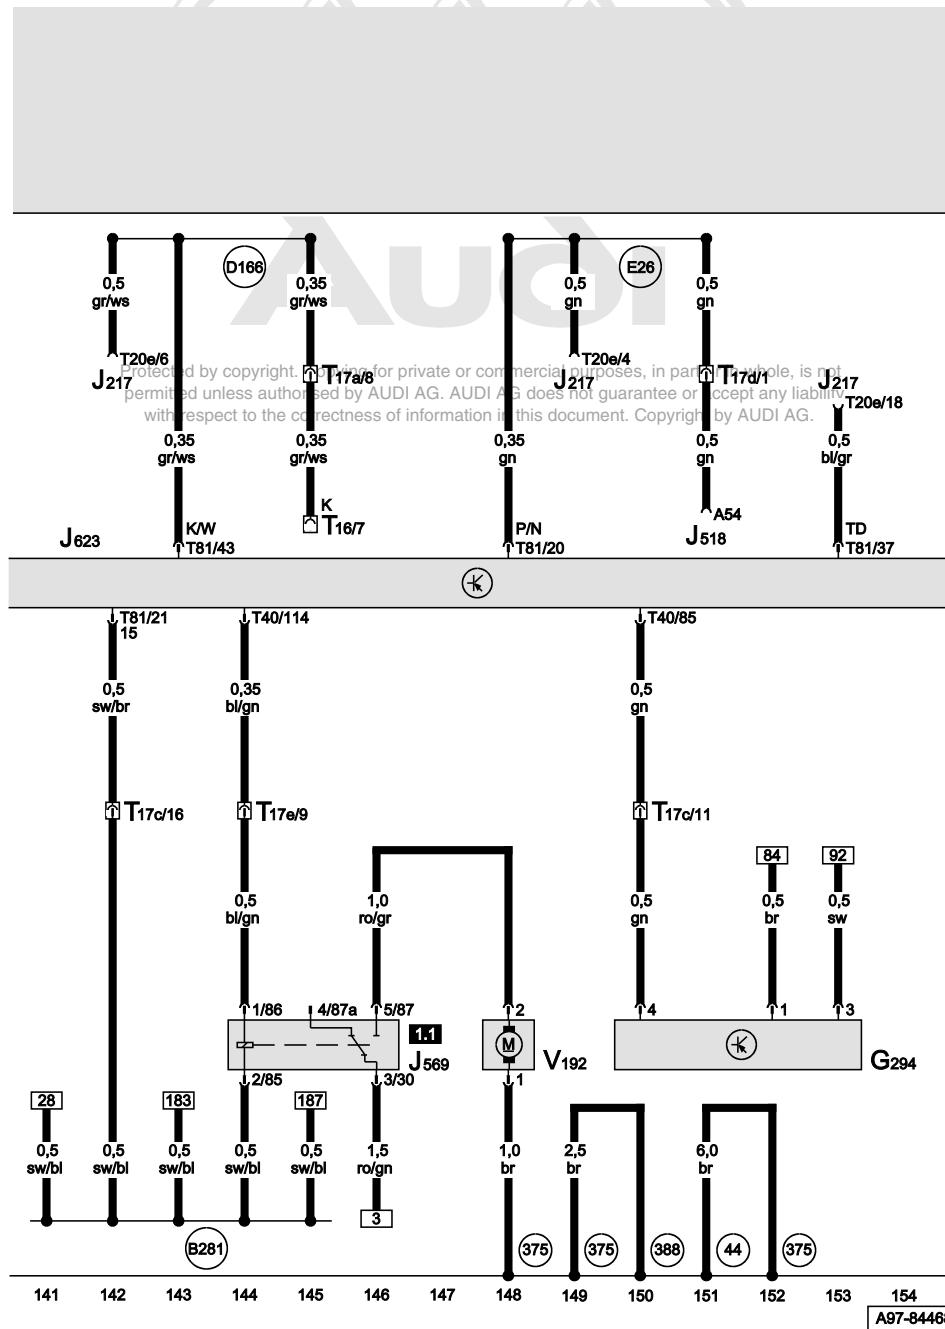

Engine control unit, brake servo relay, vacuum pump for brakes, brake servo pressure sensor

- G294 Brake servo pressure sensor
- J217 Automatic gearbox control unit
- J518 Entry and start authorisation control unit
- J569 Brake servo relay
- J623 Engine control unit
- T16 16-pin connector, black, diagnostic connection
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T17c 17-pin connector, brown, in electronics box in plenum chamber
- T17d 17-pin connector, blue, in electronics box in plenum chamber
- T17e 17-pin connector, red, in electronics box in plenum chamber
- T20e 20-pin connector, black, on gearbox
- T40 40-pin connector, black, on engine control unit
- T81 81-pin connector, black, on engine control unit
- V192 Vacuum pump for brakes
- 44 Earth point, lower part of left A-pillar
- 375 Earth connection 10, in main wiring harness
- 388 Earth connection 23, in main wiring harness
- B281 Positive connection 5 (15a), in main wiring harness
- D166 Connection (K-diagnosis wiring), in engine compartment wiring harness
- E26 Connection selector lever lock, in Motronic wiring harness

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

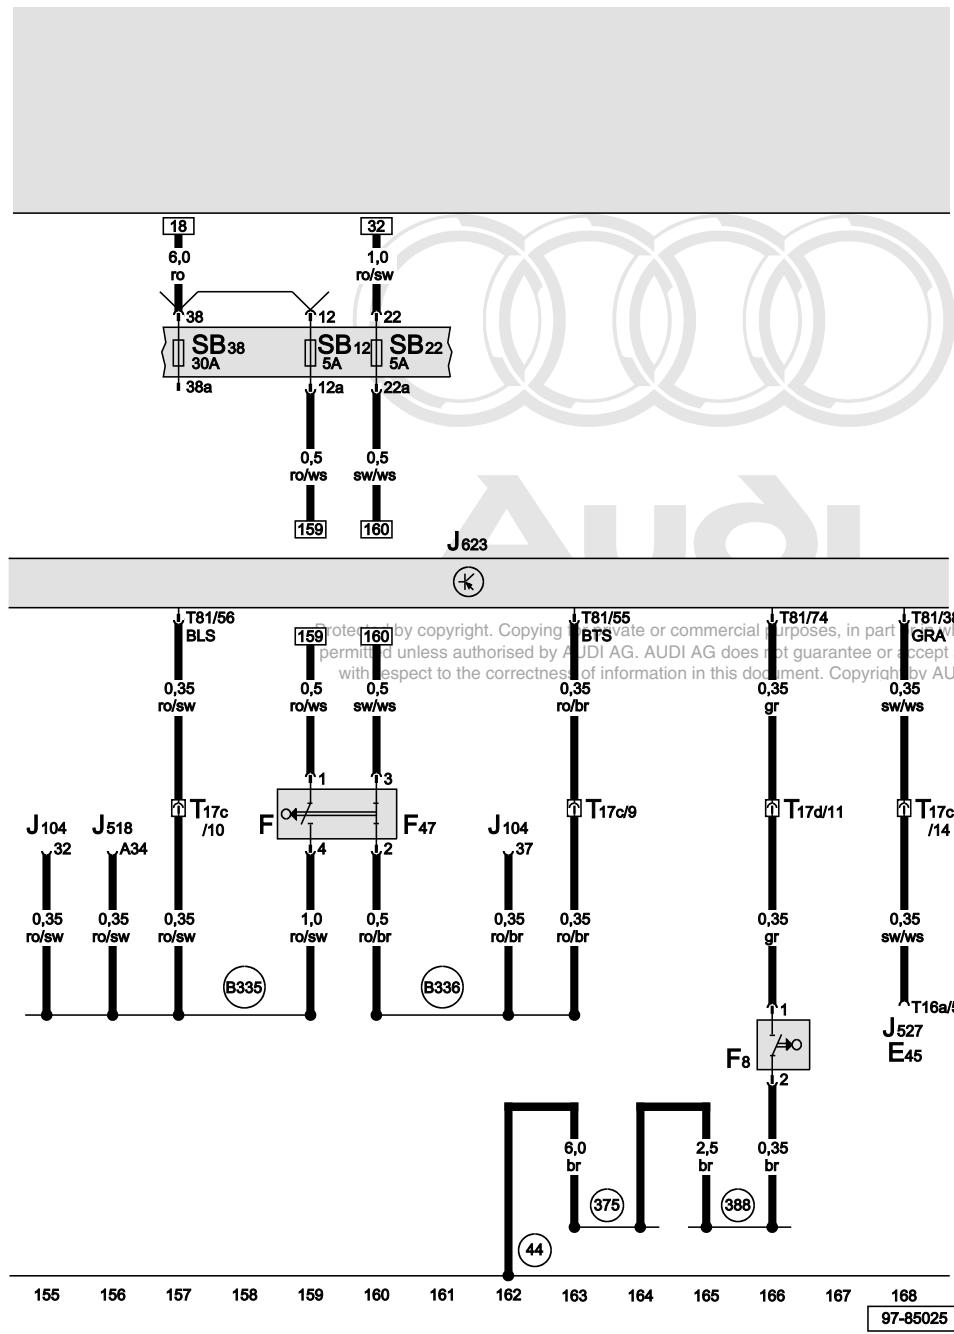


Engine control unit, brake light switch, kick-down switch,
brake pedal switch, cruise control system switch

- E45 Cruise control system switch
- F Brake light switch
- F8 Kick-down switch
- F47 Brake pedal switch
- J104 ABS control unit
- J518 Entry and start authorisation control unit
- J527 Steering column electronics control unit
- J623 Engine control unit
- SB12 Fuse 12 on fuse holder
- SB22 Fuse 22 on fuse holder
- SB38 Fuse 38 on fuse holder
- T16a 16-pin connector, on steering column electronics control unit
- T17c 17-pin connector, brown, in electronics box in plenum chamber
- T17d 17-pin connector, blue, in electronics box in plenum chamber
- T81 81-pin connector, black, on engine control unit

- 44 Earth point, lower part of left A-pillar
- 375 Earth connection 10, in main wiring harness
- 388 Earth connection 23, in main wiring harness
- B335 Connection 1 (54), in main wiring harness
- B336 Connection 2 (54), in main wiring harness

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

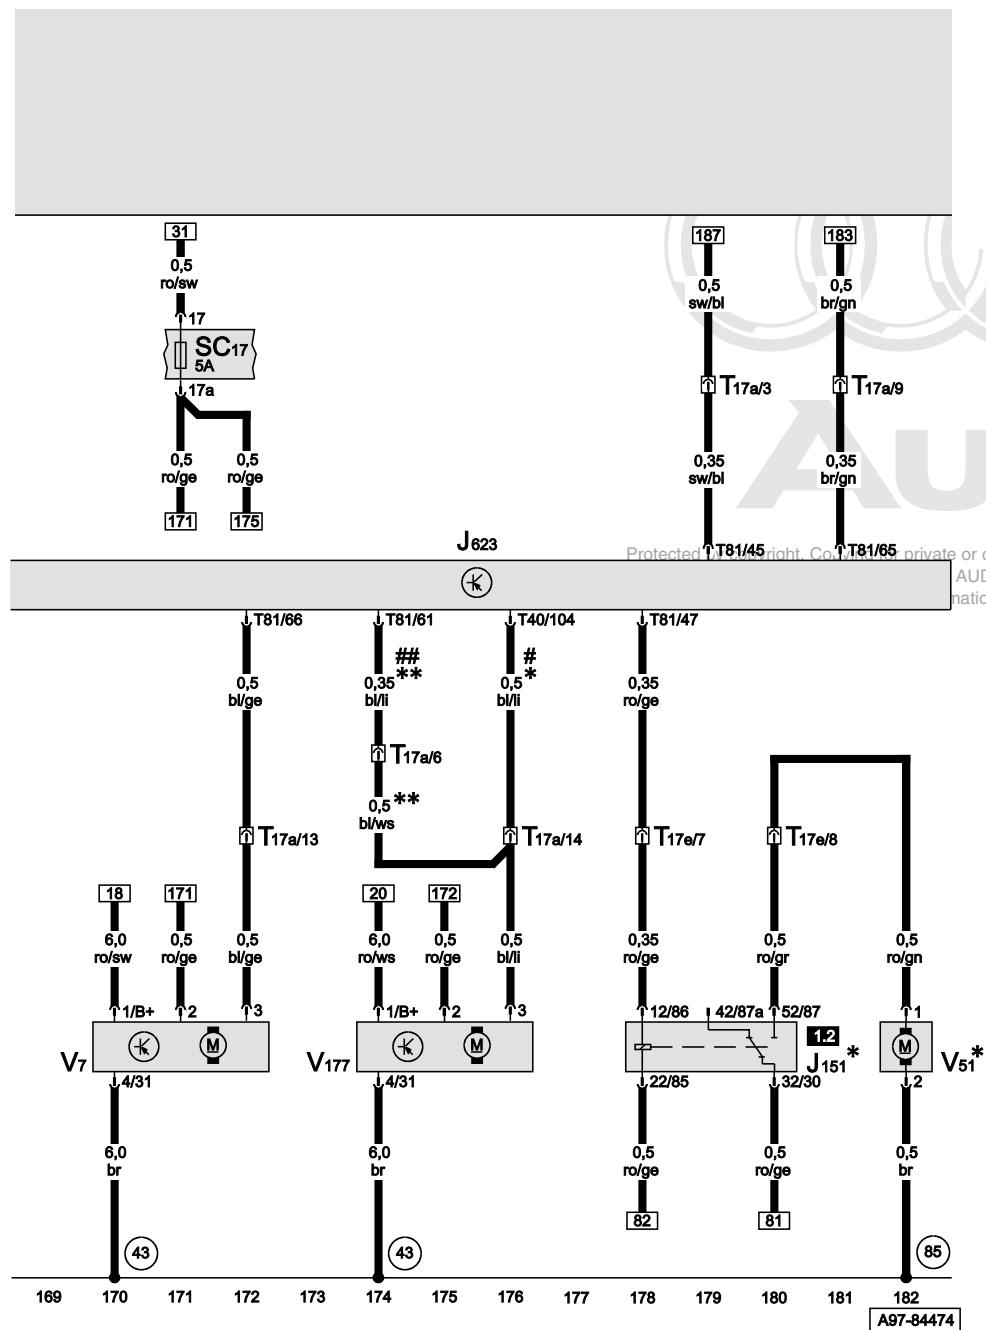

Engine control unit, radiator fan, radiator fan 2, continued coolant circulation relay, continued coolant circulation pump

 
J151 Continued coolant circulation relay
 J623 Engine control unit
 SC17 Fuse 17 on fuse holder
 T17a 17-pin connector, black, in electronics box in plenum chamber
 T17e 17-pin connector, red, in electronics box in plenum chamber
 T40 40-pin connector, black, on engine control unit
 T81 81-pin connector, black, on engine control unit
 V7 Radiator fan
 V51 Continued coolant circulation pump
 V177 Radiator fan 2

43 Earth point, lower part of right A-pillar
 85 Earth connection 1, in engine compartment wiring harness

* only countries with hot climate
 ** without countries with hot climate
 # models with trailer towing attachment
 ## models without trailer towing attachment

Protected by AUDI AG
 private or commercial purposes, in part or in whole, is not
 AUDI AG does not guarantee or accept any liability for any damage
 information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink



Fuel pump relay, electric fuel pump 2 relay, control unit in dash panel insert

- G Fuel gauge sender
- G6 Fuel system pressurisation pump
- G237 Fuel gauge sender 3
- J17 Fuel pump relay
- J49 Electric fuel pump 2 relay
- J285 Control unit in dash panel insert
- SF2 Fuse 2 on fuse holder
- T4a 4-pin connector, under right cover on vehicle floor
- T6e 6-pin connector, under right cover on vehicle floor
- T32 32-pin connector, blue, on dash panel insert
- Y24 Display in dash panel insert


Protected by copyright. Copying for private or commercial purposes is only permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

361 Earth connection (fuel gauge sender), in main wiring harness

390 Earth connection 25, in main wiring harness

675 Earth point 2, on right in luggage compartment

B299 Positive connection 3 (30), in main wiring harness


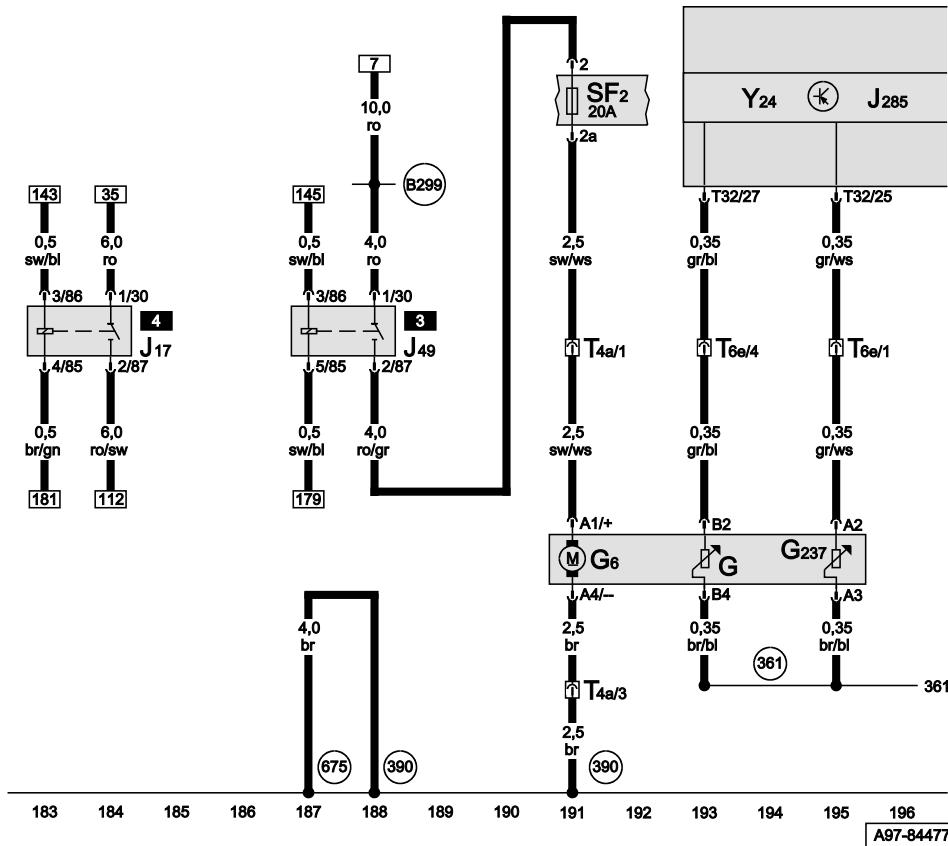


- | | |
|----|----------|
| ws | = white |
| sw | = black |
| ro | = red |
| br | = brown |
| gn | = green |
| bl | = blue |
| gr | = grey |
| li | = purple |
| ge | = yellow |
| or | = orange |
| rs | = pink |

A97-84477

Control unit in dash panel insert, fuel pump, fuel gauge, oil pressure warning lamp, fuel gauge sender

- F1 Oil pressure switch
- G1 Fuel gauge
- G23 Fuel pump
- G169 Fuel gauge sender 2
- G393 Fuel gauge sender 4
- J285 Control unit in dash panel insert
- K3 Oil pressure warning lamp
- T4a 4-pin connector, under right cover on vehicle floor
- T6e 6-pin connector, under right cover on vehicle floor
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T32 32-pin connector, blue, on dash panel insert
- Y24 Display in dash panel insert
- 361 Earth connection (fuel gauge sender), in main wiring harness
- 390 Earth connection 25, in main wiring harness


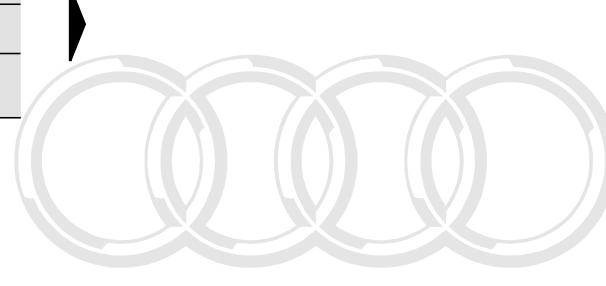
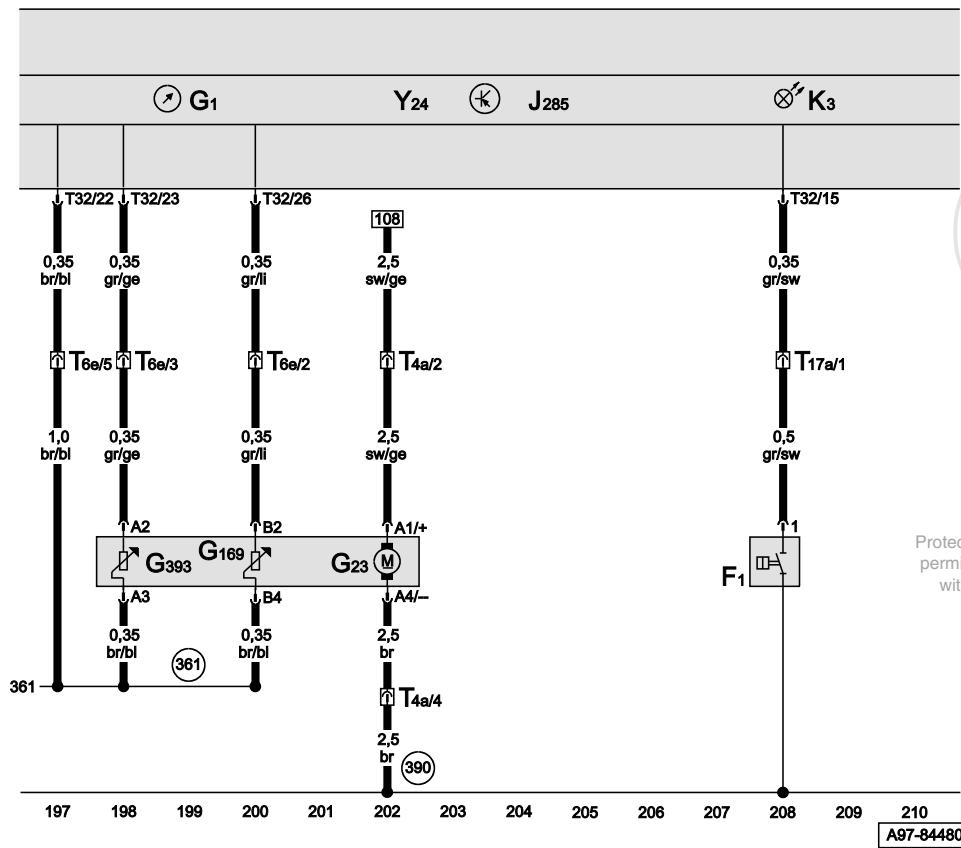


Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

 A97-84480

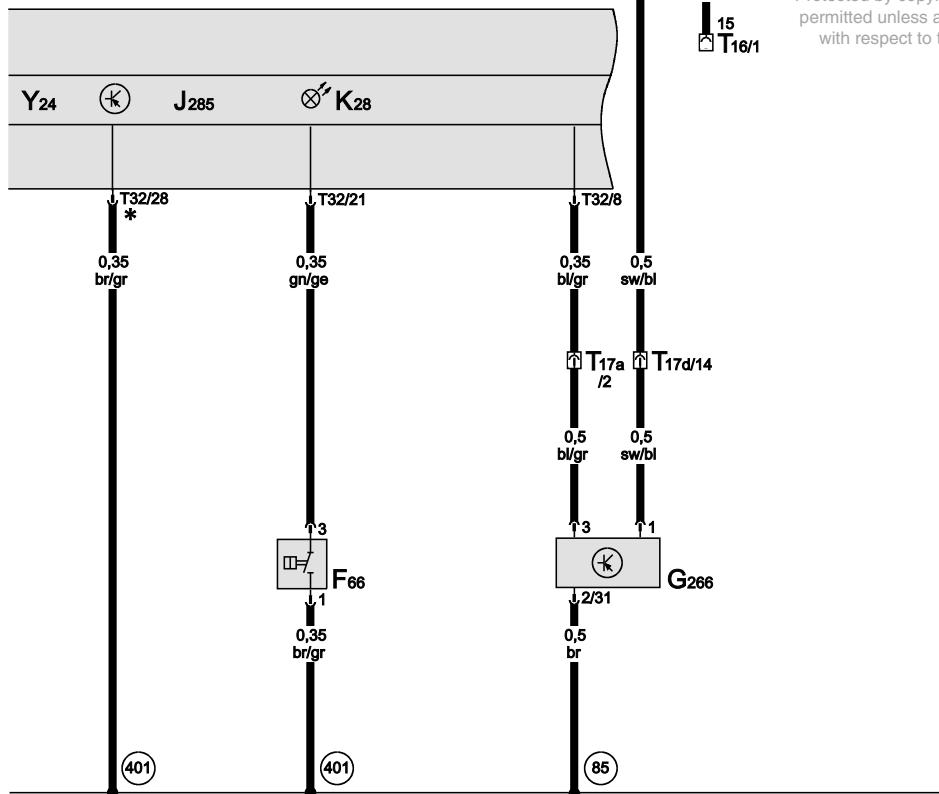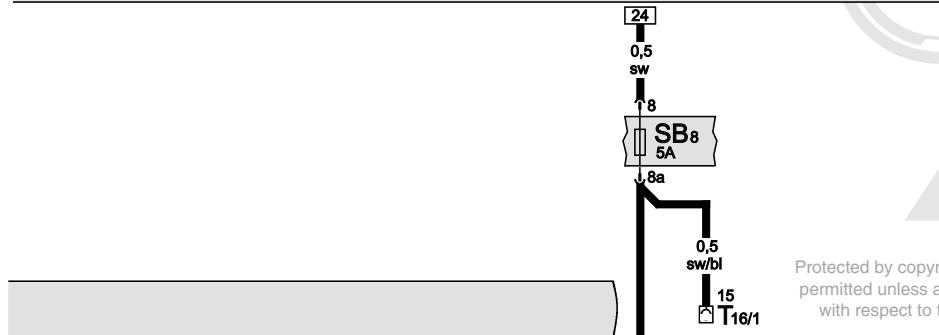

211 212 213 214 215 216 217 218 219 220 221 222 223 224
A97-84570

Control unit in dash panel insert, coolant shortage indicator switch, oil level and oil temperature sender, coolant temperature and coolant shortage warning lamp

F66 Coolant shortage indicator switch
G266 Oil level and oil temperature sender
J285 Control unit in dash panel insert
K28 Coolant temperature and coolant shortage warning lamp
SB8 Fuse 8 on fuse holder

T16 16-pin connector, black, diagnostic connection
T17a 17-pin connector, black, in electronics box in plenum chamber
T17d 17-pin connector, blue, in electronics box in plenum chamber
T32 32-pin connector, blue, on dash panel insert
Y24 Display in dash panel insert

85 Earth connection 1, in engine compartment wiring harness

401 Earth connection (sender earth), in interior wiring harness


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee the correctness of the information in this document. Copyright by AUDI AG.

* output sender earth

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

Audi A8 4.2 l - Fuel injection engine (246 kW - Motronic - 8-cylinder) engine code BFM, BGK Audi A8 3.7 l - Fuel injection engine (206 kW - Motronic - 8-cylinder) engine code BFL
from model year 2005

Fuse holder, left dash panel

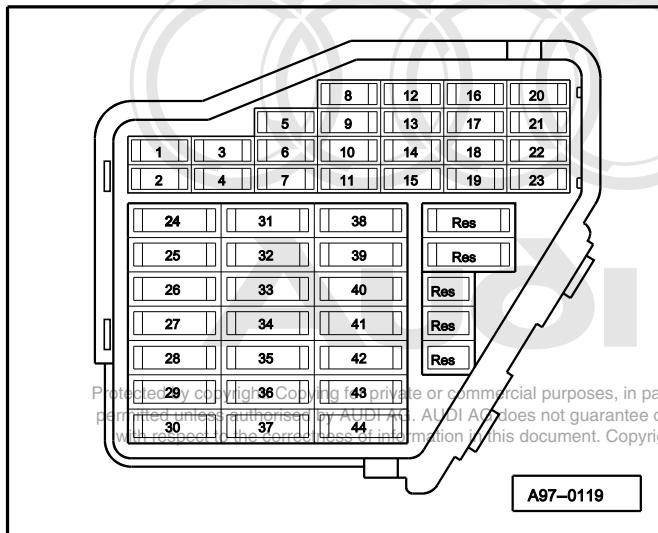

Fuse colours

30 A - green

25 A - white

20 A - yellow

15 A - blue

10 A - red

7,5 A - brown

5 A - beige

1 A - black


SB - Fuses in fuse holder left dash panel

SC - Fuses in fuse holder right dash panel


SD - Fuses in fuse holder left in luggage compartment

SF - Fuses in fuse holder right in luggage compartment

Fuse holder right dash panel

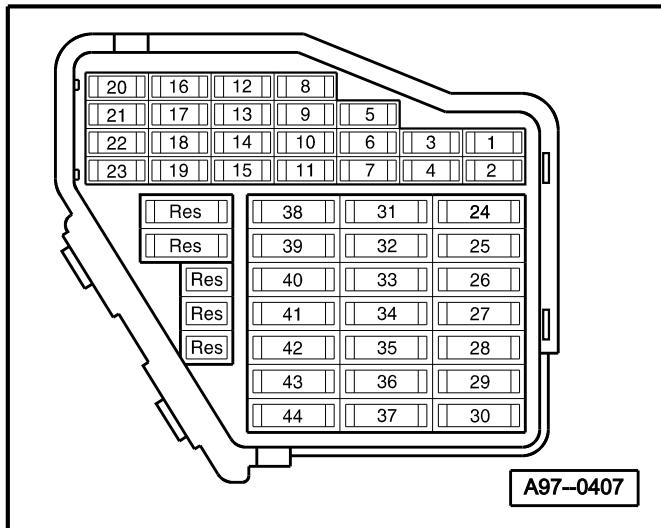

Relay carrier electronics box in plenum chamber

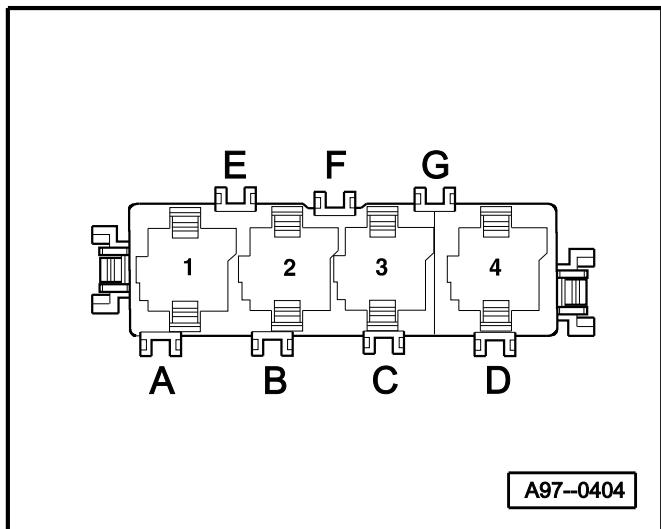

Relay positions


- 1 - Secondary air pump relay (J299)
- 2 - Motronic current supply relay (J271)



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

B - Secondary air pump fuse (S130)


Relay and fuse carrie behind left dash panel

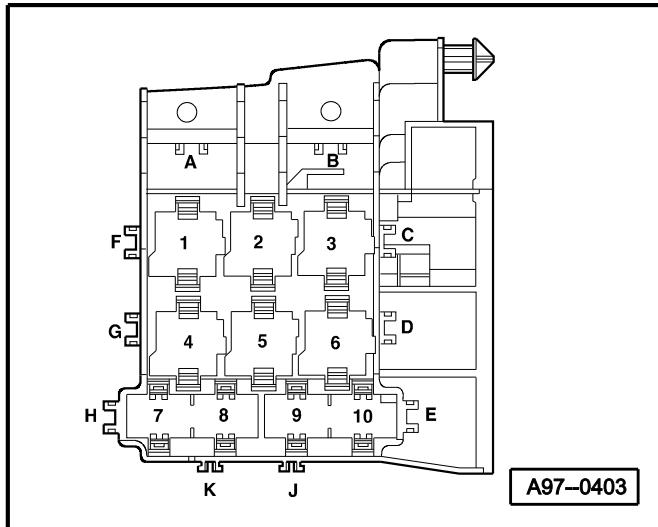

Relay positions

3 - Terminal 15 voltage supply relay (J329)

relay carrier front passenger footwell

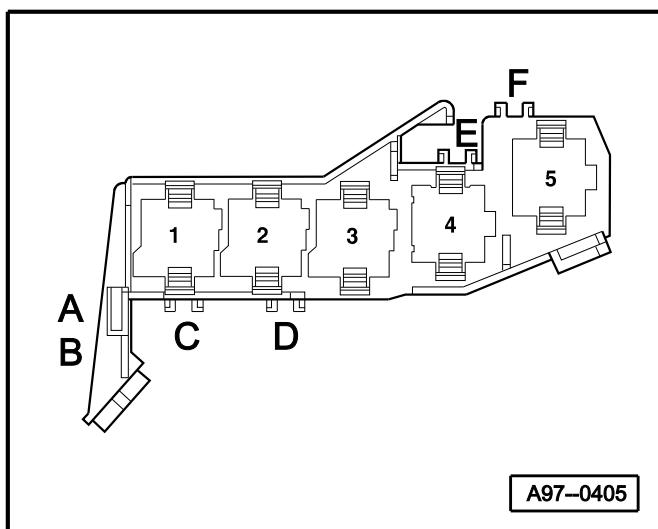


Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Relay positions

- 2 - Starter motor relay (J53)
- 3 - Starter motor relay 2 (J695)
- 4 - Fuel pump relay (J17)

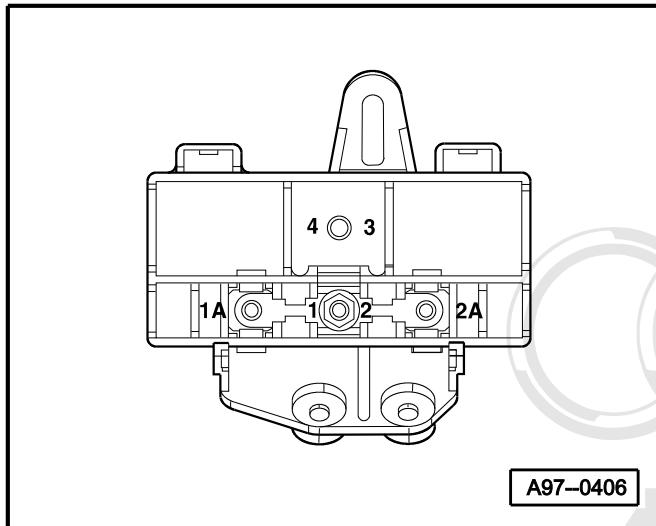
Assignment main fuse carrier right A-pillar

Fuse locations

- 1 - Radiator fan single fuse (S42, 60 A)
- 1A - Radiator fan screw point 1
- 2 - Radiator fan fuse for 2nd speed (S104, 60 A)
- 2A - Radiator fan screw point 2
- 3 - Terminal 30 screw point (battery)
- 4 - Terminal 30 screw point (starter)


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Relay and fuse carrier right in luggage compartment

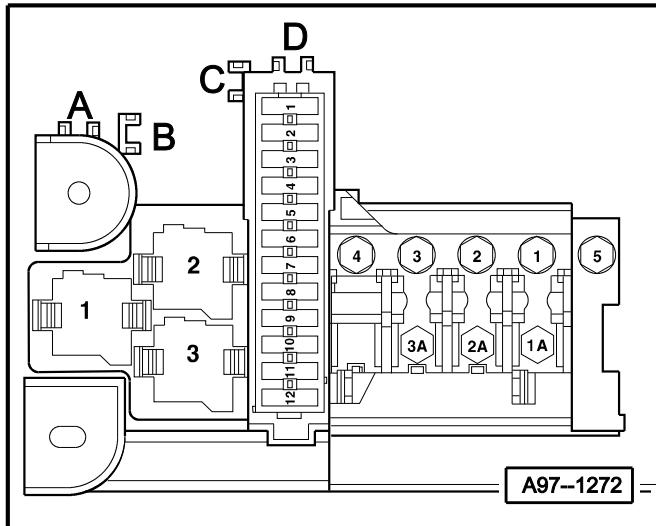


Relay positions

3 - Electric fuel pump 2 relay (J49)

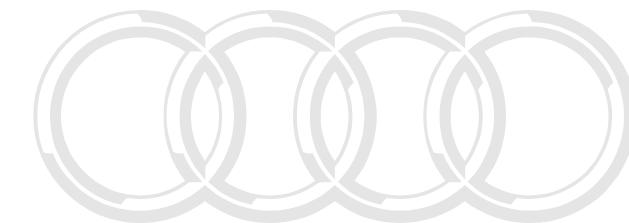


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

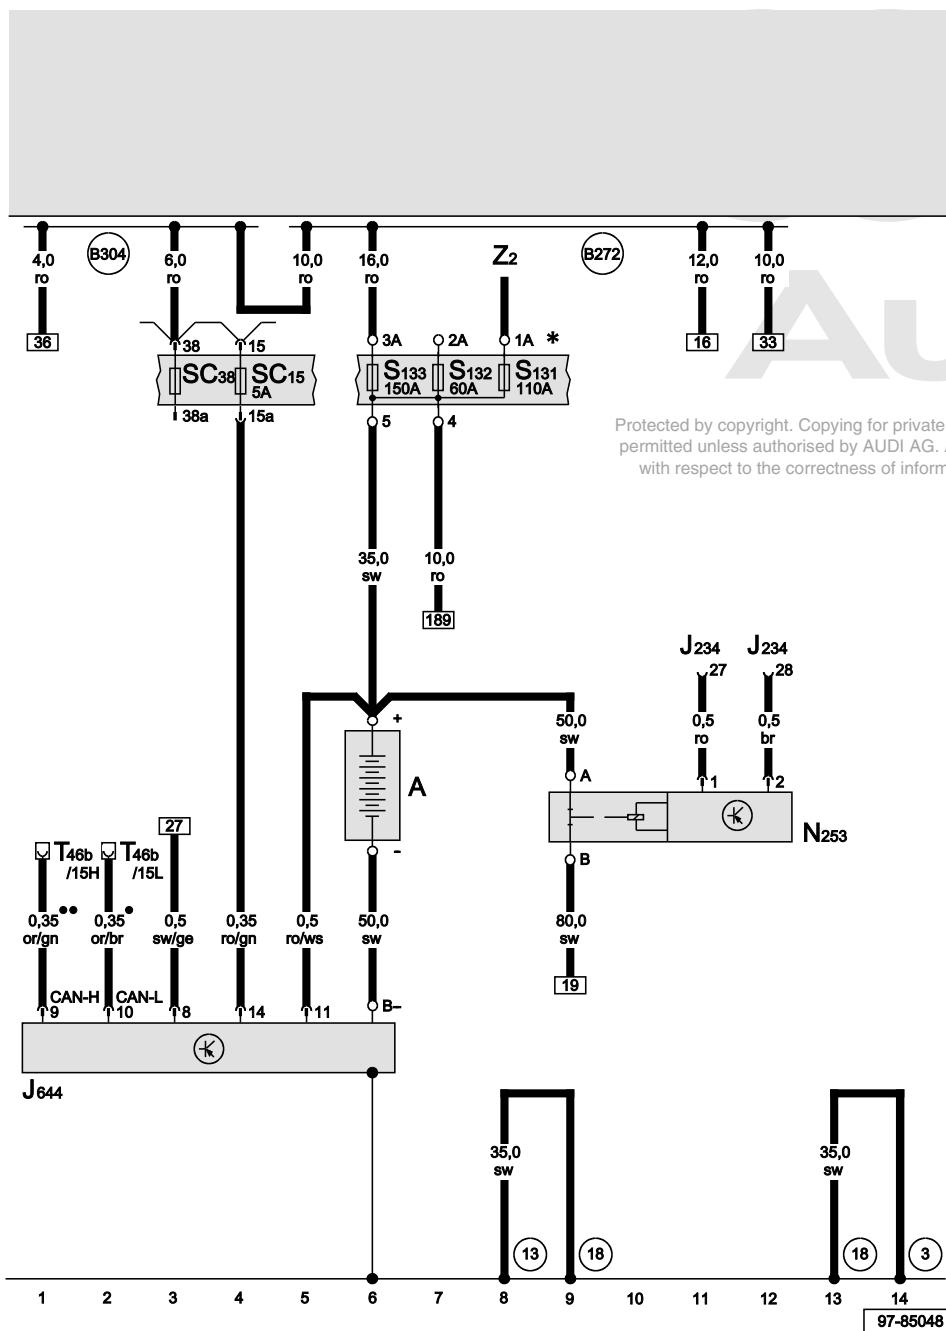

Battery, energy management control unit, battery isolation igniter

- A Battery
- J234 Airbag control unit
- J644 Energy management control unit
- N253 Battery isolation igniter
- S131 Fuse 1, 110 A, in luggage compartment, rear right
- S132 Fuse 2, 60 A, in luggage compartment, rear right
- S133 Fuse 3, 150 A, in luggage compartment, rear right
- SC15 Fuse 15 on fuse holder
- SC38 Fuse 38 on fuse holder
- T46b 46-pin connector, black, CAN separating connector right
- Z2 Heated windsreen
- 3 Earth strap, engine - body
- 13 Earth point, on right in engine compartment
- 18 Earth point on engine block
- B272 Positive connection (30), in main wiring harness
- B304 Positive connection 8 (30), in main wiring harness
- * CAN bus (data wire)
- * In luggage compartment, rear right

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

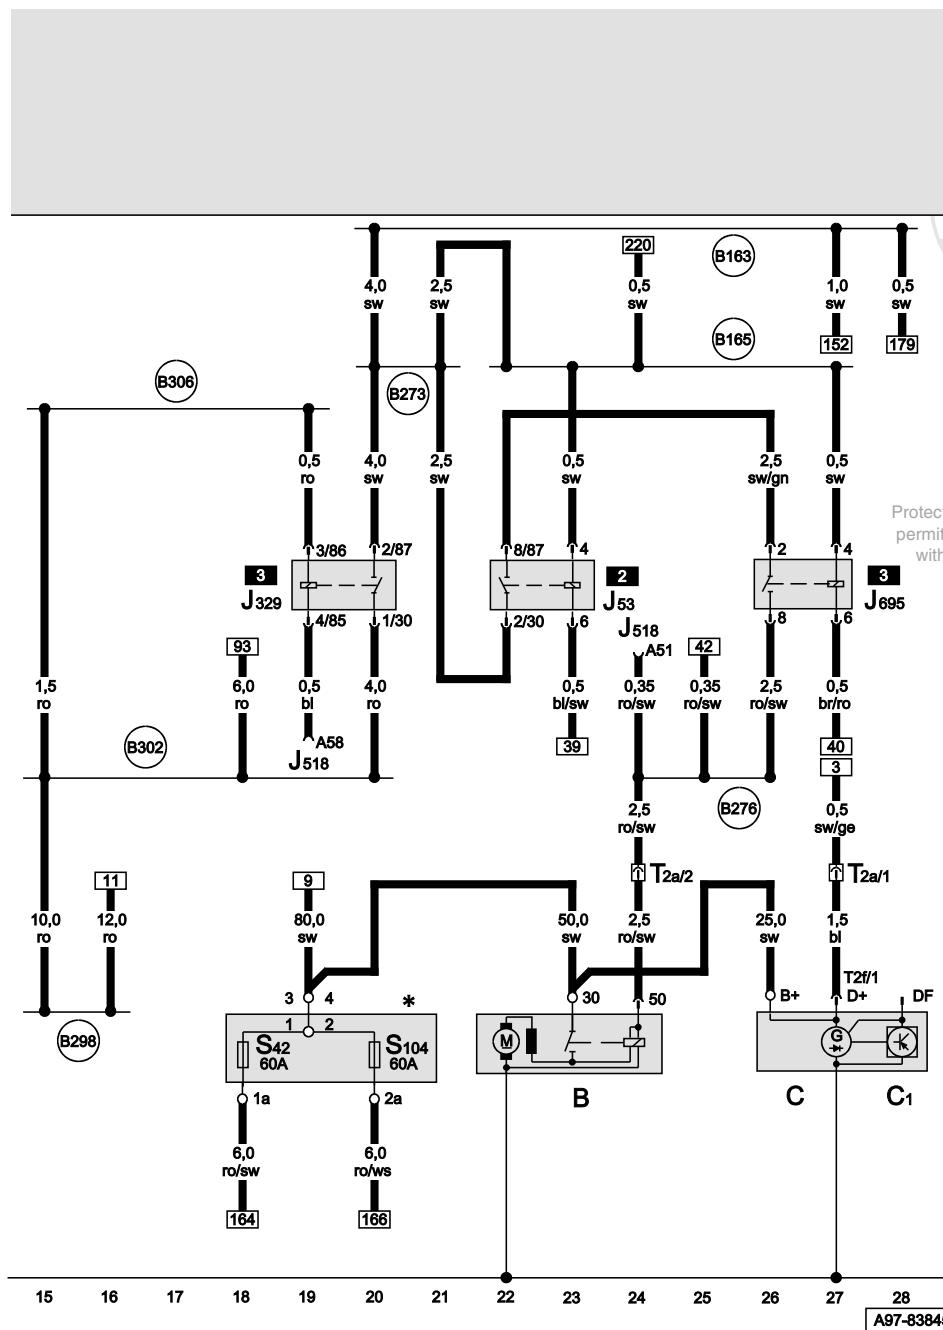

Starter, alternator, terminal 15 voltage supply relay, starter motor relay

- B Starter
- C Alternator
- C1 Voltage regulator
- J53 Starter motor relay
- J329 Terminal 15 voltage supply relay
- J518 Entry and start authorisation control unit
- J695 Starter motor relay 2
- S42 Radiator fan single fuse
- S104 Radiator fan fuse for 2nd speed
- T2a 2-pin connector, black, in front right engine compartment
- T2f 2-pin connector, black, on alternator

B163 Positive connection 1 (15), in interior wiring harness

B165 Positive connection 2 (15), in interior wiring harness

B273 Positive connection (15) in main wiring harness
Protected by copyright. Copying for private or commercial purposes is
permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability
with respect to the correctness of information in this document. Copyright by AUDI AG.

B276 Positive connection (50), in main wiring harness


B298 Positive connection 2 (30), in main wiring harness

B302 Positive connection 6 (30), in main wiring harness

B306 Positive connection 10 (30), in main wiring harness

* Main fuse carrier right A-pillar


- | | |
|----|----------|
| ws | = white |
| sw | = black |
| ro | = red |
| br | = brown |
| gn | = green |
| bl | = blue |
| gr | = grey |
| li | = purple |
| ge | = yellow |
| or | = orange |
| rs | = pink |

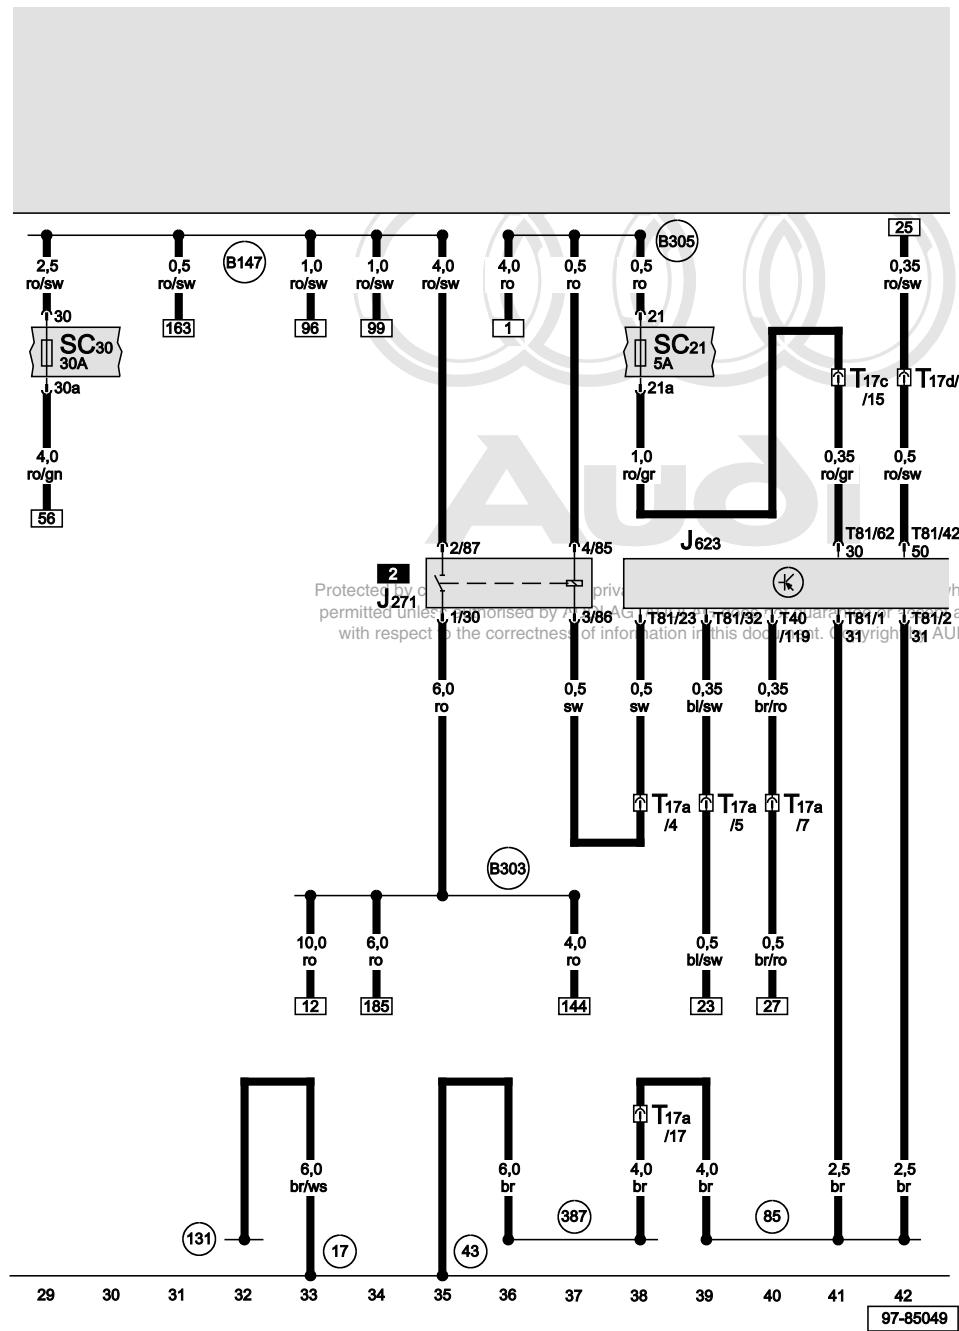

Engine control unit, Motronic current supply relay

- J271 Motronic current supply relay
- J623 Engine control unit
- SC21 Fuse 21 on fuse holder
- SC30 Fuse 30 on fuse holder
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T17c 17-pin connector, brown, in electronics box in plenum chamber
- T17d 17-pin connector, blue, in electronics box in plenum chamber
- T40 40-pin connector, black, on engine control unit
- T81 81-pin connector, black, on engine control unit
- 17 Earth point, on intake manifold
- 43 Earth point, lower part of right A-pillar
- 85 Earth connection 1, in engine compartment wiring harness
- 131 Earth connection 2, in engine compartment wiring harness
- 387 Earth connection 22, in main wiring harness
- B147 Positive connection 2 (87), in interior wiring harness
- B303 Positive connection 7 (30), in main wiring harness
- B305 Positive connection 9 (30), in main wiring harness

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

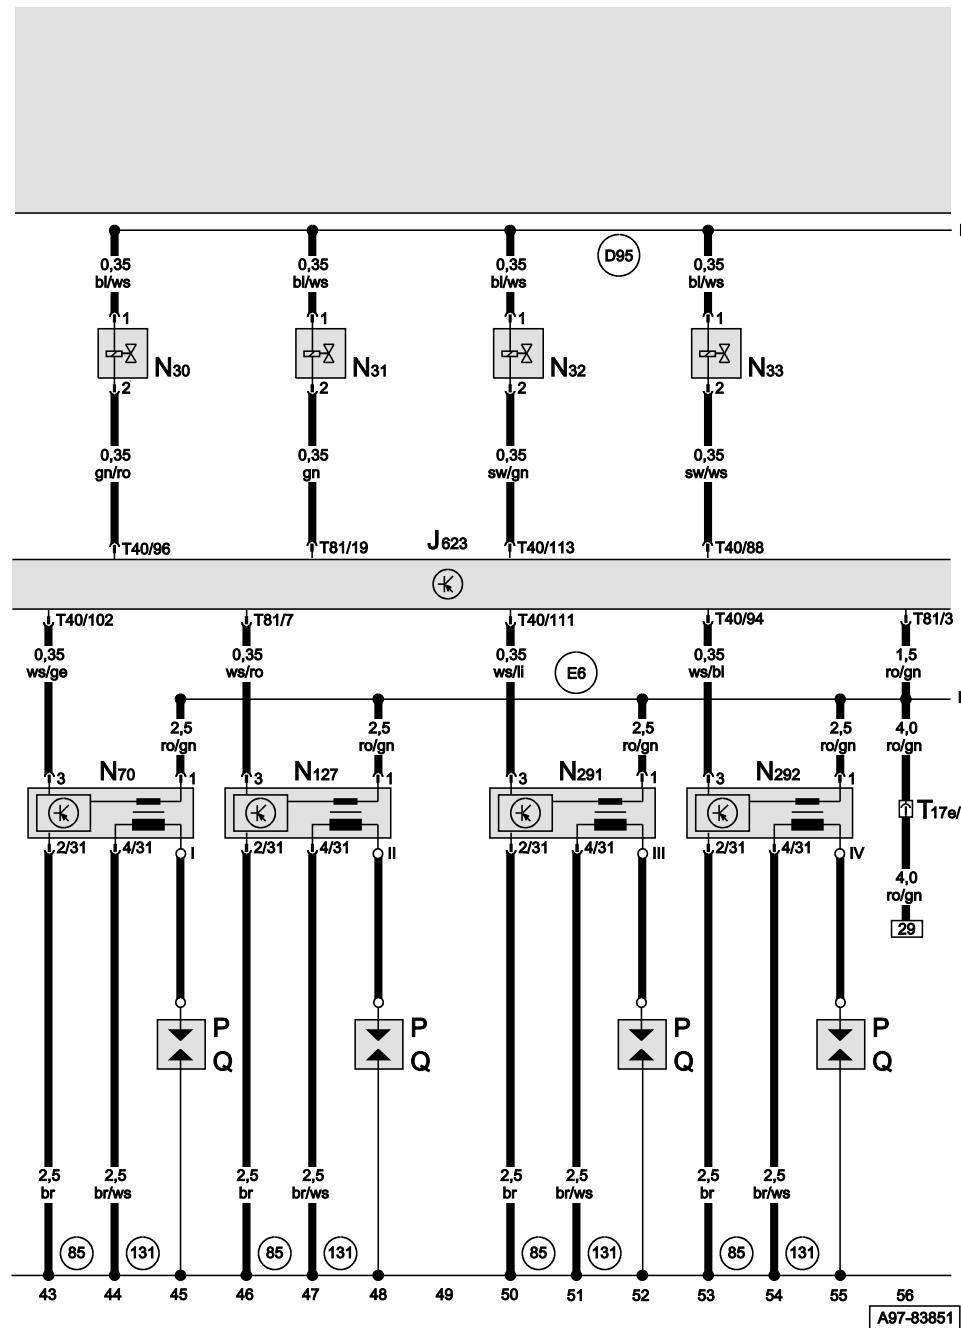

Engine control unit, ignition coils, injectors for cylinders 1 - 4


- J623 Engine control unit
- N30 Injector, cylinder 1
- N31 Injector, cylinder 2
- N32 Injector, cylinder 3
- N33 Injector, cylinder 4
- N70 Ignition coil 1 with output stage
- N127 Ignition coil 2 with output stage
- N291 Ignition coil 3 with output stage
- N292 Ignition coil 4 with output stage
- P Spark plug connector
- Q Spark plugs
- T17e 17-pin connector, red, in electronics box in plenum chamber
- T40 40-pin connector, black, on engine control unit
- T81 81-pin connector, black, on engine control unit
- 85 Earth connection 1, in engine compartment wiring harness
- 131 Earth connection 2, in engine compartment wiring harness
- D95 Connection (injectors), in engine compartment wiring harness
- E6 Positive connection 1 (15), in Motronic wiring harness

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

A97-83851


Engine control unit, ignition coils, injectors for cylinders 5 - 8

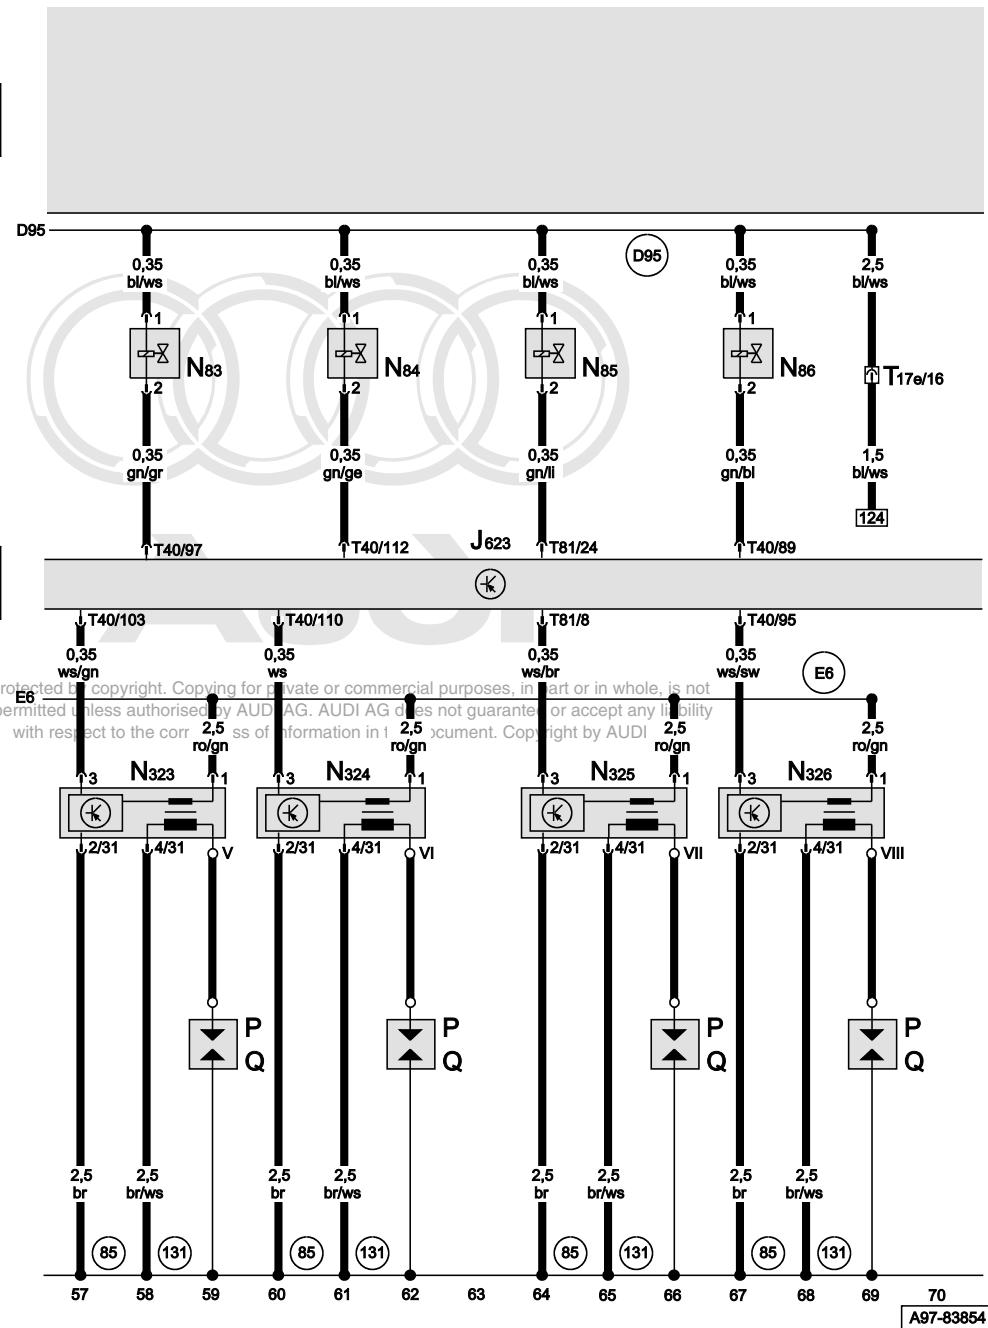

- J623 Engine control unit
- N83 Injector, cylinder 5
- N84 Injector, cylinder 6
- N85 Injector, cylinder 7
- N86 Injector, cylinder 8
- N323 Ignition coil 5 with output stage
- N324 Ignition coil 6 with output stage
- N325 Ignition coil 7 with output stage
- N326 Ignition coil 8 with output stage
- P Spark plug connector
- Q Spark plugs
- T17e 17-pin connector, red, in electronics box in plenum chamber
- T40 40-pin connector, black, on engine control unit
- T81 81-pin connector, black, on engine control unit
- 85 Earth connection 1, in engine compartment wiring harness
- 131 Earth connection 2, in engine compartment wiring harness
- D95 Connection (injectors), in engine compartment wiring harness
- E6 Positive connection 1 (15), in Motronic wiring harness

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

A97-83854

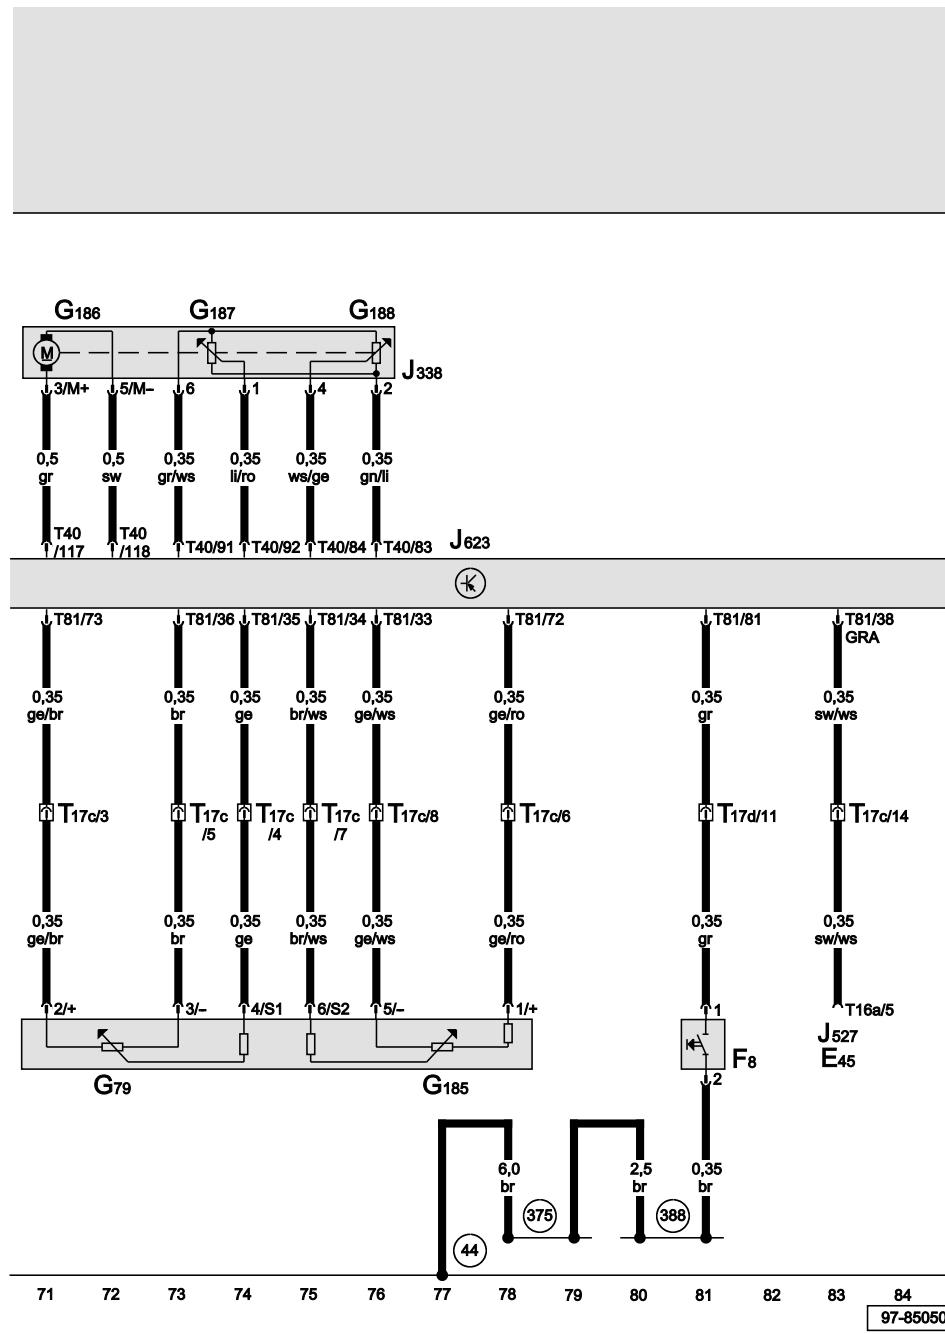

Engine control unit, throttle valve module, accelerator position sender, kickdown switch

- E45 Cruise control system switch
- F8 Kick-down switch
- G79 Accelerator position sender
- G185 Accelerator position sender 2
- G186 Throttle valve drive (electric power control)
- G187 Throttle valve drive angle sender 1 for electric throttle
- G188 Throttle valve drive angle sender 2 for electric throttle
- J338 Throttle valve module
- J527 Steering column electronics control unit
- J623 Engine control unit
- T16a 16-pin connector, on steering column electronics control unit
- T17c 17-pin connector, brown, in electronics box in plenum chamber
- T17d 17-pin connector, blue, in electronics box in plenum chamber
- T40 40-pin connector, black, on engine control unit
- T81 81-pin connector, black, on engine control unit

(44) Earth point, lower part of left A-pillar


(375) Earth connection 10, in main wiring harness

(388) Earth connection 23, in main wiring harness

Audi


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

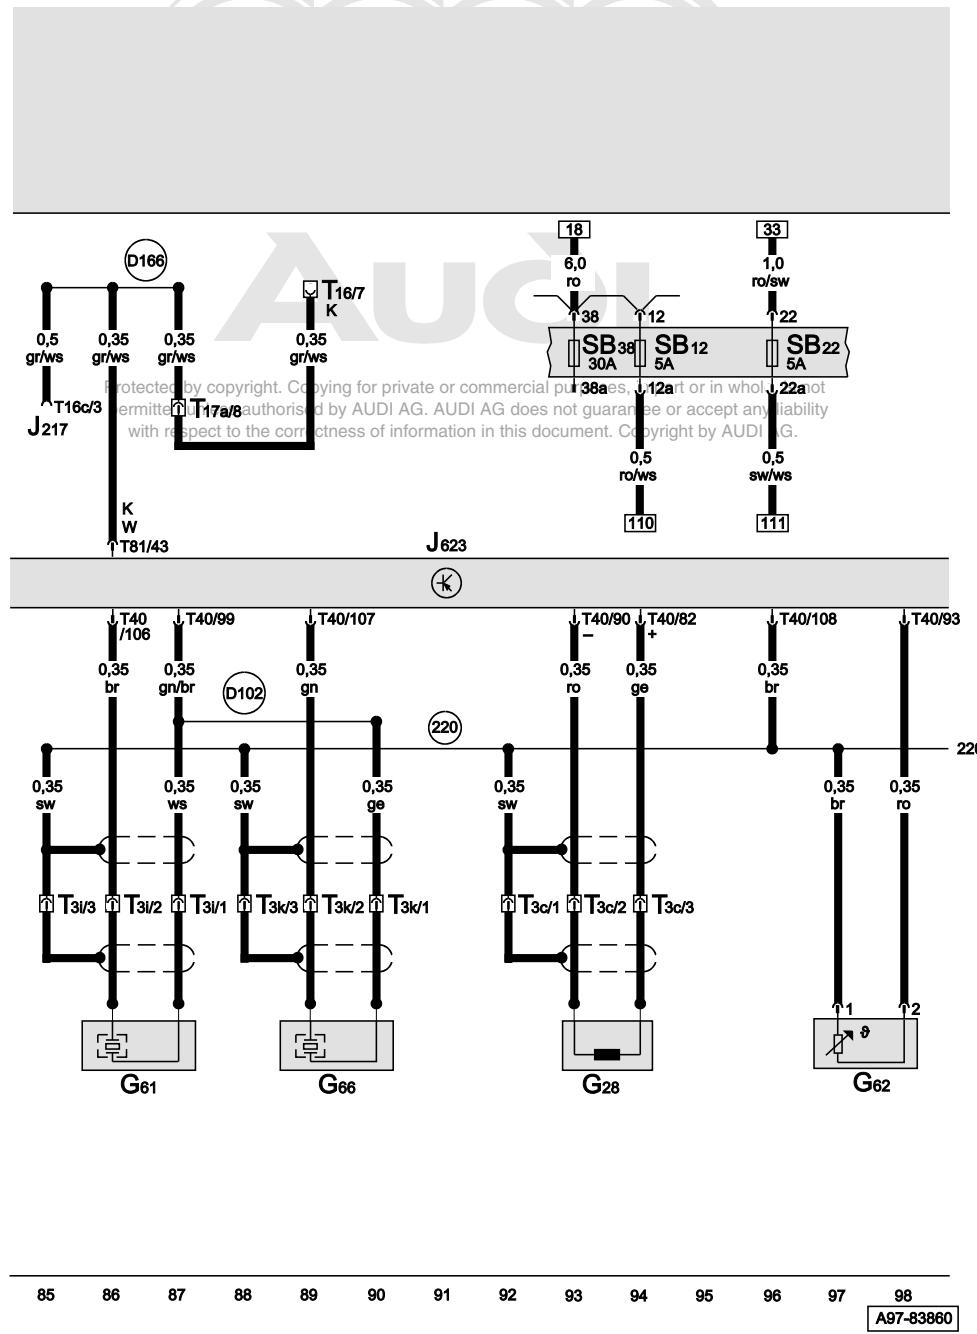

Engine control unit, knock sensor 1, engine speed sender,
coolant temperature sender

- G28 Engine speed sender
- G61 Knock sensor 1
- G62 Coolant temperature sender
- G66 Knock sensor 2
- J217 Automatic gearbox control unit
- J623 Engine control unit
- SB12 Fuse 12 on fuse holder
- SB22 Fuse 22 on fuse holder
- SB38 Fuse 38 on fuse holder
- T3c 3-pin connector, grey, on engine speed sender
- T3i 3-pin connector, black, on knock sensor 1
- T3k 3-pin connector, brown, on knock sensor 2
- T16 16-pin connector, black, diagnostic connection
- T16c 16-pin connector, black, on automatic gearbox control unit
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T40 40-pin connector, black, on engine control unit
- T81 81-pin connector, black, on engine control unit
- 220 Earth connection (sender earth), in engine wiring harness
- D102 Connection 2, in engine compartment wiring harness
- D166 Connection (K-diagnosis wiring), in engine compartment wiring harness

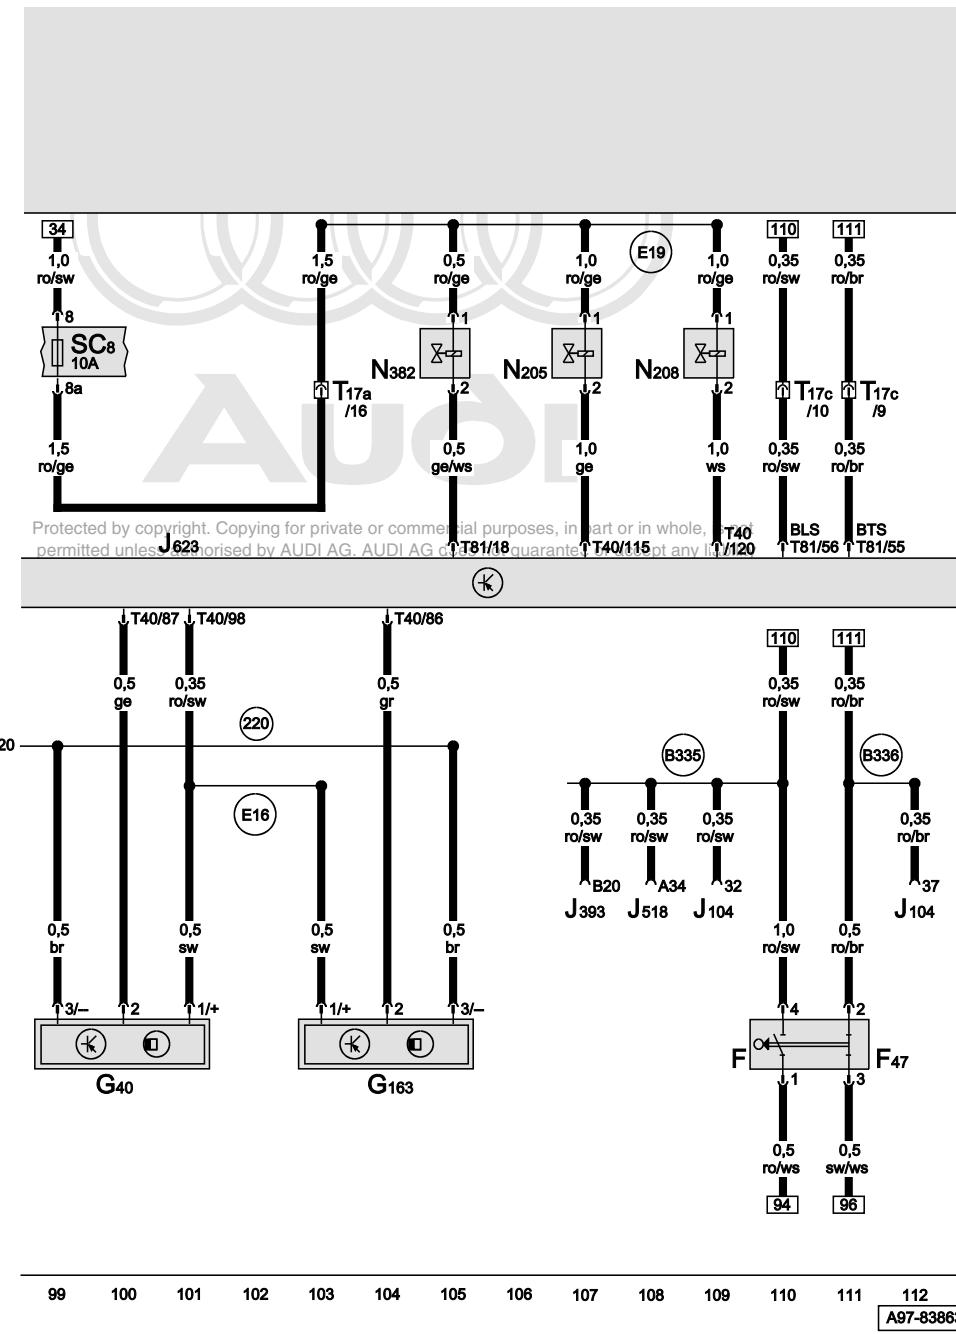

Engine control unit, inlet camshaft control valve 1, Hall sender, brake light switch, torque rod valve

- F Brake light switch
- F47 Brake pedal switch
- G40 Hall sender
- G163 Hall sender 2
- J104 ABS control unit
- J393 Convenience system central control unit
- J518 Entry and start authorisation control unit
- J623 Engine control unit
- N205 Inlet camshaft control valve 1
- N208 Inlet camshaft control valve 2
- N382 Torque rod valve
- SC8 Fuse 8 on fuse holder
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T17c 17-pin connector, brown, in electronics box in plenum chamber
- T40 40-pin connector, black, on engine control unit
- T81 81-pin connector, black, on engine control unit
- 220 Earth connection (sender earth), in engine wiring harness

(B335) Connection 1 (54), in main wiring harness


(B336) Connection 2 (54), in main wiring harness

(E16) Positive connection (5 volts), in Motronic wiring harness

(E19) Connection 4, in Motronic wiring harness

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

A97-83863

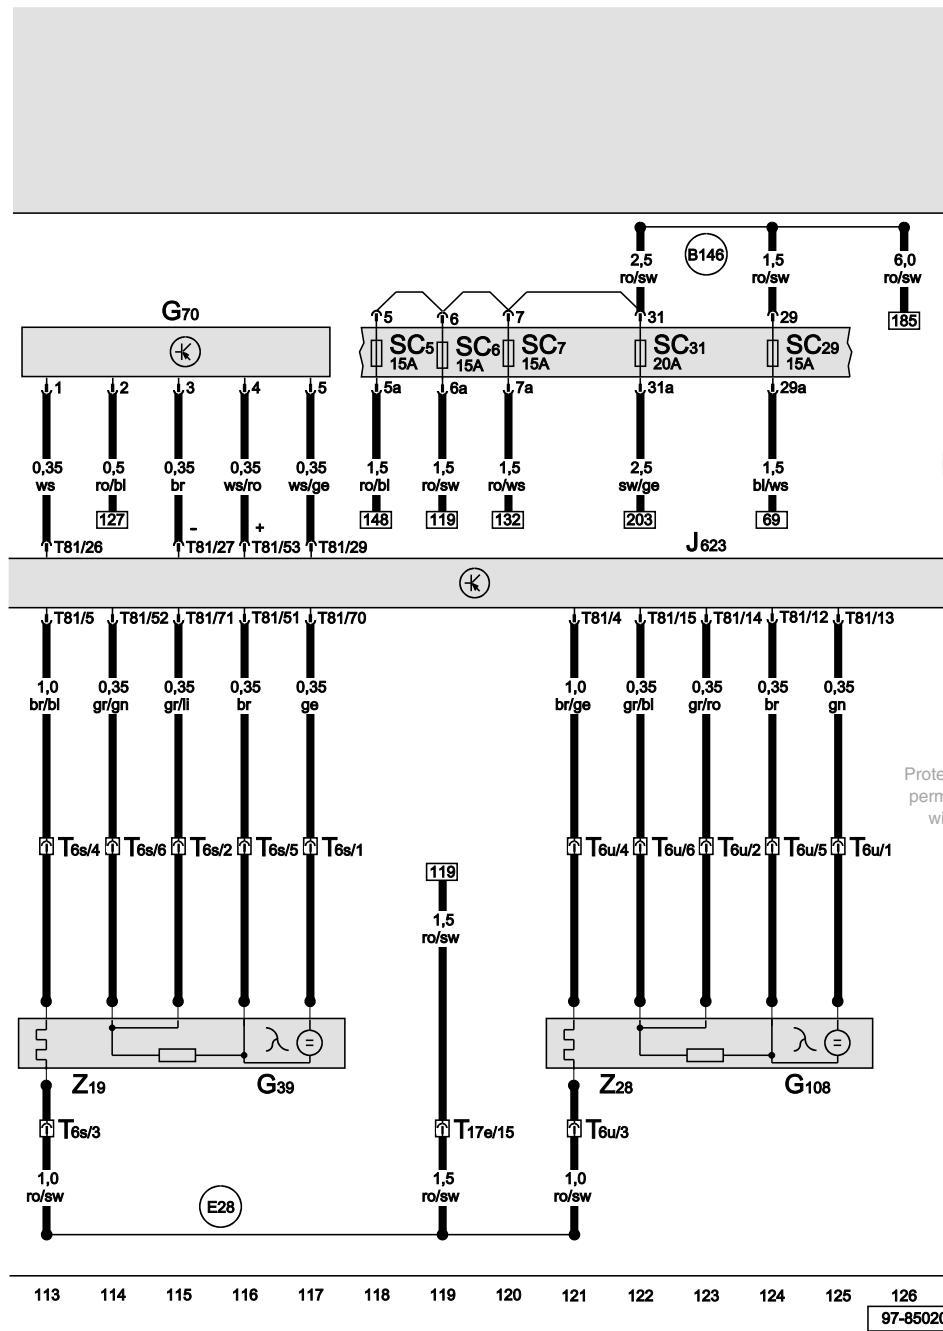


Engine control unit, air mass meter, lambda probe, lambda probe 2

- G39 Lambda probe
- G70 Air mass meter
- G108 Lambda probe 2
- J623 Engine control unit
- SC5 Fuse 5 on fuse holder
- SC6 Fuse 6 on fuse holder
- SC7 Fuse 7 on fuse holder
- SC29 Fuse 29 on fuse holder
- SC31 Fuse 31 on fuse holder
- T6s 6-pin connector, black, for lambda probe
- T6u 6-pin connector, brown, for lambda probe 2
- T17e 17-pin connector, red, in electronics box in plenum chamber
- T81 81-pin connector, black, on engine control unit
- Z19 Lambda probe heater
- Z28 Lambda probe 2 heater
- B146 Positive connection 1 (87), in interior wiring harness
- E28 Connection (lambda probe heating), in Motronic wiring harness

Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

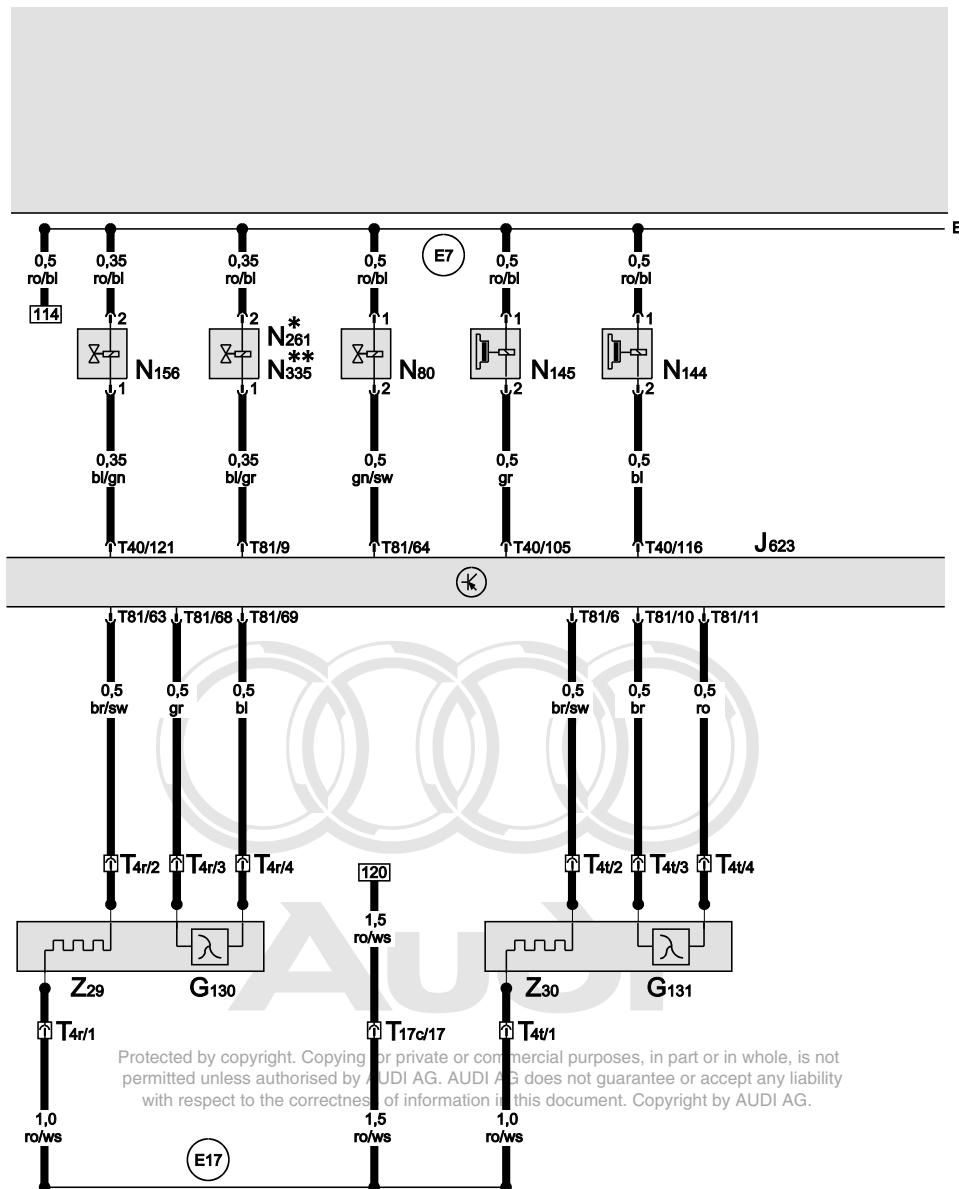

Engine control unit, variable intake manifold change-over valve, variable intake manifold change-over valve 2, variable intake manifold change-over valve, active charcoal filter system solenoid valve 1, left electrohydraulic engine mounting solenoid valve, Lambda probe after catalytic converter

G130 Lambda probe after catalytic converter
 G131 Lambda probe 2 after catalytic converter
 J623 Engine control unit
 N80 Activated charcoal filter system solenoid valve 1
 N144 Left electrohydraulic engine mounting solenoid valve
 N145 Right electrohydraulic engine mounting solenoid valve
 N156 Variable intake manifold change-over valve
 N261 Variable intake manifold change-over valve 2
 N335 Variable intake manifold change-over valve
 T4r 4-pin connector, black, for lambda probe 1 after catalytic converter
 T4t 4-pin connector, brown, for lambda probe 2 after catalytic converter

T17c 17-pin connector, brown, in electronics box in plenum chamber
 T40 40-pin connector, black, on engine control unit
 T81 81-pin connector, black, on engine control unit
 Z29 Lambda probe 1 heater after catalytic converter
 Z30 Lambda probe 2 heater after catalytic converter


E7 Connection (87a), in Motronic wiring harness

E17 Connection 2, in Motronic wiring harness

* 3.7 l engine

** 4.2 l engine


ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

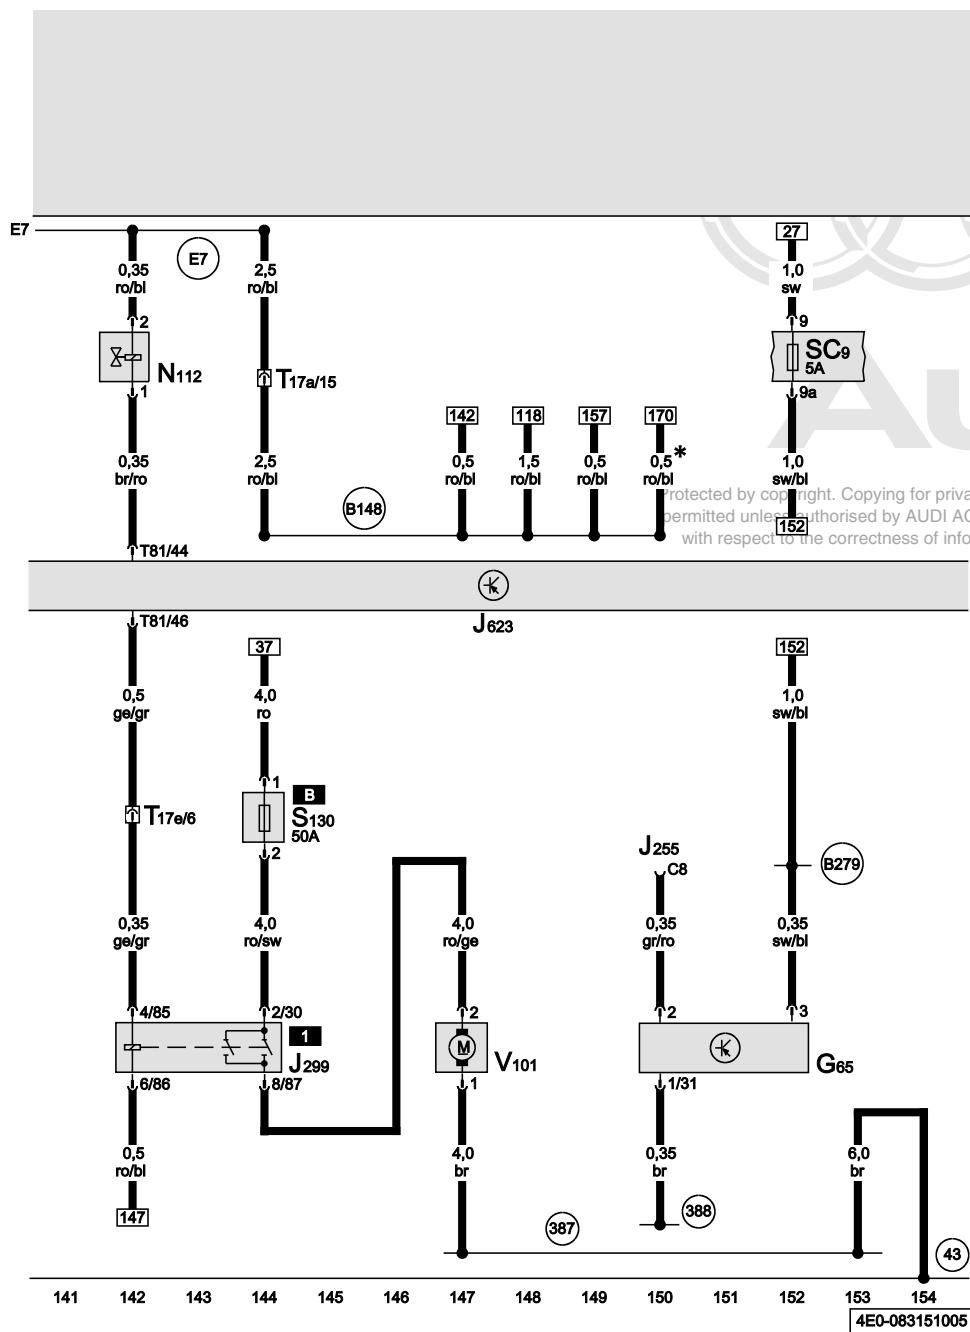

Engine control unit, secondary air pump relay, secondary air pump motor, high pressure sender, secondary air inlet valve

- G65 High pressure sender
 - J255 Climatronic control unit
 - J299 Secondary air pump relay
 - J623 Engine control unit
 - N112 Secondary air inlet valve
 - S130 Secondary air pump fuse
 - SC9 Fuse 9 on fuse holder
 - T17a 17-pin connector, black, in electronics box in plenum chamber
 - T17e 17-pin connector, red, in electronics box in plenum chamber
 - T81 81-pin connector, black, on engine control unit
 - V101 Secondary air pump motor
 - 43 Earth point, lower part of right A-pillar
 - 387 Earth connection 22, in main wiring harness
 - 388 Earth connection 23, in main wiring harness
 - B148 Positive connection 3 (87), in interior wiring harness
 - B279 Positive connection 3 (15a), in main wiring harness
 - E7 Connection (87a), in Motronic wiring harness
- * only USA

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

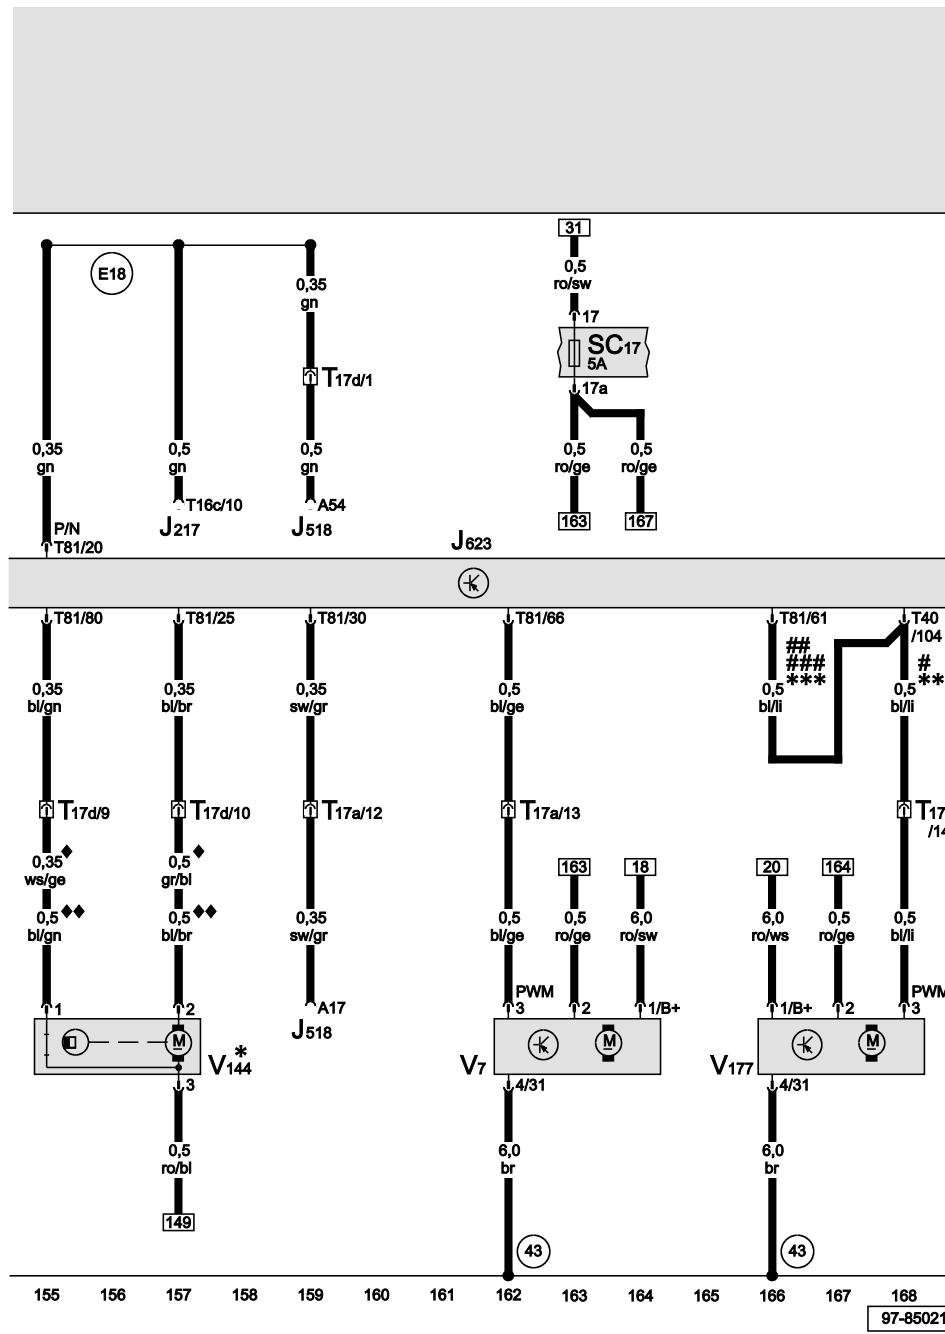

Engine control unit, radiator fan, radiator fan 2, fuel system diagnostic pump

J217 Automatic gearbox control unit
 J518 Entry and start authorisation control unit
 J623 Engine control unit
 SC17 Fuse 17 on fuse holder
 T16c 16-pin connector, black, on automatic gearbox control unit
 T17a 17-pin connector, black, in electronics box in plenum chamber
 T17d 17-pin connector, blue, in electronics box in plenum chamber
 T40 40-pin connector, black, on engine control unit
 T81 81-pin connector, black, on engine control unit
 V7 Radiator fan
 V144 Fuel system diagnostic pump
 V177 Radiator fan 2

(43) Earth point, lower part of right A-pillar


E18 Connection 3, in Motronic wiring harness

- * models with fuel system diagnostic pump
- ** countries with hot climate
- *** without countries with hot climate
- # models with trailer towing attachment
- ## models without trailer towing attachment
- ### only 3.7 l engine BFL
- ◆ up to model year 2005
- ◆◆ from model year 2006



ws = white
 sw = black
 ro = red
 br = brown
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not
 permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability
 with respect to the correctness of information in this document. Copyright by AUDI AG.

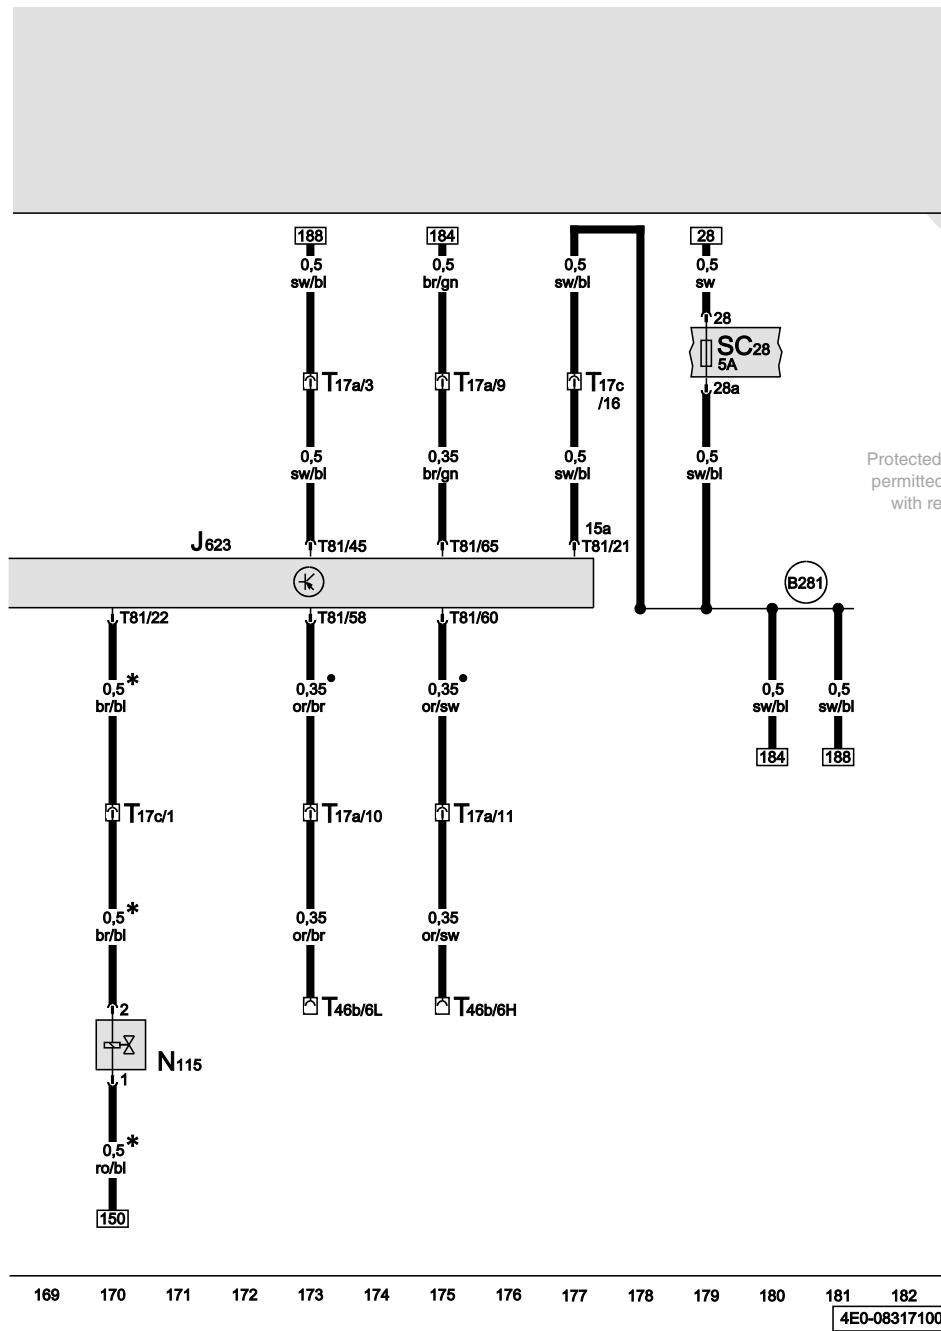

Engine control unit, fuse

- J623 Engine control unit
- N115 Activated charcoal filter system solenoid valve 2
- SC28 Fuse 28 on fuse holder
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T17c 17-pin connector, brown, in electronics box in plenum chamber
- T46b 46-pin connector, black, CAN separating connector right
- T81 81-pin connector, black, on engine control unit
- B281 Positive connection 5 (15a), in main wiring harness
 - CAN bus (data wire)
 - * only USA


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

Fuel pump relay, electric fuel pump 2 relay, fuel system pressurisation pump, fuel gauge sender, control unit in dash panel insert


- G Fuel gauge sender
- G6 Fuel system pressurisation pump
- G237 Fuel gauge sender 3
- J17 Fuel pump relay
- J49 Electric fuel pump 2 relay
- J285 Control unit in dash panel insert
- SF2 Fuse 2 on fuse holder
- T4a 4-pin connector, under right cover on vehicle floor
- T6e 6-pin connector, under right cover on vehicle floor
- T32 32-pin connector, blue, on dash panel insert
- Y24 Display in dash panel insert

- 361 Earth connection (fuel gauge sender), in main wiring harness
- 390 Earth connection 25, in main wiring harness
- 675 Earth point 2, on right in luggage compartment
- B299 Positive connection 3 (30), in main wiring harness

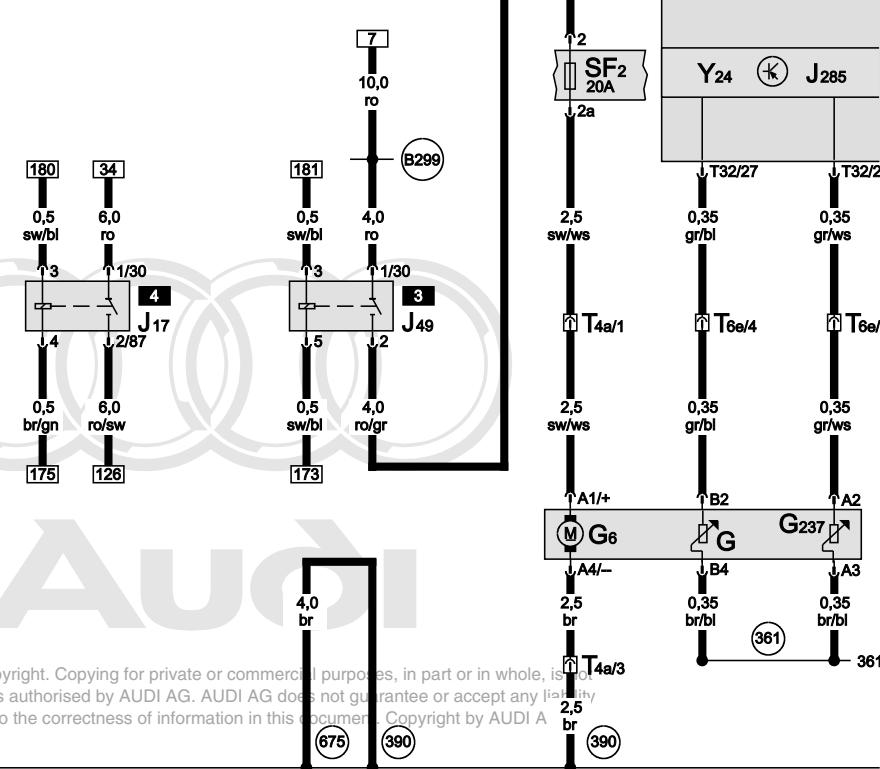

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG

 ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink




Control unit in dash panel insert, fuel gauge, fuel pump, fuel gauge sender, oil pressure warning lamp

- F1 Oil pressure switch
- G1 Fuel gauge
- G23 Fuel pump
- G169 Fuel gauge sender 2
- G393 Fuel gauge sender 4
- J285 Control unit in dash panel insert
- K3 Oil pressure warning lamp
- T4a 4-pin connector, under right cover on vehicle floor
- T6e 6-pin connector, under right cover on vehicle floor
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T32 32-pin connector, blue, on dash panel insert
- Y24 Display in dash panel insert

- (361) Earth connection (fuel gauge sender), in main wiring harness


- (390) Earth connection 25, in main wiring harness

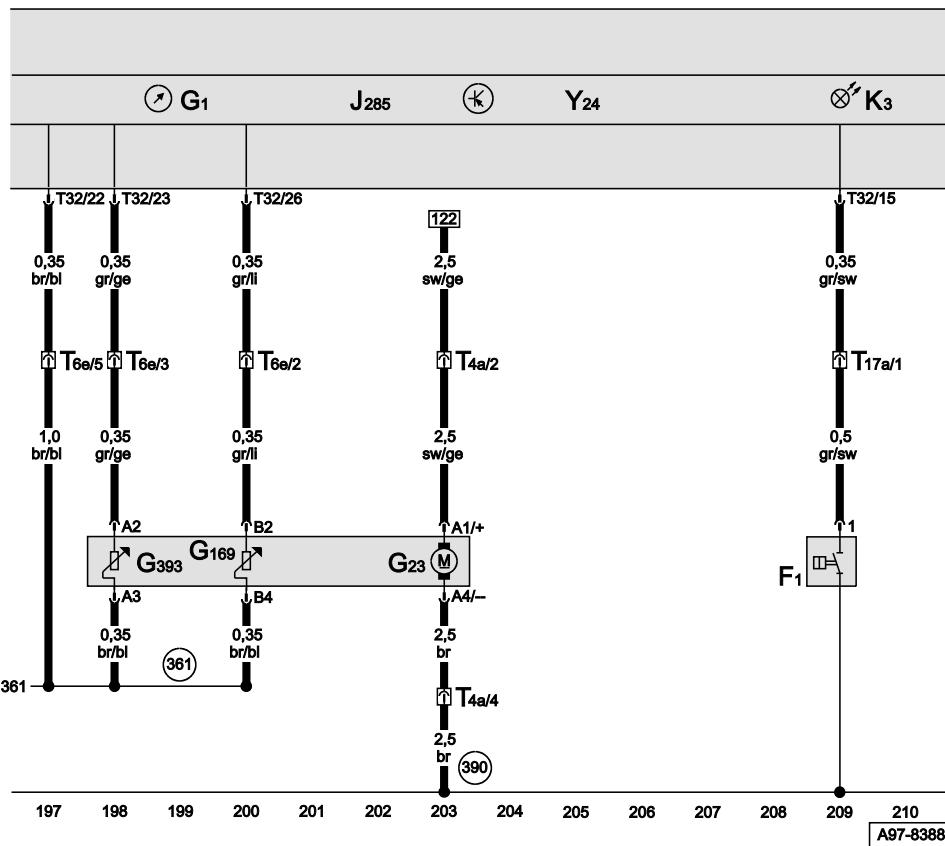

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

A97-83884

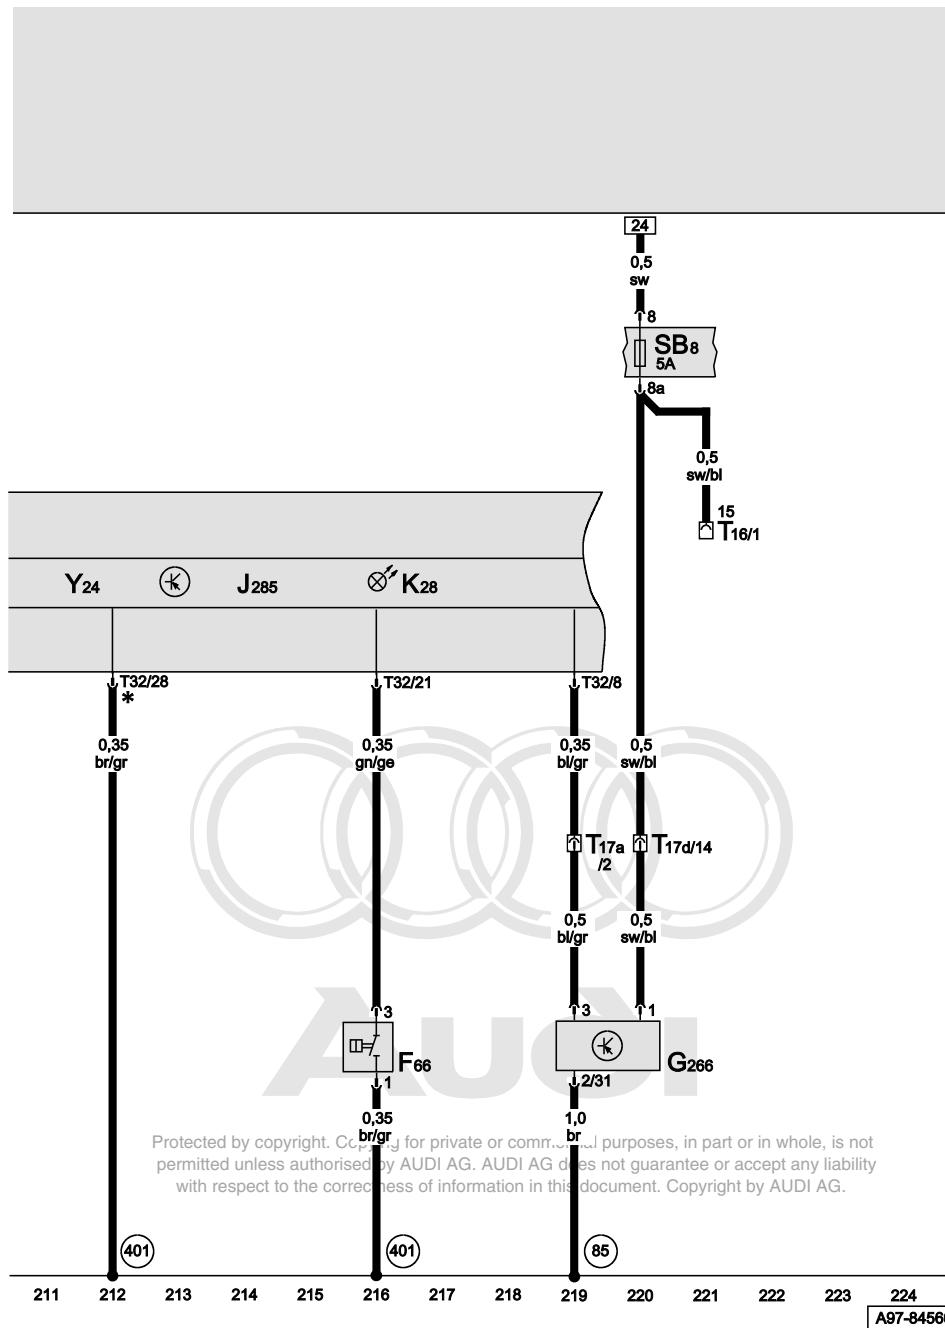

Control unit in dash panel insert, coolant shortage indicator switch, oil level and oil temperature sender

- F66 Coolant shortage indicator switch
- G266 Oil level and oil temperature sender
- J285 Control unit in dash panel insert
- K28 Coolant temperature and coolant shortage warning lamp
- SB8 Fuse 8 on fuse holder
- T16 16-pin connector, black, diagnostic connection
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T17d 17-pin connector, blue, in electronics box in plenum chamber
- T32 32-pin connector, blue, on dash panel insert
- Y24 Display in dash panel insert
- 85 Earth connection 1, in engine compartment wiring harness
- 401 Earth connection (sender earth), in interior wiring harness
- * Output sender earth

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

Audi A8 6.0 I - Fuel injection engine (331 kW - Motronic - 12-cylinder) engine codes BHT, BSB from model year 2005

Notes:

For information concerning

- ◆ Position of relays and fuses

- ◆ Multi-pin connections

- ◆ Control units and relays

- ◆ Earth connections

⇒ List of Fitting Locations!


For information concerning

- ◆ Fault Finding Programs

⇒ guided fault finding




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

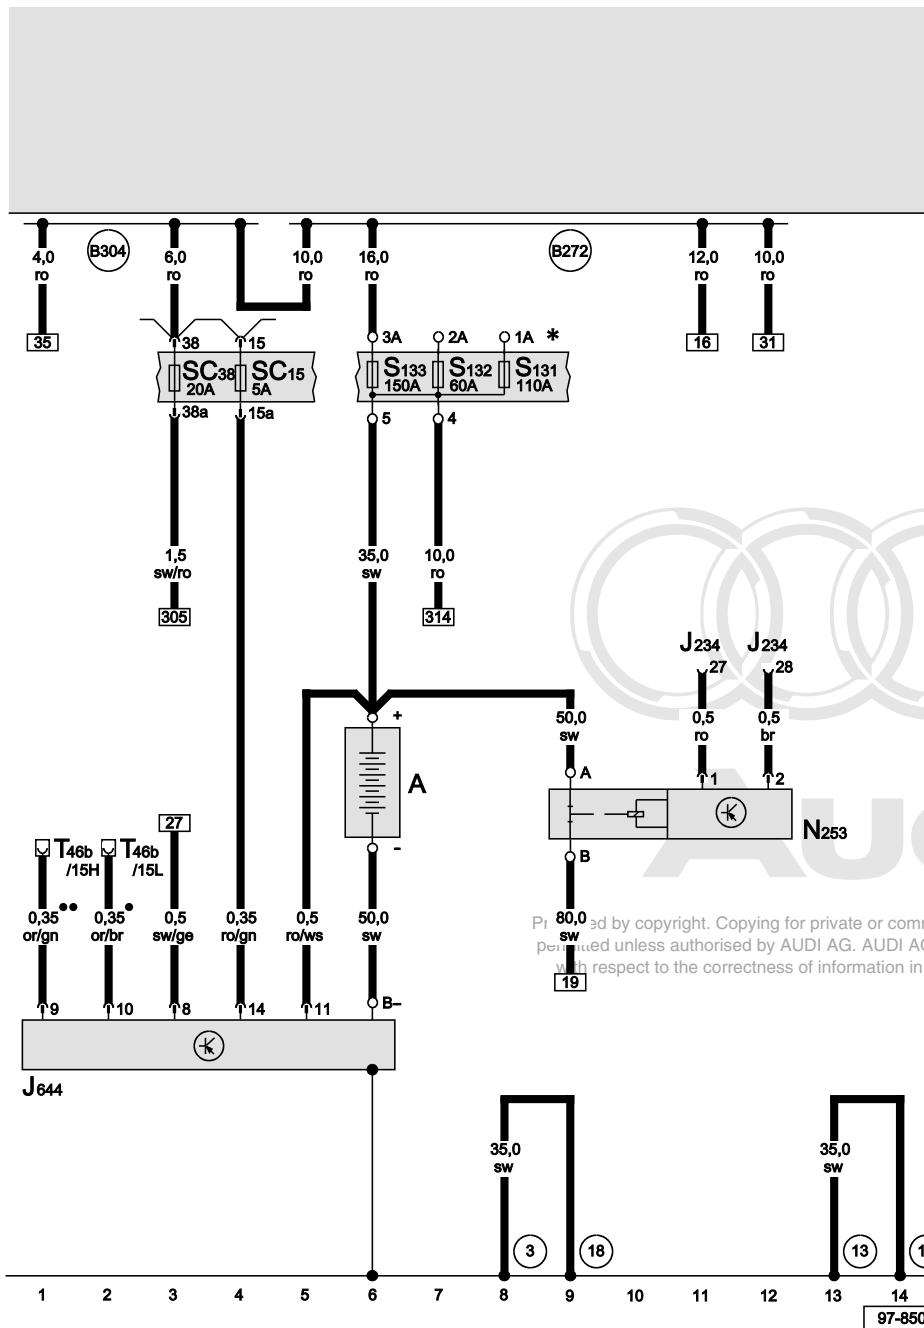

Battery, energy management control unit, battery isolation igniter, fuses

- A Battery
- J234 Airbag control unit
- J644 Energy management control unit
- N253 Battery isolation igniter
- S131 Fuse 1
- S132 Fuse 2
- S133 Fuse 3
- SC15 Fuse 15 on fuse holder C
- SC38 Fuse 38 on fuse holder C
- T46b 46-pin connector, black, CAN bus separating connector right
- 3 Earth strap, engine - body
- 13 Earth point, on right in engine compartment
- 18 Earth point on engine block
- (B272) Positive connection (30), in main wiring harness
- (B304) Positive connection 8 (30), in main wiring harness
- CAN bus (data wire)
- * In luggage compartment, rear right

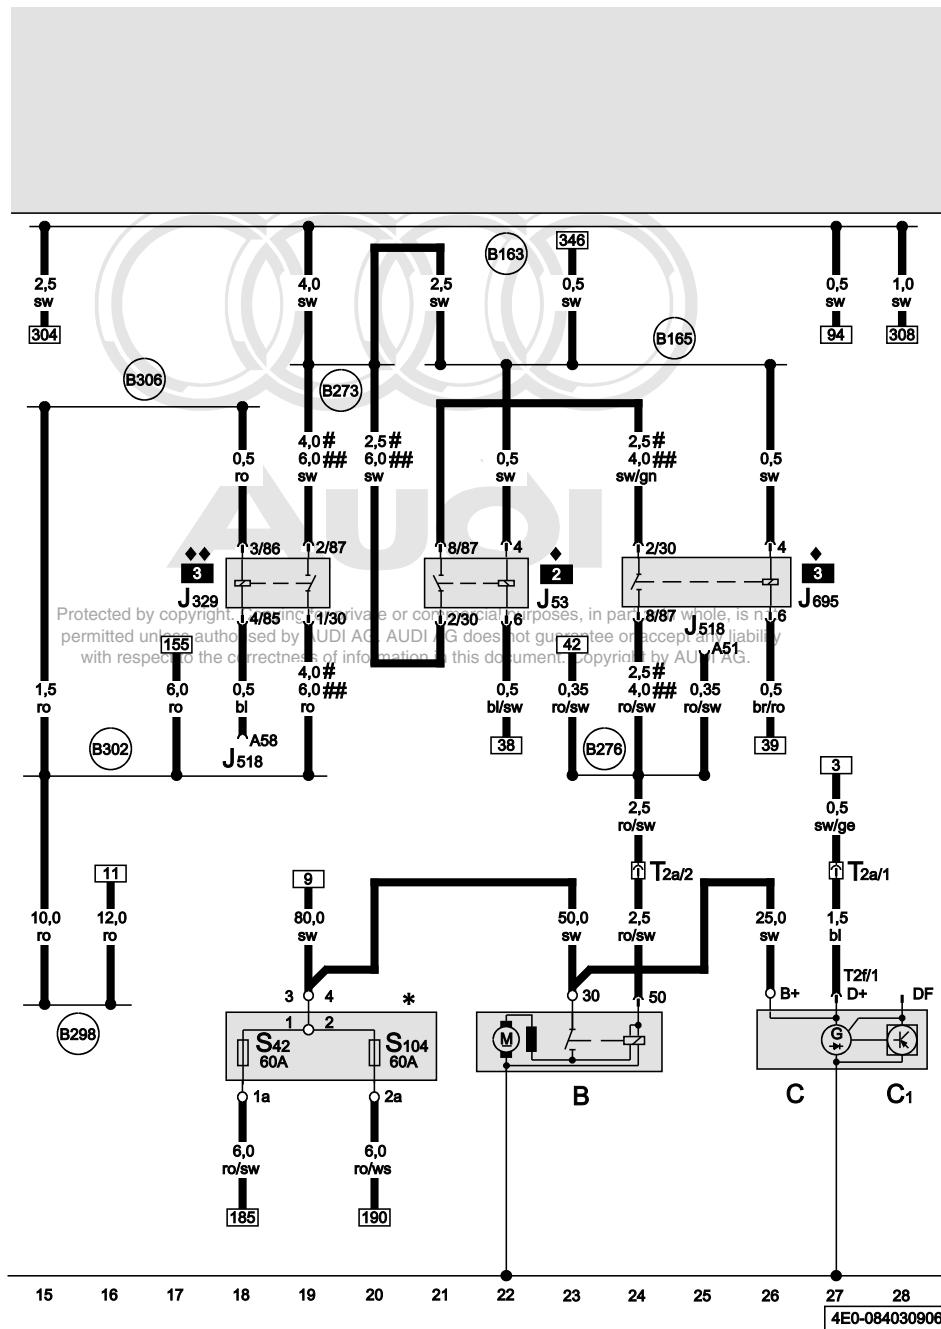

Starter, alternator, terminal 15 voltage supply relay, starter motor relay

- B Starter
- C Alternator
- C1 Voltage regulator
- J53 Starter motor relay
- J329 Terminal 15 voltage supply relay
- J518 Entry and start authorisation control unit
- J695 Starter motor relay 2
- S42 Radiator fan single fuse
- S104 Radiator fan fuse for 2nd speed
- T2a 2-pin connector, black, in front right engine compartment
- T2f 2-pin connector, black, on alternator

B163 Positive connection 1 (15), in interior wiring harness

B165 Positive connection 2 (15), in interior wiring harness

B273 Positive connection (15), in main wiring harness

B276 Positive connection (50), in main wiring harness

B298 Positive connection 2 (30), in main wiring harness

B302 Positive connection 6 (30), in main wiring harness

B306 Positive connection 10 (30), in main wiring harness

* Main fuse carrier right A-pillar


up to April 2006

from May 2006

◆ relay carrier front passenger footwell

◆◆ Relay and fuse carrier behind left dash panel


- | | |
|----|----------|
| ws | = white |
| sw | = black |
| ro | = red |
| br | = brown |
| gn | = green |
| bl | = blue |
| gr | = grey |
| li | = purple |
| ge | = yellow |
| or | = orange |
| rs | = pink |

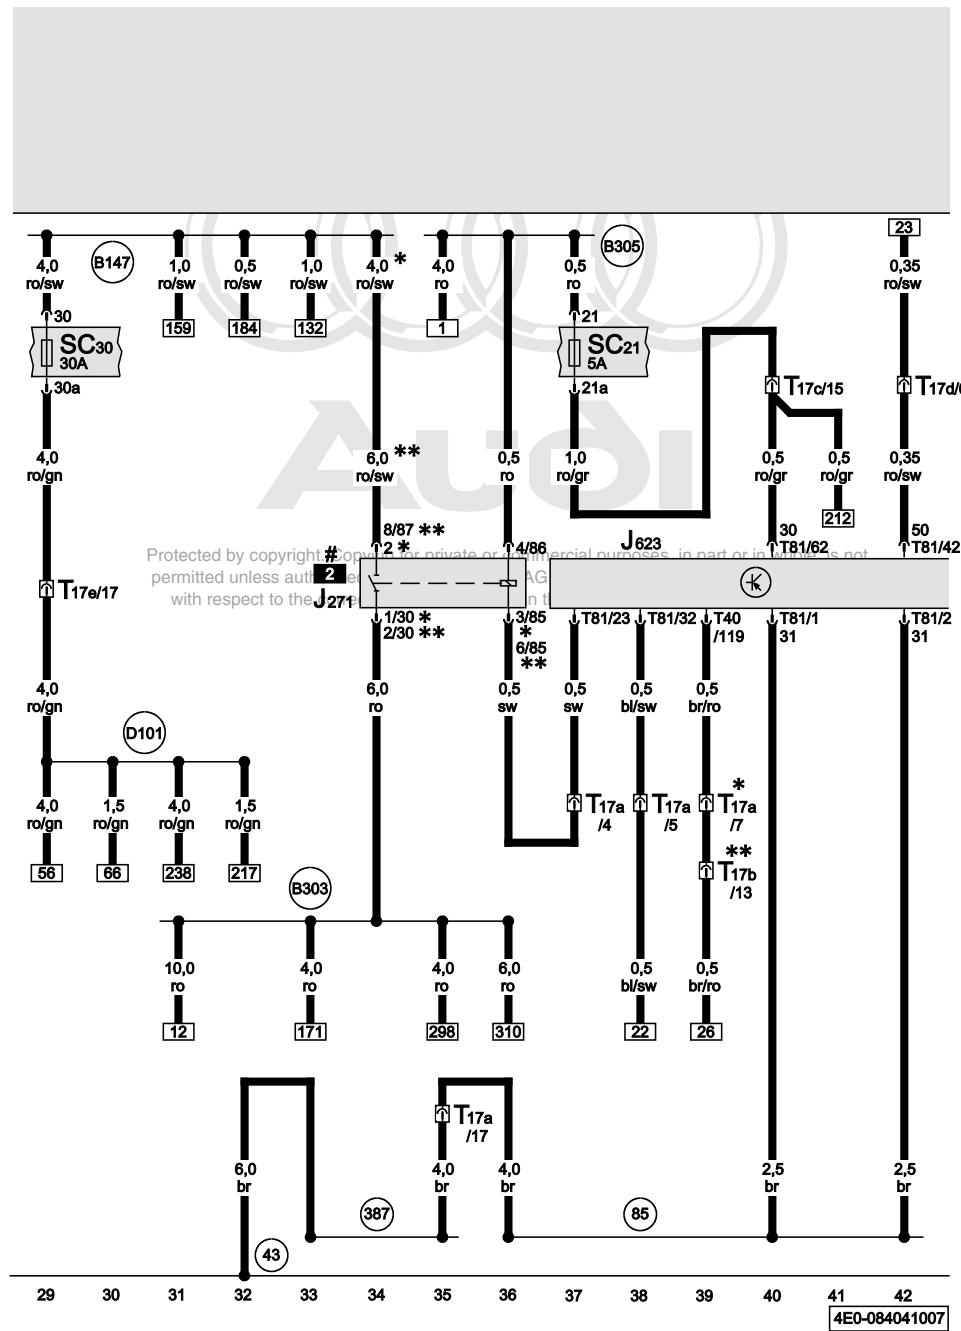

Engine control unit, Motronic current supply relay


- J271 Motronic current supply relay
 - J623 Engine control unit
 - SC21 Fuse 21 on fuse holder C
 - SC30 Fuse 30 on fuse holder C
 - T17a 17-pin connector, black, in electronics box in plenum chamber
 - T17c 17-pin connector, brown, in electronics box in plenum chamber
 - T17b 17-pin connector, green, in electronics box in plenum chamber
 - T17d 17-pin connector, blue, in electronics box in plenum chamber
 - T17e 17-pin connector, red, in electronics box in plenum chamber
 - T40 40-pin connector, black, on engine control unit
 - T81 81-pin connector, black, on engine control unit
 - 43 Earth point, lower part of right A-pillar
 - 85 Earth connection 1, in engine compartment wiring harness
 - 387 Earth connection 22, in main wiring harness
 - B147 Positive connection 2 (87), in interior wiring harness
 - B303 Positive connection 7 (30), in main wiring harness
 - B305 Positive connection 9 (30), in main wiring harness
 - D101 Connection 1, in engine compartment wiring harness
- * up to August 2007
** from September 2007
Relay carrier electronics box in plenum chamber

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

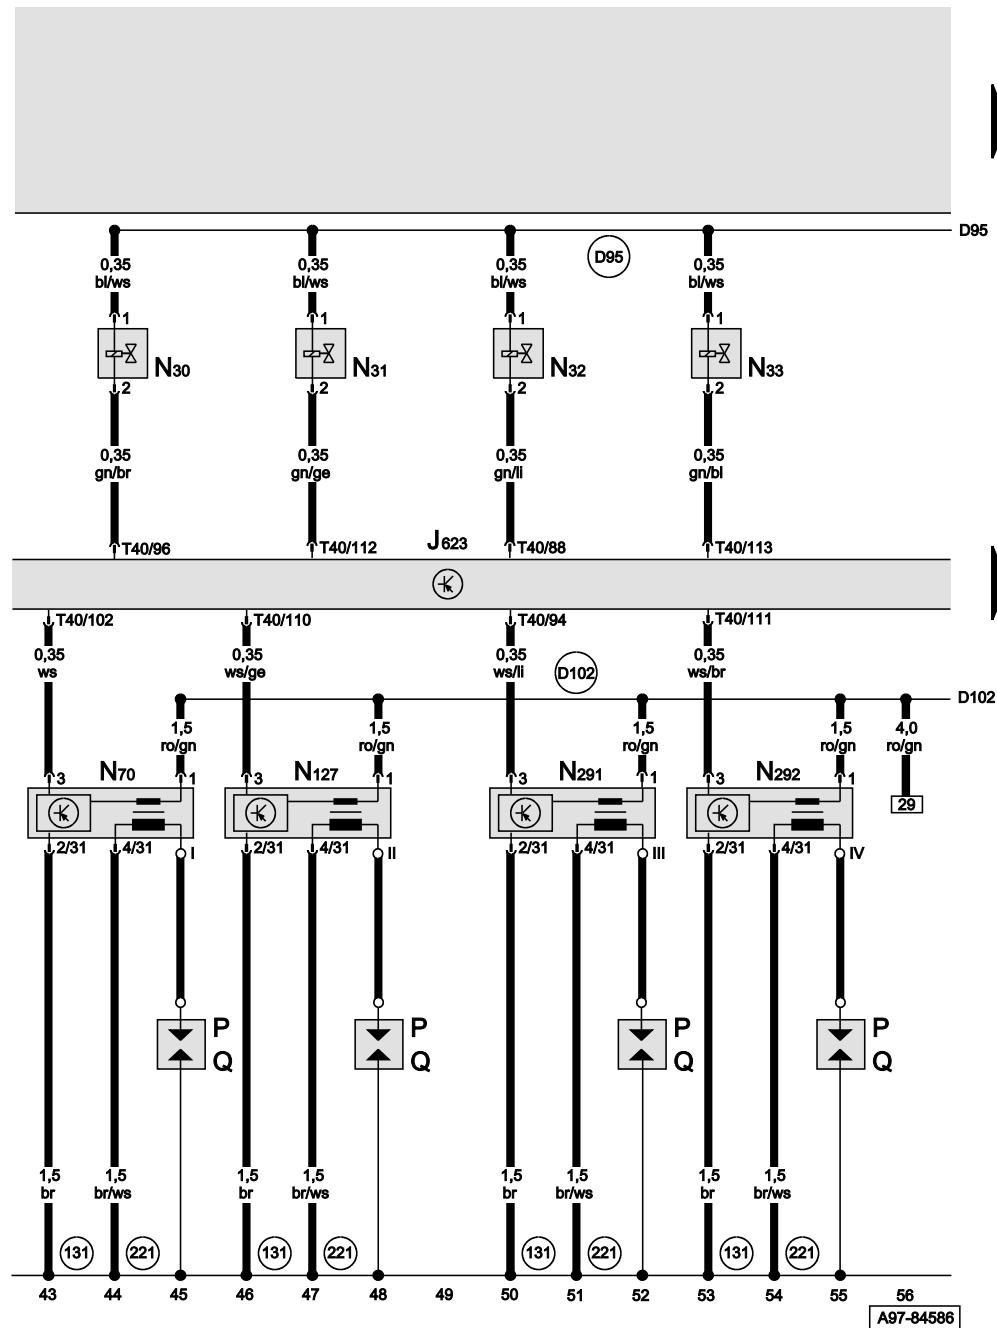

**Engine control unit, ignition coils 1 - 4 with output stage,
injector, cylinder 1 - 4**

- J623 Engine control unit
- N30 Injector, cylinder 1
- N31 Injector, cylinder 2
- N32 Injector, cylinder 3
- N33 Injector, cylinder 4
- N70 Ignition coil 1 with output stage
- N127 Ignition coil 2 with output stage
- N291 Ignition coil 3 with output stage
- N292 Ignition coil 4 with output stage
- P Spark plug connector
- Q Spark plugs
- T40 40-pin connector, black, on engine control unit
- (131) Earth connection 2, in engine compartment wiring harness
- (221) Earth connection (engine earth), in engine wiring harness
- (D95) Connection (injectors), in engine compartment wiring harness
- (D102) Connection 2, in engine compartment wiring harness

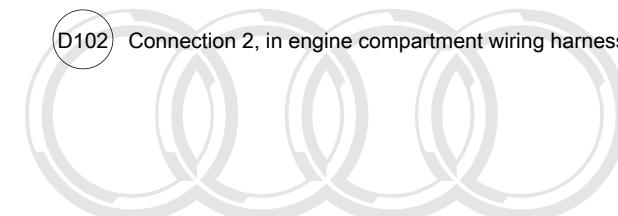


Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

A97-84586

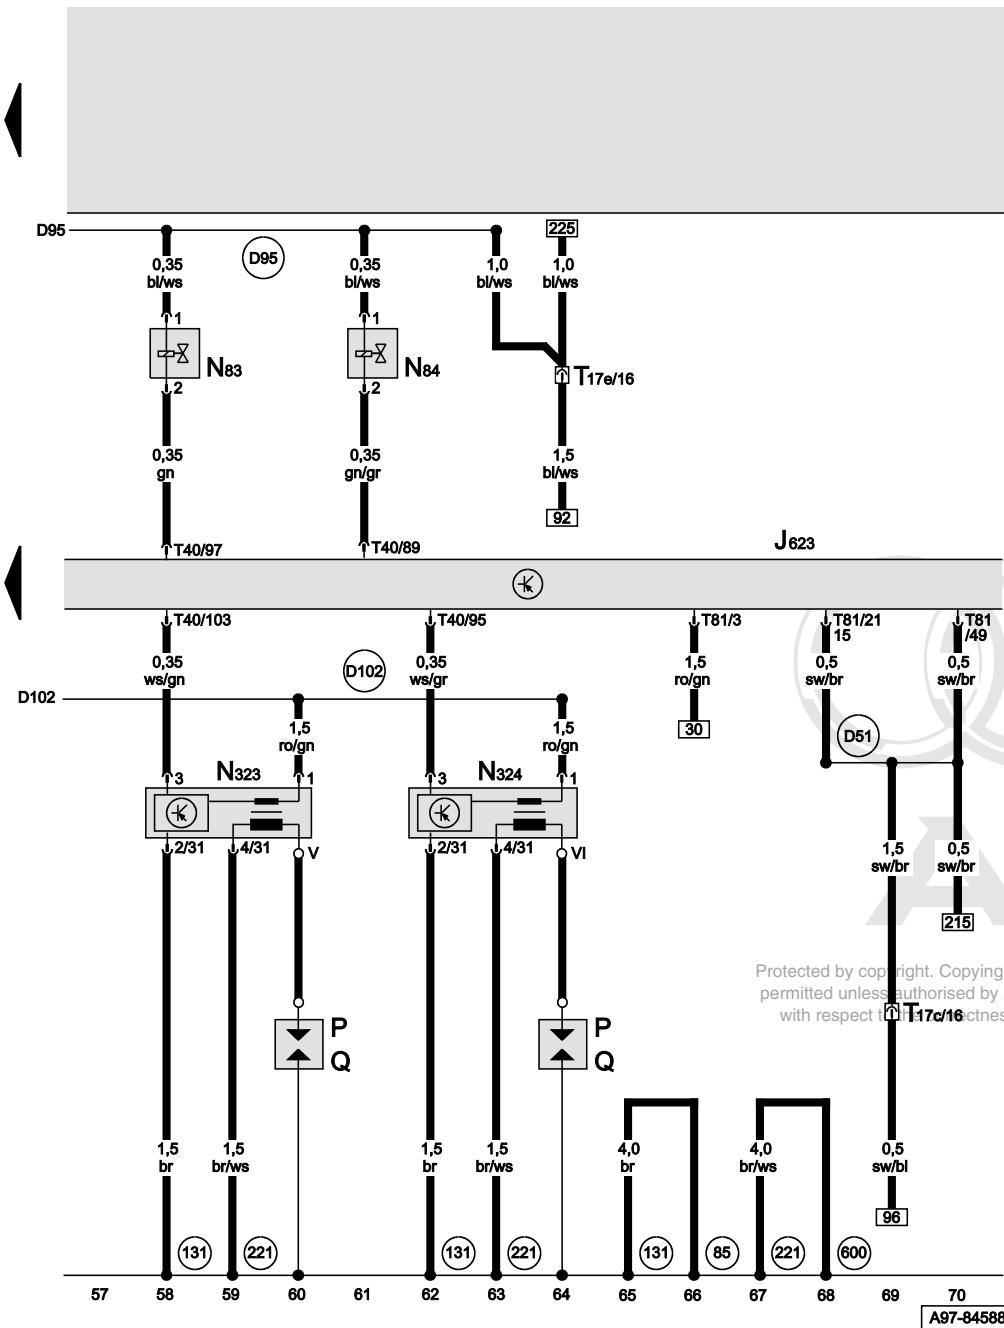



Engine control unit, ignition coils 5 and 6 with output stage, injectors cylinder 5 and 6

- J623 Engine control unit
- N83 Injector, cylinder 5
- N84 Injector, cylinder 6
- N323 Ignition coil 5 with output stage
- N324 Ignition coil 6 with output stage
- P Spark plug connector
- Q Spark plugs
- T17c 17-pin connector, brown, in electronics box in plenum chamber
- T17e 17-pin connector, red, in electronics box in plenum chamber
- T40 40-pin connector, black, on engine control unit
- T81 81-pin connector, black, on engine control unit
- 85 Earth connection 1, in engine compartment wiring harness
- 131 Earth connection 2, in engine compartment wiring harness
- 221 Earth connection (engine earth), in engine wiring harness
- 600 Earth point, on right of cylinder head
- D51 Positive connection 1 (15), in engine compartment wiring harness
- D95 Connection (injectors), in engine compartment wiring harness
- D102 Connection 2, in engine compartment wiring harness

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

 A97-84588

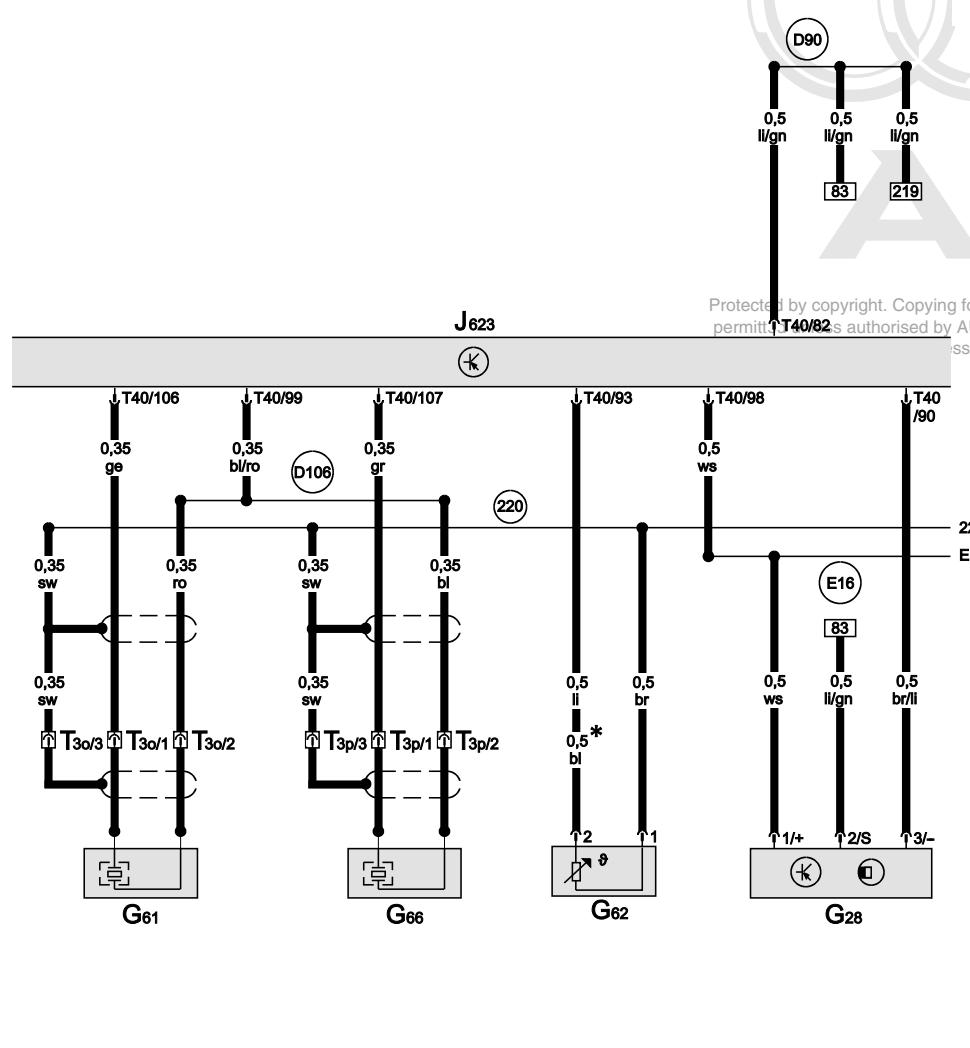

Engine control unit, knock sensor 1, knock sensor 2,
coolant temperature sender, engine speed sender

- G28 Engine speed sender
- G61 Knock sensor 1
- G62 Coolant temperature sender
- G66 Knock sensor 2
- J623 Engine control unit
- T3o 3-pin connector, black, on knock sensor 1
- T3p 3-pin connector, grey, on knock sensor 2
- T40 40-pin connector, black, on engine control unit
- 220 Earth connection (sender earth), in engine wiring harness
- D90 Connection (RPM signal), in engine compartment wiring harness
- D106 Connection 4, in engine compartment wiring harness
- E16 Positive connection (5 volts), in Motronic wiring harness



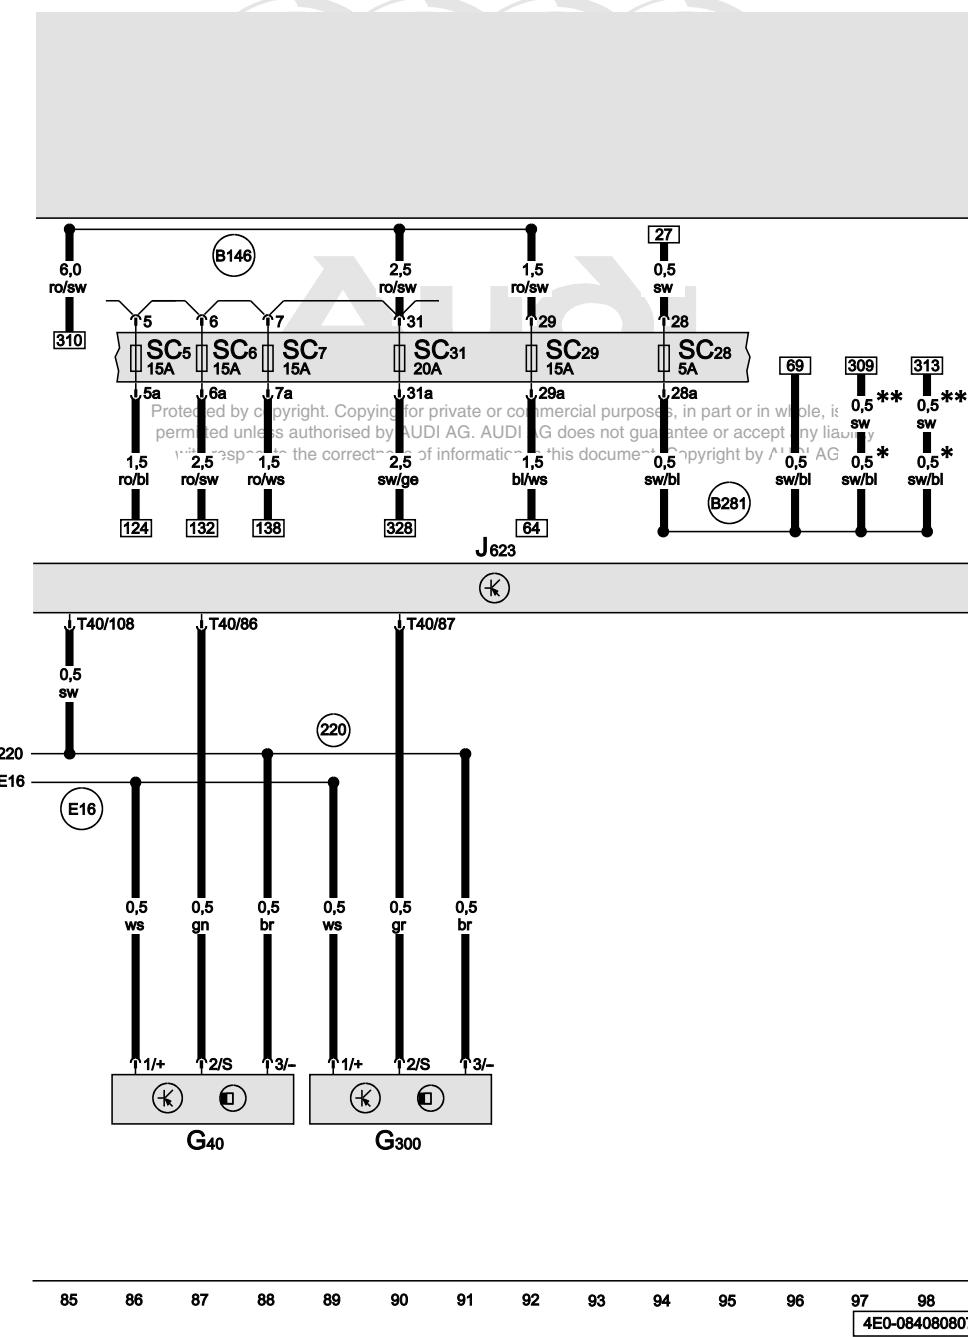


Engine control unit, Hall sender, Hall sender 3, fuses


- G40 Hall sender
- G300 Hall sender 3
- J623 Engine control unit
- SC5 Fuse 5 on fuse holder C
- SC6 Fuse 6 on fuse holder C
- SC7 Fuse 7 on fuse holder C
- SC28 Fuse 28 on fuse holder C
- SC29 Fuse 29 on fuse holder C
- SC31 Fuse 31 on fuse holder C
- T40 40-pin connector, black, on engine control unit
- 220 Earth connection (sender earth), in engine wiring harness
- B146 Positive connection 1 (87), in interior wiring harness
- B281 Positive connection 5 (15a), in main wiring harness
- E16 Positive connection (5 volts), in Motronic wiring harness

* up to August 2007

 ** from September 2007

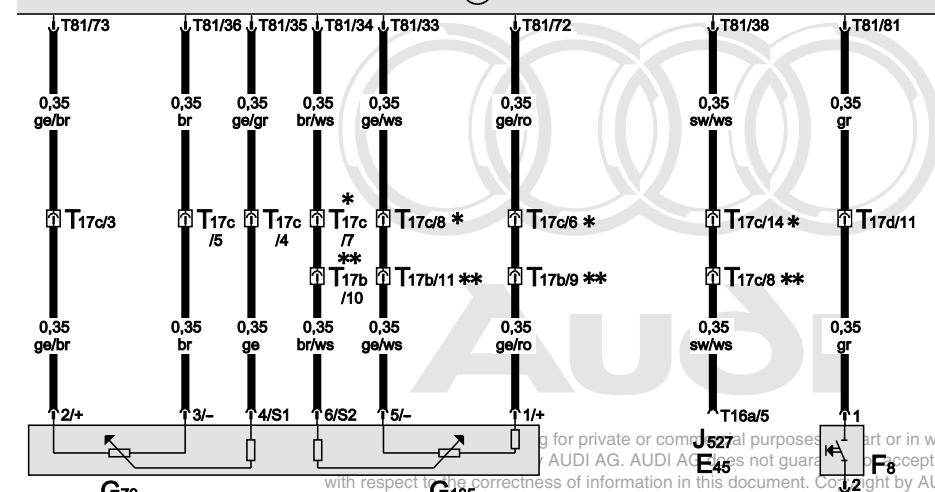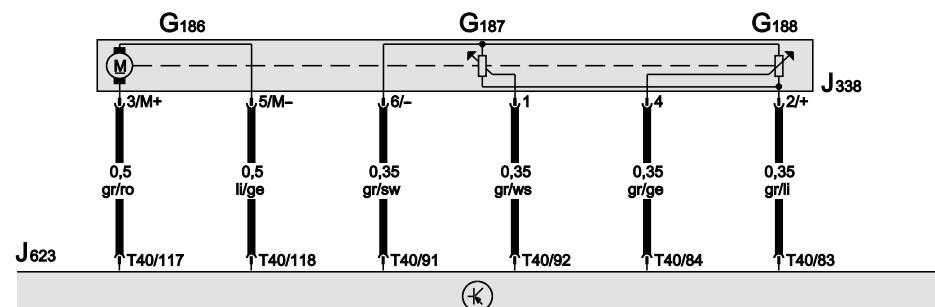

Warning: This document is for private or commercial purposes. It may not be copied or reproduced in whole or in part. AUDI AG. AUDI AG does not guarantee the correctness of information in this document. Copyright by AUDI AG.

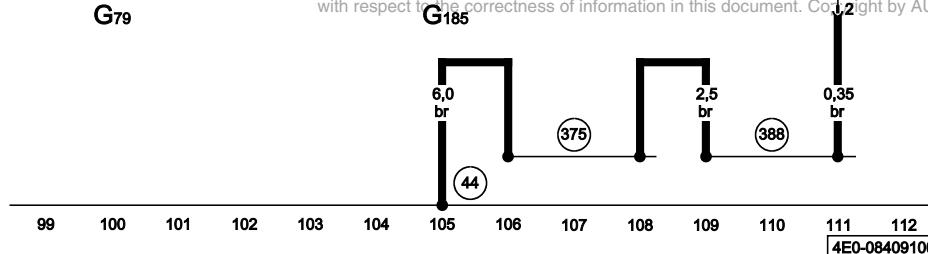

Engine control unit, accelerator position sender, throttle valve module, kickdown switch

- E45 Cruise control system switch
- F8 Kick-down switch
- G79 Accelerator position sender
- G185 Accelerator position sender 2
- G186 Throttle valve drive (electric power control)
- G187 Throttle valve drive angle sender 1 for electric throttle
- G188 Throttle valve drive angle sender 2 for electric throttle
- J338 Throttle valve module
- J527 Steering column electronics control unit
- J623 Engine control unit
- T16a 16-pin connector, on steering column electronics control unit
- T17b 17-pin connector, green, in electronics box in plenum chamber
- T17c 17-pin connector, brown, in electronics box in plenum chamber
- T17d 17-pin connector, blue, in electronics box in plenum chamber
- T40 40-pin connector, black, on engine control unit
- T81 81-pin connector, black, on engine control unit

(44) Earth point, lower part of left A-pillar


(375) Earth connection 10, in main wiring harness

(388) Earth connection 23, in main wiring harness

* up to August 2007

** from September 2007

- | | |
|----|----------|
| ws | = white |
| sw | = black |
| ro | = red |
| br | = brown |
| gn | = green |
| bl | = blue |
| gr | = grey |
| li | = purple |
| ge | = yellow |
| or | = orange |
| rs | = pink |

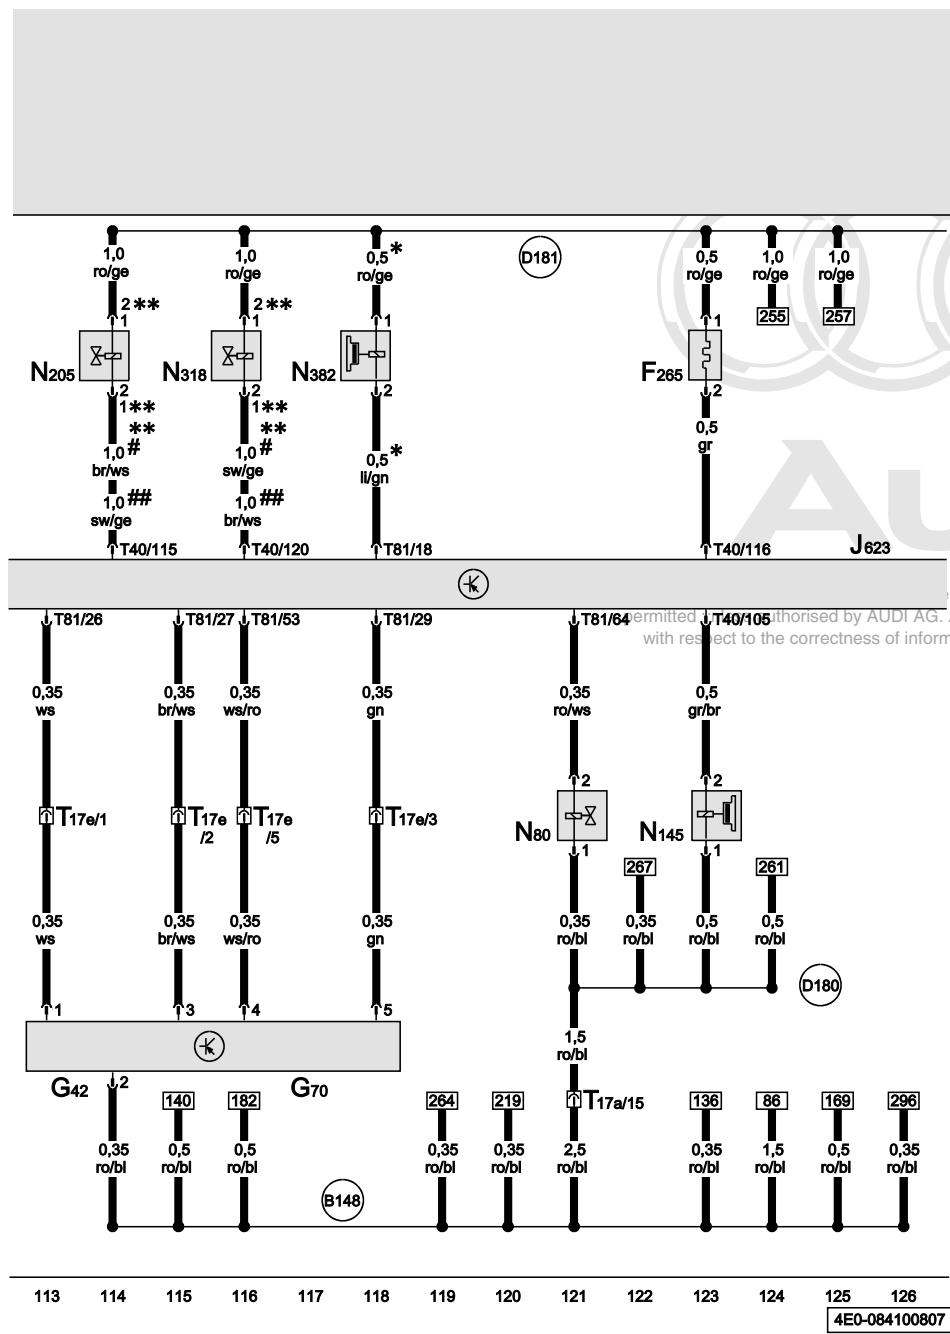

Engine control unit, air mass meter, intake air temperature sender, inlet camshaft control valve 1, exhaust camshaft control valve 1, torque rod valve, right electrohydraulic engine mounting solenoid valve, map-controlled engine cooling system thermostat, activated charcoal filter system solenoid valve 1

- F265 Map-controlled engine cooling system thermostat
- G42 Intake air temperature sender
- G70 Air mass meter
- J623 Engine control unit
- N80 Activated charcoal filter system solenoid valve 1
- N145 Right electrohydraulic engine mounting solenoid valve
- N205 Inlet camshaft control valve 1
- N318 Exhaust camshaft control valve 1
- N382 Torque rod valve
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T17e 17-pin connector, red, in electronics box in plenum chamber
- T40 40-pin connector, black, on engine control unit
- T81 81-pin connector, black, on engine control unit
- B148 Positive connection 3 (87), in interior wiring harness

D180 Connection (87a), in engine compartment wiring harness

D181 Connection 2 (87a), in engine compartment wiring harness


* is dropped, from model year 2006

** from November 2007

up to October 2005

from November 2005


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

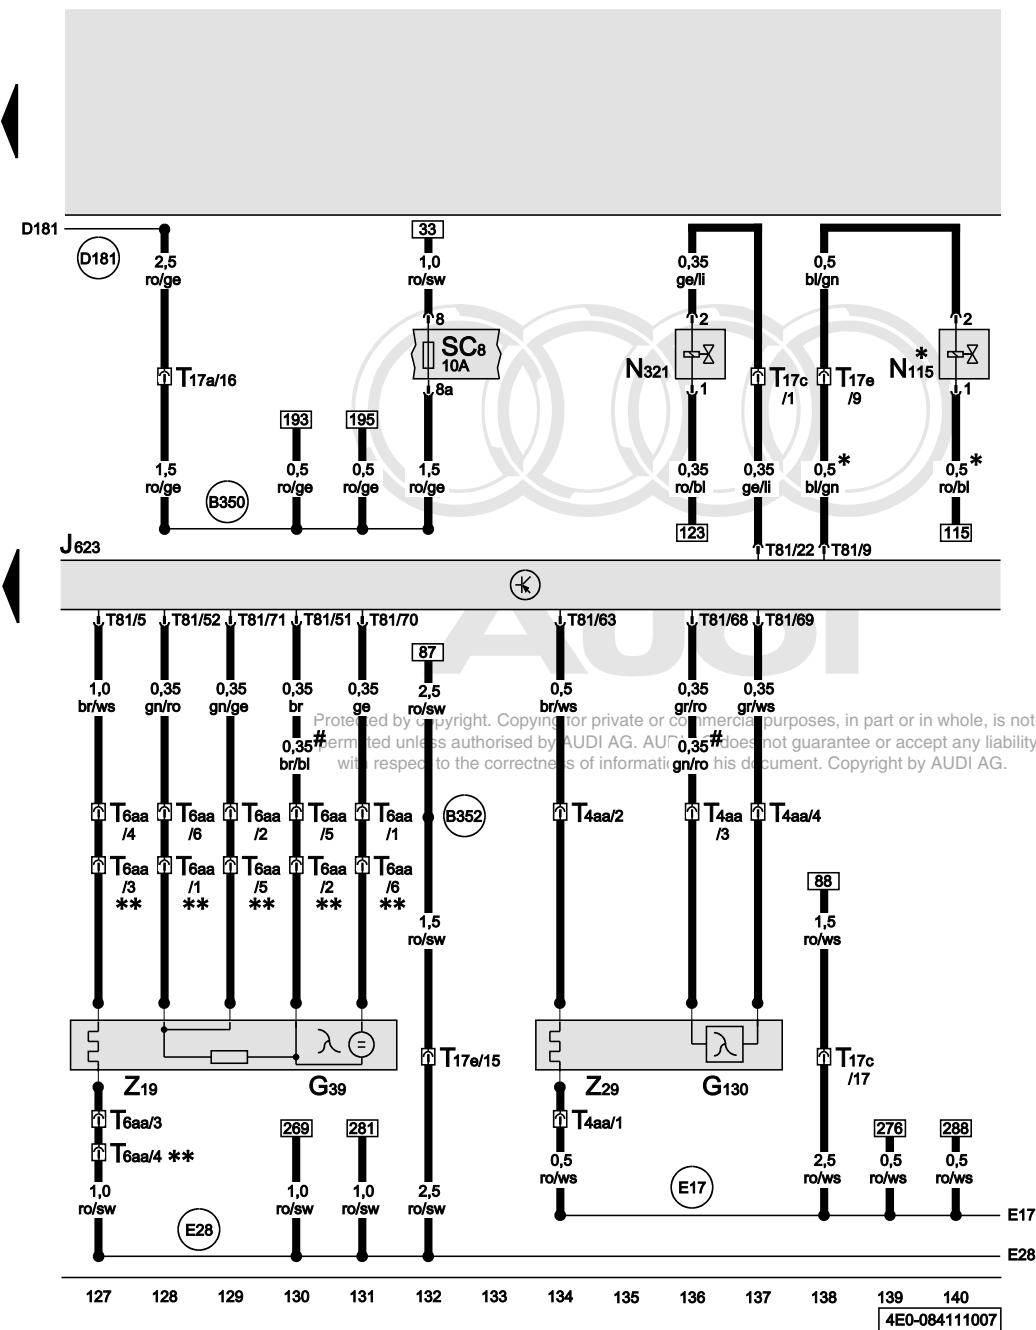


Engine control unit, lambda probe, lambda probe after catalytic converter, exhaust flap valve

- | | |
|------|--|
| G39 | Lambda probe |
| G130 | Lambda probe after catalytic converter |
| J623 | Engine control unit |
| N115 | Activated charcoal filter system solenoid valve 2 |
| N321 | Exhaust flap 1 valve |
| SC8 | Fuse 8 on fuse holder C |
| T4aa | 4-pin connector, black, for lambda probe after catalytic converter |
| T6aa | 6-pin connector, black, lambda probe |
| T17a | 17-pin connector, black, in electronics box in plenum chamber |
| T17c | 17-pin connector, brown, in electronics box in plenum chamber |
| T17e | 17-pin connector, red, in electronics box in plenum chamber |
| T81 | 81-pin connector, black, on engine control unit |
| Z19 | Lambda probe heater |
| Z29 | Lambda probe 1 heater after catalytic converter |
| B350 | Positive connection 1 (87a), in main wiring harness |
| B352 | Positive connection 3 (87a), in main wiring harness |
| D181 | Connection 2 (87a), in engine compartment wiring harness |
| E17 | Connection 2, in Motronic wiring harness |
| E28 | Connection (lambda probe heating), in Motronic wiring harness |
- * only USA
** from March 2007
phased-in modification

 ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink



Audi

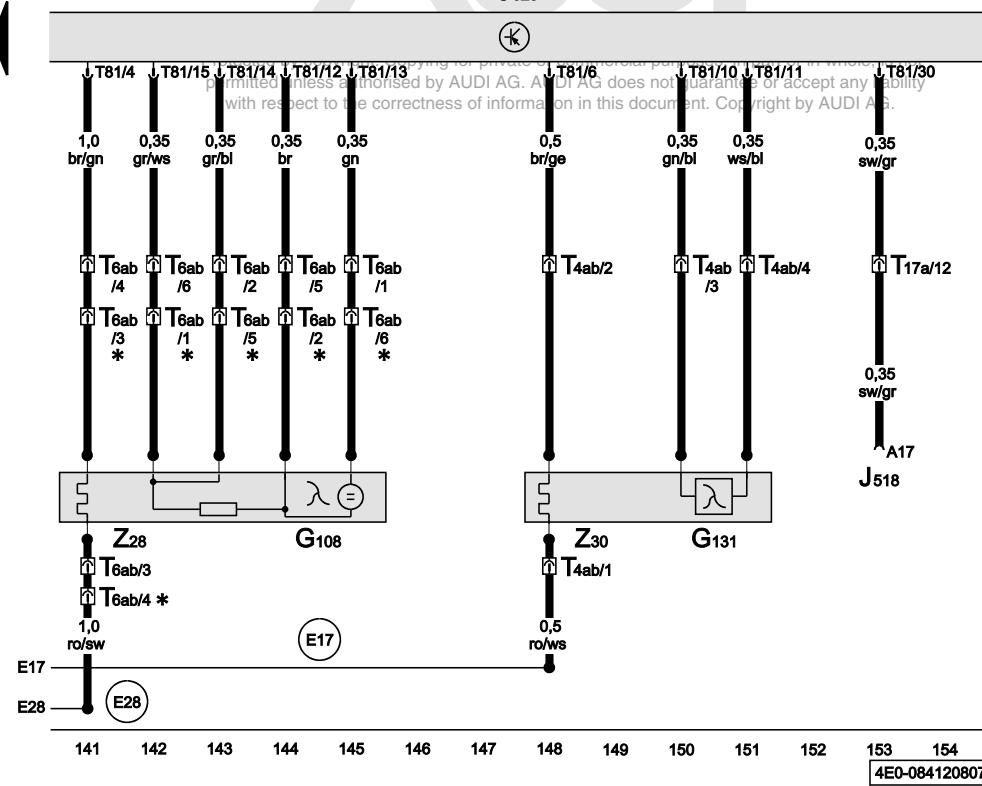


Engine control unit, lambda probe 2, lambda probe 2 after catalytic converter

- G108 Lambda probe 2
- G131 Lambda probe 2 after catalytic converter
- J518 Entry and start authorisation control unit
- J623 Engine control unit
- T4ab 4-pin connector, brown, for lambda probe 2 after catalytic converter
- T6ab 6-pin connector, brown, lambda probe 2
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T81 81-pin connector, black, on engine control unit
- Z28 Lambda probe 2 heater
- Z30 Lambda probe 2 heater after catalytic converter
- E17 Connection 2, in Motronic wiring harness
- E28 Connection (lambda probe heating), in Motronic wiring harness


* from March 2007

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

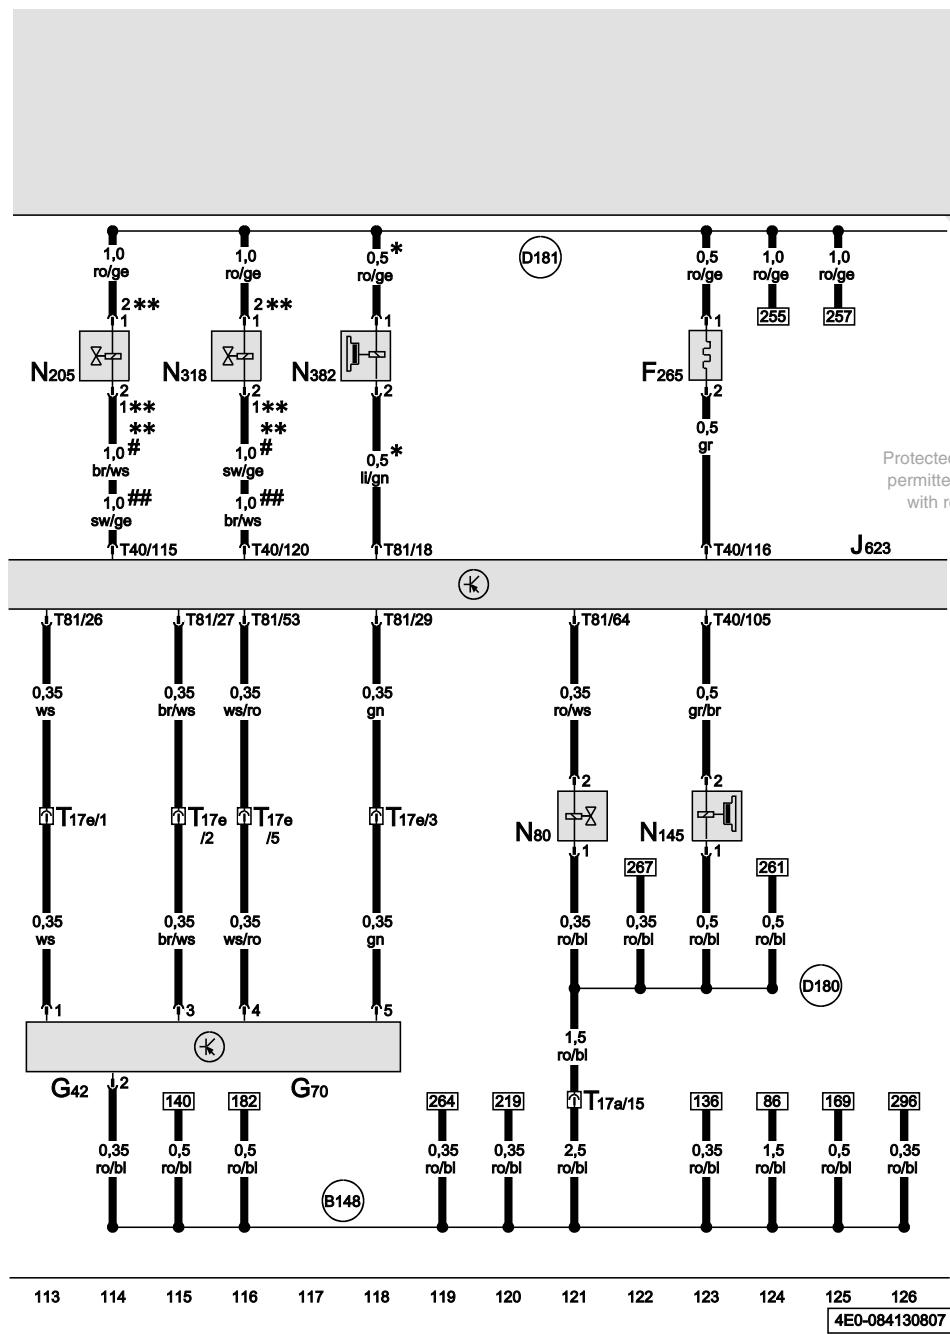

Engine control unit, brake light switch

- F Brake light switch
- F47 Brake pedal switch
- J104 ABS control unit
- J393 Convenience system central control unit
- J518 Entry and start authorisation control unit
- J623 Engine control unit
- SB12 Fuse 12 on fuse holder B
- SB22 Fuse 22 on fuse holder B
- SB38 Fuse 38 on fuse holder B
- T6r 6-pin connector, black, connector B, on entry and start authorisation control unit
- T17c 17-pin connector, brown, in electronics box in plenum chamber
- T32b 32-pin connector, connector B, on convenience system central control unit
- T81 81-pin connector, black, on engine control unit
- T81b 81-pin connector, black, connector A, on entry and start authorisation control unit

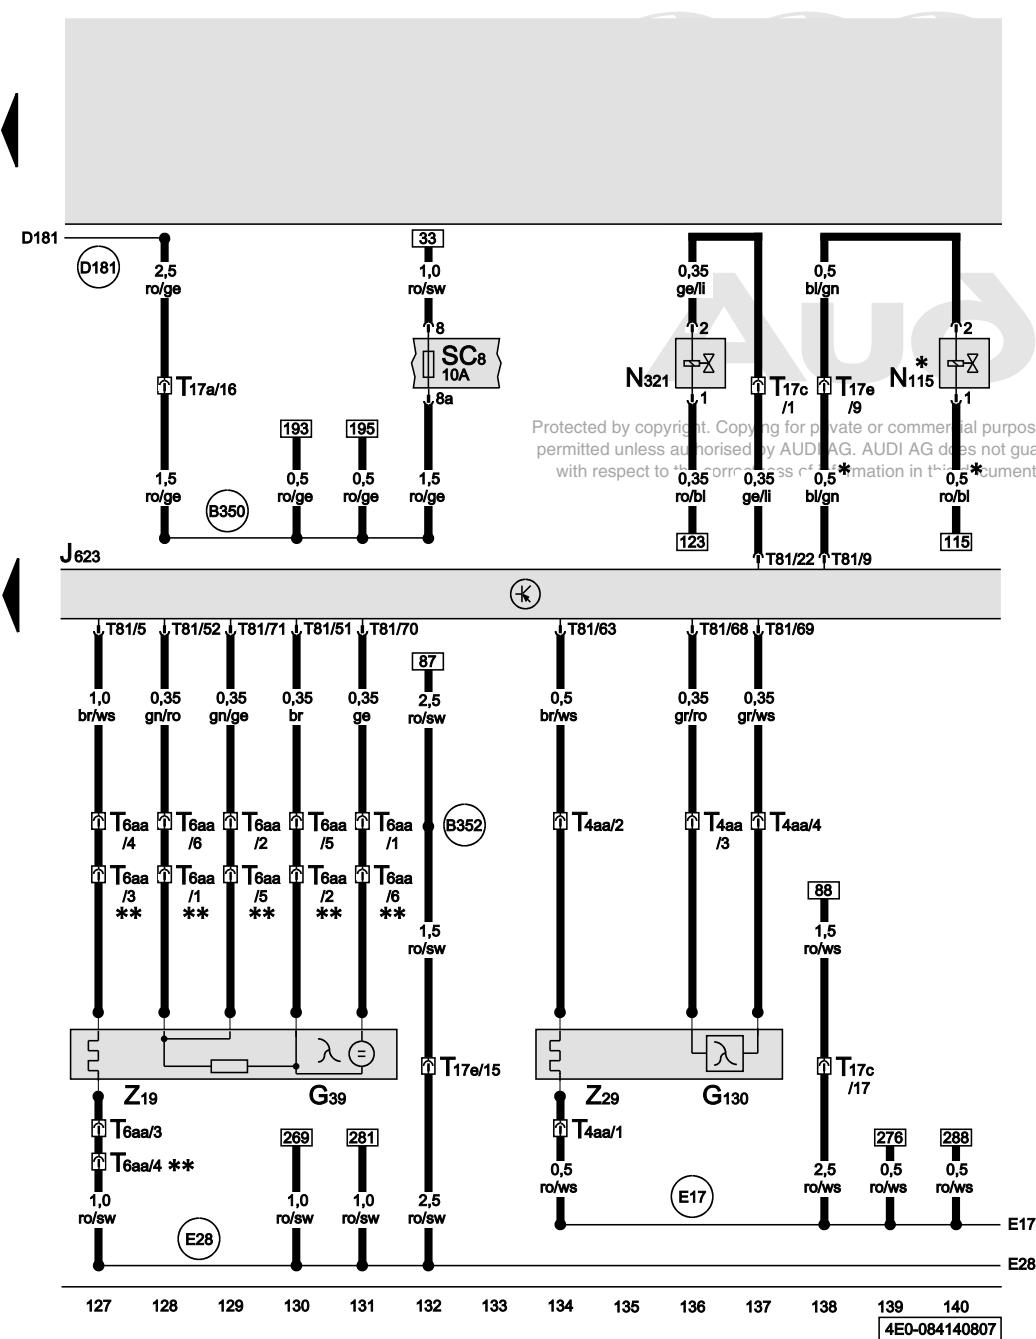


Engine control unit, secondary air pump relay, secondary air pump motor

- J217 Automatic gearbox control unit
 J299 Secondary air pump relay
 J518 Entry and start authorisation control unit
 J623 Engine control unit
 S130 Secondary air pump fuse
 T16c 16-pin connector, black, on automatic gearbox control unit
 T17a 17-pin connector, black, in electronics box in plenum chamber
 T17d 17-pin connector, blue, in electronics box in plenum chamber
 T17e 17-pin connector, red, in electronics box in plenum chamber
 T81 81-pin connector, black, on engine control unit
 V101 Secondary air pump motor
 V144 Fuel system diagnostic pump
- (44) Earth point, lower part of left A-pillar
 (375) Earth connection 10, in main wiring harness
 (D107) Connection 5, in engine compartment wiring harness
- * models with fuel system diagnostic pump
 # up to model year 2005
 ## from model year 2006
 ♦ Relay carrier electronics box in plenum chamber

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

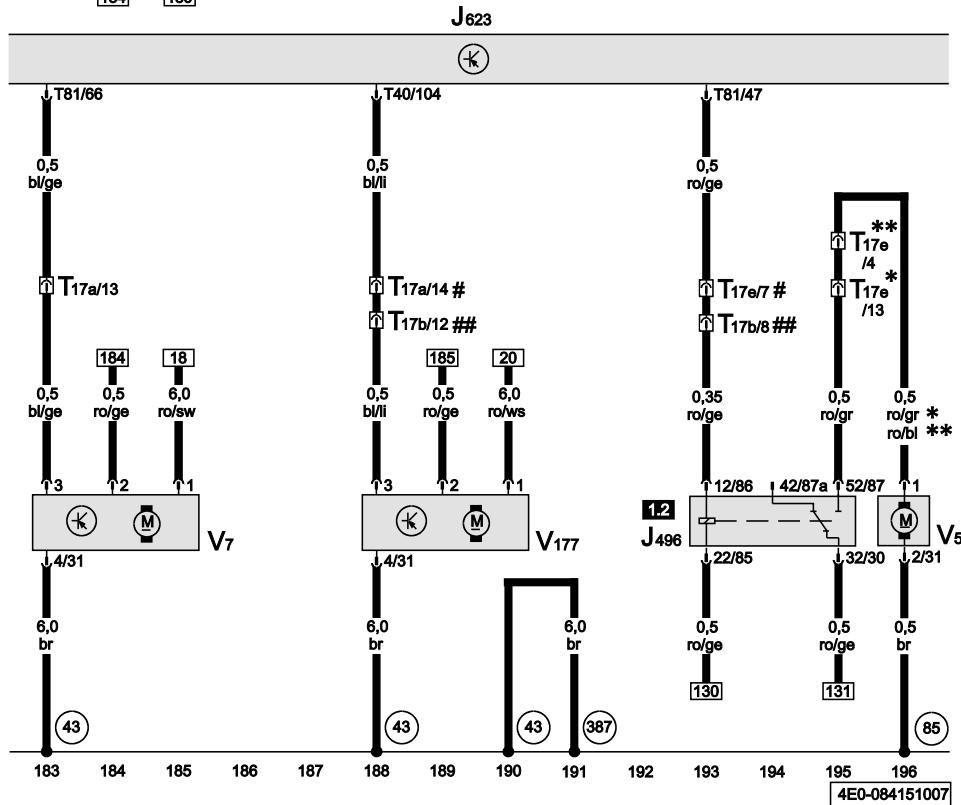

Engine control unit, radiator fan, radiator fan 2, additional coolant pump relay, continued coolant circulation pump

J496 Additional coolant pump relay
 J623 Engine control unit
 SC17 Fuse 17 on fuse holder C
 T17a 17-pin connector, black, in electronics box in plenum chamber
 T17b 17-pin connector, green, in electronics box in plenum chamber
 T17e 17-pin connector, red, in electronics box in plenum chamber

T40 40-pin connector, black, on engine control unit
 T81 81-pin connector, black, on engine control unit
 V7 Radiator fan

V51 Continued coolant circulation pump

V177 Radiator fan 2

43 Earth point, lower part of right A-pillar

85 Earth connection 1, in engine compartment wiring harness

387 Earth connection 22, in main wiring harness


* up to model year 2005

** from model year 2006

up to August 2007

from September 2007



ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

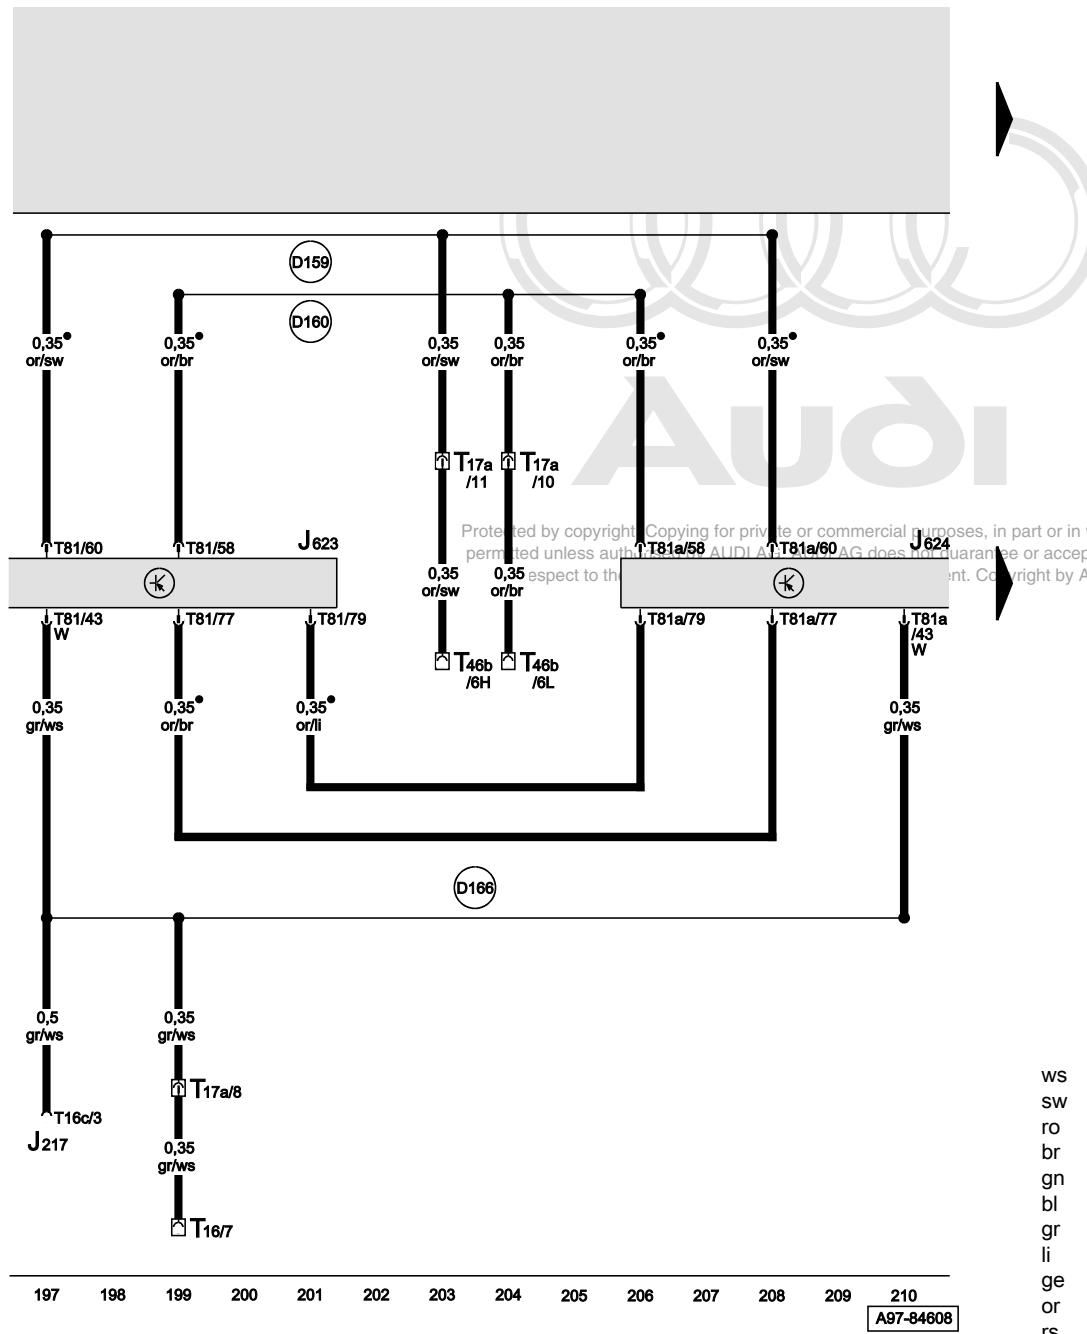

Engine control unit, engine control unit 2

- J217 Automatic gearbox control unit
J623 Engine control unit
J624 Engine control unit 2
T16 16-pin connector, black, diagnostic connection
T16c 16-pin connector, black, on automatic gearbox control unit
T17a 17-pin connector, black, in electronics box in plenum chamber
T46b 46-pin connector, black, CAN bus separating connector right
T81 81-pin connector, black, on engine control unit
T81a 81-pin connector, black, on engine control unit 2
- D159 Connection (high bus), in engine compartment wiring harness
D160 Connection (low bus), in engine compartment wiring harness
D166 Connection (K-diagnosis wiring), in engine compartment wiring harness

 ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

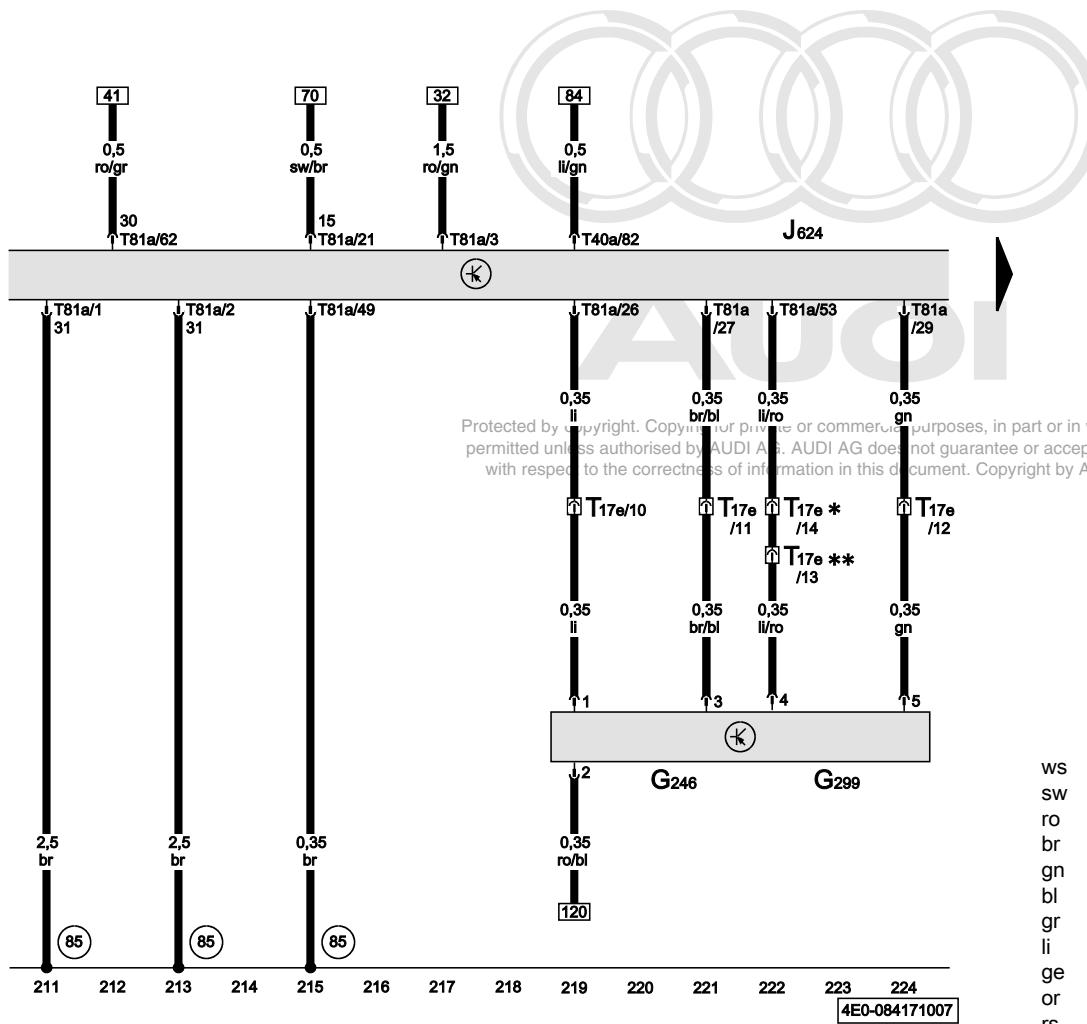

Engine control unit 2, air mass meter 2, intake air temperature sender 2

G246 Air mass meter 2

G299 Intake air temperature sender 2

J624 Engine control unit 2

T17e 17-pin connector, red, in electronics box in plenum chamber

T40a 40-pin connector, black, on engine control unit 2

T81a 81-pin connector, black, on engine control unit 2


85 Earth connection 1, in engine compartment wiring harness

* up to August 2007

** from September 2007

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

4E0-084171007

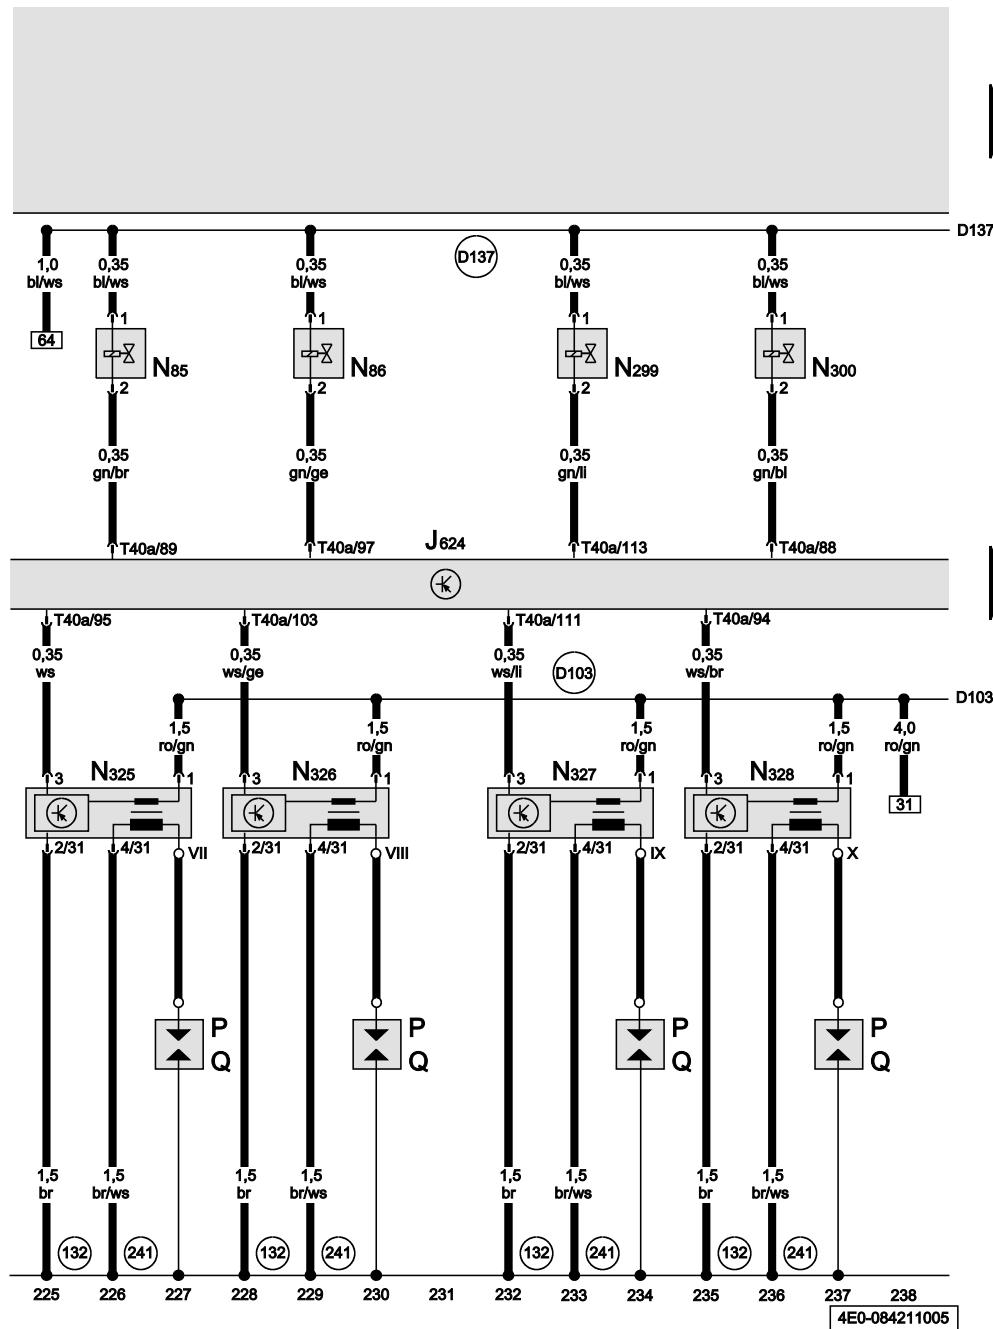


Engine control unit 2, ignition coils 7 - 10 with output stage, injectors, cylinder 7 - 10

- J624 Engine control unit 2
- N85 Injector, cylinder 7
- N86 Injector, cylinder 8
- N299 Injector, cylinder 9
- N300 Injector, cylinder 10
- N325 Ignition coil 7 with output stage
- N326 Ignition coil 8 with output stage
- N327 Ignition coil 9 with output stage
- N328 Ignition coil 10 with output stage
- P Spark plug connector
- Q Spark plugs
- T40a 40-pin connector, black, on engine control unit 2
- (132) Earth connection 3, in engine compartment wiring harness
- (241) Earth connection 2 engine earth, in engine wiring harness
- (D103) Connection 3, in engine compartment wiring harness
- (D137) Connection 2 (injectors), in engine compartment wiring harness

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

4E0-084211005

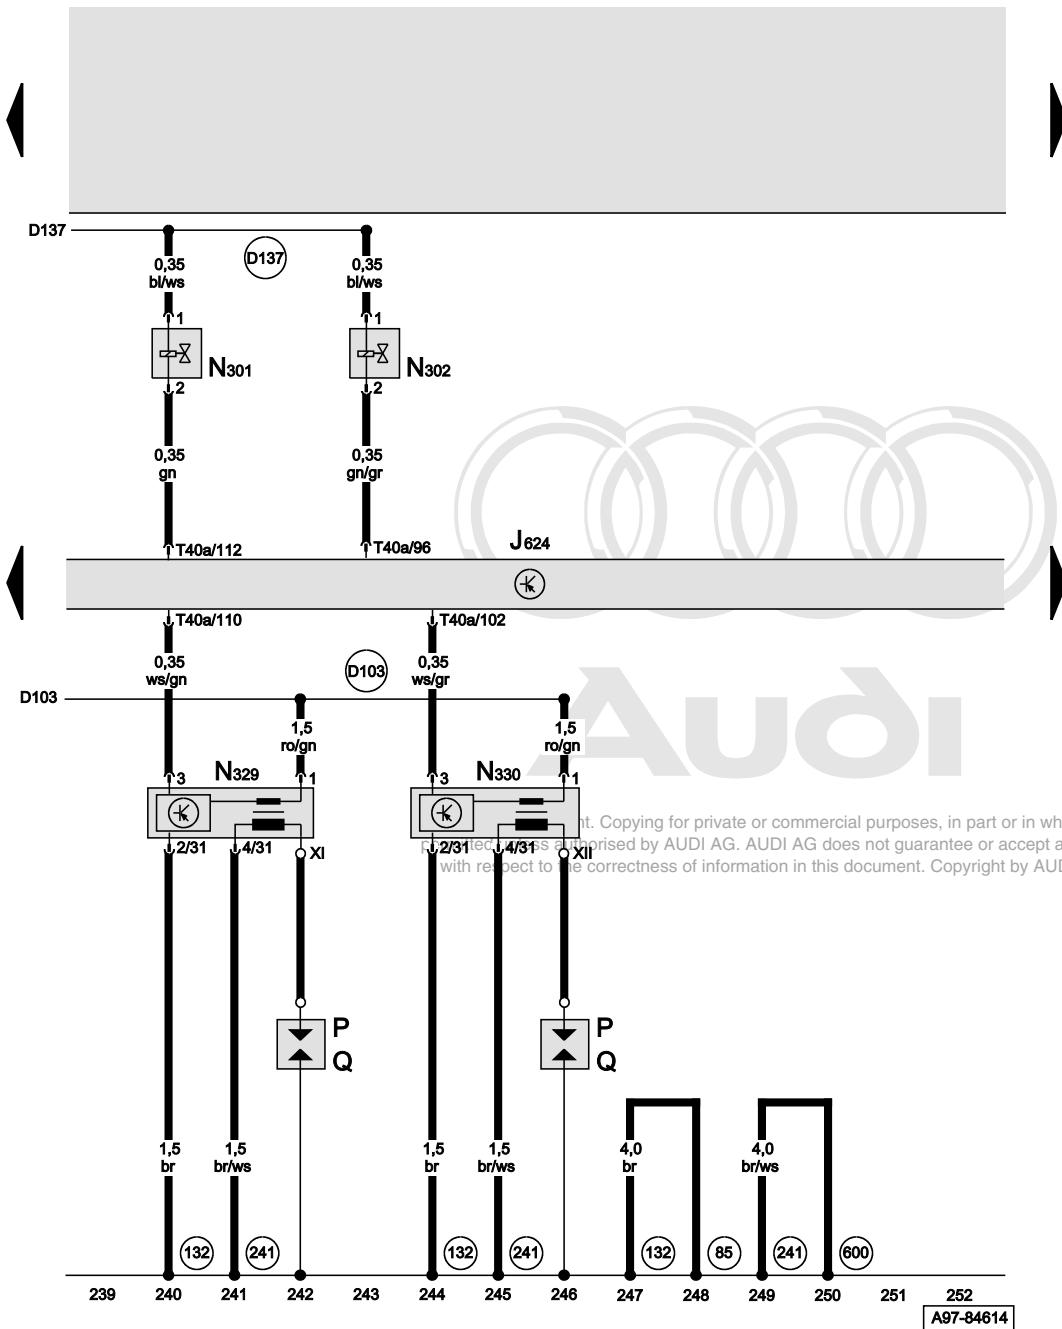

Engine control unit 2, ignition coils 11 and 12 with output stage, injectors cylinder 11 and 12


- J624 Engine control unit 2
- N301 Injector, cylinder 11
- N302 Injector, cylinder 12
- N329 Ignition coil 11 with output stage
- N330 Ignition coil 12 with output stage
- P Spark plug connector
- Q Spark plugs
- T40a 40-pin connector, black, on engine control unit 2
- 85 Earth connection 1, in engine compartment wiring harness
- 132 Earth connection 3, in engine compartment wiring harness
- 241 Earth connection 2 engine earth, in engine wiring harness
- 600 Earth point, on right of cylinder head
- D103 Connection 3, in engine compartment wiring harness
- D137 Connection 2 (injectors), in engine compartment wiring harness

AUDI

Important. Copying for private or commercial purposes, in part or in whole, is not
authorised by AUDI AG. AUDI AG does not guarantee or accept any liability
with respect to the correctness of information in this document. Copyright by AUDI AG.



ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

A97-84614

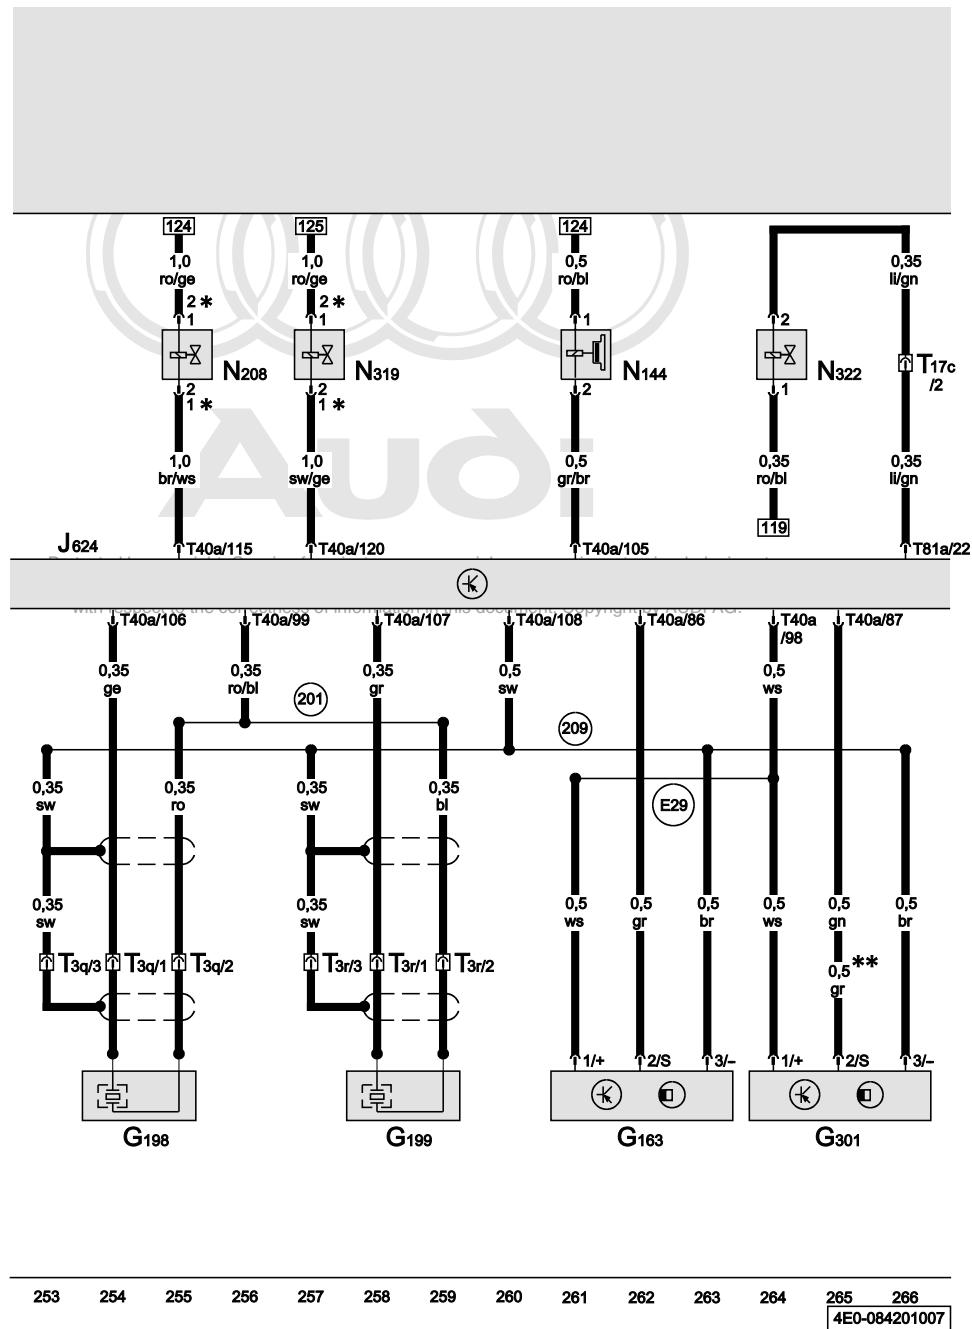


Engine control unit 2, knock sensor 3, knock sensor 4, Hall sender 2, Hall sender 4, inlet camshaft control valve 2, exhaust camshaft control valve 2, left electrohydraulic engine mounting solenoid valve, exhaust flap 2 valve

 - G163 Hall sender 2
 - G198 Knock sensor 3
 - G199 Knock sensor 4
 - G301 Hall sender 4
 - J624 Engine control unit 2
 - N144 Left electrohydraulic engine mounting solenoid valve
 - N208 Inlet camshaft control valve 2
 - N319 Exhaust camshaft control valve 2
 - N322 Exhaust flap 2 valve
 - T3q 3-pin connector, orange, on knock sensor 3
 - T3r 3-pin connector, black, on knock sensor 4
 - T17c 17-pin connector, brown, in electronics box in plenum chamber
 - T40a 40-pin connector, black, on engine control unit 2
 - T81a 81-pin connector, black, on engine control unit 2
 - (201) Earth connection 5, in engine compartment wiring harness
 - (209) Earth connection 6, in engine compartment wiring harness
 - (E29) Connection, in engine wiring harness
- * from November 2006
** phased-in modification

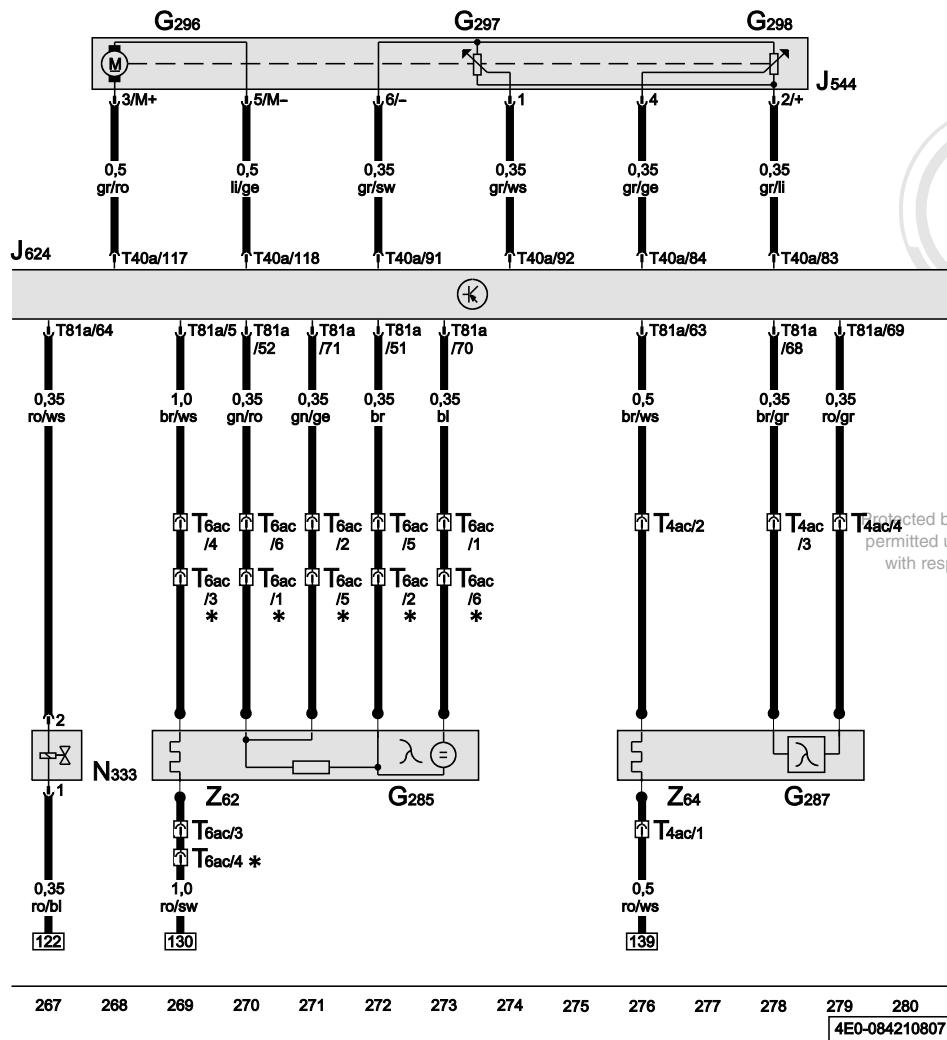

Engine control unit 2, throttle valve module 2, active charcoal filter system solenoid valve 2, lambda probe 3, lambda probe 3 after catalytic converter

- G285 Lambda probe 3
- G287 Lambda probe 3 after catalytic converter
- G296 Throttle valve drive 2
- G297 Angle sender 1 for throttle valve drive 2
- G298 Angle sender 2 for throttle valve drive 2
- J544 Throttle valve module 2
- J624 Engine control unit 2
- N333 Activated charcoal filter system solenoid valve 2
- T4ac 4-pin connector, green, lambda probe 3 after catalytic converter
- T6ac 6-pin connector, black, lambda probe 3
- T40a 40-pin connector, black, on engine control unit 2
- T81a 81-pin connector, black, on engine control unit 2
- Z62 Lambda probe 3 heater
- Z64 Lambda probe 3 heater after catalytic converter from March 2007
- * *

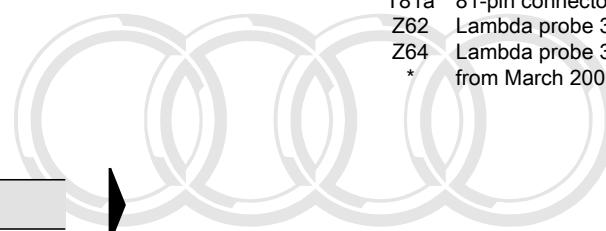

AUDI

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- ge = yellow
- or = orange
- rs = pink



Engine control unit 2, lambda probe 4, lambda probe 4 after catalytic converter

- G286 Lambda probe 4
- G288 Lambda probe 4 after catalytic converter
- J624 Engine control unit 2
- T4ad 4-pin connector, grey, lambda probe 4 after catalytic converter
- T6ad 6-pin connector, brown, lambda probe 4
- T81a 81-pin connector, black, on engine control unit 2
- Z63 Lambda probe 4 heater
- Z65 Lambda probe 4 heater after catalytic converter
- * from March 2007




Audi

J624




Copying for private or commercial purposes, in part or in whole, is not
permitted by AUDI AG. AUDI AG does not guarantee or accept any liability
with respect to the correctness of information in this document. Copyright by AUDI AG.

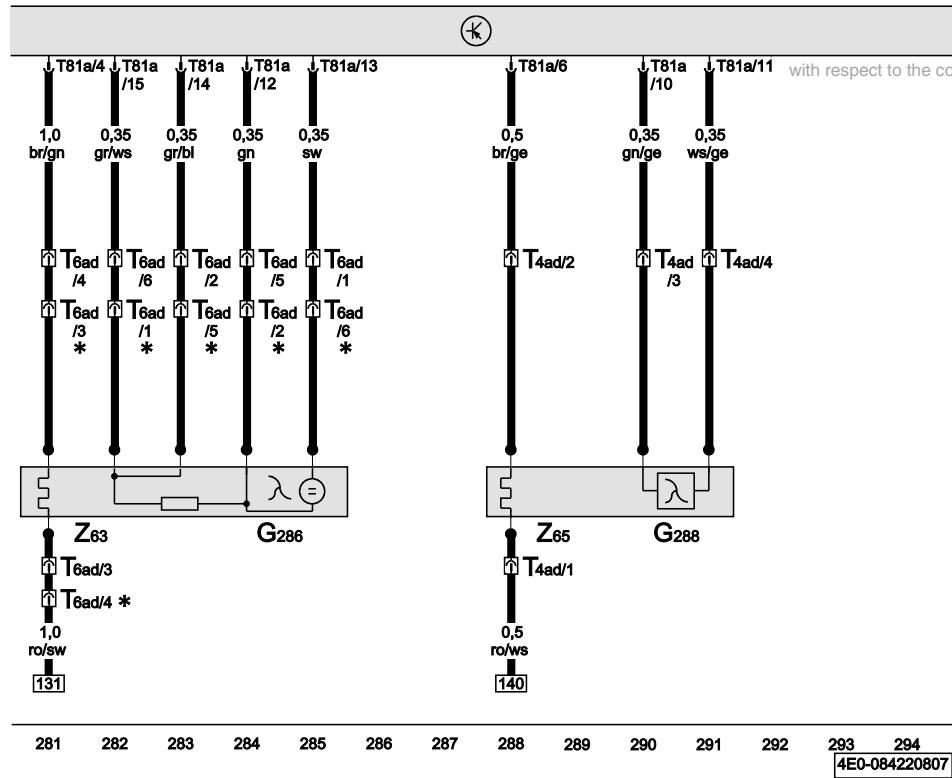


ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

 281 282 283 284 285 286 287 288 289 290 291 292 293 294
4E0-084220807



Engine control unit 2, secondary air pump relay 2, coolant pump relay 3, secondary air pump motor 2, high pressure sender

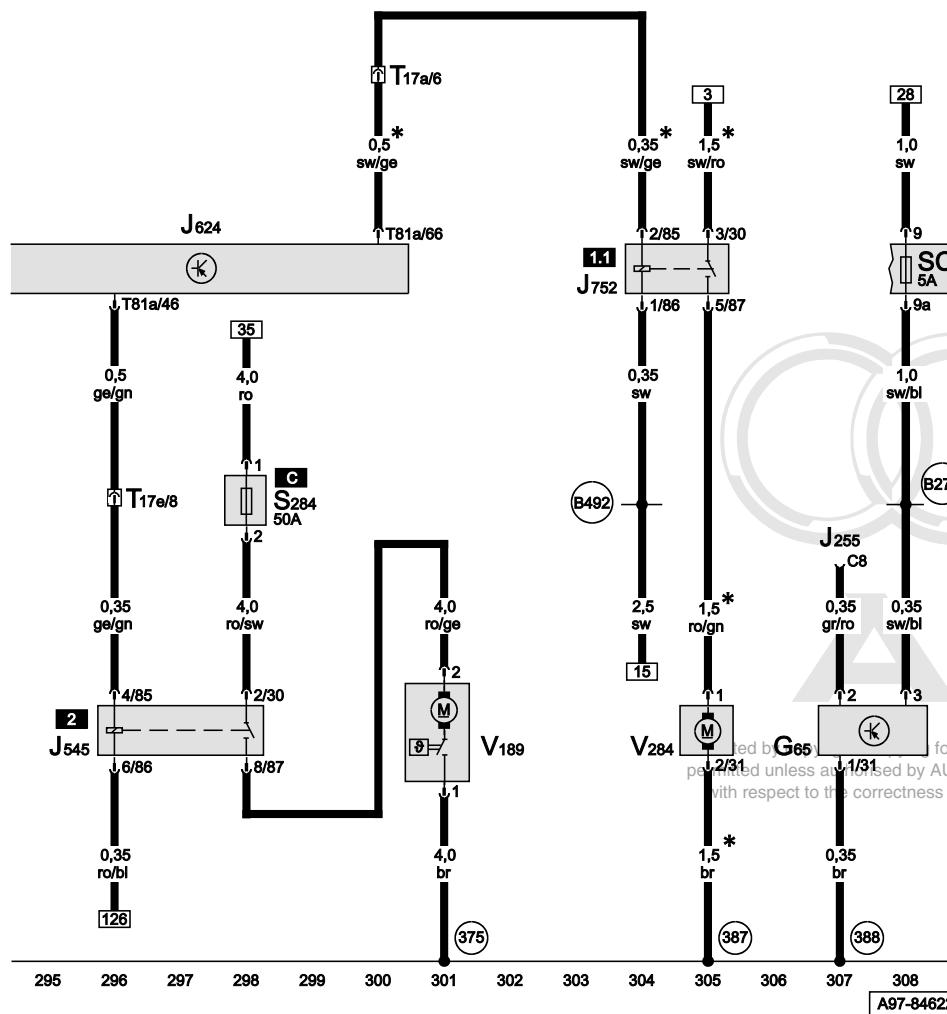

G65 High pressure sender
 J255 Climatronic control unit
 J545 Secondary air pump relay 2
 J624 Engine control unit 2
 J752 Radiator fan 3 relay
 S284 Secondary air pump fuse 2
 SC9 Fuse 9 on fuse holder C
 T17a 17-pin connector, black, in electronics box in plenum chamber
 T17e 17-pin connector, red, in electronics box in plenum chamber
 T81a 81-pin connector, black, on engine control unit 2
 V189 Secondary air pump motor 2
 V284 Radiator fan 3

375 Earth connection 10, in main wiring harness
 387 Earth connection 22, in main wiring harness
 388 Earth connection 23, in main wiring harness
 B279 Positive connection 3 (15a), in main wiring harness
 B492 Positive connection 3 (15), in interior wiring harness

* models with trailer towing attachment

relay carrier front passenger footwell

Relay carrier electronics box in plenum chamber


 
AUDI

for private or commercial purposes, in part or in whole, is not
 permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability
 with respect to the correctness of information contained in this document. Copyright by AUDI AG.

WS = white
 SW = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

295 296 297 298 299 300 301 302 303 304 305 306 307 308

A97-84622

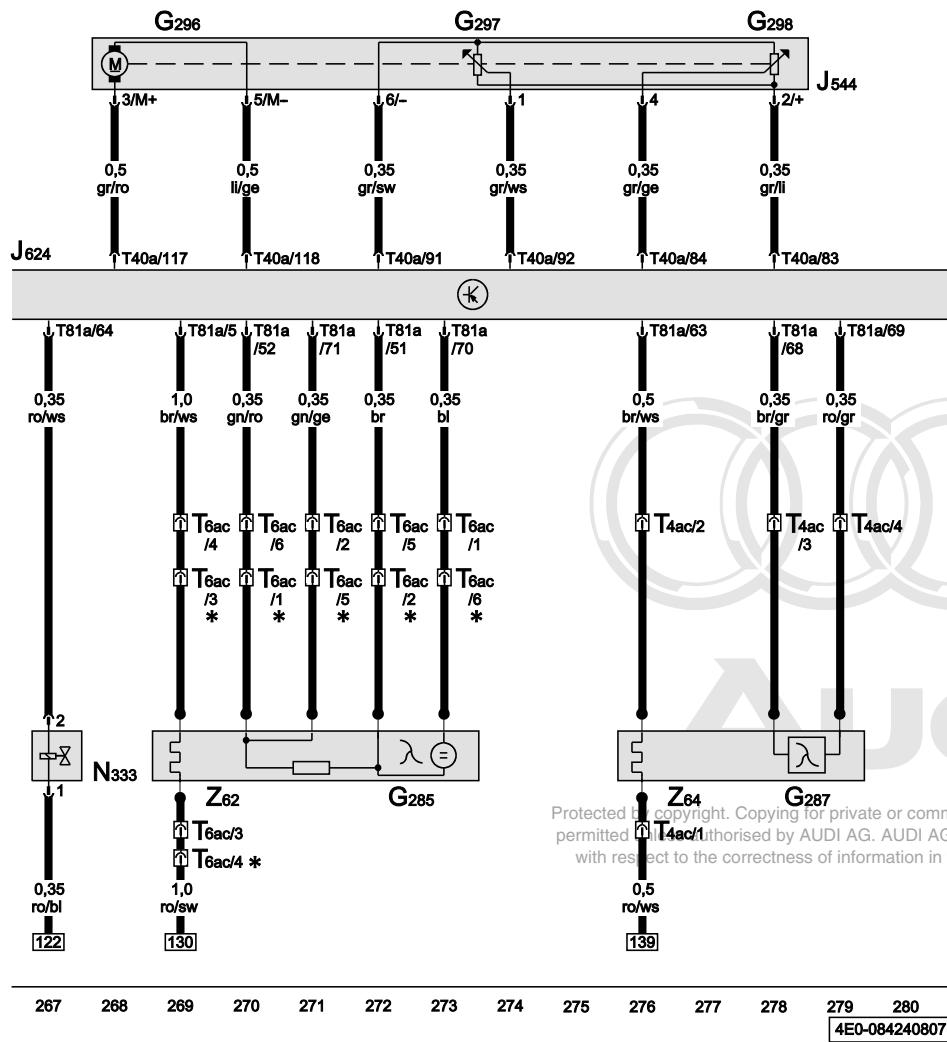



Fuel pump relay, electric fuel pump 2 relay, fuel gauge sender, fuel system pressurisation pump, control unit in dash panel insert

- G Fuel gauge sender
 - G6 Fuel system pressurisation pump
 - G237 Fuel gauge sender 3
 - J17 Fuel pump relay
 - J49 Electric fuel pump 2 relay
 - J285 Control unit in dash panel insert
 - SF2 Fuse 2 on fuse holder F
 - T4a 4-pin connector, under right cover on vehicle floor
 - T6e 6-pin connector, under right cover on vehicle floor
 - T32 32-pin connector, blue, on dash panel insert
 - Y24 Display in dash panel insert
 - 361 Earth connection (fuel gauge sender), in main wiring harness
 - 390 Earth connection 25, in main wiring harness
 - 675 Earth point 2, on right in luggage compartment
 - B299 Positive connection 3 (30), in main wiring harness
- * up to August 2007
 ** from September 2007
 # relay carrier front passenger footwell
 ## Relay and fuse carrier right in luggage compartment

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted! © AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw, in particular black = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

 267 268 269 270 271 272 273 274 275 276 277 278 279 280
4E0-084240807

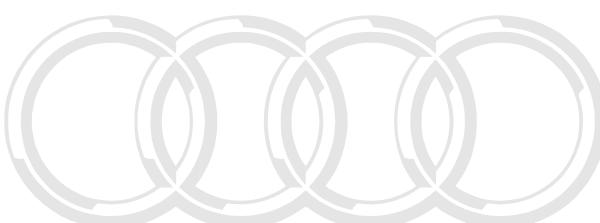


Control unit in dash panel insert, oil pressure switch, fuel pump, fuel gauge sender, oil pressure warning lamp


- F1 Oil pressure switch
- G1 Fuel gauge
- G23 Fuel pump
- G169 Fuel gauge sender 2
- G393 Fuel gauge sender 4
- J285 Control unit in dash panel insert
- K3 Oil pressure warning lamp
- T4a 4-pin connector, under right cover on vehicle floor
- T6e 6-pin connector, under right cover on vehicle floor
- T32 32-pin connector, blue, on dash panel insert
- Y24 Display in dash panel insert

- (361) Earth connection (fuel gauge sender), in main wiring harness

- (390) Earth connection 25, in main wiring harness

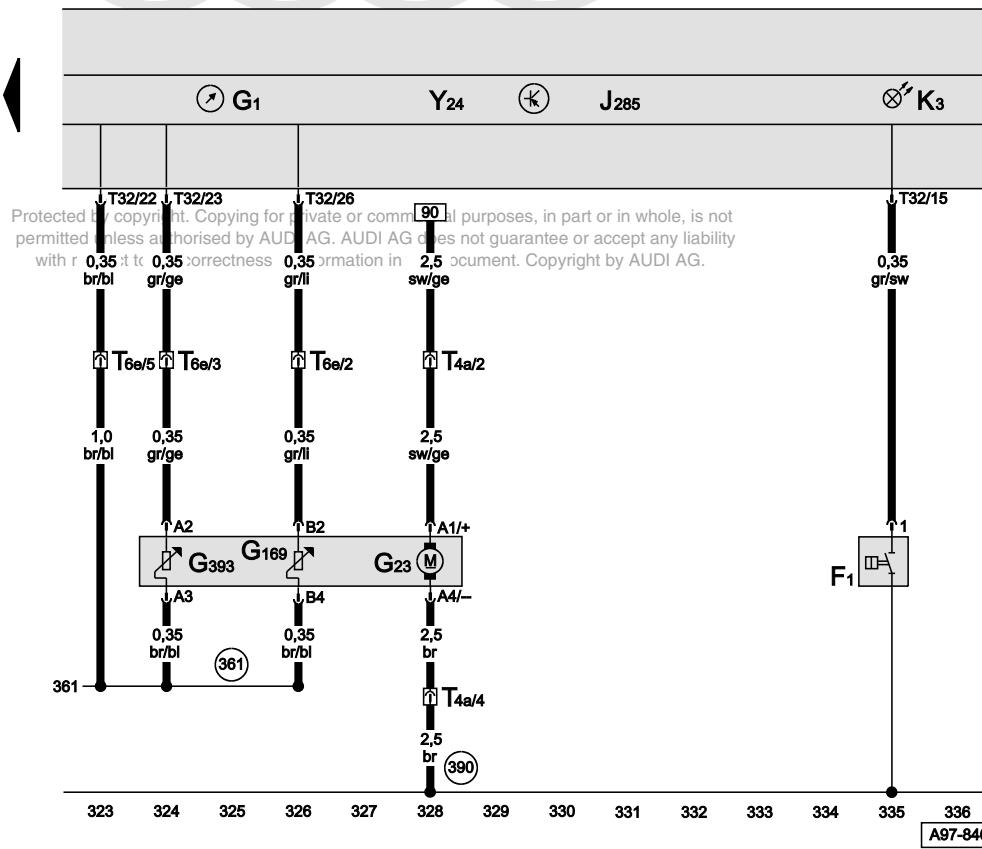

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

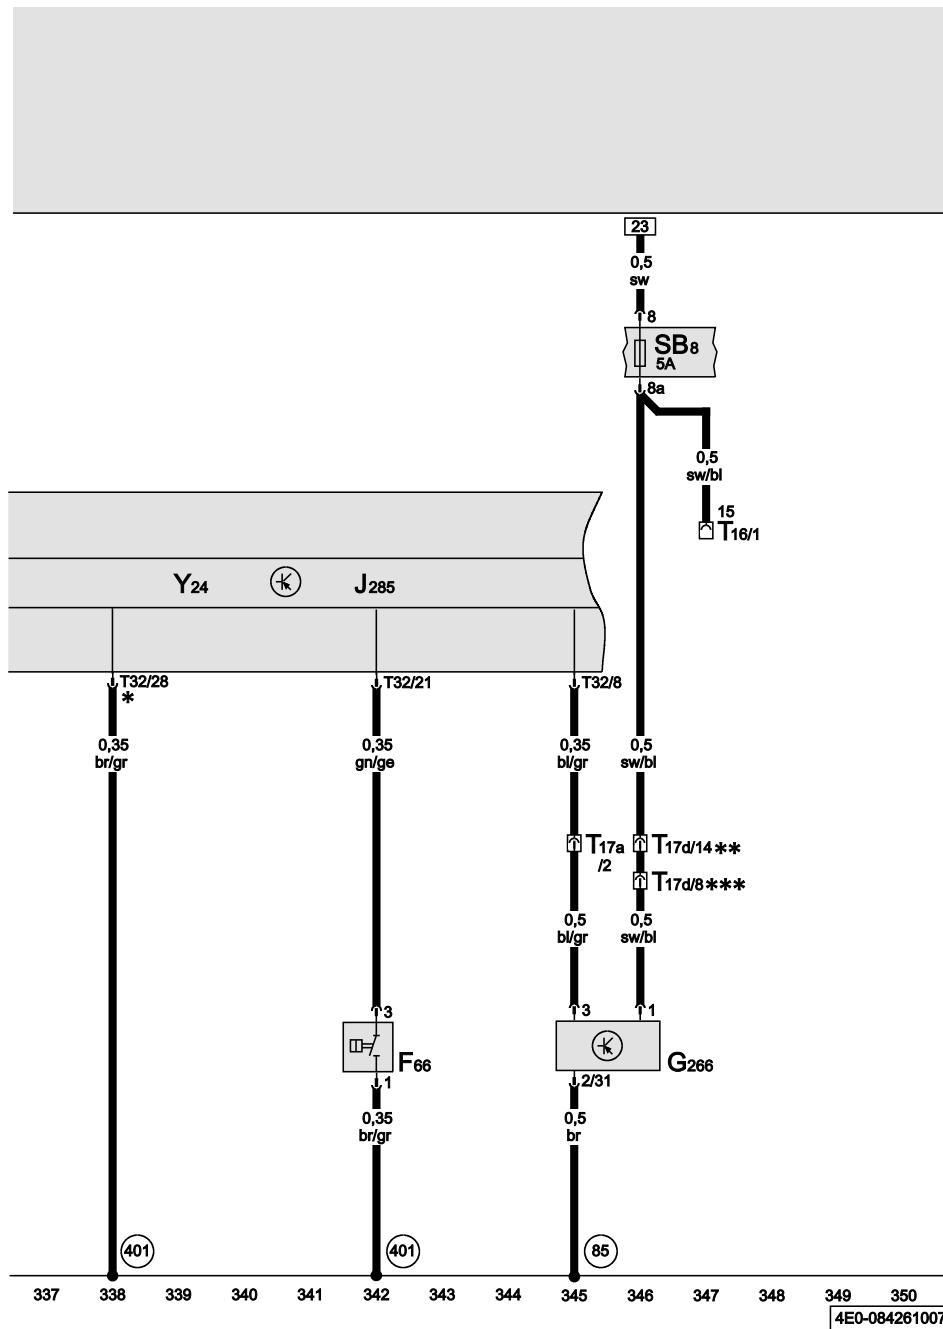

Control unit in dash panel insert, coolant shortage indicator switch, oil level and oil temperature sender

- F66 Coolant shortage indicator switch
 - G266 Oil level and oil temperature sender
 - J285 Control unit in dash panel insert
 - SB8 Fuse 8 on fuse holder B
 - T16 16-pin connector, black, diagnostic connection
 - T17a 17-pin connector, black, in electronics box in plenum chamber
 - T17d 17-pin connector, blue, in electronics box in plenum chamber
 - T32 32-pin connector, blue, on dash panel insert
 - Y24 Display in dash panel insert
 - (85) Earth connection 1, in engine compartment wiring harness
 - (401) Earth connection (sender earth), in interior wiring harness
- * output sender earth
 ** up to August 2007
 *** from September 2007



ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

gn Prohibited by law. Copying for private or commercial purposes, in part or in whole, is not
 bl Prohibited by law. Copying for private or commercial purposes, in part or in whole, is not
 gr Prohibited by law. Copying for private or commercial purposes, in part or in whole, is not
 li Prohibited by law. Copying for private or commercial purposes, in part or in whole, is not
 ge Prohibited by law. Copying for private or commercial purposes, in part or in whole, is not
 or Prohibited by law. Copying for private or commercial purposes, in part or in whole, is not
 rs Prohibited by law. Copying for private or commercial purposes, in part or in whole, is not
 Copyright by AUDI AG.

Audi A8 3.0 I - TDI, Common Rail, (171 kW 155 kW - 6-cylinder) engine code ASB, BNG from model year 2005

Notes:

For information concerning

- ◆ Position of relays and fuses
- ◆ Multi-pin connections
- ◆ Control units and relays
- ◆ Earth connections


⇒ List of Fitting Locations!

For information concerning

- ◆ Fault Finding Programs
- ⇒ guided fault finding



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

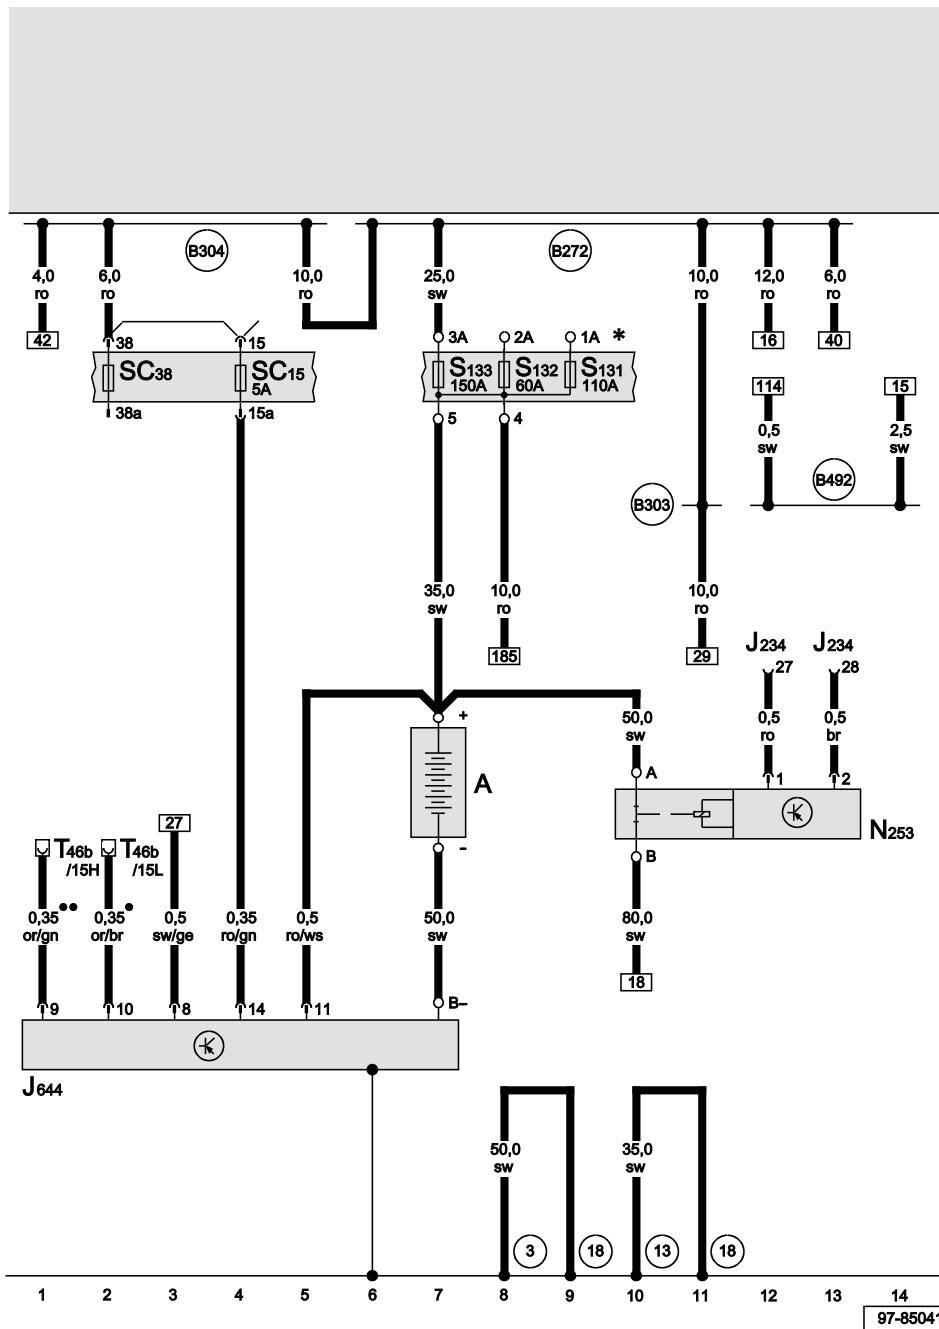

Battery, energy management control unit, battery isolation igniter, fuses

- A Battery
- J234 Airbag control unit
- J644 Energy management control unit
- N253 Battery isolation igniter
- S131 Fuse 1
- S132 Fuse 2
- S133 Fuse 3
- SC15 Fuse 15 on fuse holder C
- SC38 Fuse 38 on fuse holder C
- T46b 46-pin connector, black, CAN disconnector right

(3) Earth strap, engine - body

(13) Earth point, on right in engine compartment

(18) Earth point on engine block

(B272) Positive connection (30), in main wiring harness

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to third party's content. © AUDI AG.

(B303) Positive connection 7 (30), in main wiring harness


(B304) Positive connection 8 (30), in main wiring harness

(B492) Positive connection 3 (15), in interior wiring harness

* CAN bus (data wire)

* In luggage compartment, rear right

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

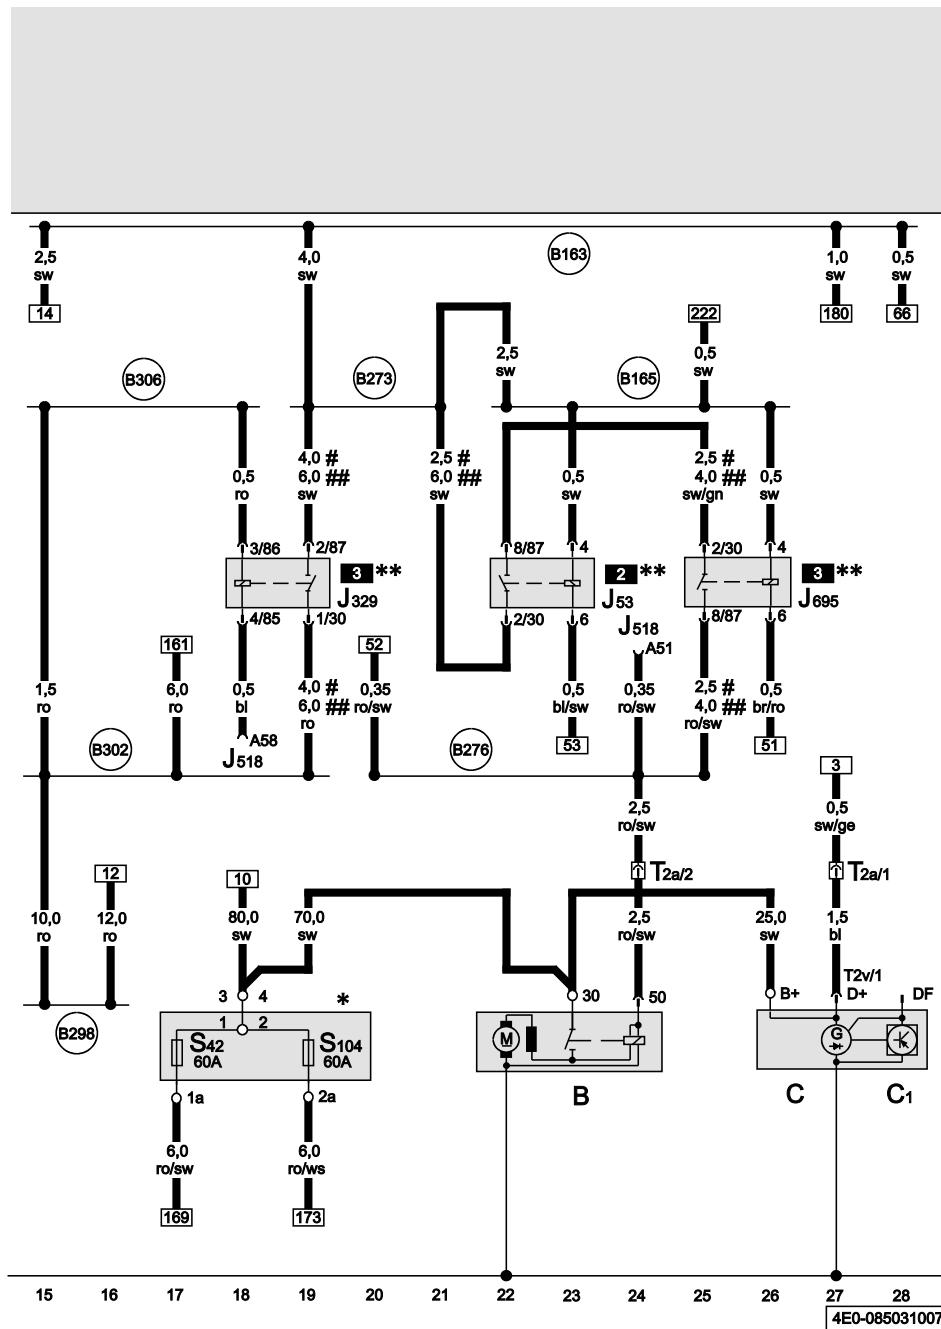

Starter, alternator, terminal 15 voltage supply relay, starter motor relay

- B Starter
- C Alternator
- C1 Voltage regulator
- J53 Starter motor relay
- J329 Terminal 15 voltage supply relay
- J518 Entry and start authorisation control unit
- J695 Starter motor relay 2
- S42 Radiator fan single fuse
- S104 Radiator fan fuse for 2nd speed
- T2a 2-pin connector, black, in front right engine compartment
- T2v 2-pin connector, red, on alternator

B163 Positive connection 1 (15), in interior wiring harness

B165 Positive connection 2 (15), in interior wiring harness

B273 Positive connection (15), in main wiring harness

B276 Positive connection (50), in main wiring harness

B298 Positive connection 2 (30), in main wiring harness

B302 Positive connection 6 (30), in main wiring harness

B306 Positive connection 10 (30), in main wiring harness


* Main fuse carrier right A-pillar

** relay carrier front passenger footwell

up to April 2006

from May 2006

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.
 ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

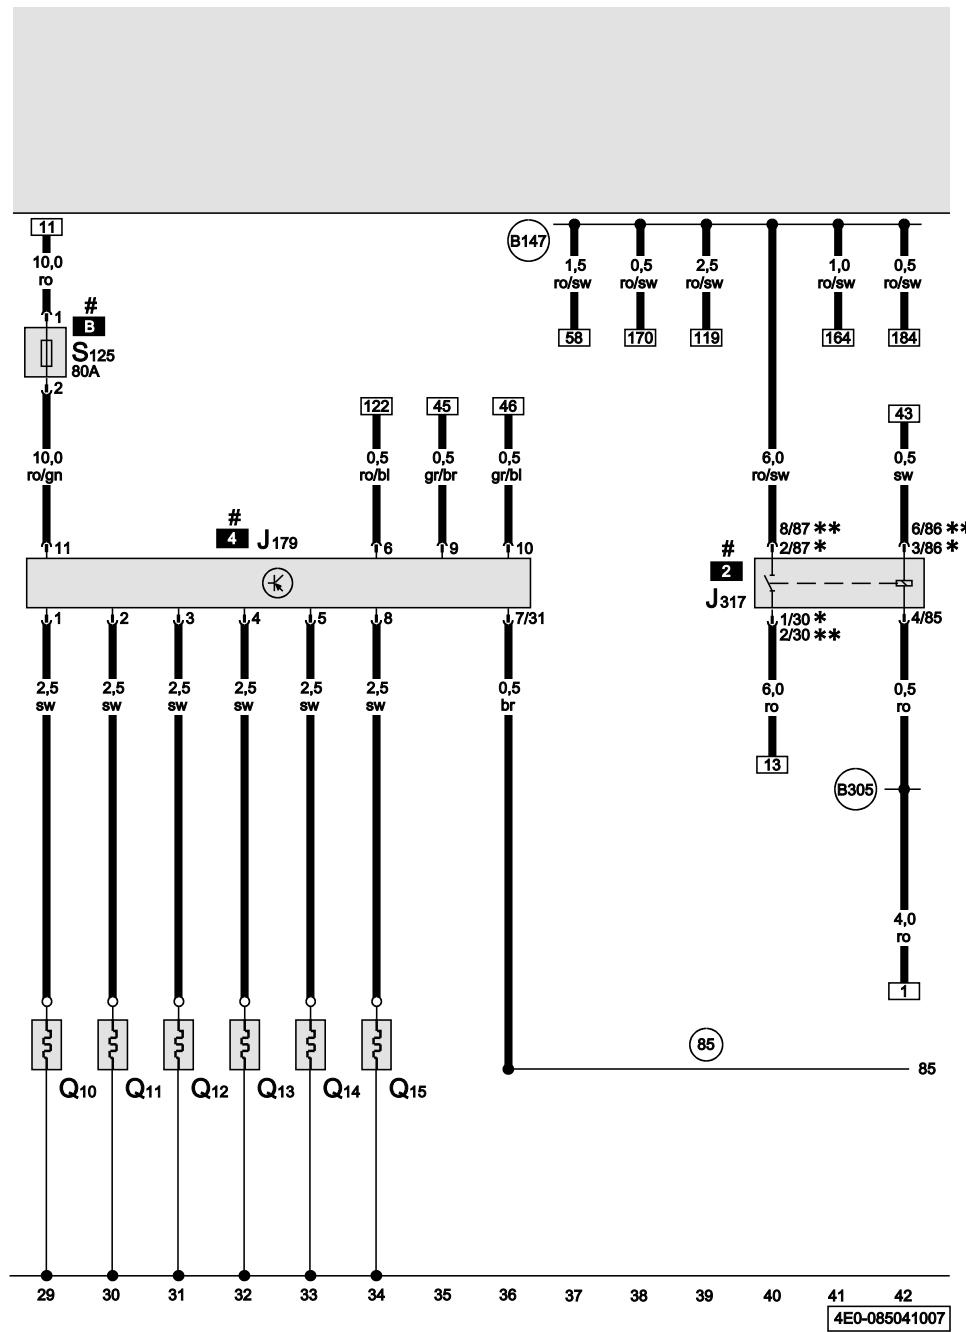

Automatic glow period control unit, terminal 30 voltage supply relay, glow plugs, glow plug fuse

J179 Automatic glow period control unit

J317 Terminal 30 voltage supply relay

Q10 Glow plug 1

Q11 Glow plug 2

Q12 Glow plug 3

Q13 Glow plug 4

Q14 Glow plug 5

Q15 Glow plug 6

S125 Glow plug fuse

85 Earth connection 1, in engine compartment wiring harness

B147 Positive connection 2 (87), in interior wiring harness

B305 Positive connection 9 (30), in main wiring harness

* up to August 2007

** from September 2007


Relay carrier electronics box in plenum chamber

Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

4E0-085041007

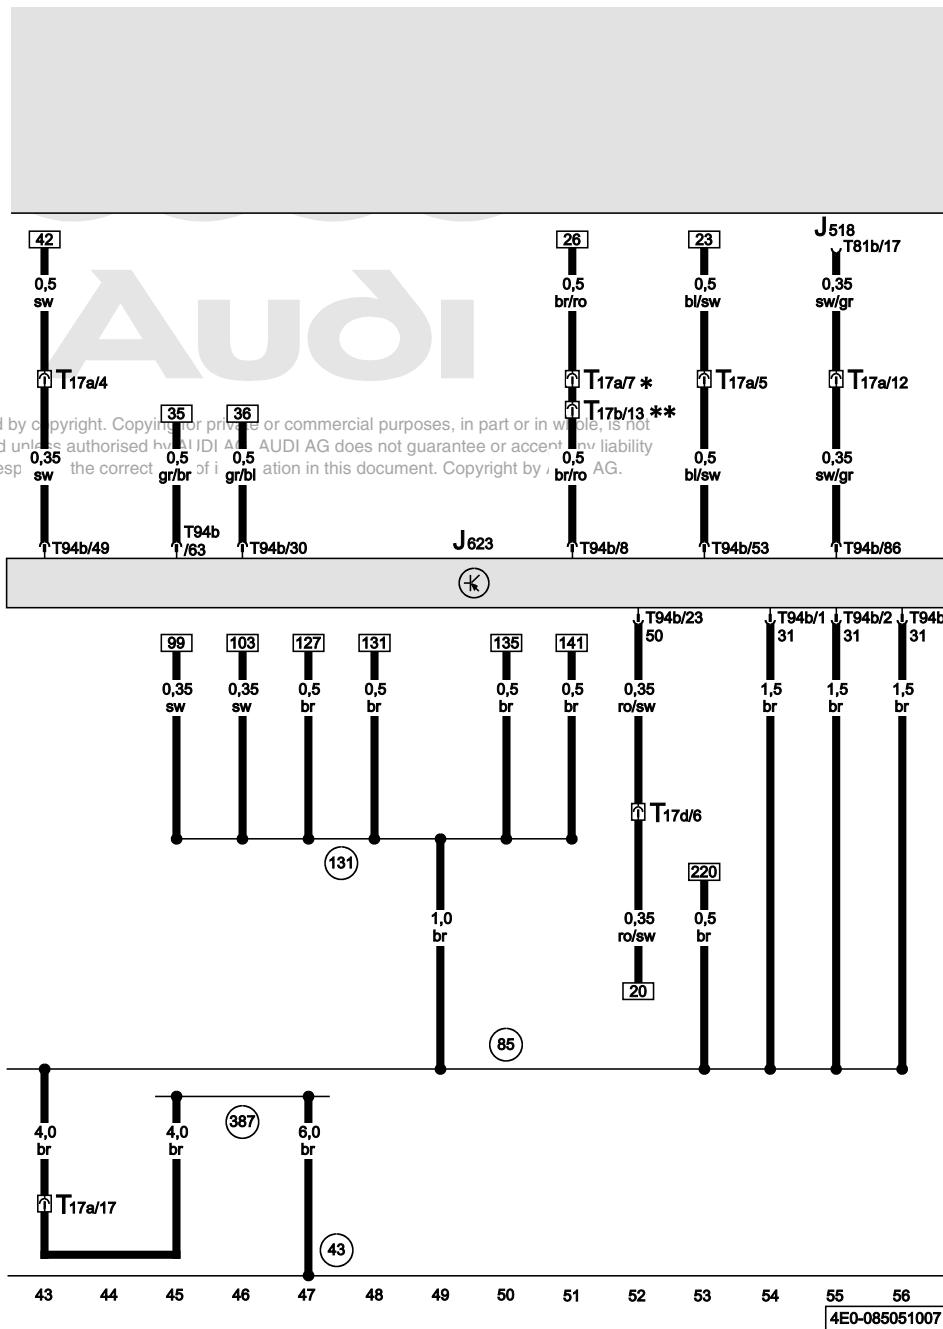**Engine control unit**


- J518 Entry and start authorisation control unit
- J623 Engine control unit
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T17b 17-pin connector, green, in electronics box in plenum chamber
- T17d 17-pin connector, blue, in electronics box in plenum chamber
- T81b 81-pin connector, black, connector A, on entry and start authorisation control unit
- T94b 94-pin connector, black, connector B, on engine control unit

- (43) Earth point, lower part of right A-pillar
- (85) Earth connection 1, in engine compartment wiring harness
- (131) Earth connection 2, in engine compartment wiring harness
- (387) Earth connection 22, in main wiring harness

* up to August 2007


** from September 2007

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

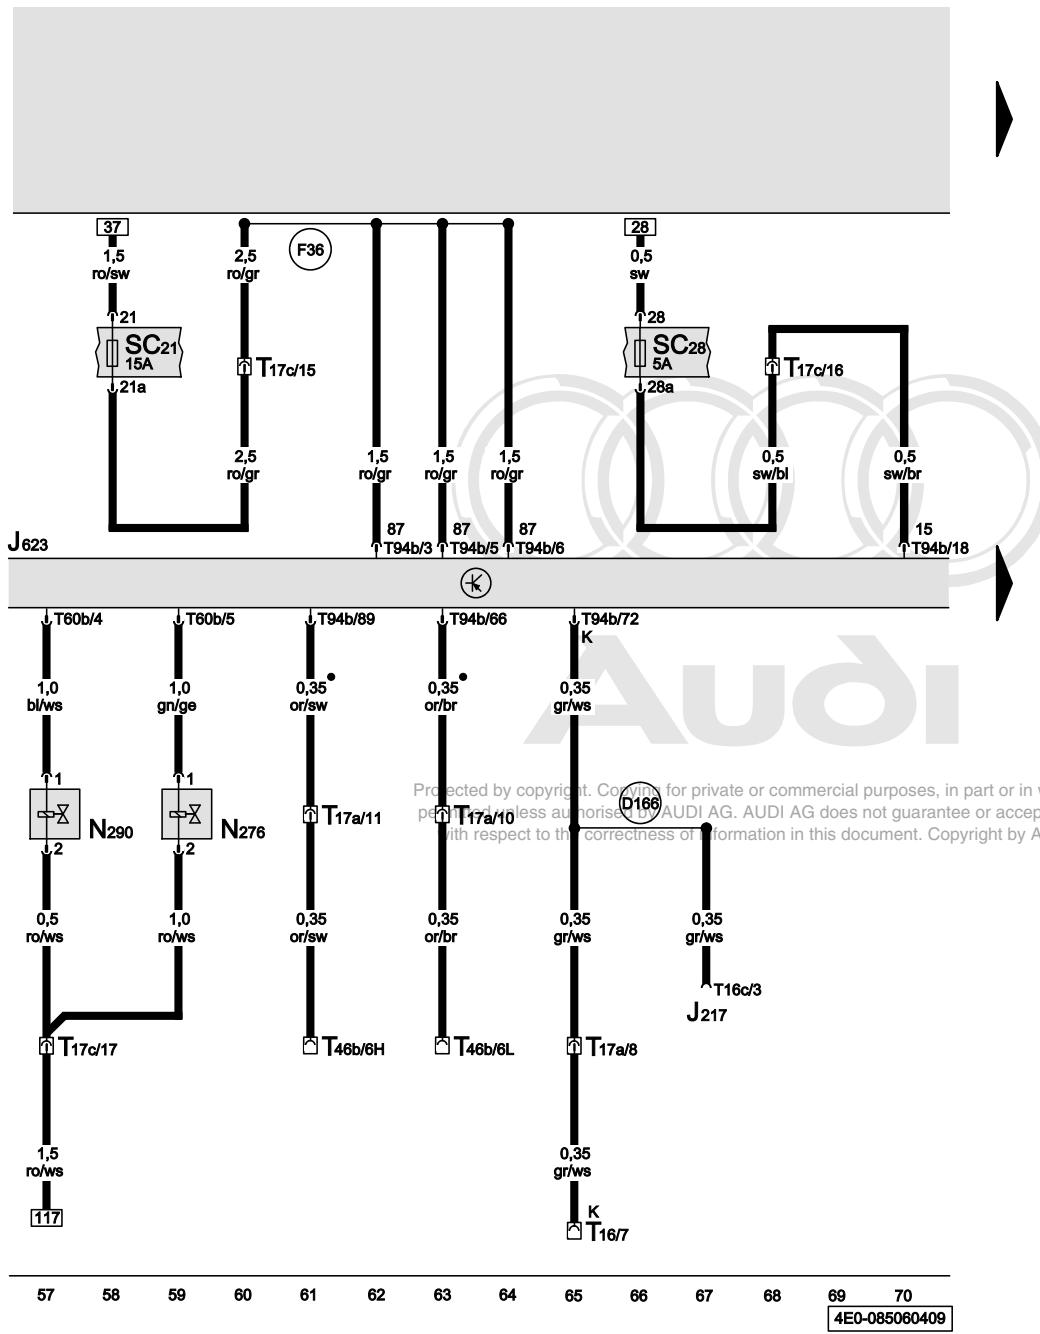

Engine control unit, fuel pressure regulating valve, fuel metering valve

- J217 Automatic gearbox control unit
- J623 Engine control unit
- N276 Fuel pressure regulating valve
- N290 Fuel metering valve
- SC21 Fuse 21 on fuse holder C
- SC28 Fuse 28 on fuse holder C
- T16 16-pin connector, black, diagnostic connection
- T16c 16-pin connector, black, on automatic gearbox control unit
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T17c 17-pin connector, brown, in electronics box in plenum chamber
- T46b 46-pin connector, black, CAN bus disconnector right
- T60b 60-pin connector, black, connector A, on engine control unit
- T94b 94-pin connector, black, connector B, on engine control unit
- D166 Connection (K-diagnosis wiring), in engine compartment wiring harness
- F36 Connection (87a), in diesel direct injection system wiring harness
- CAN bus (data wire)

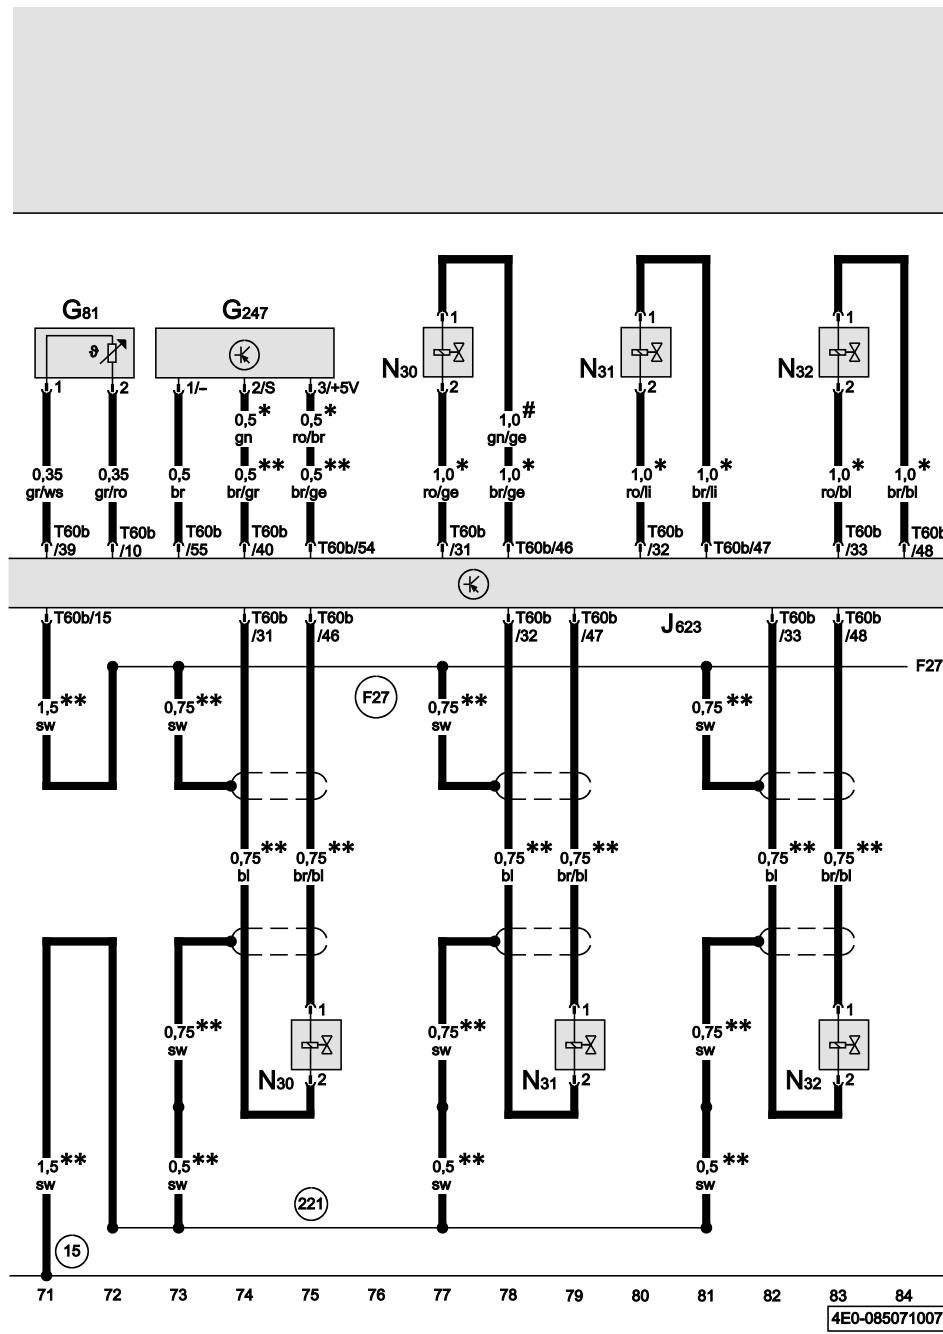

Engine control unit, fuel temperature sender, fuel pressure sender, injector, cylinder 1 - 3

G81 Fuel temperature sender
 G247 Fuel pressure sender
 J623 Engine control unit
 N30 Injector, cylinder 1
 N31 Injector, cylinder 2
 N32 Injector, cylinder 3
 T60b 60-pin connector, black, connector A, on engine control unit


 
15 Earth point, on cylinder head
 221 Earth connection (engine earth), in engine wiring harness
 F27 Connection (screening), in diesel direct injection wiring harness

* phased from March 2005
 ** no longer fitted, phased from March 2005
 # phased-in modification

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

4E0-085071007

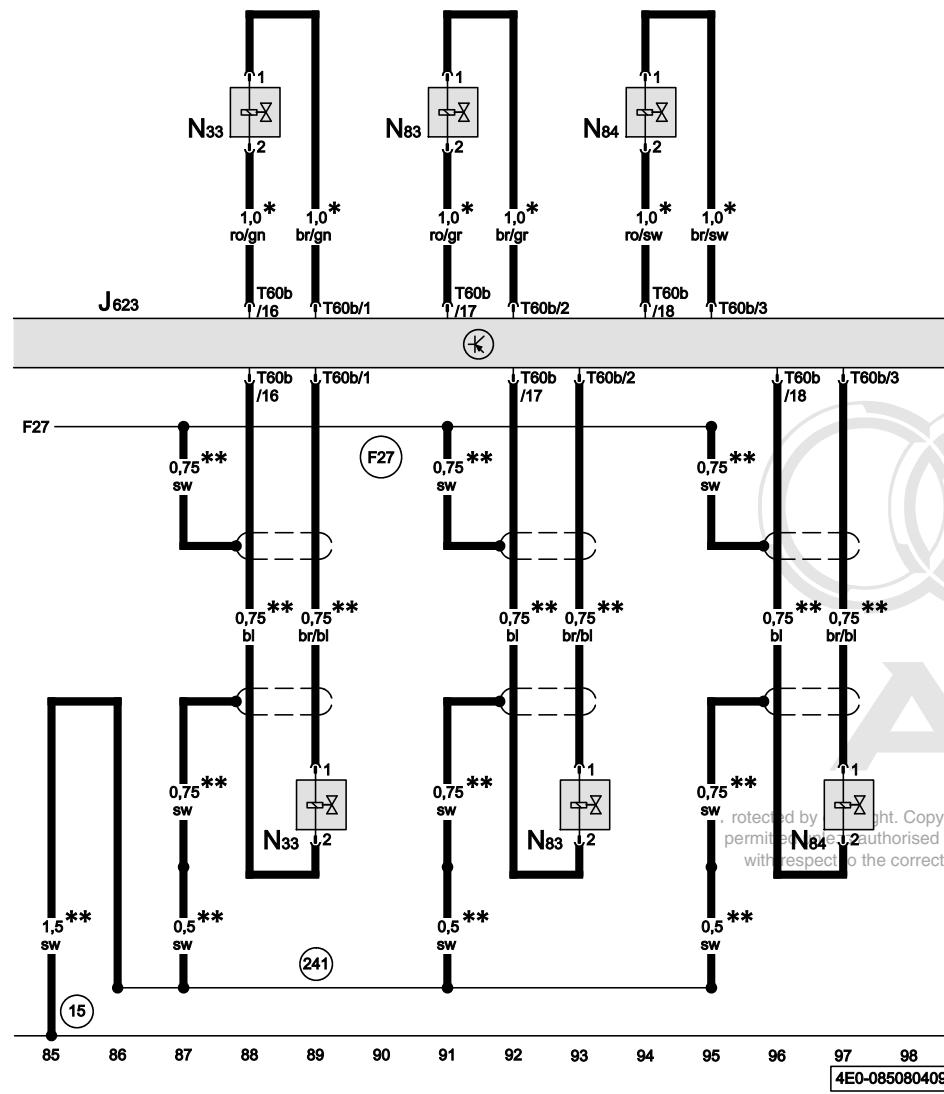

Engine control unit, injectors cylinder 4 up to 6


 
J623 Engine control unit
 N33 Injector, cylinder 4
 N83 Injector, cylinder 5
 N84 Injector, cylinder 6
 T60b 60-pin connector, black, connector A, on engine control unit

- (15) Earth point, on cylinder head
 - (241) Earth connection 2 engine earth, in engine wiring harness
 - (F27) Connection (screening), in diesel direct injection wiring harness
- * phased from March 2005
 ** no longer fitted, phased from March 2005

Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted without authorisation by AUDI AG. WS-DI AG white dot guarantee or accept any liability with respect to the correctness of information. Copyright by AUDI AG.

ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

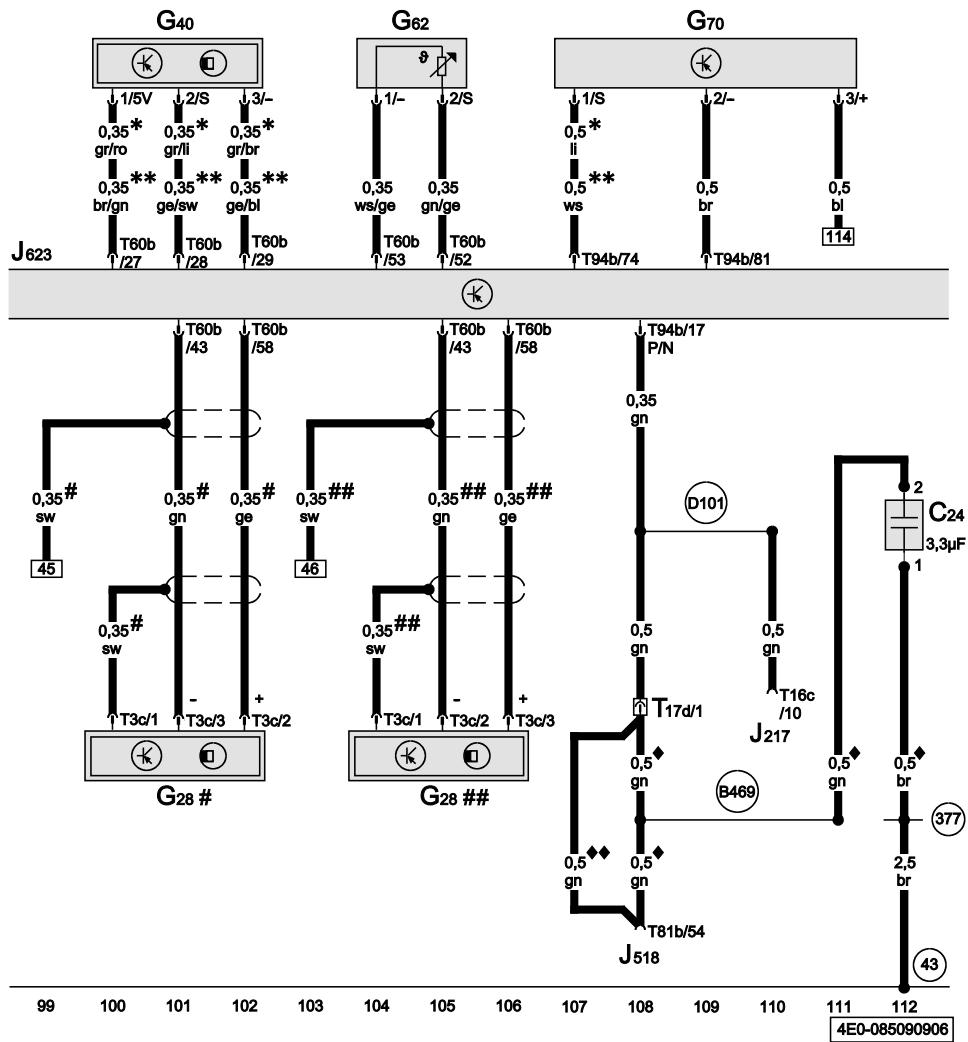

Engine control unit, Hall sender, air mass meter, engine speed sender, coolant temperature sender, suppression filter

- C24 Suppression filter
- G28 Engine speed sender
- G40 Hall sender
- G62 Coolant temperature sender
- G70 Air mass meter
- J217 Automatic gearbox control unit
- J518 Entry and start authorisation control unit
- J623 Engine control unit
- T3c 3-pin connector, grey, on engine speed sender
- T16c 16-pin connector, black, on automatic gearbox control unit
- T17d 17-pin connector, blue, in electronics box in plenum chamber
- T60b 60-pin connector, black, connector A, on engine control unit
- T81b 81-pin connector, black, connector A, on entry and start authorisation control unit
- T94b 94-pin connector, black, connector B, on engine control unit

- 43 Earth point, lower part of right A-pillar
- 377 Earth connection 12, in main wiring harness

- B469 Connection 5 in main wiring harness

- D101 Connection 1, in engine compartment wiring harness

* phased from March 2005

** no longer fitted, phased from March 2005

up to model year 2005


from model year 2006, when replacing the gearbox, observe the version of the drive plate

◆ up to October 2005

◆◆ from November 2005

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- ge = yellow
- or = orange
- rs = pink

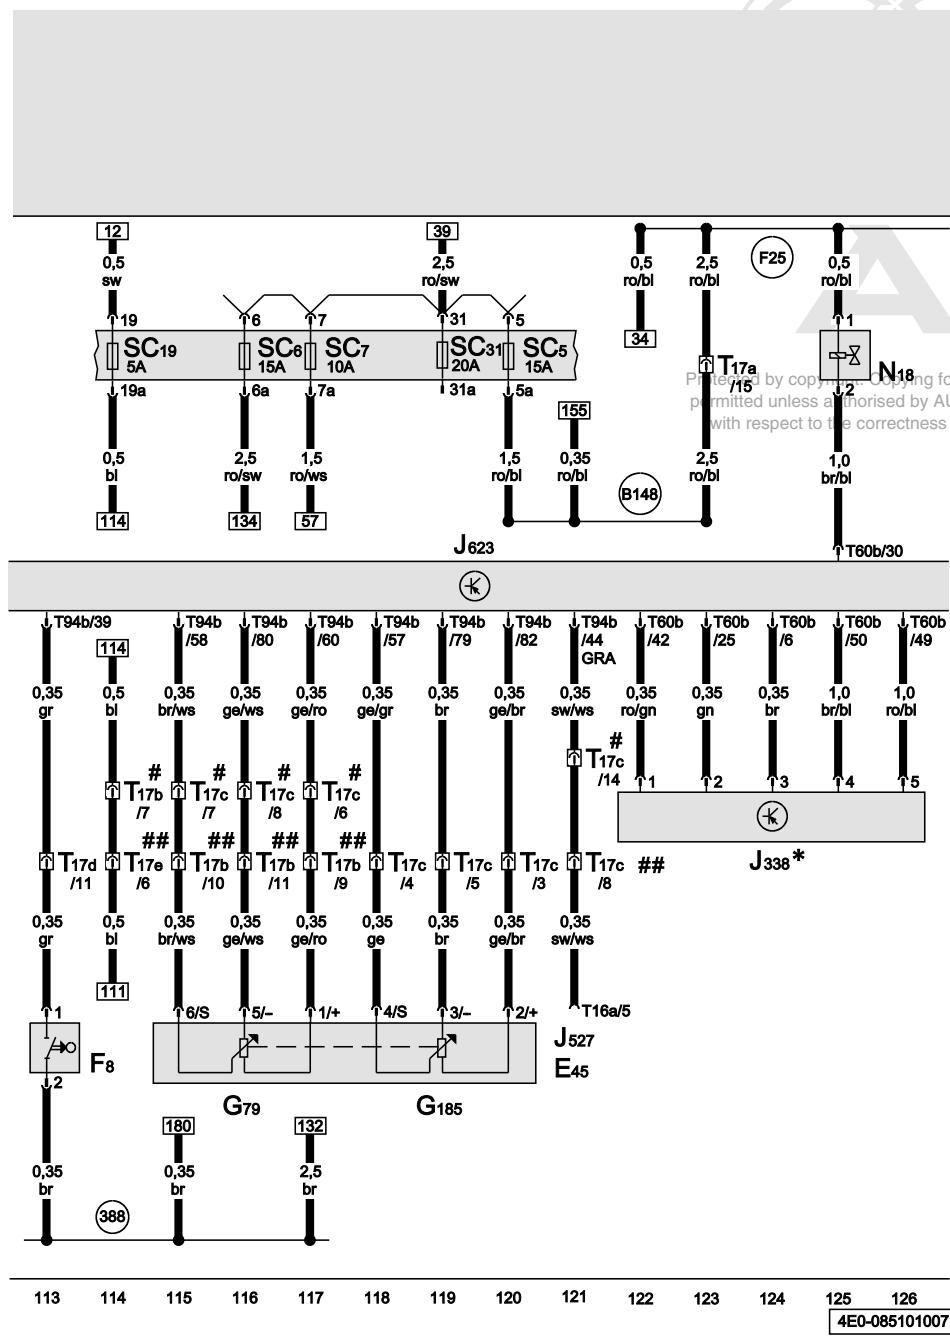


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is only permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright © AUDI AG.

- E45 Cruise control system switch
 - F8 Kick-down switch
 - G79 Accelerator position sender
 - G185 Accelerator position sender 2
 - J338 Throttle valve module
 - J527 Steering column electronics control unit
 - J623 Engine control unit
 - N18 Exhaust gas recirculation valve
 - SC5 Fuse 5 on fuse holder C
 - SC6 Fuse 6 on fuse holder C
 - SC7 Fuse 7 on fuse holder C
 - SC19 Fuse 19 on fuse holder C
 - SC31 Fuse 31 on fuse holder C
 - T16a 16-pin connector, on steering column electronics control unit
 - T17a 17-pin connector, black, in electronics box in plenum chamber
 - T17b 17-pin connector, green, in electronics box in plenum chamber
 - T17c 17-pin connector, brown, in electronics box in plenum chamber
 - T17d 17-pin connector, blue, in electronics box in plenum chamber
 - T17e 17-pin connector, red, in electronics box in plenum chamber
 - T60b 60-pin connector, black, connector A, on engine control unit
 - T94b 94-pin connector, black, connector B, on engine control unit
 - 388 Earth connection 23, in main wiring harness
 - B148 Positive connection 3 (87), in interior wiring harness
 - F25 Connection 1, in diesel direct injection system wiring harness
- * from November 2005
up to August 2007
from September 2007

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

4E0-085101007

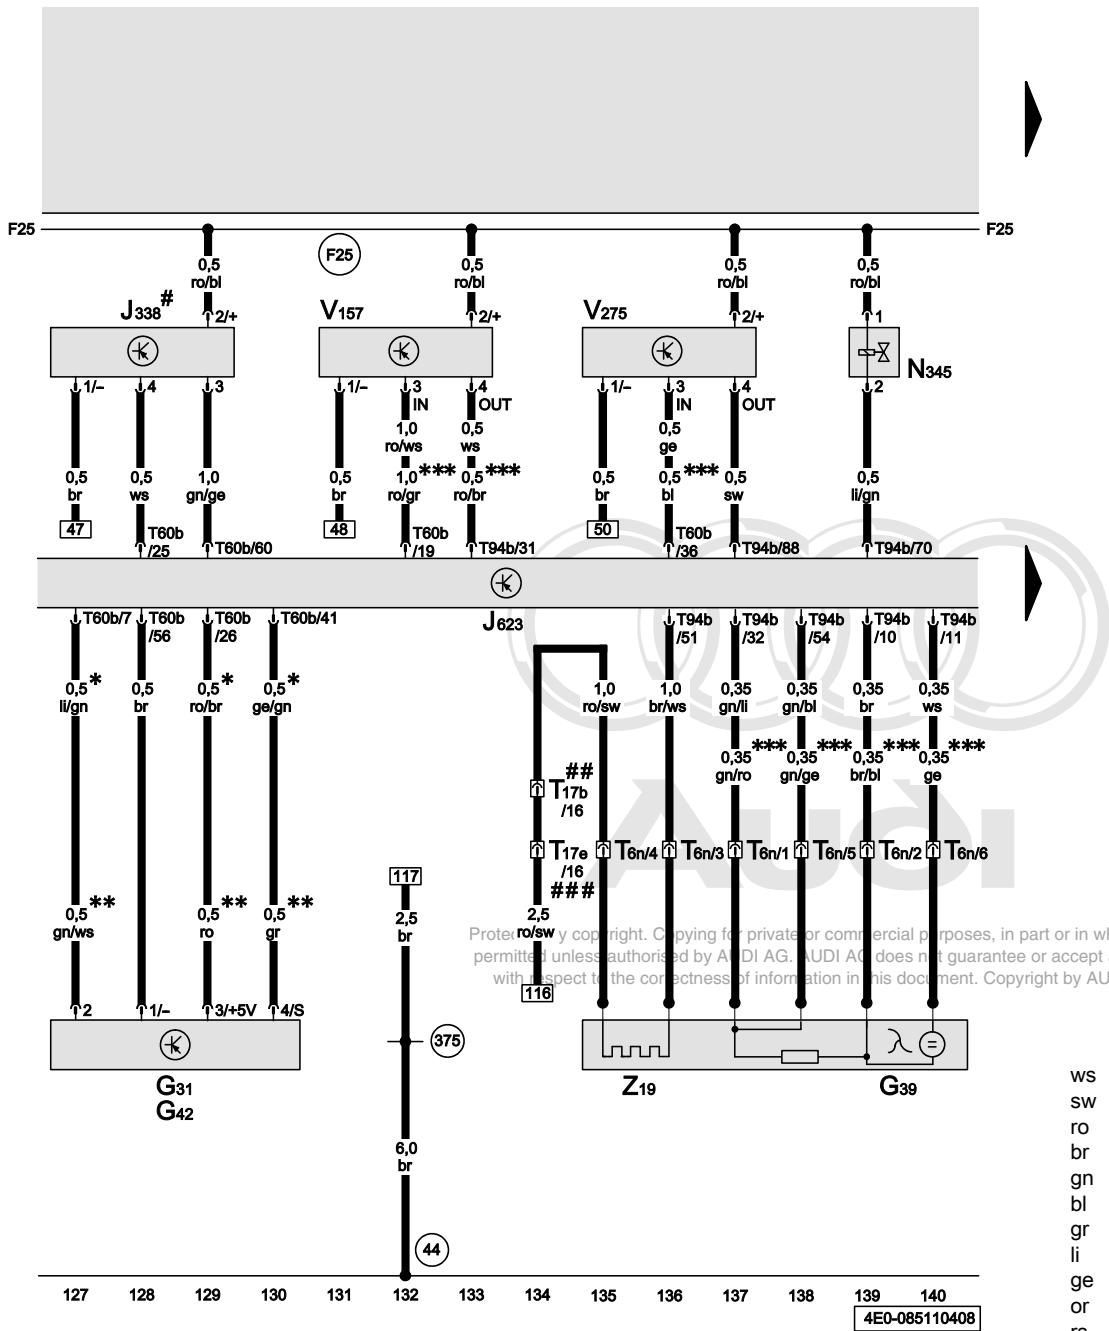


Engine control unit, throttle valve module, intake manifold flap motor, exhaust gas recirculation cooler change-over valve, intake air temperature sender, charge air pressure sender, lambda probe

- G31 Charge air pressure sender
- G39 Lambda probe
- G42 Intake air temperature sender
- J338 Throttle valve module
- J623 Engine control unit
- N345 Exhaust gas recirculation cooler change-over valve
- T6n 6-pin connector, brown, for Lambda probe
- T17b 17-pin connector, green, in electronics box in plenum chamber
- T17e 17-pin connector, red, in electronics box in plenum chamber
- T60b 60-pin connector, black, connector A, on engine control unit
- T94b 94-pin connector, black, connector B, on engine control unit
- V157 Intake manifold flap motor
- V275 Intake manifold flap 2 motor
- Z19 Lambda probe heater
- 44 Earth point, lower part of left A-pillar
- 375 Earth connection 10, in main wiring harness
- F25 Connection 1, in diesel direct injection system wiring harness

- * phased from March 2005
- ** no longer fitted, phased from March 2005
- ** phased-in modification
- # up to October 2005
- ## up to August 2007
- ### from September 2007

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

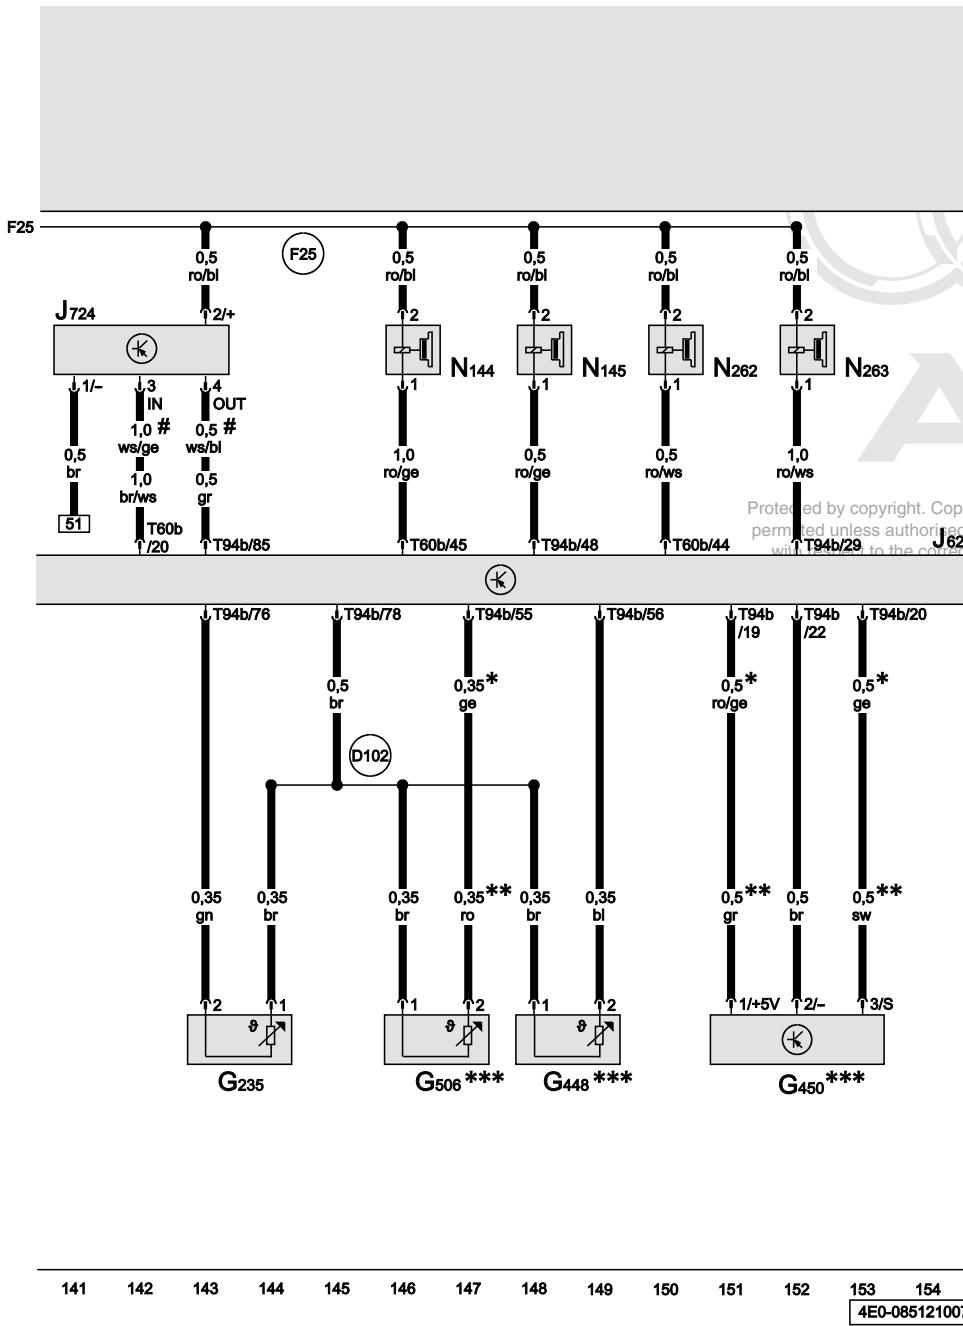

Engine control unit, turbocharger 1 control unit, exhaust temperature sender, electro-hydraulic engine mounting solenoid valve, gearbox mounting valve, temperature sender before particulate filter, exhaust gas pressure sensor 1


G235 Exhaust gas temperature sender 1
 G448 Bank 1 exhaust gas temperature sender 2
 G450 Exhaust gas pressure sensor 1
 G506 Temperature sender before particulate filter
 J623 Engine control unit
 J724 Turbocharger 1 control unit
 N144 Left electrohydraulic engine mounting solenoid valve
 N145 Right electrohydraulic engine mounting solenoid valve
 N262 Gearbox mounting valve 1
 N263 Gearbox mounting valve 2
 T60b 60-pin connector, black, connector A, on engine control unit
 T94b 94-pin connector, black, connector B, on engine control unit

131 Earth connection 2, in engine compartment wiring harness
 D102 Connection 2, in engine compartment wiring harness

F25 Connection 1, in diesel direct injection system wiring harness

* phased from March 2005
 ** no longer fitted, phased from March 2005
 *** with particulate filter
 # phased-in modification

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

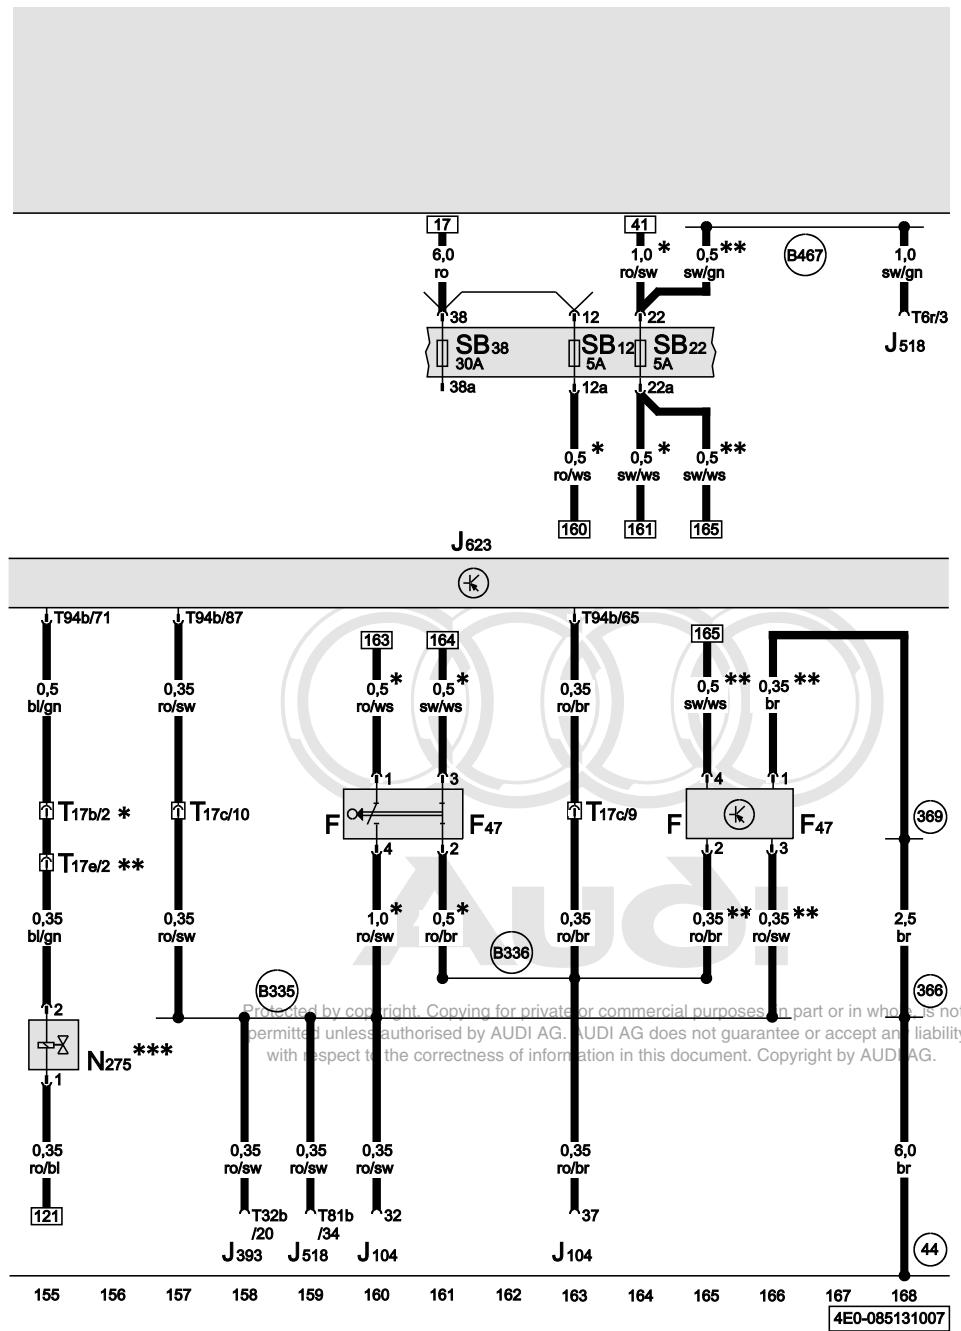

Engine control unit, brake light switch, air filter bypass flap valve


- F Brake light switch
- F47 Brake pedal switch
- J104 ABS control unit
- J393 Convenience system central control unit
- J518 Entry and start authorisation control unit
- J623 Engine control unit
- N275 Air filter bypass flap valve
- SB12 Fuse 12 on fuse holder B
- SB22 Fuse 22 on fuse holder B
- SB38 Fuse 38 on fuse holder B
- T6r 6-pin connector, black, connector B, on entry and start authorisation control unit
- T17b 17-pin connector, green, in electronics box in plenum chamber
- T17c 17-pin connector, brown, in electronics box in plenum chamber
- T17e 17-pin connector, red, in electronics box in plenum chamber
- T32b 32-pin connector, connector B, on convenience system central control unit
- T81b 81-pin connector, black, connector A, on entry and start authorisation control unit
- T94b 94-pin connector, black, connector B, on engine control unit
- 44 Earth point, lower part of left A-pillar
- 366 Earth connection 1, in main wiring harness
- 369 Earth connection 4, in main wiring harness
- B467 Connection 3 in main wiring harness
- B335 Connection 1 (54), in main wiring harness
- B336 Connection 2 (54), in main wiring harness

* up to August 2007

** from September 2007

*** countries with cold climate only

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

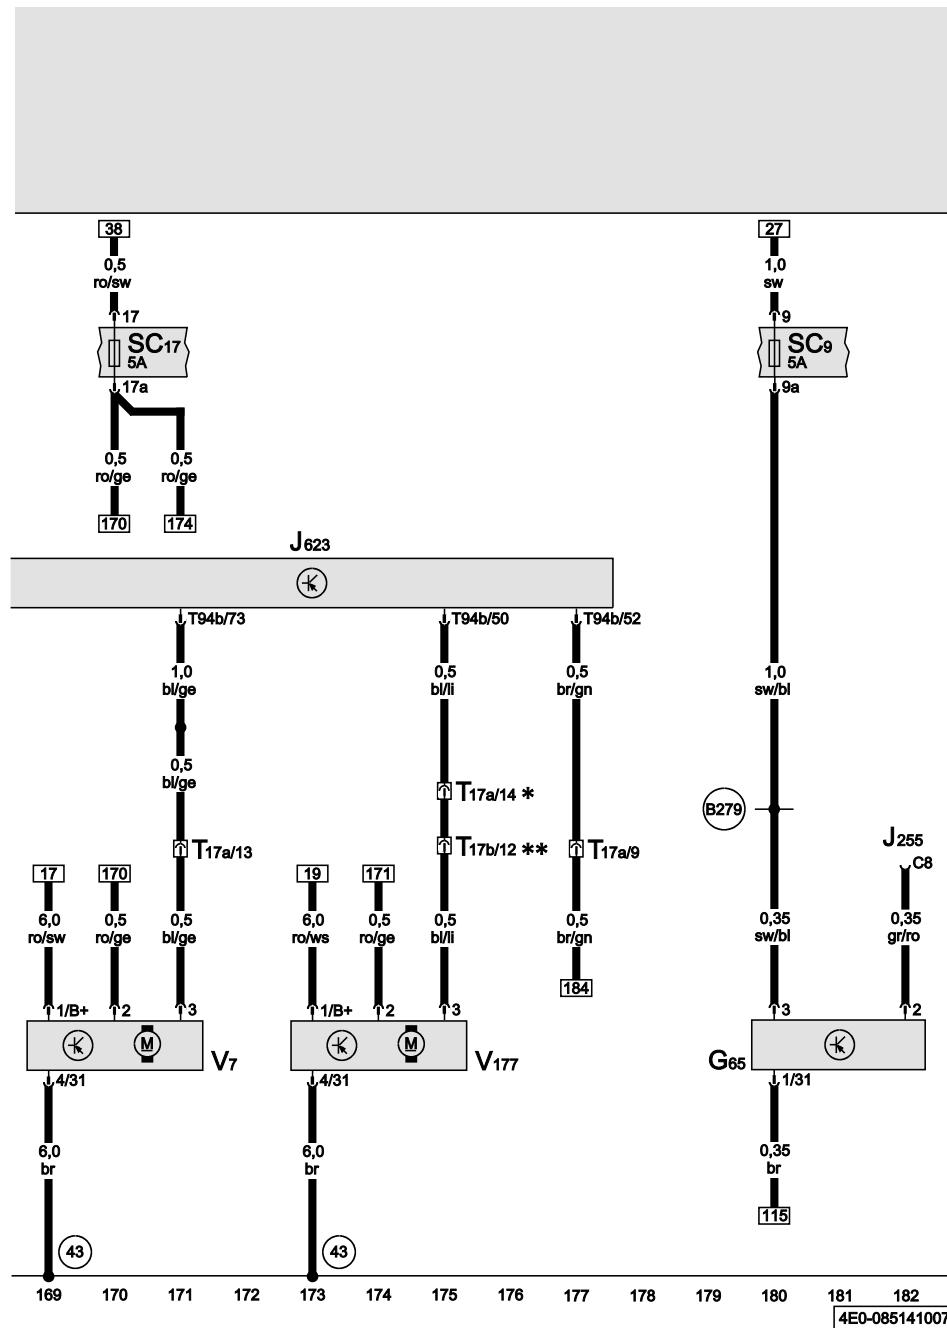
Engine control unit, radiator fan, high-pressure sender

- G65 High pressure sender
- J255 Climatronic control unit
- J623 Engine control unit
- SC9 Fuse 9 on fuse holder C
- SC17 Fuse 17 on fuse holder C
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T17b 17-pin connector, green, in electronics box in plenum chamber
- T94b 94-pin connector, black, connector B, on engine control unit
- V7 Radiator fan
- V177 Radiator fan 2

(43) Earth point, lower part of right A-pillar

(B279) Positive connection 3 (15a), in main wiring harness

* up to August 2007


** from September 2007



Audi



ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

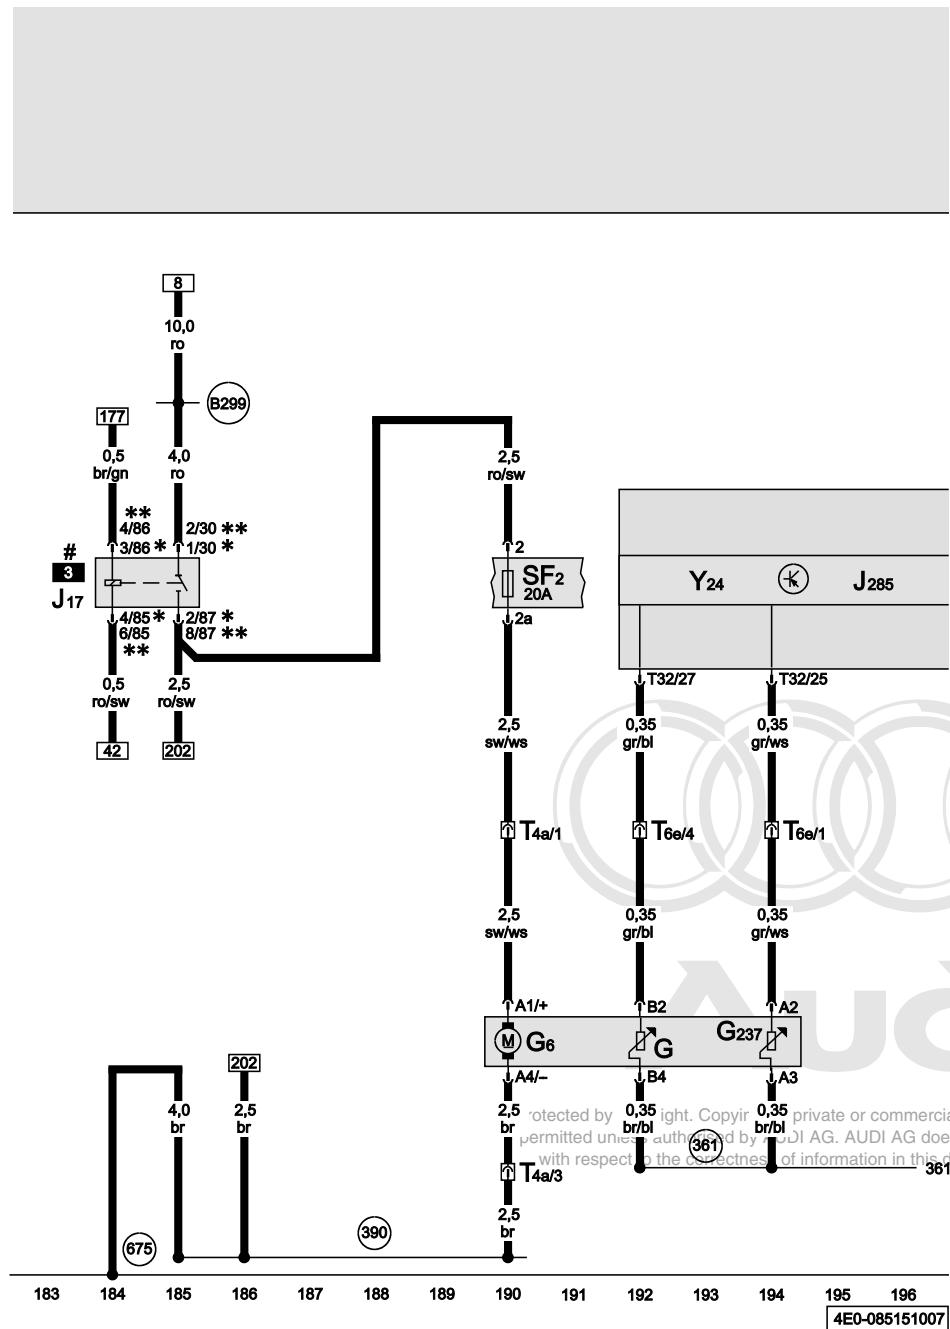

Control unit in dash panel insert, fuel pump relay



 
- G Fuel gauge sender
 - G6 Fuel system pressurisation pump
 - G237 Fuel gauge sender 3
 - J17 Fuel pump relay
 - J285 Control unit in dash panel insert
 - SF2 Fuse 2 on fuse holder F
 - T4a 4-pin connector, under right cover on vehicle floor
 - T6e 6-pin connector, under right cover on vehicle floor
 - T32 32-pin connector, blue, on dash panel insert
 - Y24 Display in dash panel insert
 - 361 Earth connection (fuel gauge sender), in main wiring harness
 - 390 Earth connection 25, in main wiring harness
 - 675 Earth point 2, on right in luggage compartment
 - B299 Positive connection 3 (30), in main wiring harness
- * up to August 2007
 ** from September 2007
 # Relay and fuse carrier right in luggage compartment

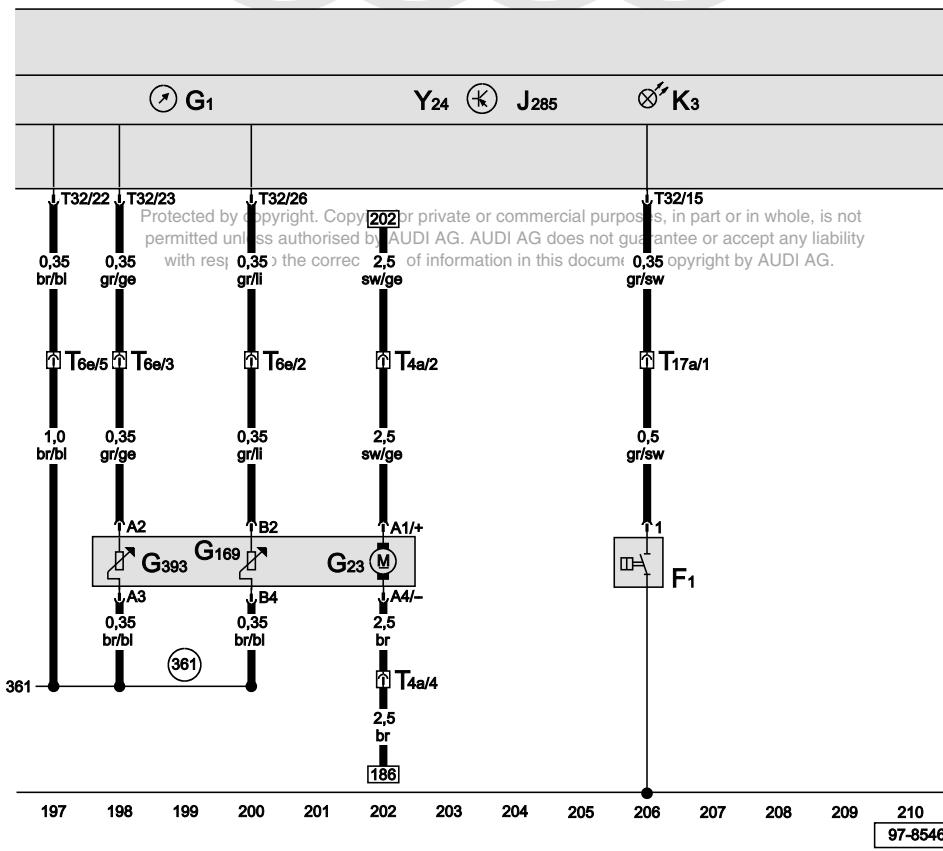

Control unit in dash panel insert, fuel gauge, fuel pump, fuel gauge sender, oil pressure warning lamp, oil pressure switch

- F1 Oil pressure switch
- G1 Fuel gauge
- G23 Fuel pump
- G169 Fuel gauge sender 2
- G393 Fuel gauge sender 4
- J285 Control unit in dash panel insert
- K3 Oil pressure warning lamp
- SF1 Fuse 1 on fuse holder F
- T4a 4-pin connector, under right cover on vehicle floor
- T6e 6-pin connector, under right cover on vehicle floor
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T32 32-pin connector, blue, on dash panel insert
- Y24 Display in dash panel insert
- 361 Earth connection (fuel gauge sender), in main wiring harness

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

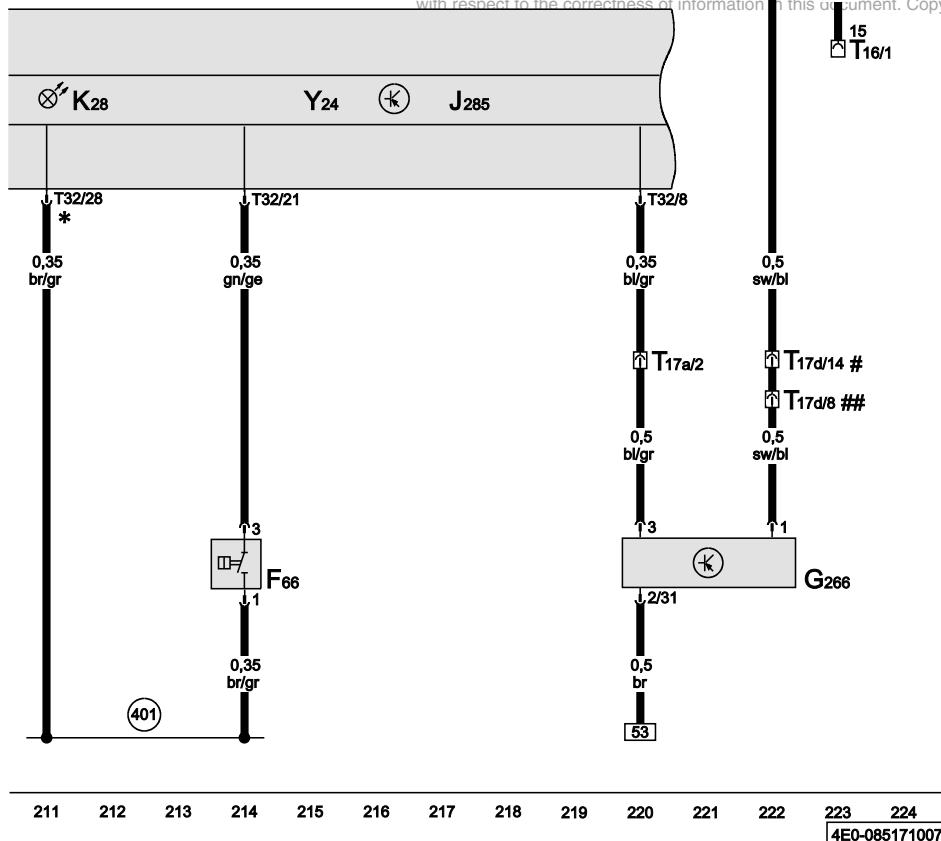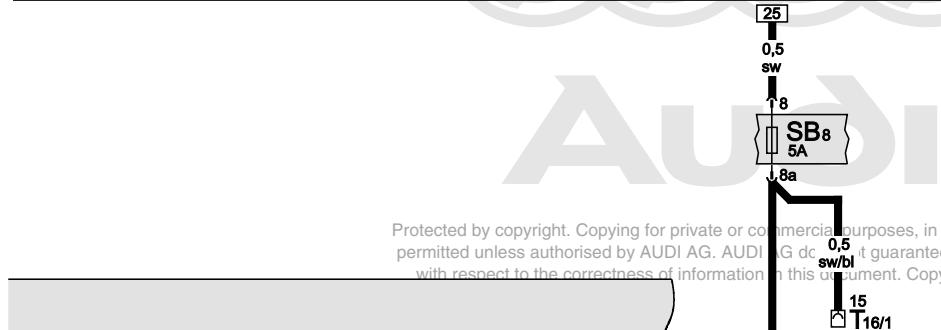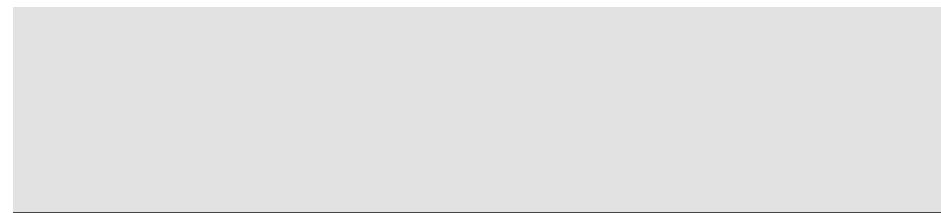

Control unit in dash panel insert, coolant shortage indicator switch, oil level and oil temperature sender

- F66 Coolant shortage indicator switch
- G266 Oil level and oil temperature sender
- J285 Control unit in dash panel insert
- K28 Coolant temperature and coolant shortage warning lamp
- SB8 Fuse 8 on fuse holder B
- T16 16-pin connector, black, diagnostic connection
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T17d 17-pin connector, blue, in electronics box in plenum chamber
- T32 32-pin connector, blue, on dash panel insert
- Y24 Display in dash panel insert

(401) Earth connection (sender earth), in interior wiring harness

* output sender earth

up to August 2007


from September 2007

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

211 212 213 214 215 216 217 218 219 220 221 222 223 224
4E0-085171007

Audi A8 4.0 l - TDI, Common Rail, (202 kW - 8-cylinder) engine code ASE

from model year 2005

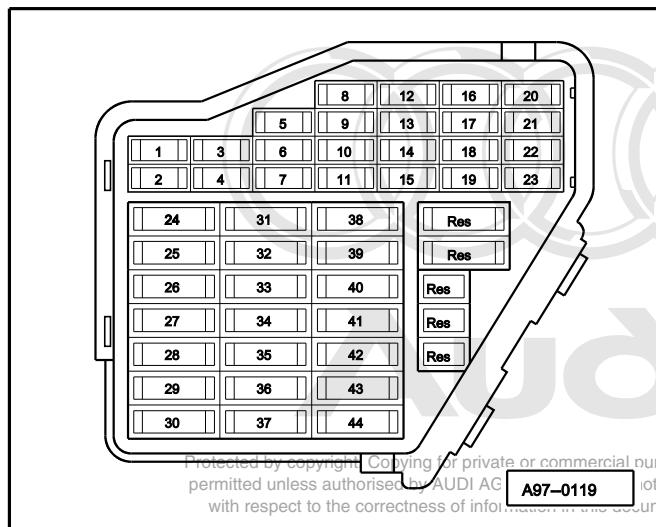Fuse holder, left dash panel**Fuse colours**

30 A - green

25 A - white

20 A - yellow

15 A - blue

10 A - red

7,5 A - brown

5 A - beige

1 A - black


SB - Fuses in fuse holder left dash panel

SC - Fuses in fuse holder right dash panel

SD - Fuses in fuse holder left in luggage compartment


SF - Fuses in fuse holder right in luggage compartment

Fuse holder right dash panel

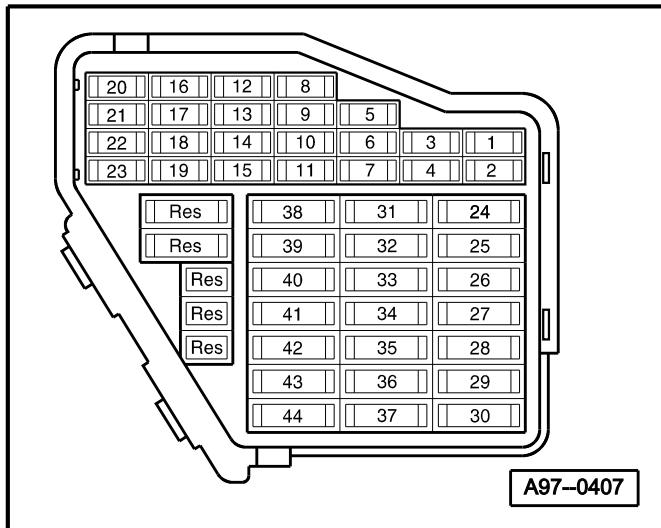

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Relay carrier electronics box in plenum chamber

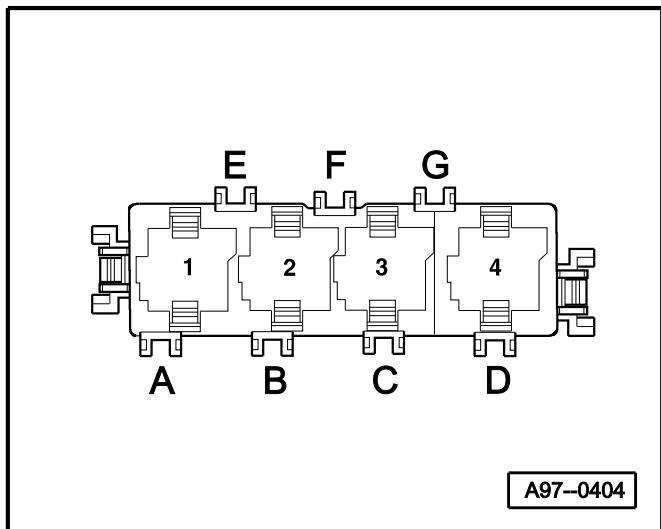

Relay positions


- 1 - Glow plug relay (J52)
- 2 - Terminal 30 voltage supply relay (J317)

3 - Glow plugs relay 2 (J495)


B - Glow plug fuse (S125, 80A)

C - Glow plug fuse 2 (S189, 80A)

Relay and fuse carrie behind left dash panel

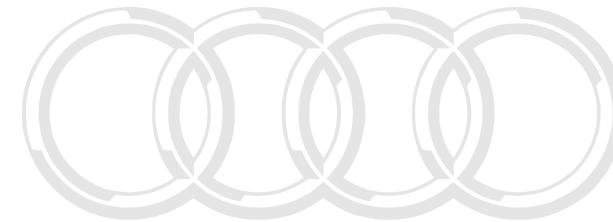


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

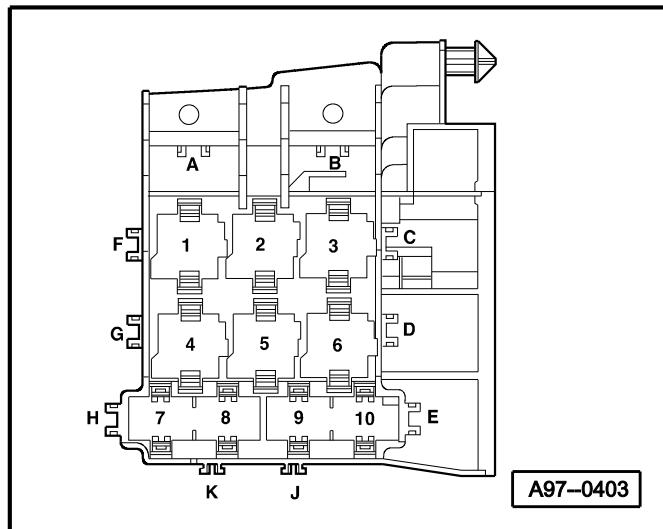

Relay positions

3 - Terminal 15 voltage supply relay (J329)

relay carrier front passenger footwell

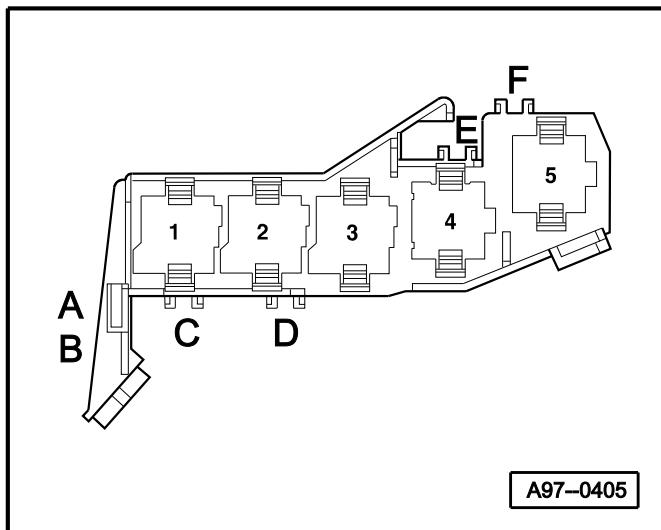


Relay positions

- 1.1 - Fuel cooling pump relay (J445)
- 2 - Starter motor relay (J53)
- 3 - Starter motor relay 2 (J695)




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Assignment main fuse carrier right A-pillar

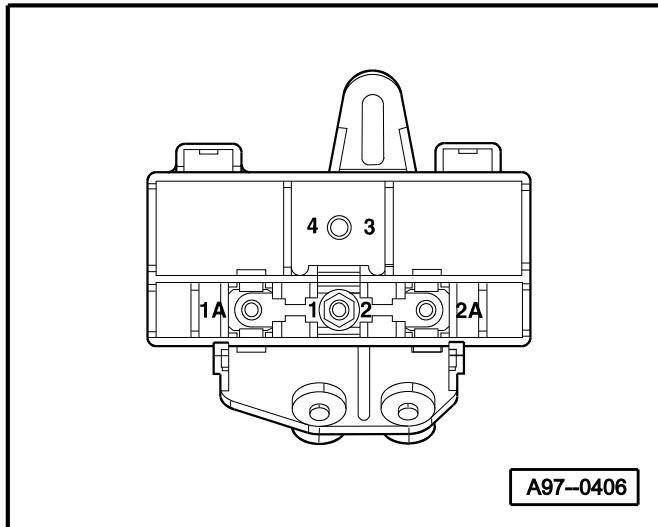


Fuse locations

- 1 - Radiator fan single fuse (S42, 60A)
- 1A - Radiator fan screw point 1
- 2 - Radiator fan fuse for 2nd speed (S104, 60A)
- 2A - Radiator fan screw point 2
- 3 - Terminal 30 screw point (battery)
- 4 - Terminal 30 screw point (starter)

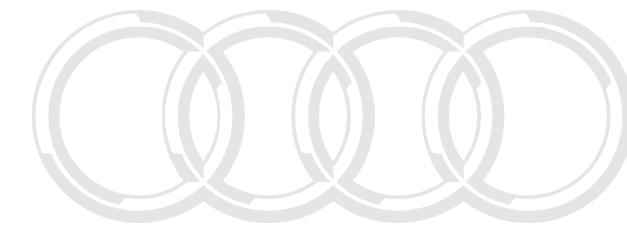


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Relay and fuse carrier right in luggage compartment

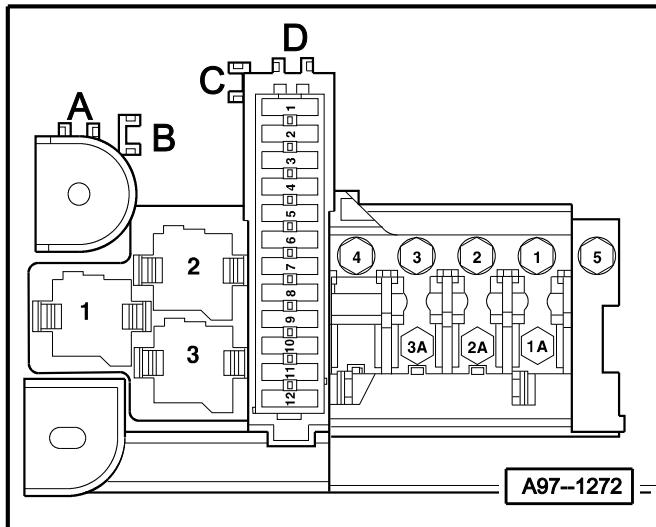


Relay positions

3 - Fuel pump relay (J17)

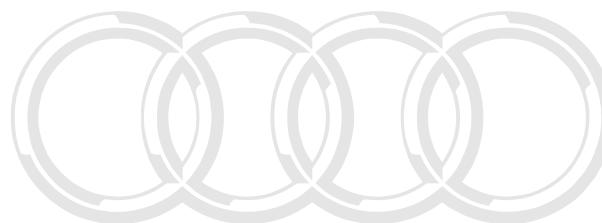

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

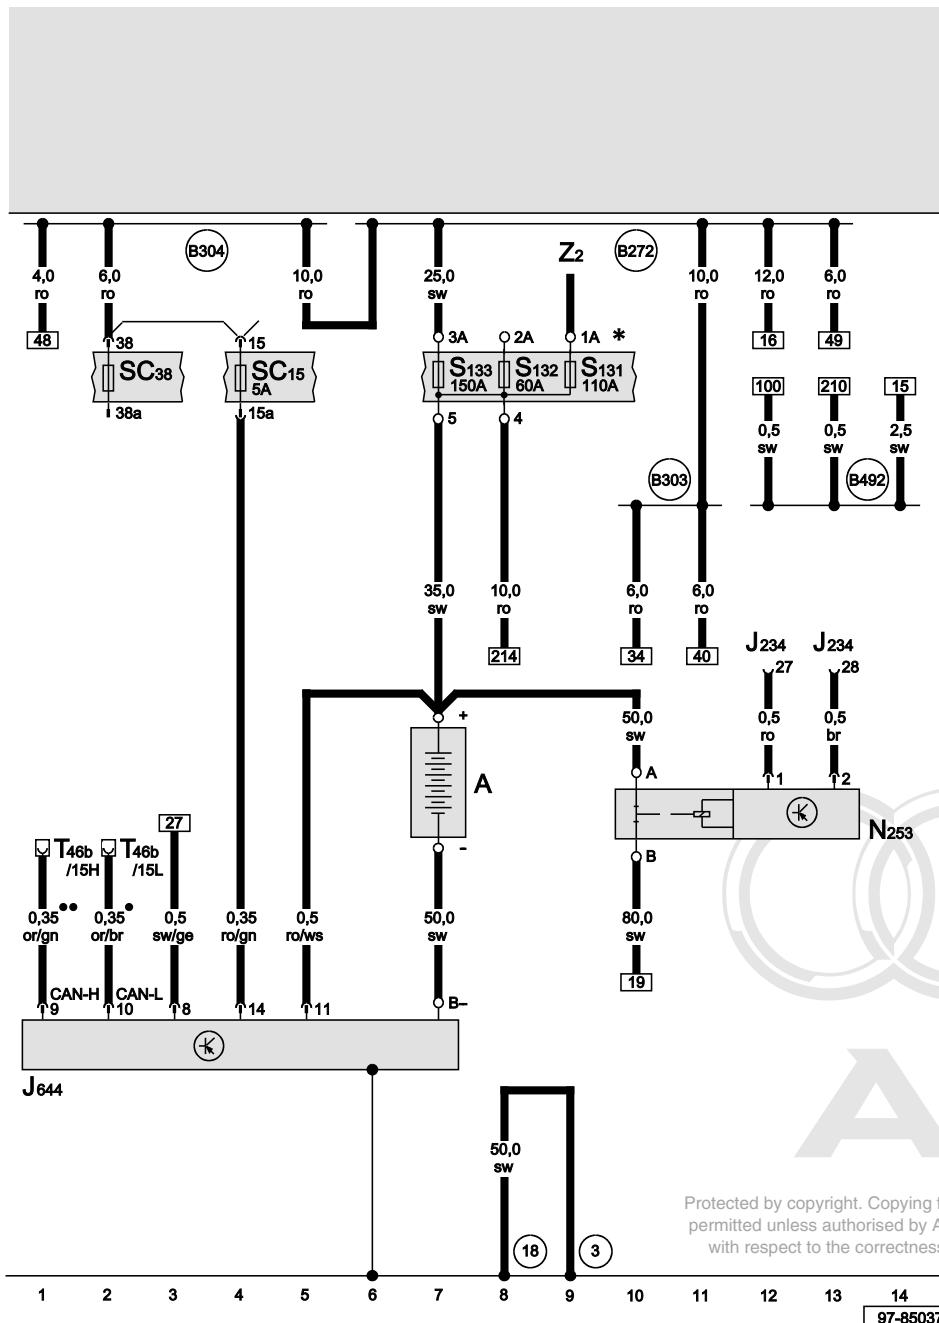


Battery, energy management control unit, battery isolation igniter

- A Battery
- J234 Airbag control unit
- J644 Energy management control unit
- N253 Battery isolation igniter
- S131 Fuse 1, 110 A, in luggage compartment, rear right
- S132 Fuse 2, 60 A, in luggage compartment, rear right
- S133 Fuse 3, 150 A, in luggage compartment, rear right
- SC15 Fuse 15 on fuse holder
- SC38 Fuse 38 on fuse holder
- T46b 46-pin connector, black, CAN separating connector right
- Z2 Heated windsreen
- 3 Earth strap, engine - body
- 18 Earth point on engine block
- (B272) Positive connection (30), in main wiring harness
- (B303) Positive connection 7 (30), in main wiring harness
- (B304) Positive connection 8 (30), in main wiring harness
- (B492) Positive connection 3 (15), in interior wiring harness
- CAN bus (data wire)
- * In luggage compartment, rear right

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 ge = yellow
 or = orange
 rs = pink

Protected by copyright. Copying for private purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

97-85037

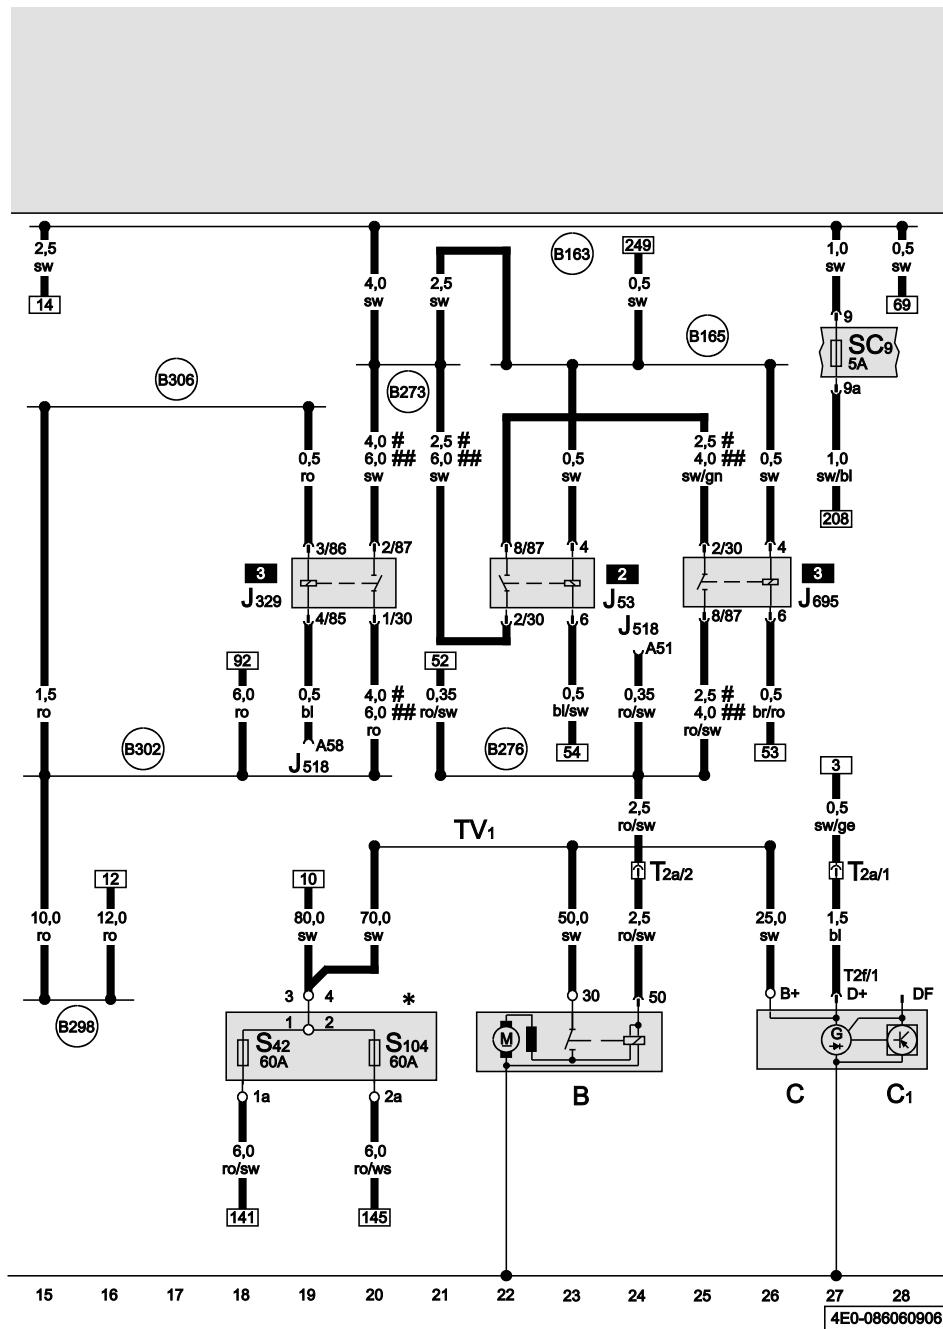

Starter, alternator, terminal 15 voltage supply relay, starter motor relay

- B Starter
- C Alternator
- C1 Voltage regulator
- J53 Starter motor relay
- J329 Terminal 15 voltage supply relay
- J518 Entry and start authorisation control unit
- J695 Starter motor relay 2
- S42 Radiator fan single fuse
- S104 Radiator fan fuse for 2nd speed
- SC9 Fuse 9 on fuse holder
- T2a 2-pin connector, black, in front right engine compartment
- T2f 2-pin connector, black, on alternator
- TV1 Wiring junction

(B163) Positive connection 1 (15), in interior wiring harness

(B165) Positive connection 2 (15), in interior wiring harness

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG.
B273 Positive connection (15), in main wiring harness
with respect to the correctness of information in this document. Copyright by AUDI AG.

(B276) Positive connection (50), in main wiring harness

(B298) Positive connection 2 (30), in main wiring harness

(B302) Positive connection 6 (30), in main wiring harness


(B306) Positive connection 10 (30), in main wiring harness

* Main fuse carrier right A-pillar

up to April 2006

from May 2006

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- ge = yellow
- or = orange
- rs = pink

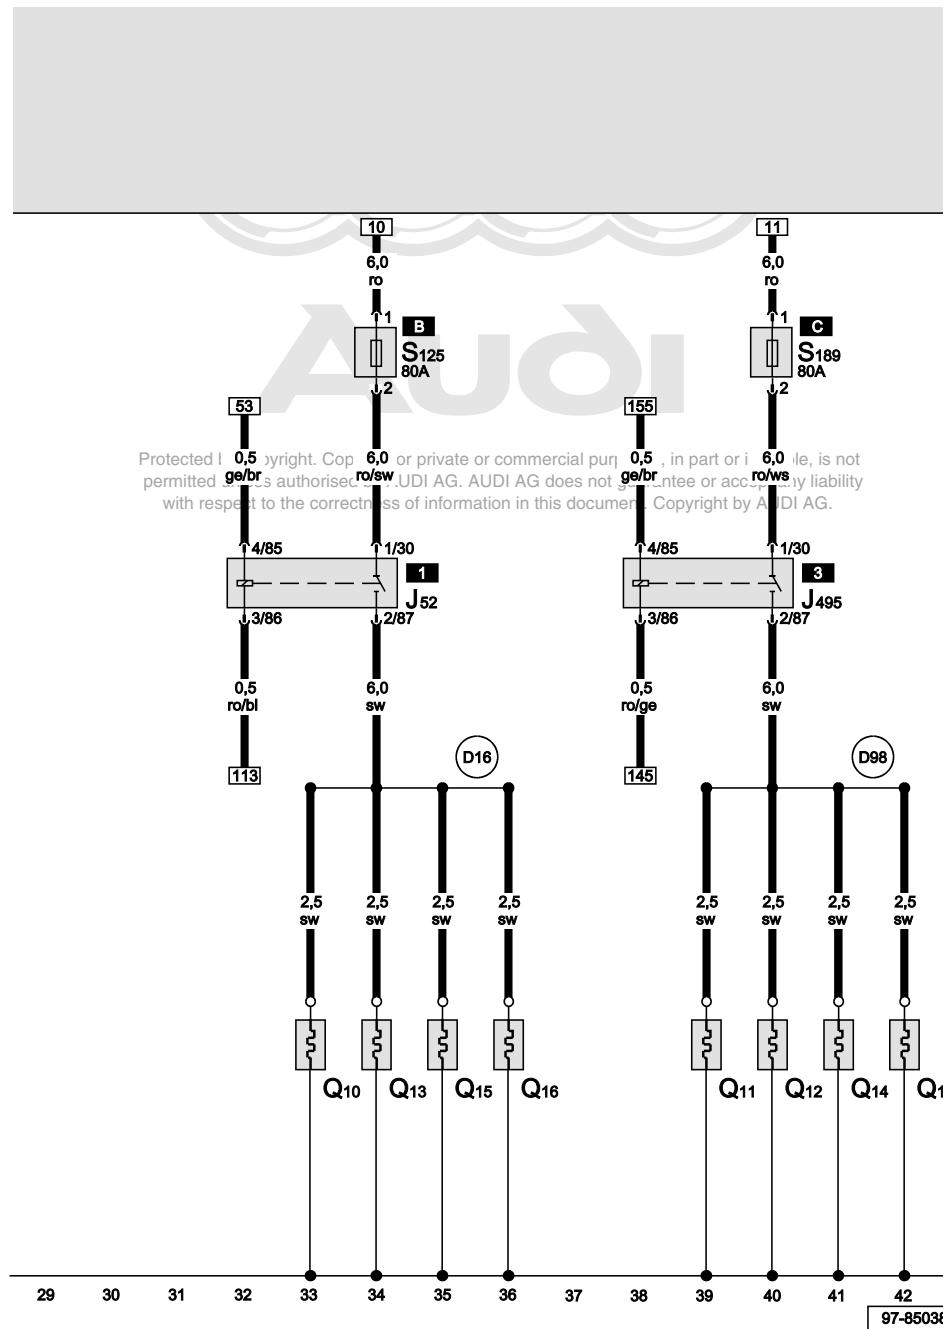


Glow plug relay, glow plugs

J52 Glow plug relay
J495 Glow plug relay 2
Q10 Glow plug 1
Q11 Glow plug 2
Q12 Glow plug 3
Q13 Glow plug 4
Q14 Glow plug 5
Q15 Glow plug 6
Q16 Glow plug 7
Q17 Glow plug 8
S125 Glow plug fuse
S189 Glow plug fuse 2


- D16 Connection (glow plugs), in front right wiring harness
D98 Connection (glow plugs), in engine compartment wiring harness

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

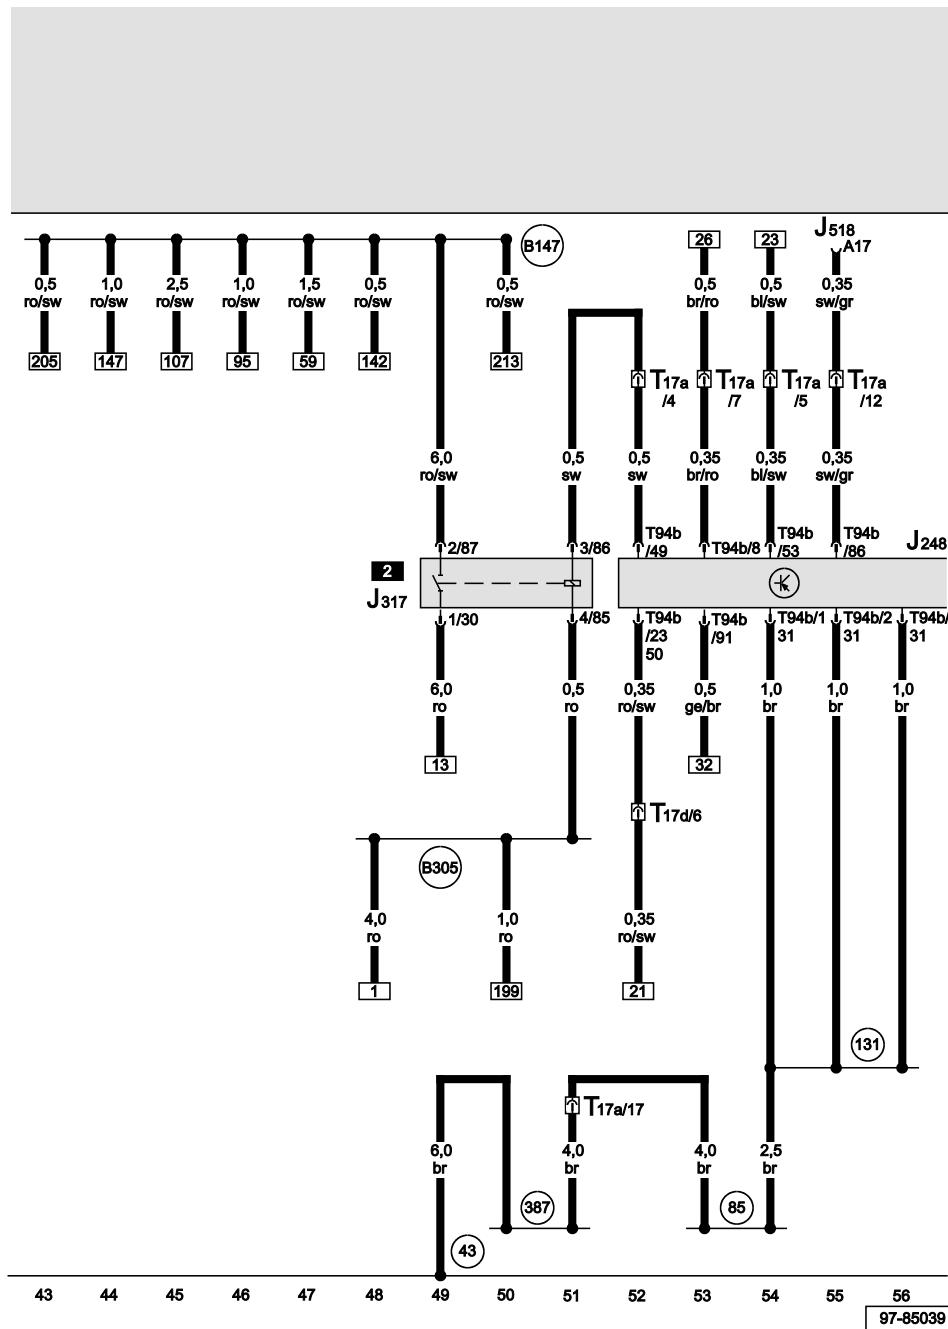
Diesel direct injection system control unit, terminal 30 voltage supply relay

J248 Diesel direct injection system control unit
 J317 Terminal 30 voltage supply relay
 J518 Entry and start authorisation control unit
 T17a 17-pin connector, black, in electronics box in plenum chamber
 T17d 17-pin connector, blue, in electronics box in plenum chamber
 T94b 94-pin connector, black, connector B, on diesel direct injection system control unit


- 43 Earth point, lower part of right A-pillar
- 85 Earth connection 1, in engine compartment wiring harness
- 131 Earth connection 2, in engine compartment wiring harness
- 387 Earth connection 22, in main wiring harness
- B147 Positive connection 2 (87), in interior wiring harness
- B305 Positive connection 9 (30), in main wiring harness

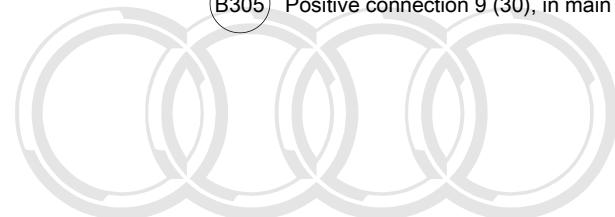

Audi


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

sw = white
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

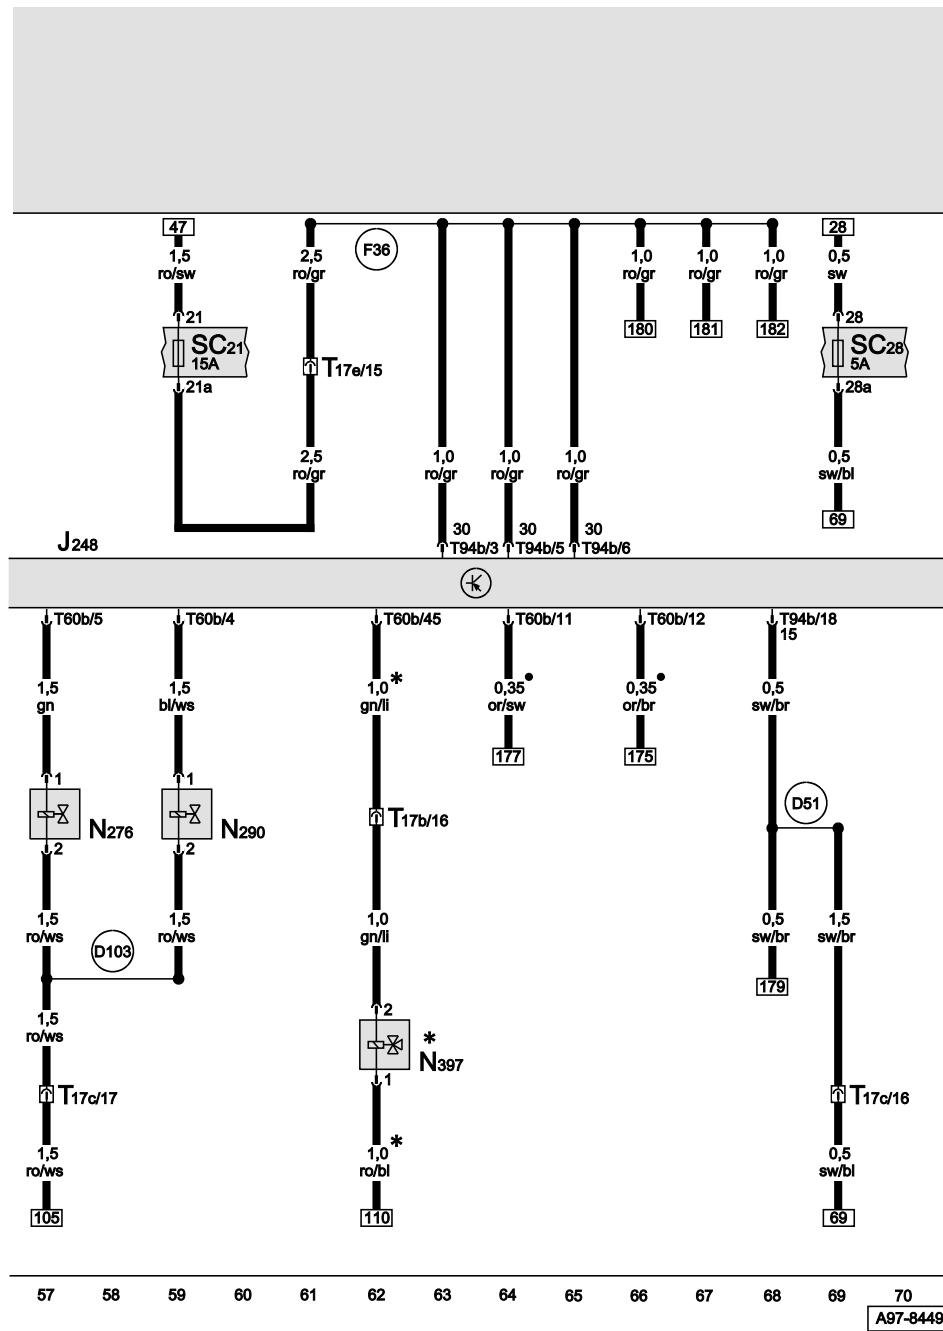

Diesel direct injection system control unit, fuel pressure regulating valve, water spray protection flap valve in intake manifold, fuel metering valve


- J248 Diesel direct injection system control unit
- N276 Fuel pressure regulating valve
- N290 Fuel metering valve
- N397 Water spray protection flap valve in intake manifold
- SC21 Fuse 21 on fuse holder
- SC28 Fuse 28 on fuse holder
- T17b 17-pin connector, green, in electronics box in plenum chamber
- T17c 17-pin connector, brown, in electronics box in plenum chamber
- T17e 17-pin connector, red, in electronics box in plenum chamber
- T60b 60-pin connector, black, connector A, on diesel direct injection system control unit
- T94b 94-pin connector, black, connector B, on diesel direct injection system control unit
- D51 Positive connection 1 (15), in engine compartment wiring harness
- D103 Connection 3, in engine compartment wiring harness
- F36 Connection (87a), in diesel direct injection system wiring harness
 - CAN bus (data wire)
 - * countries with cold climate only

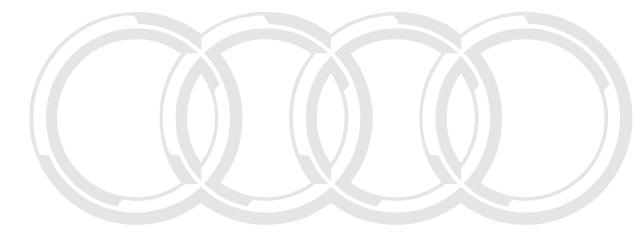

Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

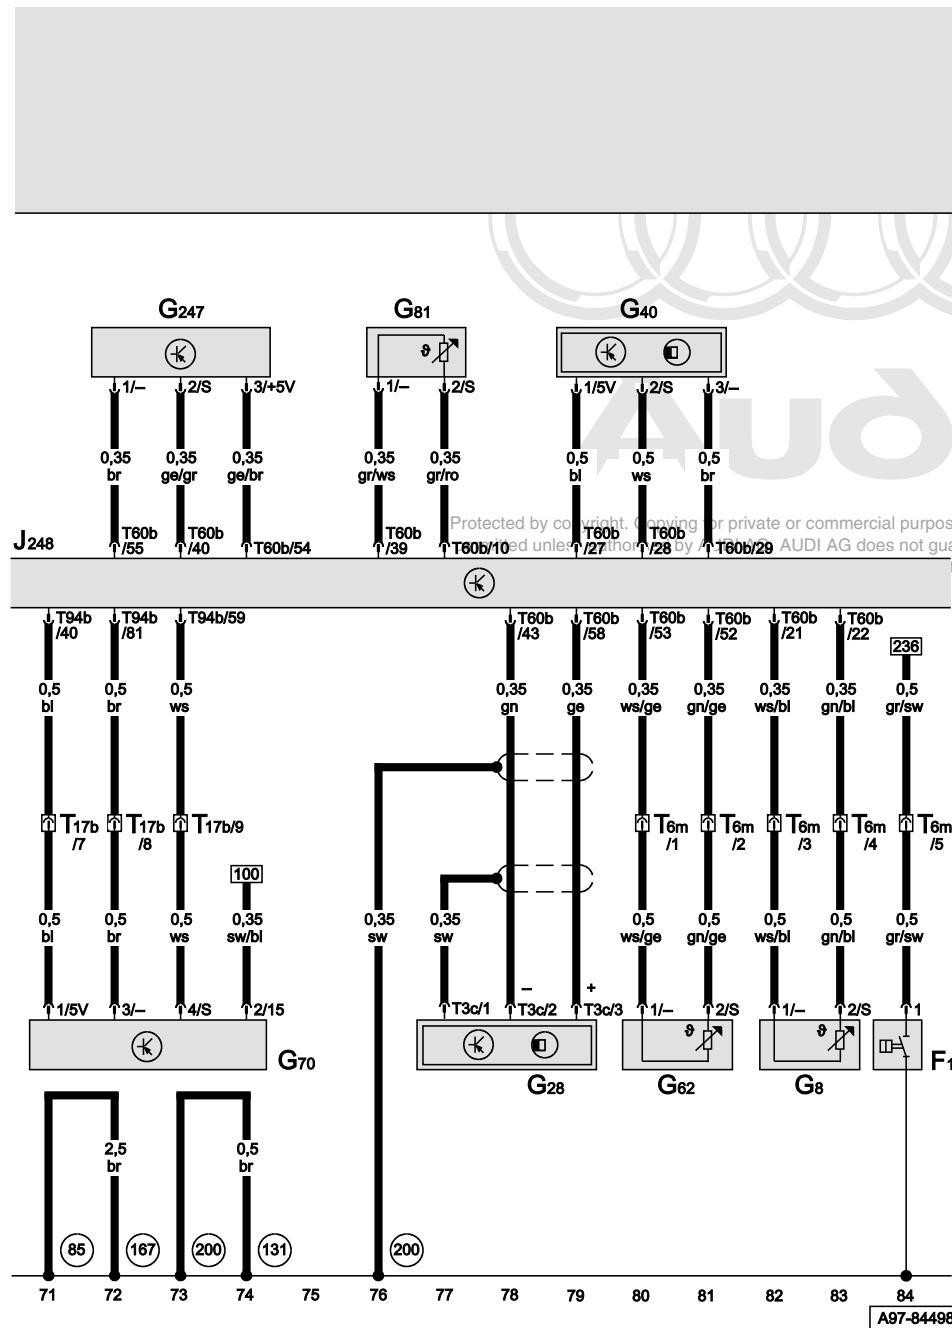

Diesel direct injection system control unit, coolant temperature sender, oil temperature sender, fuel temperature sender, air mass meter, engine speed sender, Hall sender, fuel pressure sender, oil pressure switch


- F1 Oil pressure switch
- G8 Oil temperature sender
- G28 Engine speed sender
- G40 Hall sender
- G62 Coolant temperature sender
- G70 Air mass meter
- G81 Fuel temperature sender
- G247 Fuel pressure sender
- J248 Diesel direct injection system control unit
- T3c 3-pin connector, grey, on engine speed sender
- T6m 6-connector, black, in left engine compartment
- T17b 17-pin connector, green, in electronics box in plenum chamber
- T60b 60-pin connector, black, connector A, on diesel direct injection system control unit
- T94b 94-pin connector, black, connector B, on diesel direct injection system control unit

85 Earth connection 1, in engine compartment wiring harness

131 Earth connection 2, in engine compartment wiring harness

167 Earth connection 4, in engine compartment wiring harness

200 Earth connection (screening) in engine compartment wiring harness

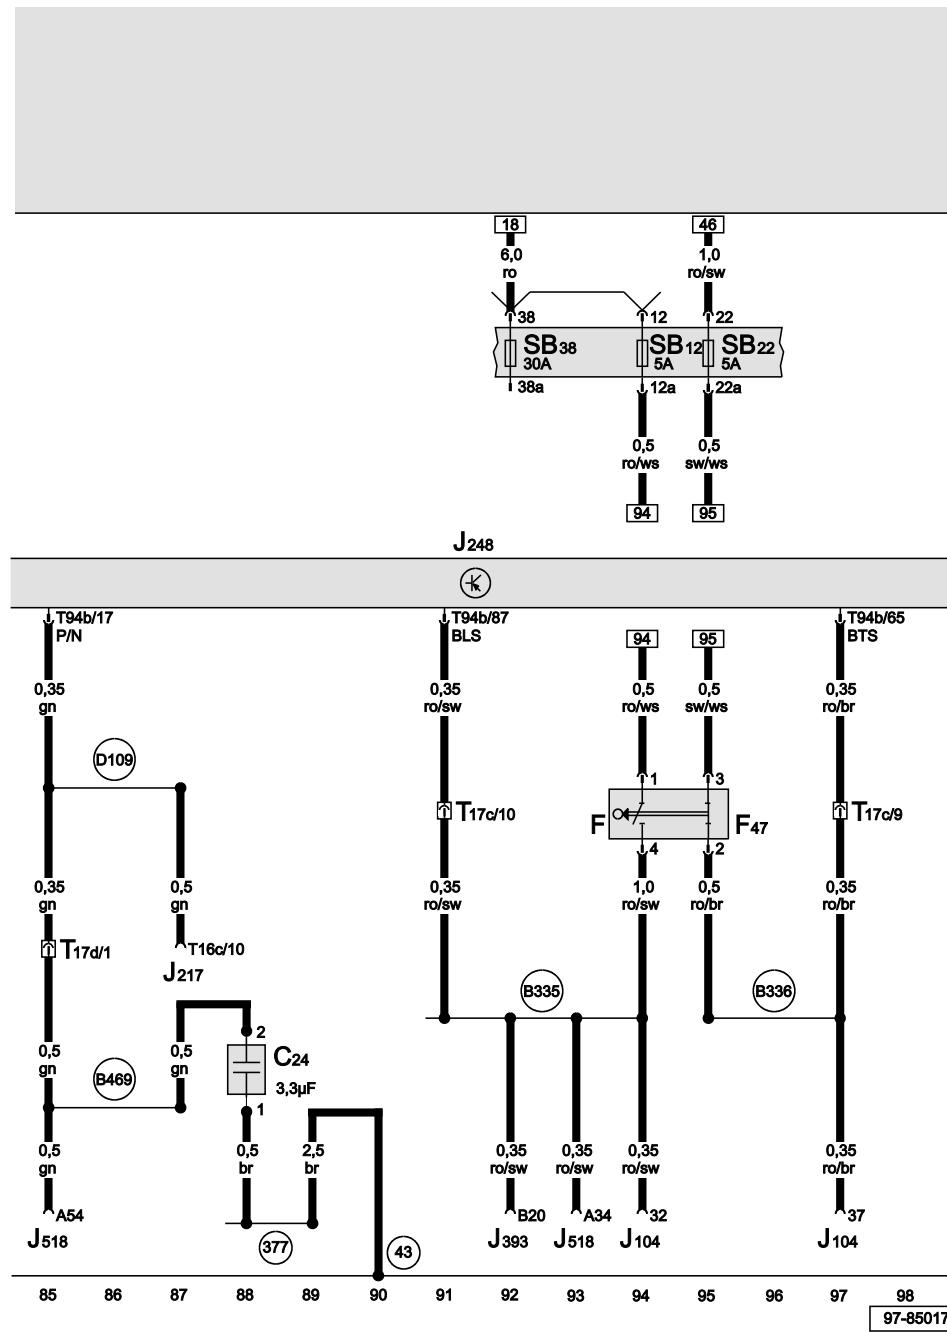


Diesel direct injection system control unit, brake light switch

- C24 Suppression filter
- F Brake light switch
- F47 Brake pedal switch
- J104 ABS control unit
- J217 Automatic gearbox control unit
- J248 Diesel direct injection system control unit
- J393 Convenience system central control unit
- J518 Entry and start authorisation control unit
- SB12 Fuse 12 on fuse holder
- SB22 Fuse 22 on fuse holder
- SB38 Fuse 38 on fuse holder
- T16c 16-pin connector, black, on automatic gearbox control unit
- T17c 17-pin connector, brown, in electronics box in plenum chamber
- T17d 17-pin connector, blue, in electronics box in plenum chamber
- T94b 94-pin connector, black, connector B, on diesel direct injection system control unit

- 43 Earth point, lower part of right A-pillar
- 377 Earth connection 12, in main wiring harness
- B335 Connection 1 (54), in main wiring harness
- B336 Connection 2 (54), in main wiring harness
- B469 Connection 5, in main wiring harness

Protected by copyright. D109g Connection 7, in engine compartment wiring harness
permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability
with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

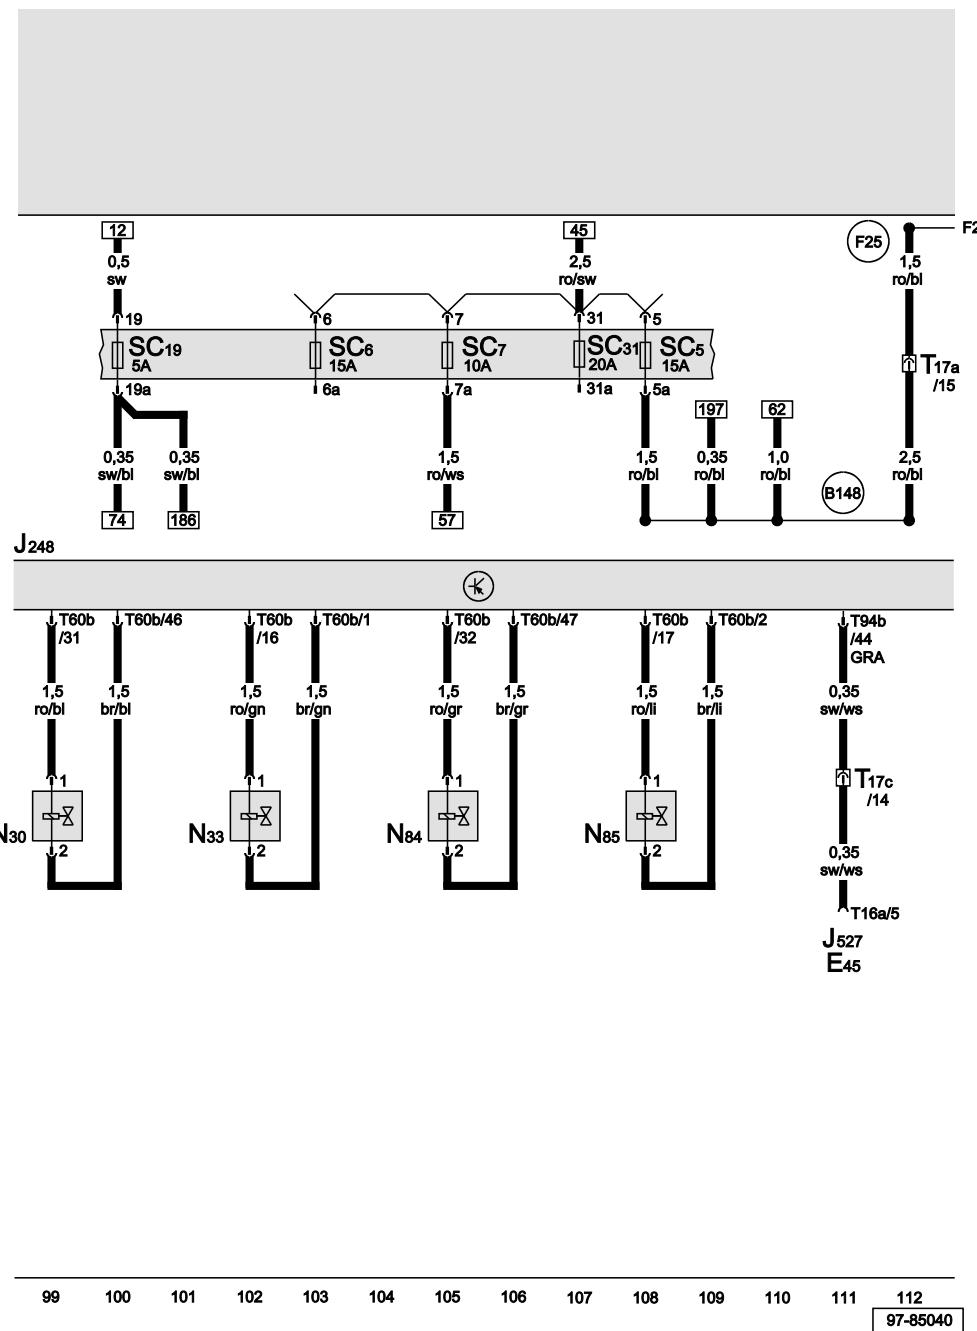

Diesel direct injection system control unit, injector, cylinder 1 - 4, 6 and 7, fuses


- E45 Cruise control system switch
- J248 Diesel direct injection system control unit
- J527 Steering column electronics control unit
- N30 Injector, cylinder 1
- N33 Injector, cylinder 4
- N84 Injector, cylinder 6
- N85 Injector, cylinder 7
- SC5 Fuse 5 on fuse holder
- SC6 Fuse 6 on fuse holder
- SC7 Fuse 7 on fuse holder
- SC19 Fuse 19 on fuse holder
- SC31 Fuse 31 on fuse holder
- T16a 16-pin connector, on steering column electronics control unit
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T17c 17-pin connector, brown, in electronics box in plenum chamber
- T60b 60-pin connector, black, connector A, on diesel direct injection system control unit
- T94b 94-pin connector, black, connector B, on diesel direct injection system control unit

B148 Positive connection 3 (87), in interior wiring harness

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

F25 Connection 1, in diesel direct injection system wiring harness

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

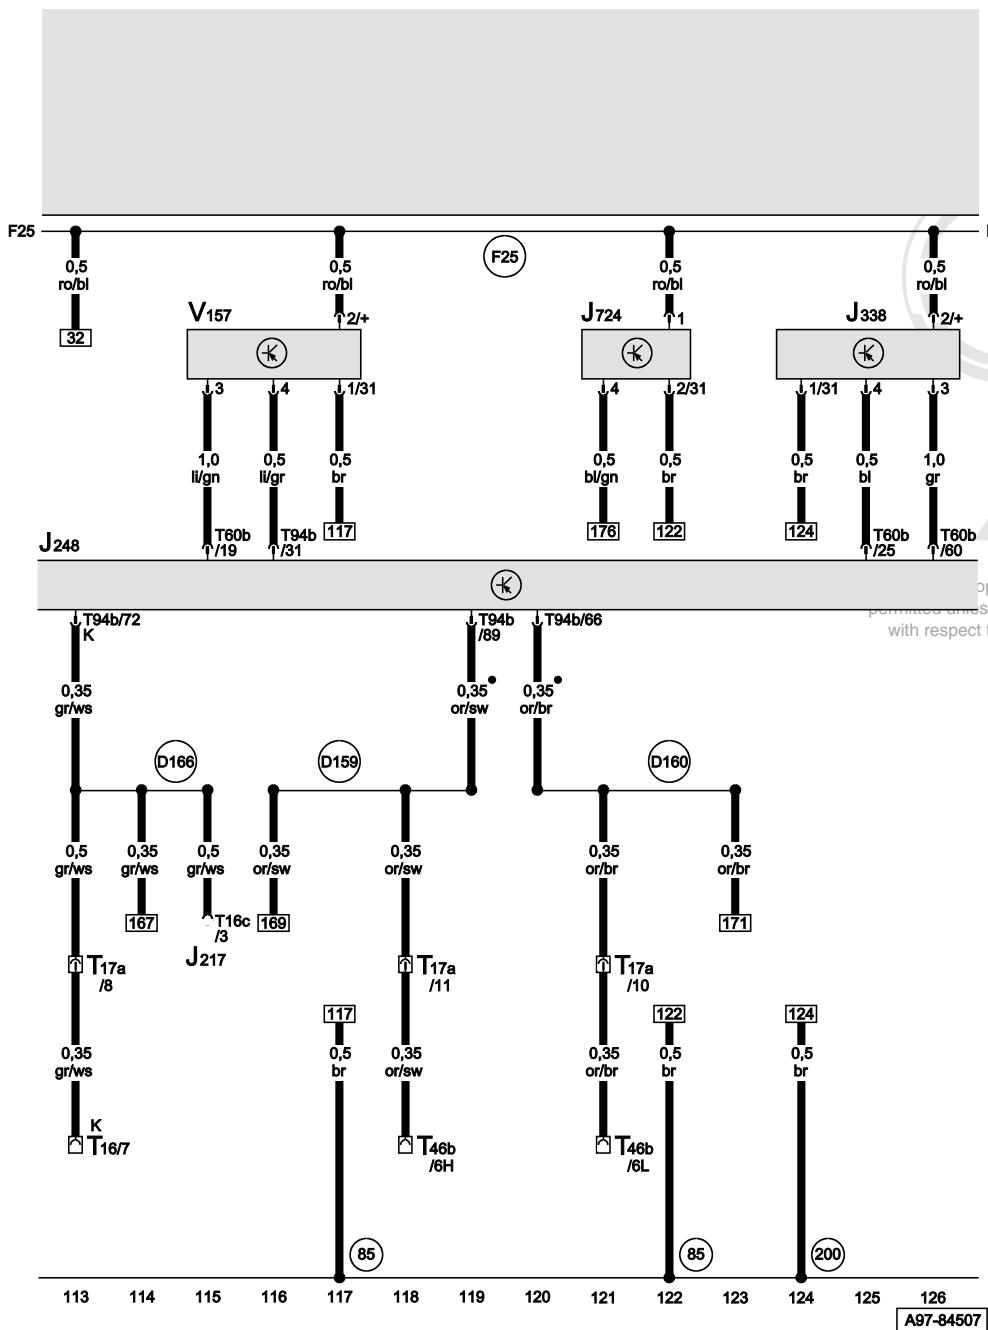

Diesel direct injection system control unit, throttle valve module, turbocharger 1 control unit, intake manifold flap motor


- J217 Automatic gearbox control unit
- J248 Diesel direct injection system control unit
- J338 Throttle valve module
- J724 Turbocharger 1 control unit
- T16 16-pin connector, black, diagnostic connection
- T16c 16-pin connector, black, on automatic gearbox control unit
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T46b 46-pin connector, black, CAN bus separating connector right
- T60b 60-pin connector, black, connector A, on diesel direct injection system control unit
- T94b 94-pin connector, black, connector B, on diesel direct injection system control unit
- V157 Intake manifold flap motor
- 85 Earth connection 1, in engine compartment wiring harness
- 200 Earth connection (screening) in engine compartment wiring harness

Copyright © AUDI AG. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- D159 Connection (high bus), in engine compartment wiring harness
- D160 Connection (low bus), in engine compartment wiring harness
- D166 Connection (K-diagnosis wiring), in engine compartment wiring harness
- F25 Connection 1, in diesel direct injection system wiring harness
 - CAN bus (data wire)

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

A97-84507

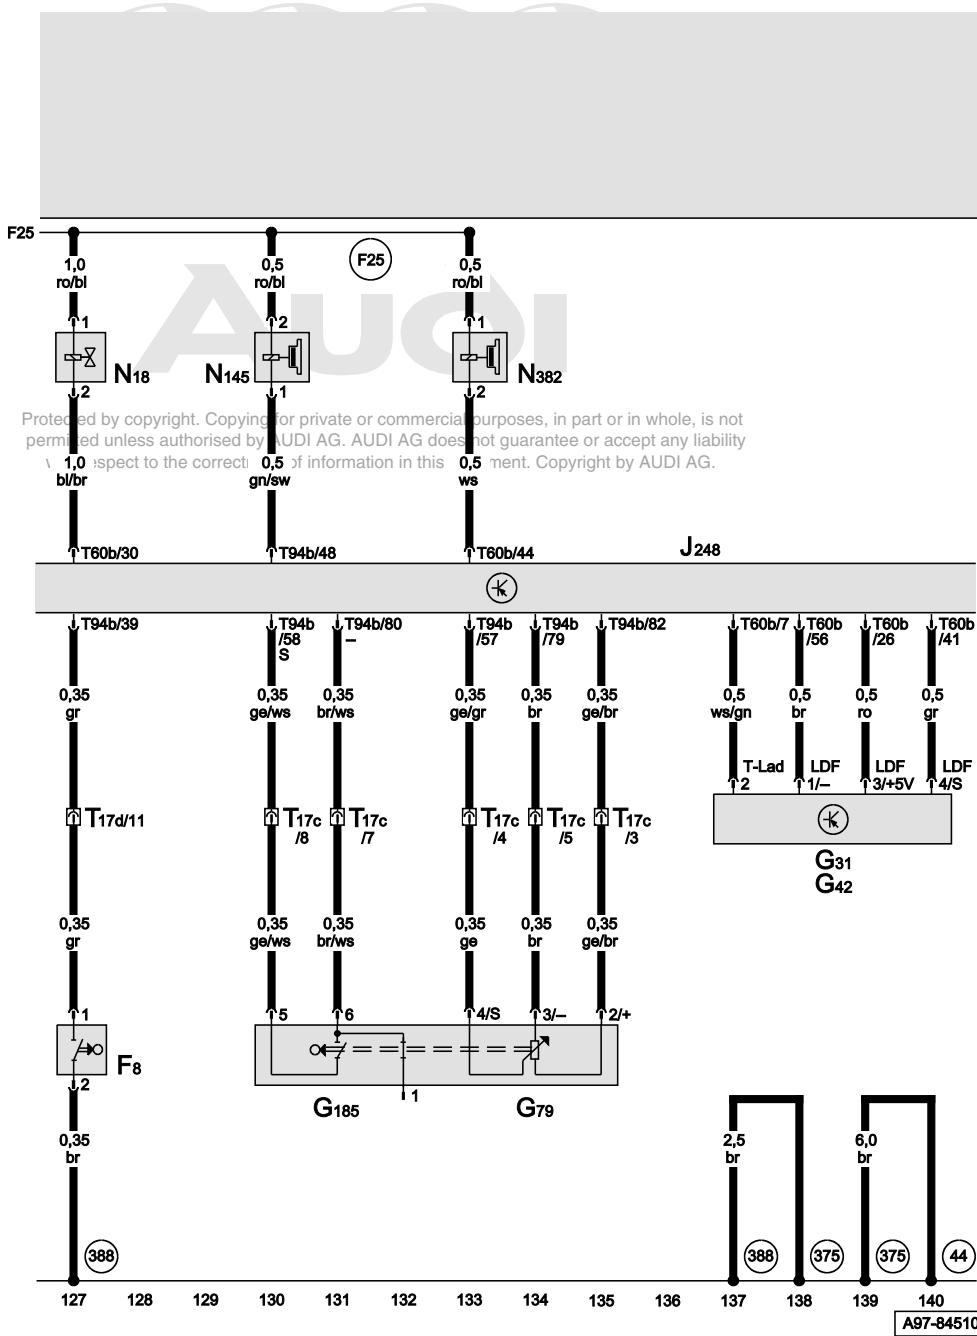


Diesel direct injection system control unit, exhaust gas recirculation valve, kick-down switch, accelerator position sender, right electrohydraulic engine mounting solenoid valve, torque rod valve, charge air pressure sender, intake air temperature sender

- F8 Kick-down switch
- G31 Charge air pressure sender
- G42 Intake air temperature sender
- G79 Accelerator position sender
- G185 Accelerator position sender 2
- J248 Diesel direct injection system control unit
- N18 Exhaust gas recirculation valve
- N145 Right electrohydraulic engine mounting solenoid valve
- N382 Torque rod valve
- T17c 17-pin connector, brown, in electronics box in plenum chamber
- T17d 17-pin connector, blue, in electronics box in plenum chamber
- T60b 60-pin connector, black, connector A, on diesel direct injection system control unit
- T94b 94-pin connector, black, connector B, on diesel direct injection system control unit

- 44 Earth point, lower part of left A-pillar
- 375 Earth connection 10, in main wiring harness
- 388 Earth connection 23, in main wiring harness
- F25 Connection 1, in diesel direct injection system wiring harness


ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

A97-84510

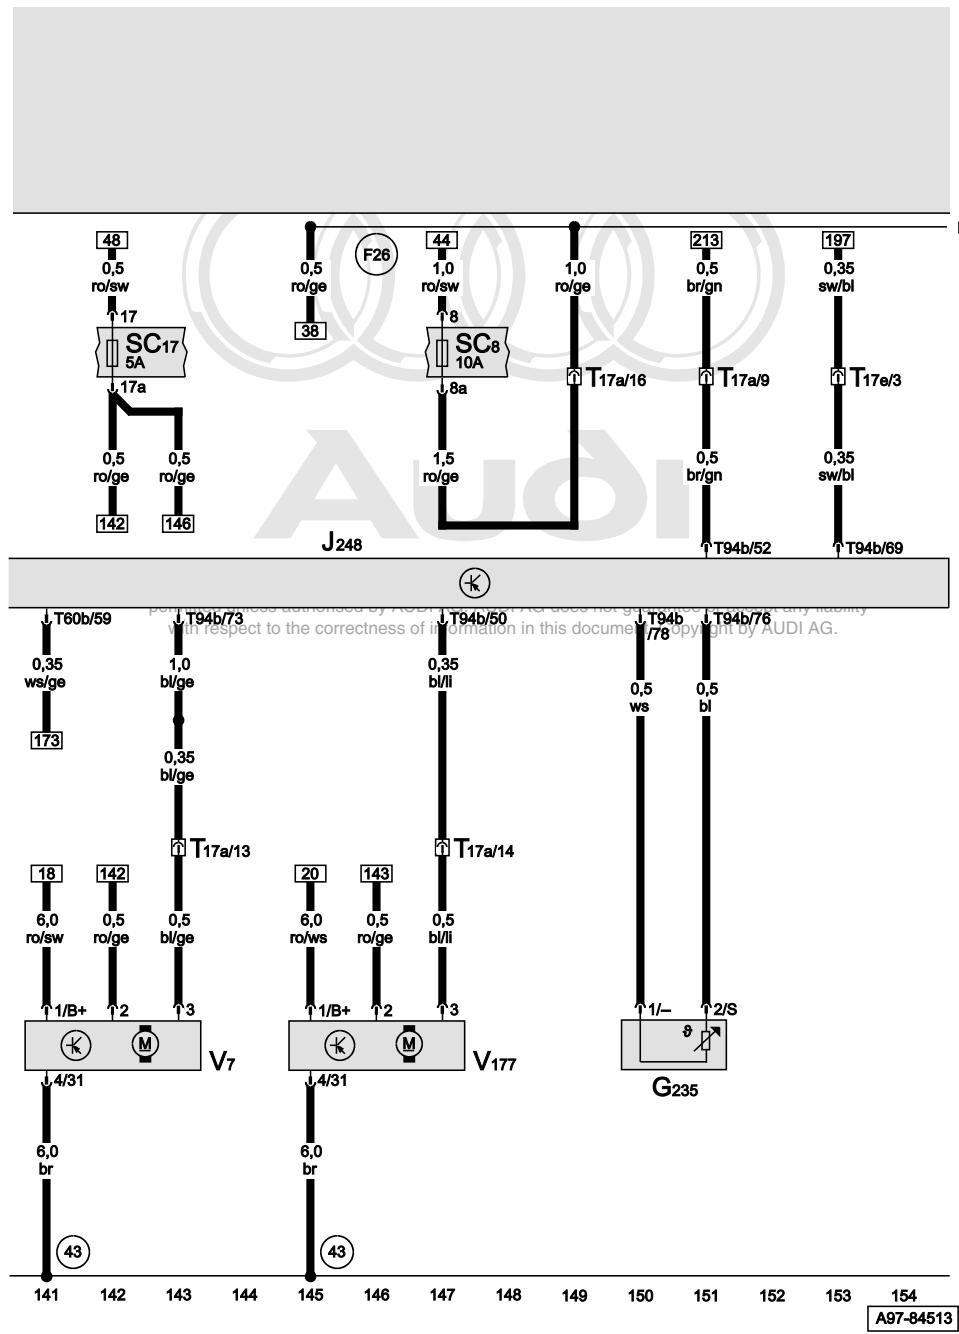

Diesel direct injection system control unit, radiator fan, exhaust gas temperature sender 1


- G235 Exhaust gas temperature sender 1
- J248 Diesel direct injection system control unit
- SC8 Fuse 8 on fuse holder
- SC17 Fuse 17 on fuse holder
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T17e 17-pin connector, red, in electronics box in plenum chamber
- T60b 60-pin connector, black, connector A, on diesel direct injection system control unit
- T94b 94-pin connector, black, connector B, on diesel direct injection system control unit
- V7 Radiator fan
- V177 Radiator fan 2
- 43 Earth point, lower part of right A-pillar
- F26 Connection 2, in diesel direct injection system wiring harness

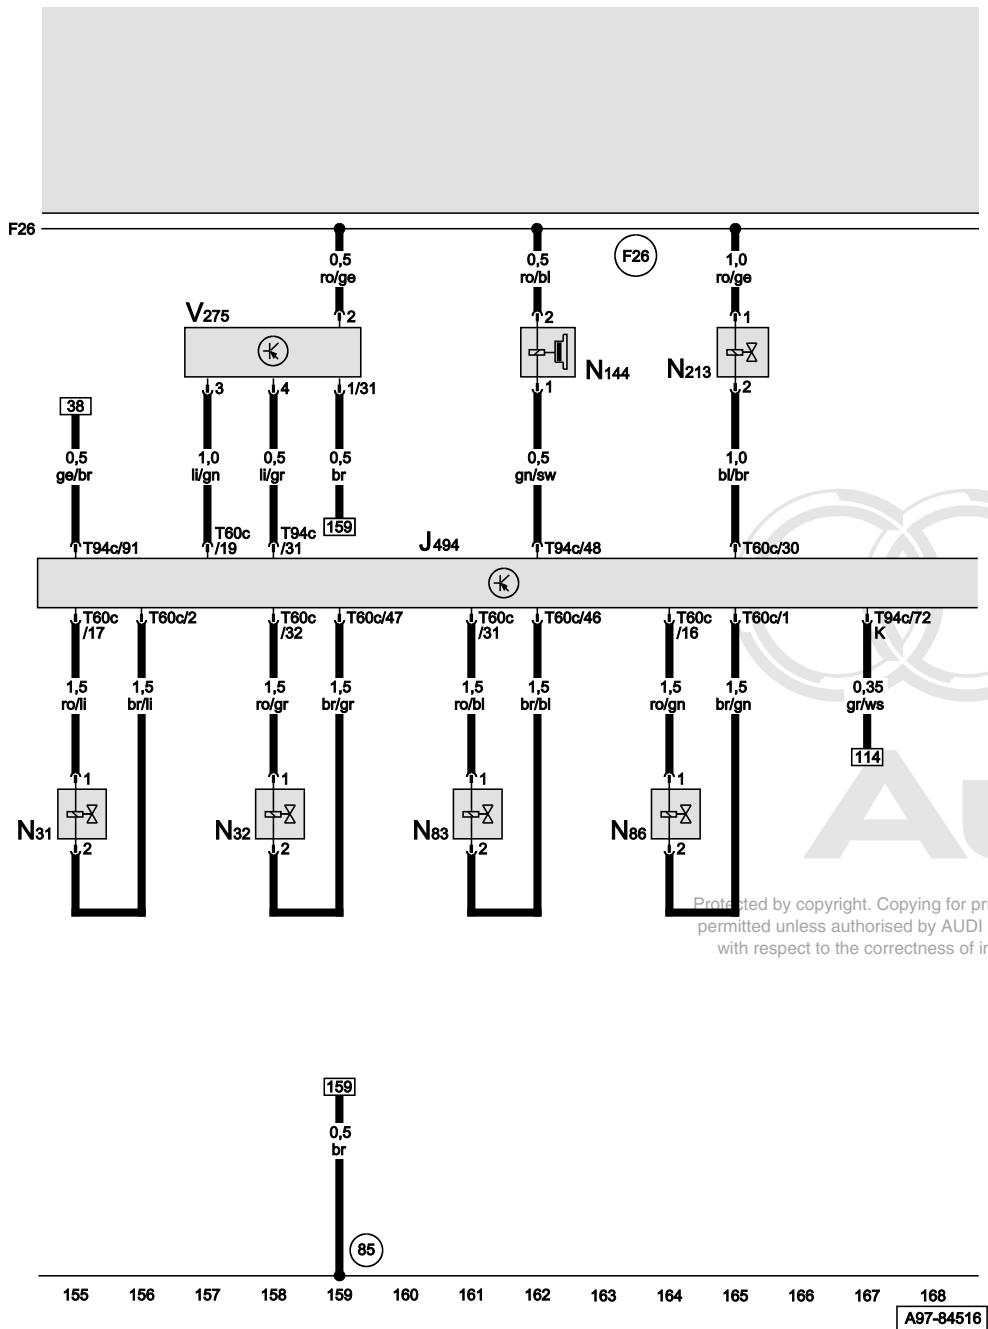

Diesel direct injection system control unit 2, injectors for cylinders 2, 3, 5 and 8, exhaust gas recirculation valve 2, left electrohydraulic engine mounting solenoid valve, intake manifold flap motor

- J494 Diesel direct injection system control unit 2
- N31 Injector, cylinder 2
- N32 Injector, cylinder 3
- N83 Injector, cylinder 5
- N86 Injector, cylinder 8
- N144 Left electrohydraulic engine mounting solenoid valve
- N213 Exhaust gas recirculation valve 2
- T60c 60-pin connector, black, connector A, on diesel direct injection system control unit 2
- T94c 94-pin connector, black, connector B, on diesel direct injection system control unit 2
- V275 Intake manifold flap 2 motor
- 85 Earth connection 1, in engine compartment wiring harness
- F26 Connection 2, in diesel direct injection system wiring harness

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

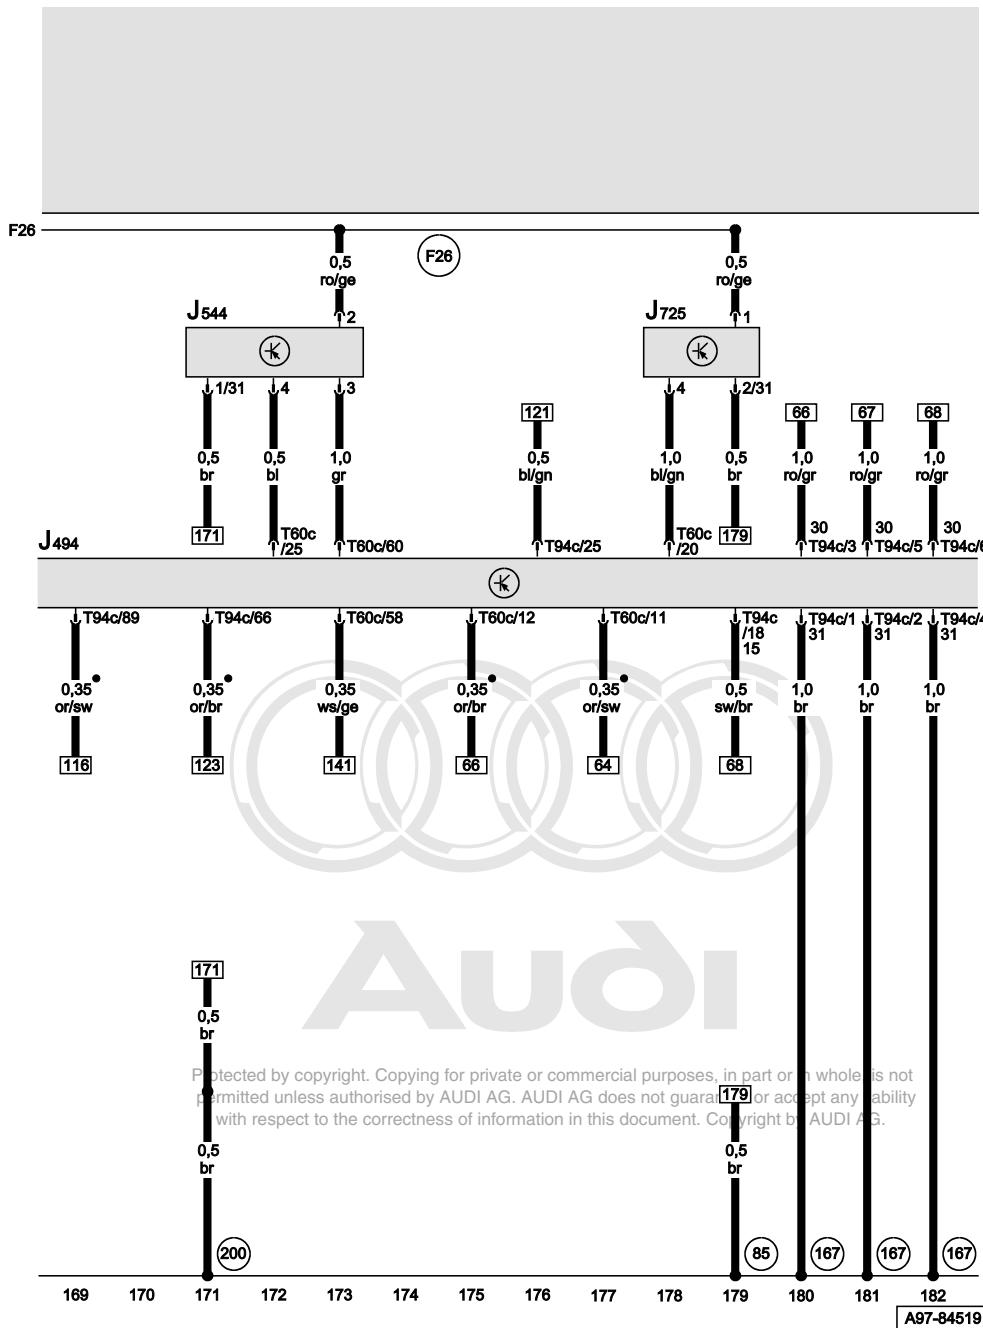



Diesel direct injection system control unit 2, throttle valve module 2, turbocharger 2 control unit

- J494 Diesel direct injection system control unit 2
- J544 Throttle valve module 2
- J725 Turbocharger 2 control unit
- T60c 60-pin connector, black, connector A, on diesel direct injection system control unit 2
- T94c 94-pin connector, black, connector B, on diesel direct injection system control unit 2
- 85 Earth connection 1, in engine compartment wiring harness
- 167 Earth connection 4, in engine compartment wiring harness
- 200 Earth connection (screening) in engine compartment wiring harness
- F26 Connection 2, in diesel direct injection system wiring harness
 - CAN bus (data wire)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee the correctness of information in this document. Copyright by AUDI AG.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to third party content in this document. Copyright by AUDI AG.

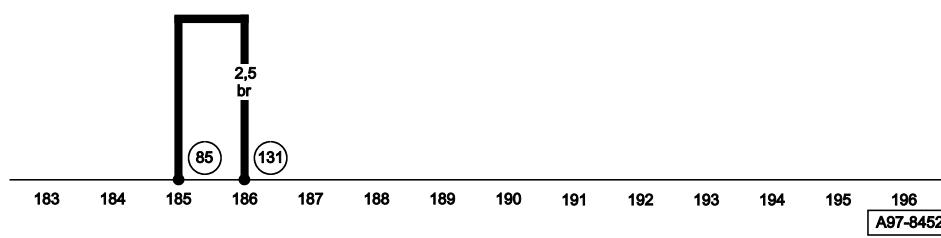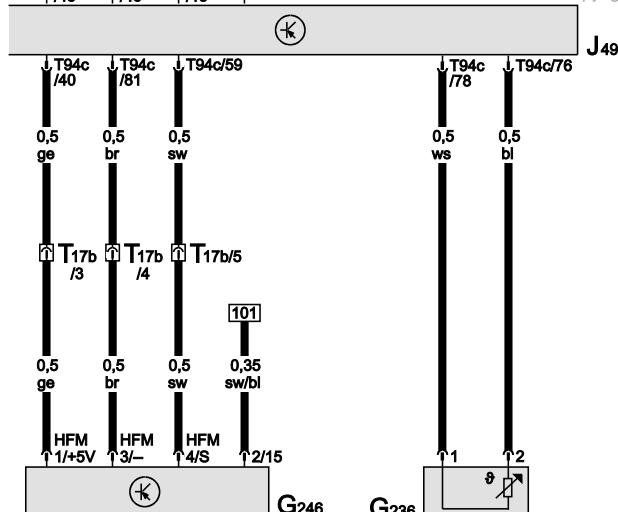

A97-84522


Diesel direct injection system control unit 2, air mass meter 2, exhaust gas temperature sender 1 for bank 2

- G236 Bank 1 exhaust gas temperature sender 2
- G246 Air mass meter 2
- J494 Diesel direct injection system control unit 2
- T17b 17-pin connector, green, in electronics box in plenum chamber
- T60c 60-pin connector, black, connector A, on diesel direct injection system control unit 2
- T94c 94-pin connector, black, connector B, on diesel direct injection system control unit 2

85 Earth connection 1, in engine compartment wiring harness

131 Earth connection 2, in engine compartment wiring harness

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- ge = yellow
- or = orange
- rs = pink

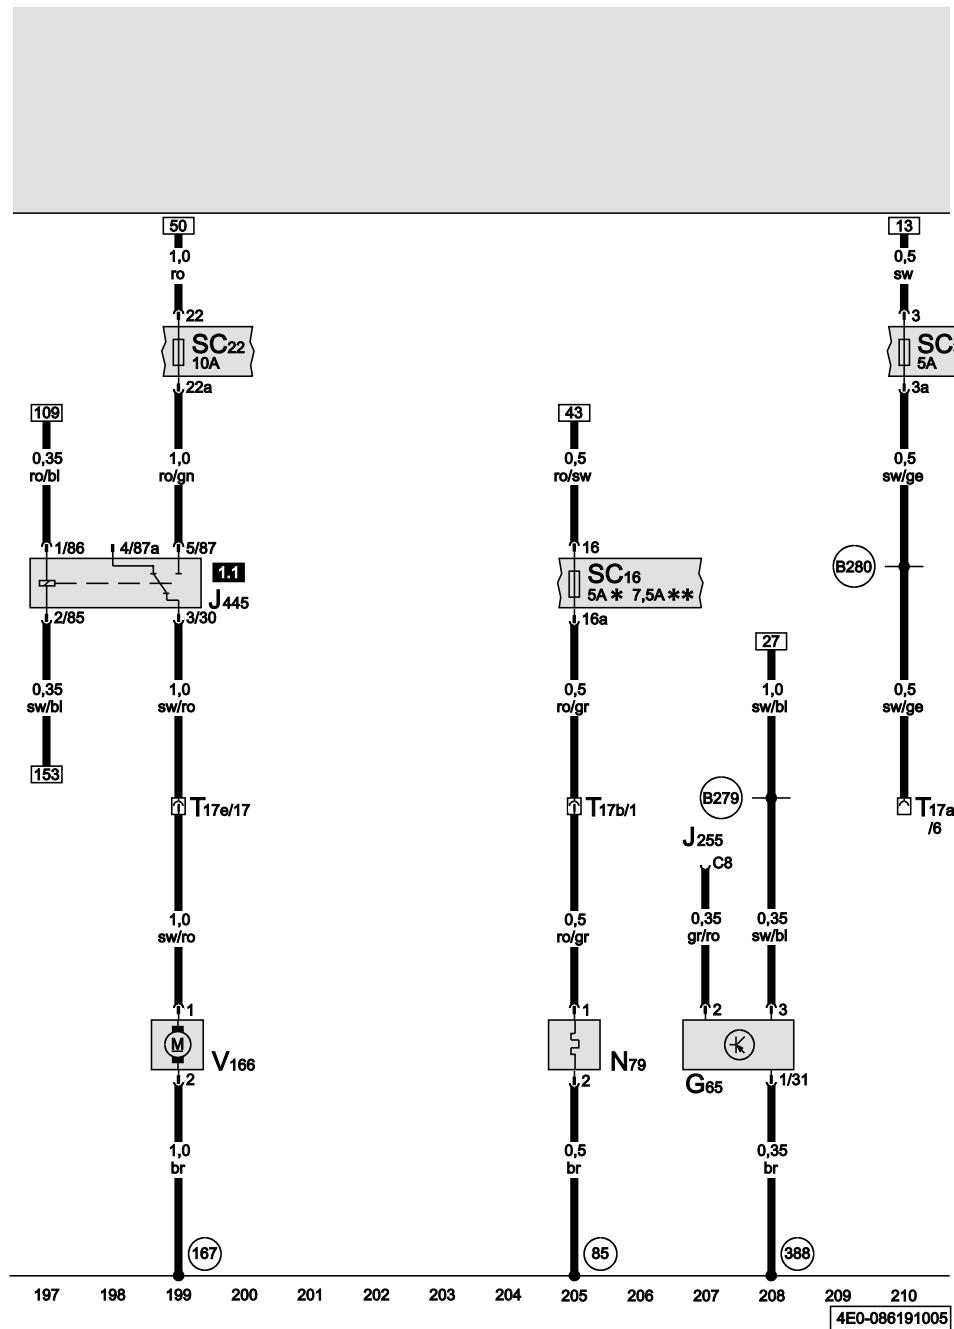

Fuel cooling pump relay, high pressure sender, fuel cooling pump, heater element for crankcase breather

- G65 High pressure sender
- J255 Climatronic control unit
- J445 Fuel cooling pump relay
- N79 Heater element for crankcase breather
- SC3 Fuse 3 on fuse holder
- SC16 Fuse 16 on fuse holder
- SC22 Fuse 22 on fuse holder
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T17b 17-pin connector, green, in electronics box in plenum chamber
- T17e 17-pin connector, red, in electronics box in plenum chamber
- V166 Fuel cooling pump
- 85 Earth connection 1, in engine compartment wiring harness
- 167 Earth connection 4, in engine compartment wiring harness
- 388 Earth connection 23, in main wiring harness

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. No rights are given in respect of the correctness of information in this document. Copyright by AUDI AG.



 
- B279 Positive connection 3 (15a), in main wiring harness

- B280 Positive connection 4 (15a), in main wiring harness

* up to model year 2005
** from model year 2006

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink


4E0-086191005

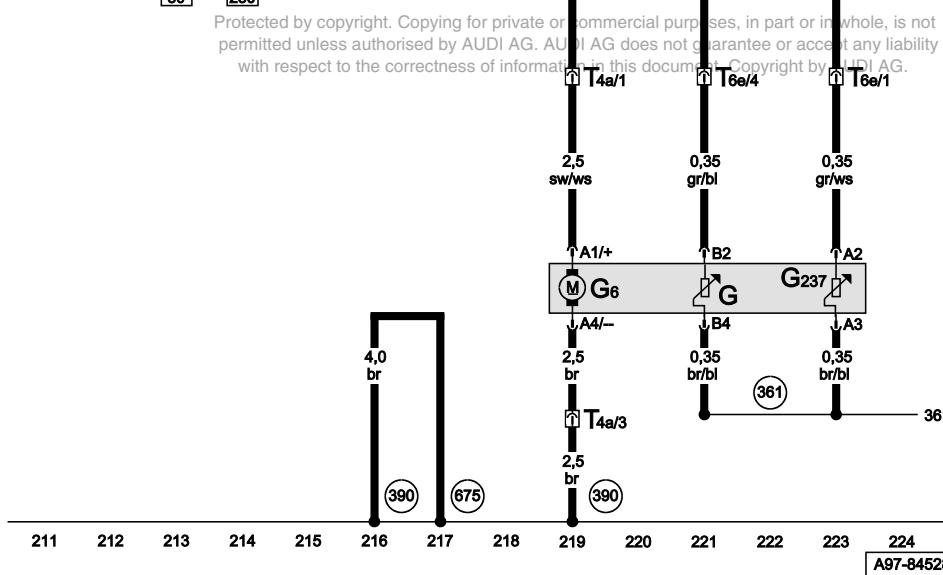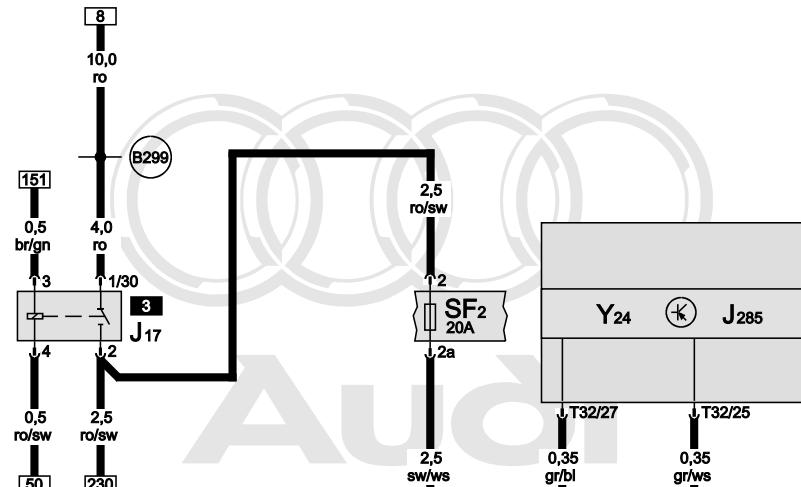

Control unit in dash panel insert, fuel pump relay


- G Fuel gauge sender
- G6 Fuel system pressurisation pump
- G237 Fuel gauge sender 3
- J17 Fuel pump relay
- J285 Control unit in dash panel insert
- SF2 Fuse 2 on fuse holder
- T4a 4-pin connector, under right cover on vehicle floor
- T6e 6-pin connector, under right cover on vehicle floor
- T32 32-pin connector, blue, on dash panel insert
- Y24 Display in dash panel insert
- 361 Earth connection (fuel gauge sender), in main wiring harness
- 390 Earth connection 25, in main wiring harness
- 675 Earth point 2, on right in luggage compartment
- B299 Positive connection 3 (30), in main wiring harness

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

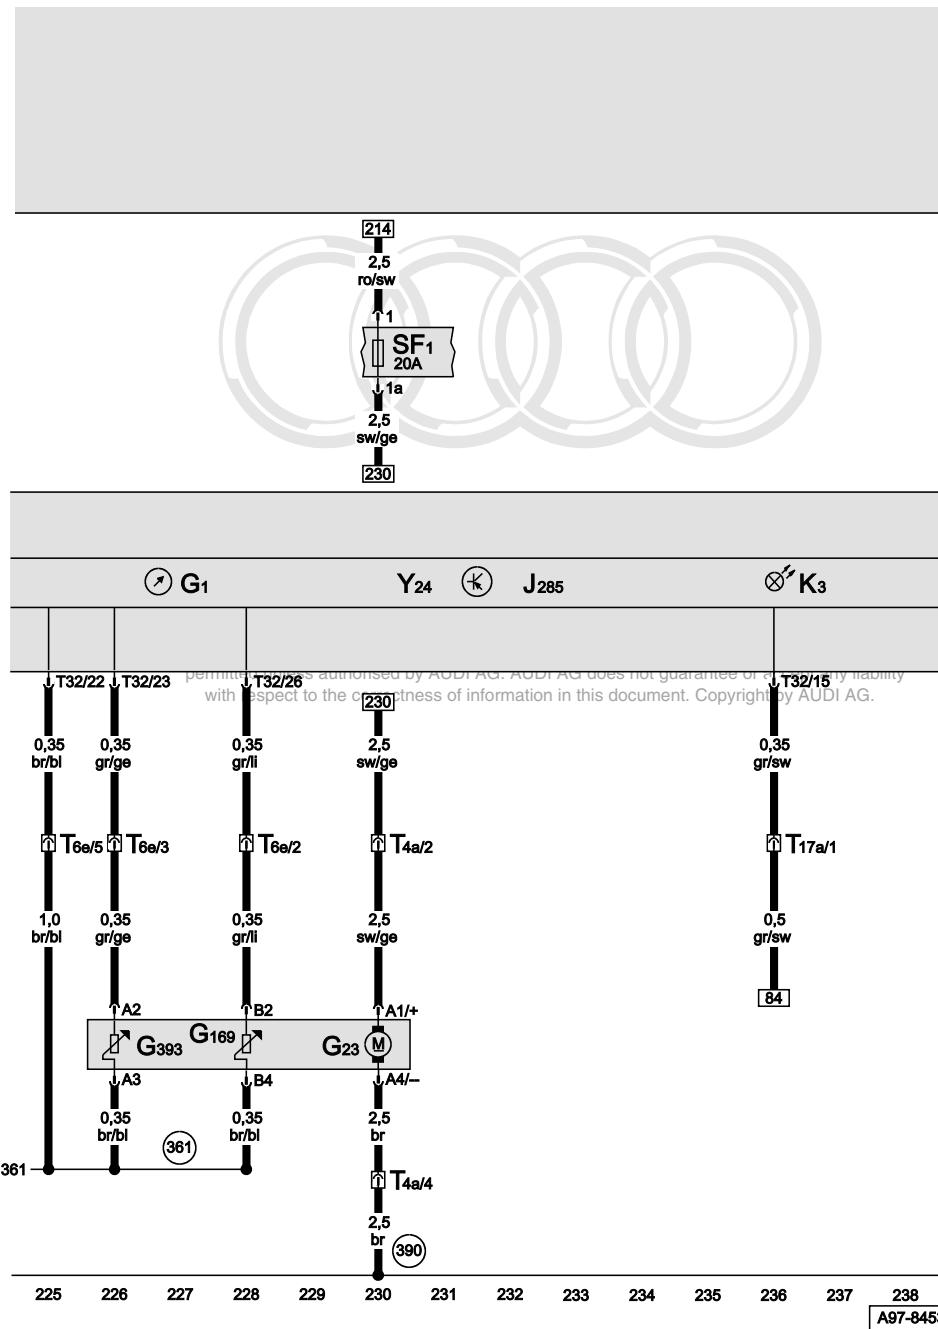

Control unit in dash panel insert, fuel gauge, fuel pump, fuel gauge sender, oil pressure warning lamp

- G1 Fuel gauge
- G23 Fuel pump
- G169 Fuel gauge sender 2
- G393 Fuel gauge sender 4
- J285 Control unit in dash panel insert
- K3 Oil pressure warning lamp
- SF1 Fuse 1 on fuse holder
- T4a 4-pin connector, under right cover on vehicle floor
- T6e 6-pin connector, under right cover on vehicle floor
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T32 32-pin connector, blue, on dash panel insert
- Y24 Display in dash panel insert
- 361 Earth connection (fuel gauge sender), in main wiring harness
- 390 Earth connection 25, in main wiring harness

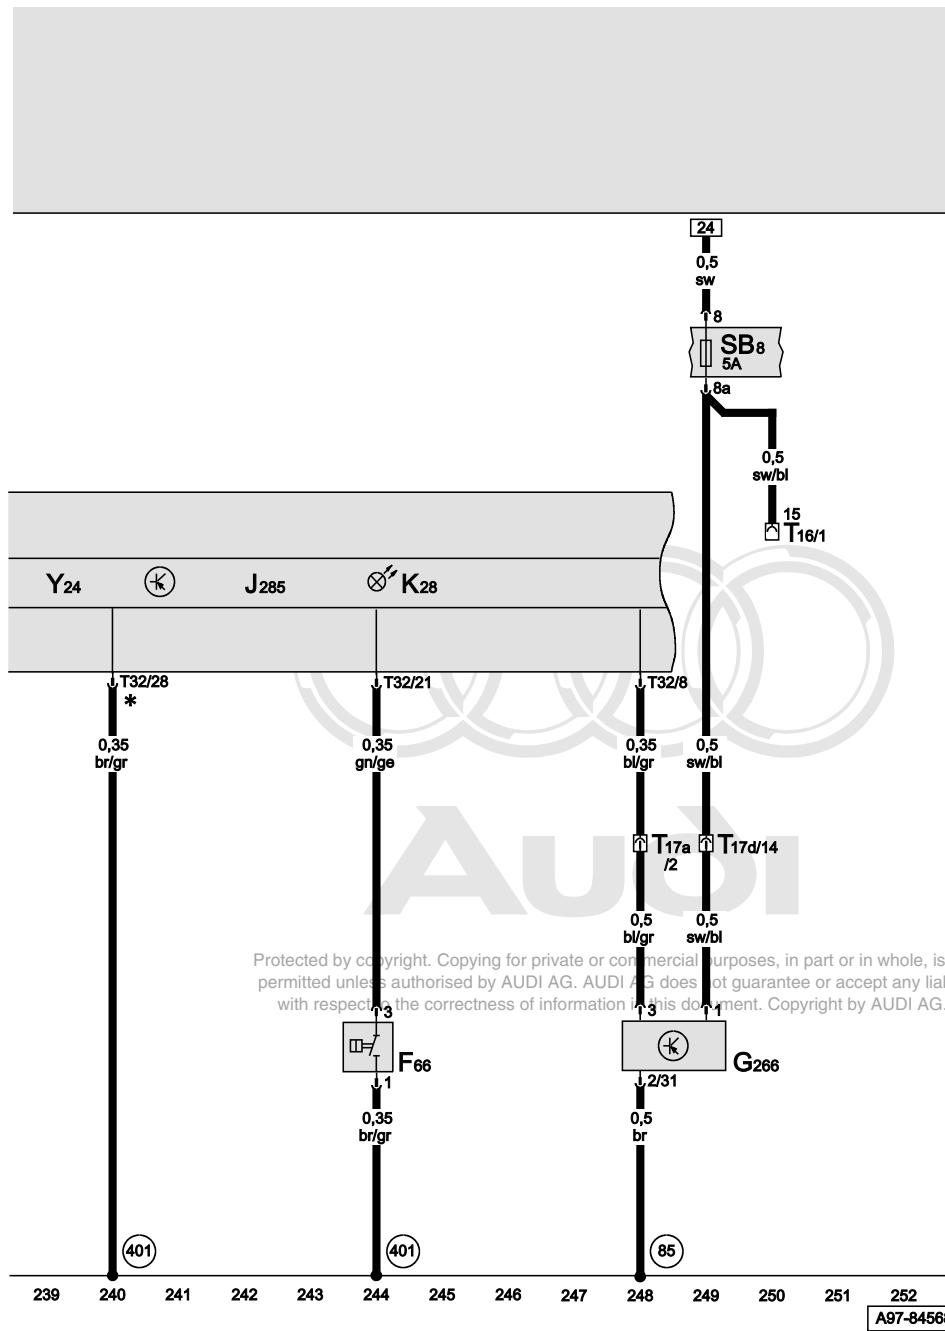

Control unit in dash panel insert, coolant shortage indicator switch, oil level and oil temperature sender

- F66 Coolant shortage indicator switch
- G266 Oil level and oil temperature sender
- J285 Control unit in dash panel insert
- K28 Coolant temperature and coolant shortage warning lamp
- SB8 Fuse 8 on fuse holder
- T16 16-pin connector, black, diagnostic connection
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T17d 17-pin connector, blue, in electronics box in plenum chamber
- T32 32-pin connector, blue, on dash panel insert
- Y24 Display in dash panel insert

(85) Earth connection 1, in engine compartment wiring harness

(401) Earth connection (sender earth), in interior wiring harness

* output sender earth


ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Convenience system

- ⇒ Electrically adjustable and heated exterior mirrors
 - ⇒ Door opener illumination
 - ⇒ Anti-theft alarm system
 - ⇒ Card system (Telepass) Italy
 - ⇒ Electrical rear roller blind, rear left and right roller blind
 - ⇒ Entry lights, door warning lamps
 - ⇒ Ambient lighting
 - ⇒ Window regulator
 - ⇒ Luggage compartment light
 - ⇒ Power latching system
 - ⇒ Central locking
- from model year 2005

Fuse holder, left dash panel

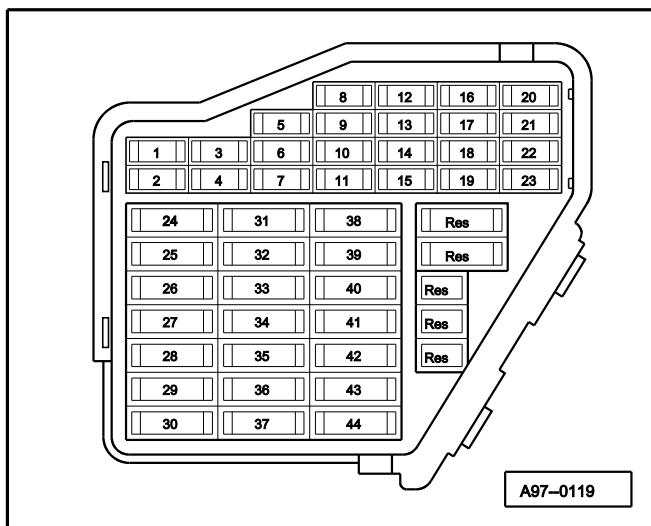

Fuse colours


- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 7,5 A - brown



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

5 A - beige

1 A - black

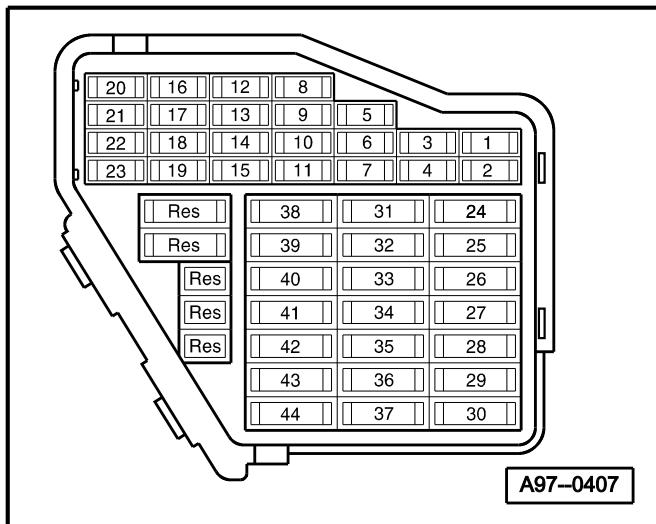Fuse holder right dash panel

SB - Fuses in fuse holder left dash panel


SC - Fuses in fuse holder right dash panel

SD - Fuses in fuse holder left in luggage compartment

SF - Fuses in fuse holder right in luggage compartment




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

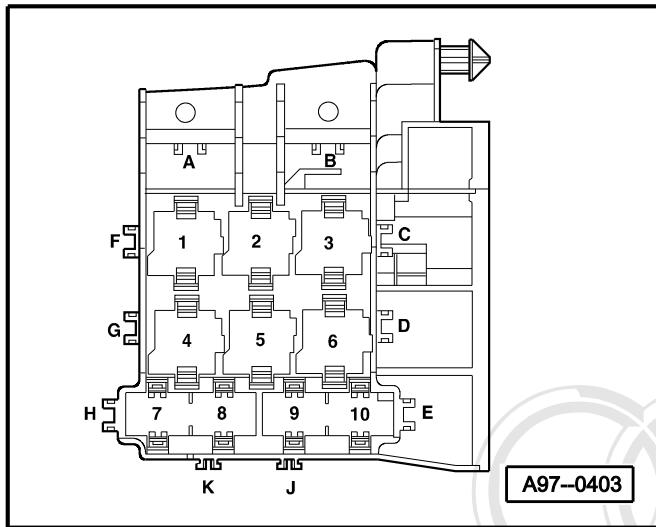Relay and fuse carrie behind left dash panel


Relay positions

3 - Terminal 15 voltage supply relay (J329)

C - Window regulator thermal fuse (S43)

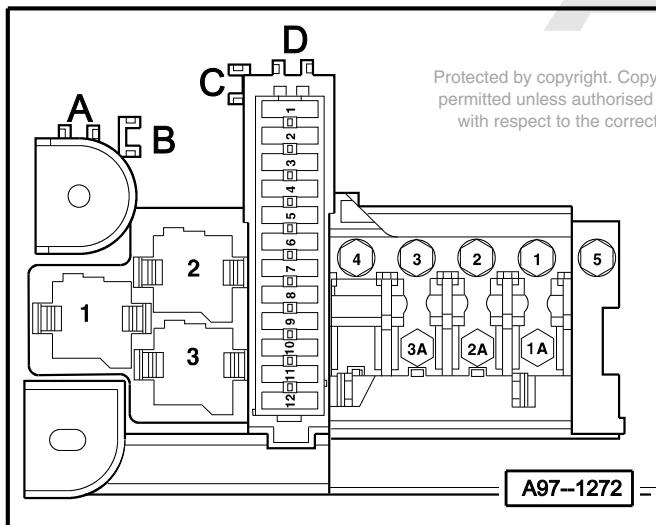Relay and fuse carrier right in luggage compartment

Relay carrier, in front right footwell

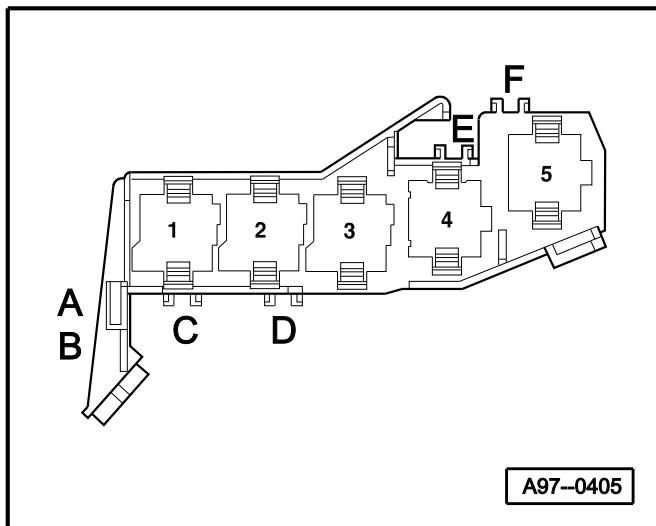

Relay positions


A - Front passenger side window regulator fuse (S170) (up to July 2006)

C - Front passenger side window regulator fuse (S170) (from August 2006)



Audi


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

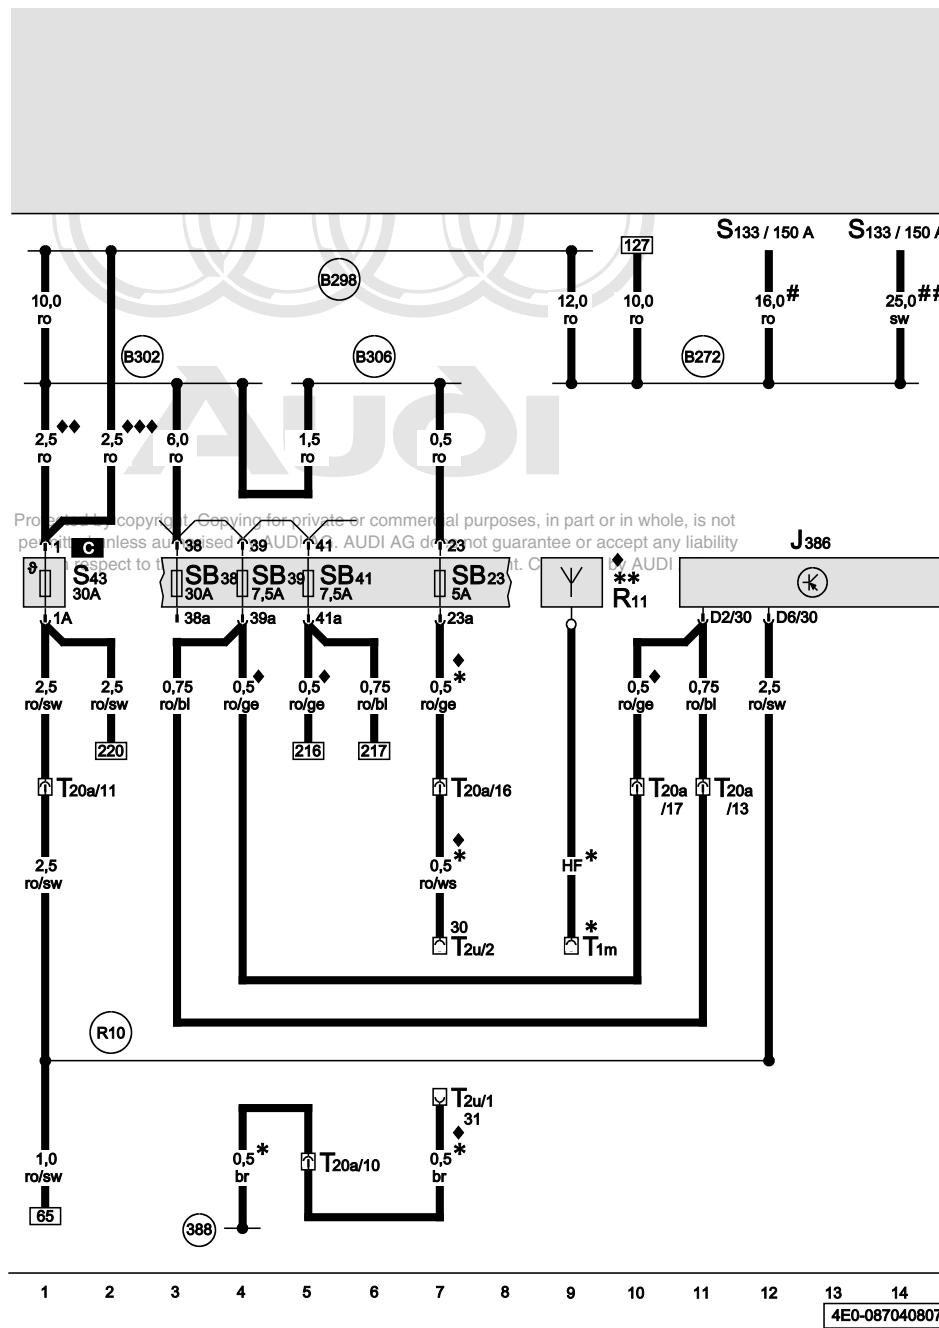

Driver door control unit, window regulator thermal fuse, Card system (Telepass) Italy

- J386 Driver door control unit
 - R11 Aerial
 - S43 Window regulator thermal fuse
 - S133 Fuse 3, 150 A, in luggage compartment, rear right
 - SB23 Fuse 23 on fuse holder
 - SB38 Fuse 38 on fuse holder
 - SB39 Fuse 39 on fuse holder
 - SB41 Fuse 41 on fuse holder
 - T1m Single connector, aerial Telepass, in driver door
 - T2u 2-pin connector, supply Telepass, in driver door
 - T20a 20-pin connector, black, left A-pillar
 - 388 Earth connection 23, in main wiring harness
 - B272 Positive connection (30), in main wiring harness
 - B298 Positive connection 2 (30), in main wiring harness
 - B302 Positive connection 6 (30), in main wiring harness
 - B306 Positive connection 10 (30), in main wiring harness
 - R10 Positive connection 1 (30), in driver door wiring harness
- * only Italy
** in driver side exterior mirror
models with petrol engines
models with diesel engines
◆ is dropped, from model year 2006
◆◆ up to October 2006
◆◆◆ from November 2006

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

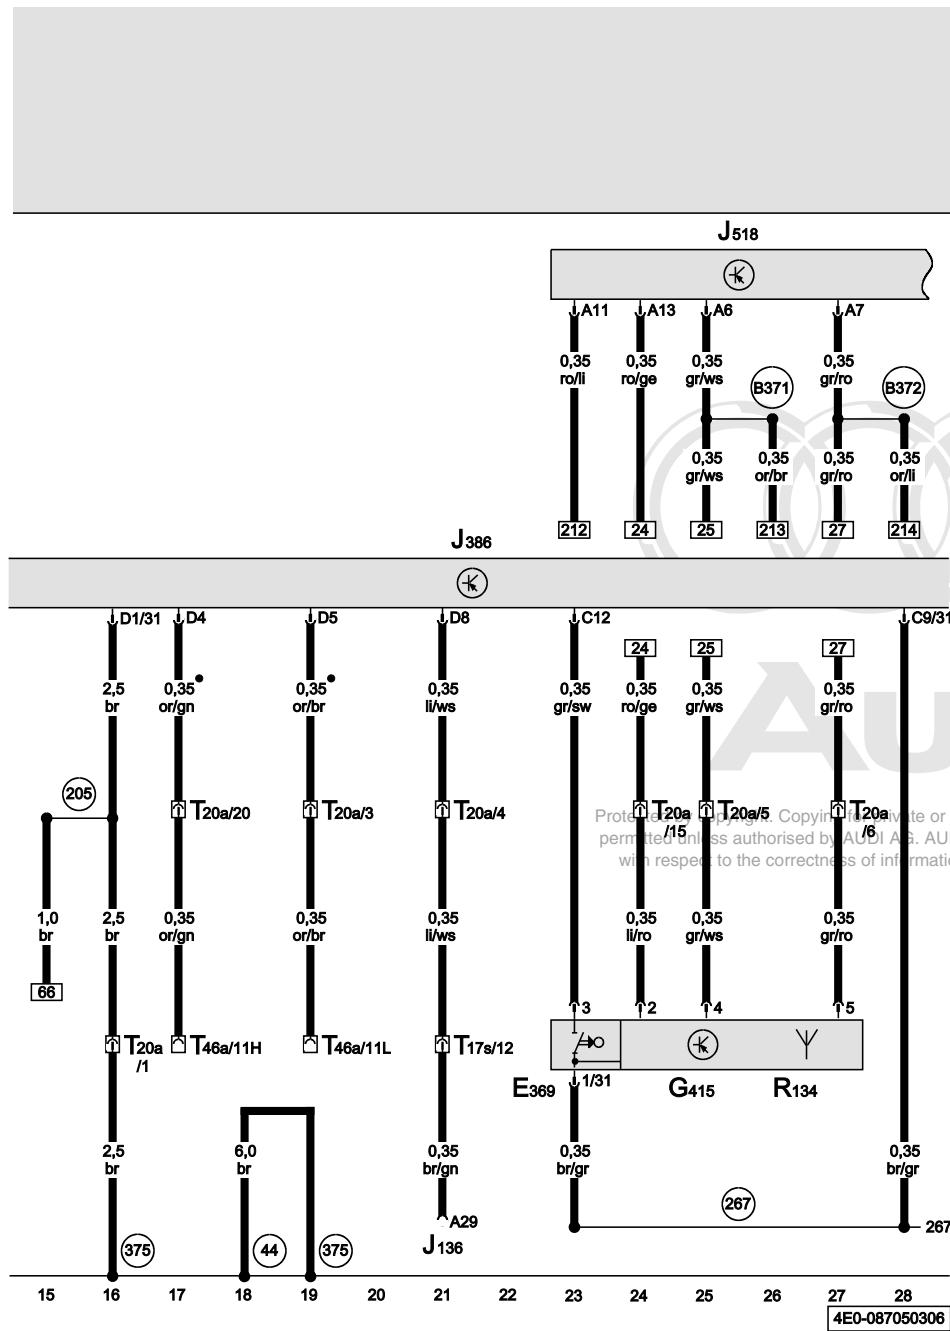


Driver door control unit, driver door exterior handle touch sensor, driver side aerial for entry and start authorisation, entry and start authorisation control unit, driver door exterior handle central locking button

- E369 Driver side door exterior handle central locking button
- G415 Driver door exterior handle touch sensor
- J136 Seat and steering column adjustment control unit with memory function
- J386 Driver door control unit
- J518 Entry and start authorisation control unit
- R134 Driver side aerial for entry and start authorisation
- T17s 17-pin connector, brown, under driver seat
- T20a 20-pin connector, black, left A-pillar
- T46a 46-pin connector, black, CAN separating connector left
- 44 Earth point, lower part of left A-pillar
- 205 Earth connection, in driver door wiring harness
- 267 Earth connection 2, in driver door wiring harness
- 375 Earth connection 10, in main wiring harness
- B371 Connection 1 (aerial), in main wiring harness
- B372 Connection 2 (aerial), in main wiring harness
- CAN bus (data wire)

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability
J386 with respect to the correctness of information in this document. Copyright by AUDI AG.

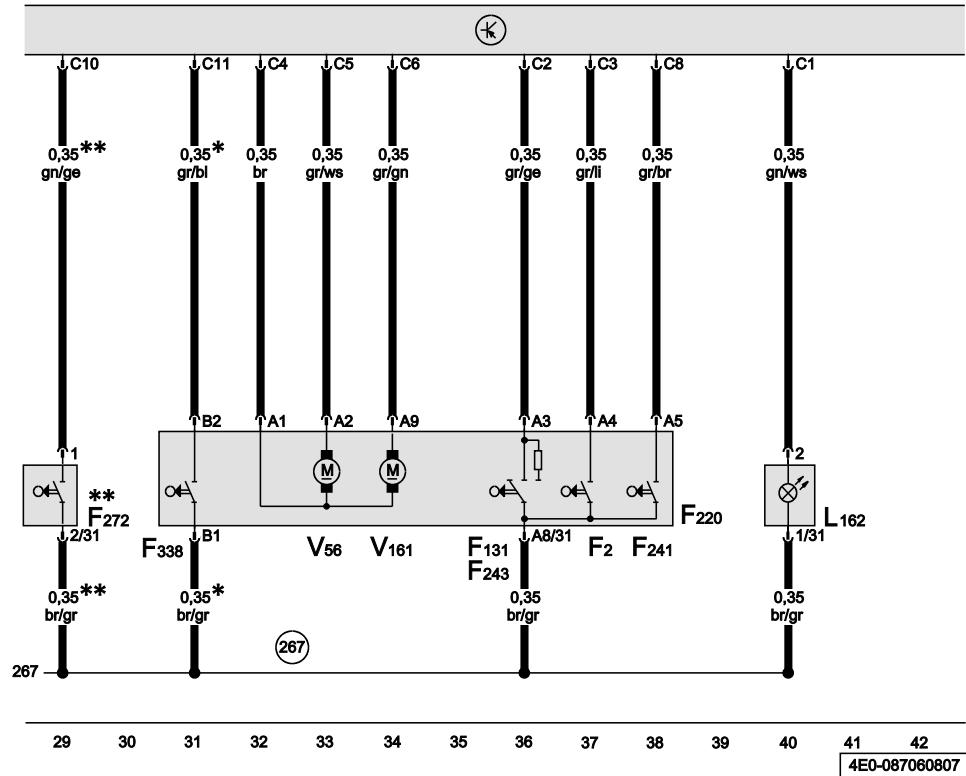

Driver door control unit, front left door exterior handle illumination bulb, driver side central locking lock unit, driver door power latching system contact switch, driver door exterior handle switch

- F2 Driver door contact switch
- F131 Front left central locking actuator
- F220 Driver side central locking lock unit
- F241 Driver side contact switch in lock cylinder
- F243 Driver door central locking actuator for deadlock function
- F272 Driver door exterior handle switch
- F338 Driver door power latching system contact switch
- J386 Driver door control unit
- L162 Front left door exterior handle illumination bulb
- V56 Driver door central locking motor
- V161 Driver door central locking deadlock function motor

267 Earth connection 2, in driver door wiring harness


* models with power latching system
** only models with Keyless-Entry (4F2, 4K5)

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

4E0-087060807


Driver door control unit, window regulator switch, driver side window regulator motor, operating unit for window regulator in driver door

- E40 Front left window regulator switch
- E53 Rear left window regulator switch, in driver door
- E55 Rear right window regulator switch, in driver door
- E81 Front right window regulator switch in driver door
- E512 Operating unit for window regulator in driver door
- J386 Driver door control unit
- T17r 17-pin connector, in driver door
- V147 Driver side window regulator motor

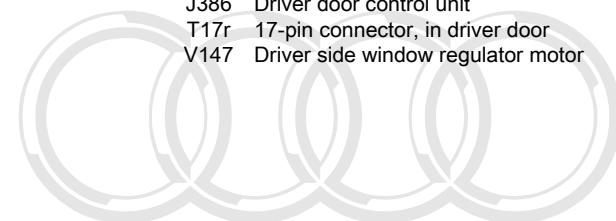

Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

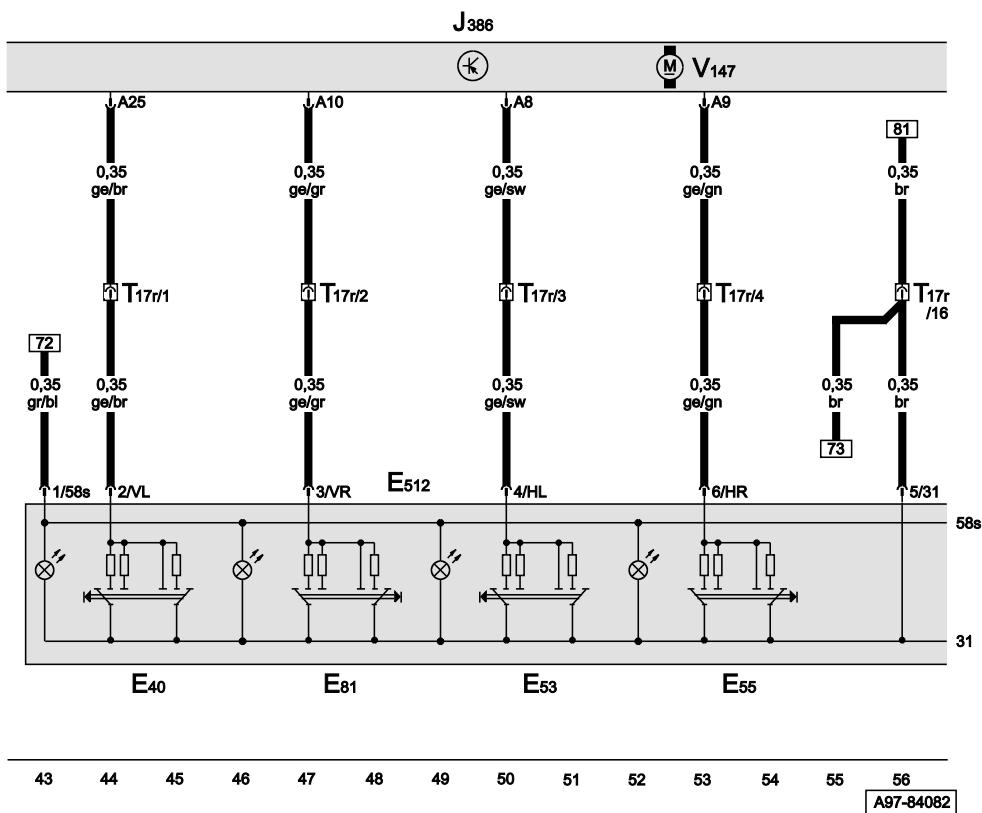


- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- ge = yellow
- or = orange
- rs = pink

A97-84082




Driver door control unit, childproof lock button, power latching control unit for driver door, driver door power latching motor

- E510 Button for left childproof lock
- E511 Button for right childproof lock
- E512 Operating unit for window regulator in driver door
- J386 Driver door control unit
- J760 Power latching control unit for driver door
- T17r 17-pin connector, in driver door
- V302 Driver door power latching motor
- * models with power latching system

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

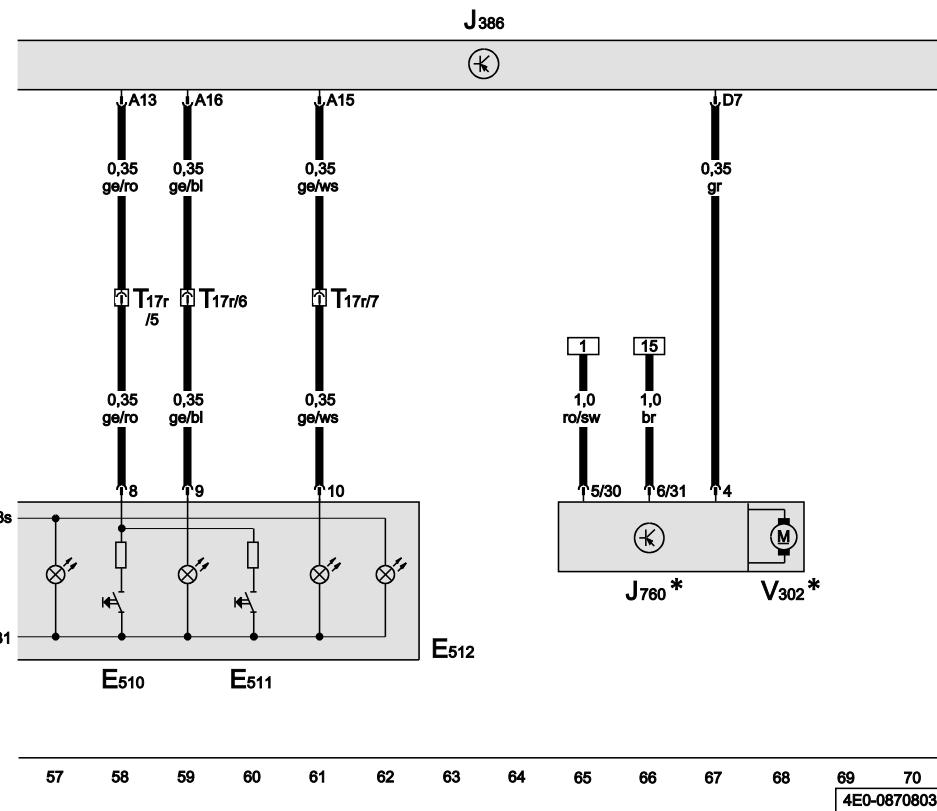

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

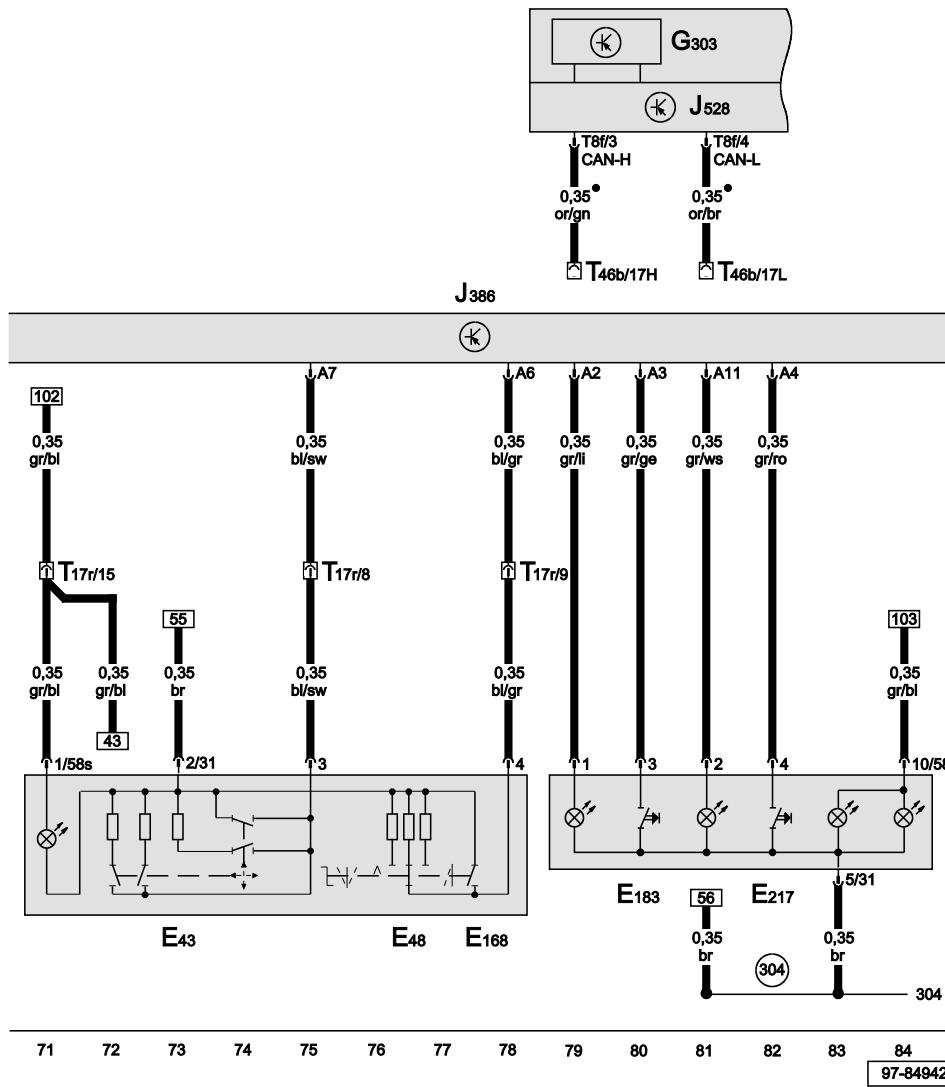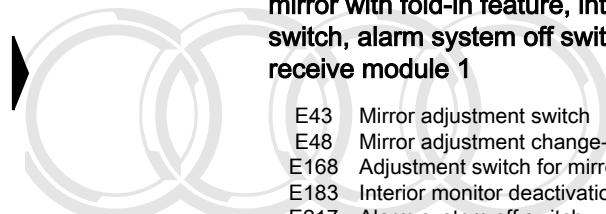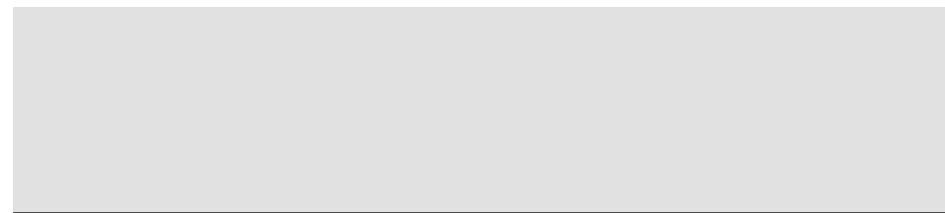

Driver door control unit, mirror adjustment switch, mirror adjustment change-over switch, adjustment switch for mirror with fold-in feature, interior monitor deactivation switch, alarm system off switch, interior monitor send and receive module 1

- E43 Mirror adjustment switch
- E48 Mirror adjustment change-over switch
- E168 Adjustment switch for mirror with fold-in feature
- E183 Interior monitor deactivation switch
- E217 Alarm system off switch
- G303 Interior monitor send and receive module 1
- J386 Driver door control unit
- J528 Roof electronics control unit
- T8f 8-pin connector, black, near front interior light
- T17r 17-pin connector, in driver door
- T46b 46-pin connector, black, CAN separating connector right

Protected by copyright. Copying for private, personal use is permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in CAN bus (data wire) by AUDI AG.

303 Earth connection 3 in driver door wiring harness



ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

Driver door control unit, driver side mirror adjustment motors, driver side heated exterior mirror, driver side automatic anti-dazzle exterior mirror

J386 Driver door control unit
 V17 Mirror adjustment motor (driver side)
 V121 Driver side fold-in mirror motor
 V149 Driver side mirror adjustment motor
 Y20 Driver side automatic anti-dazzle exterior mirror
 W52 Driver side entry light in exterior mirror
 Z4 Heated exterior mirror on driver side

303 Earth connection 3, in driver door wiring harness



* mirror with fold-in feature
 ** with automatic anti-dazzle exterior mirror
 *** with entry light in exterior mirror

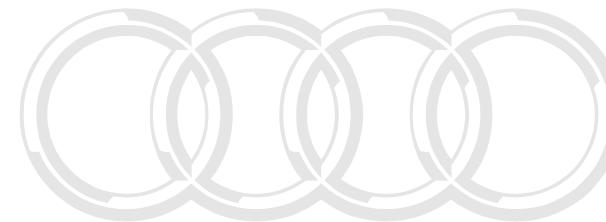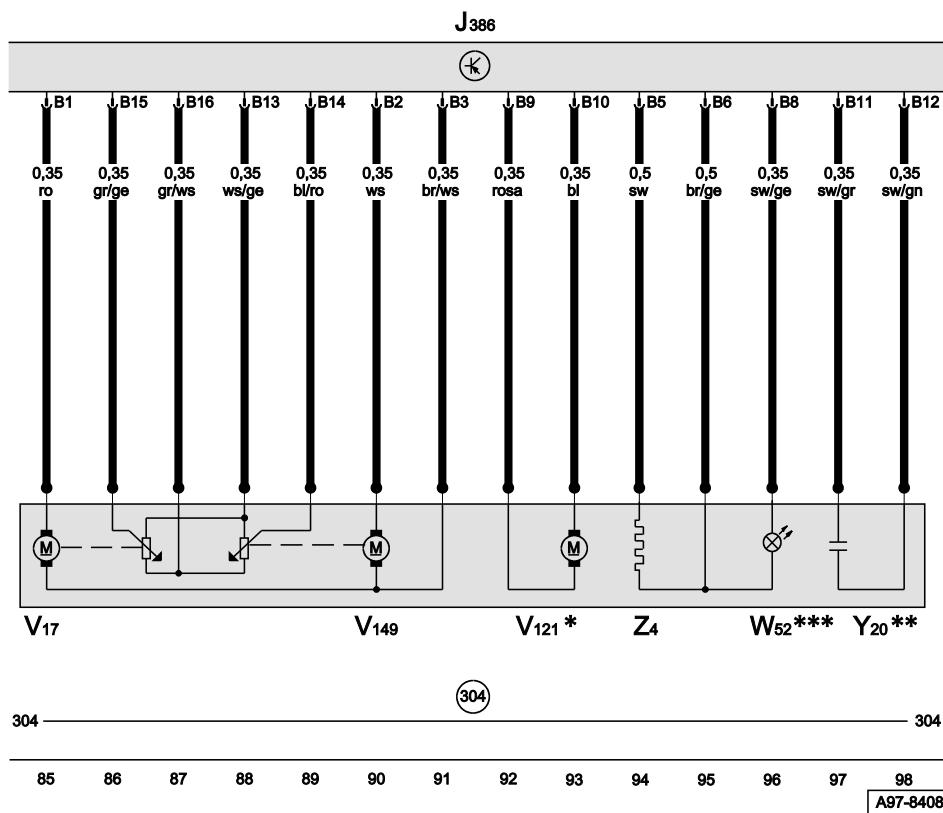

Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

 ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

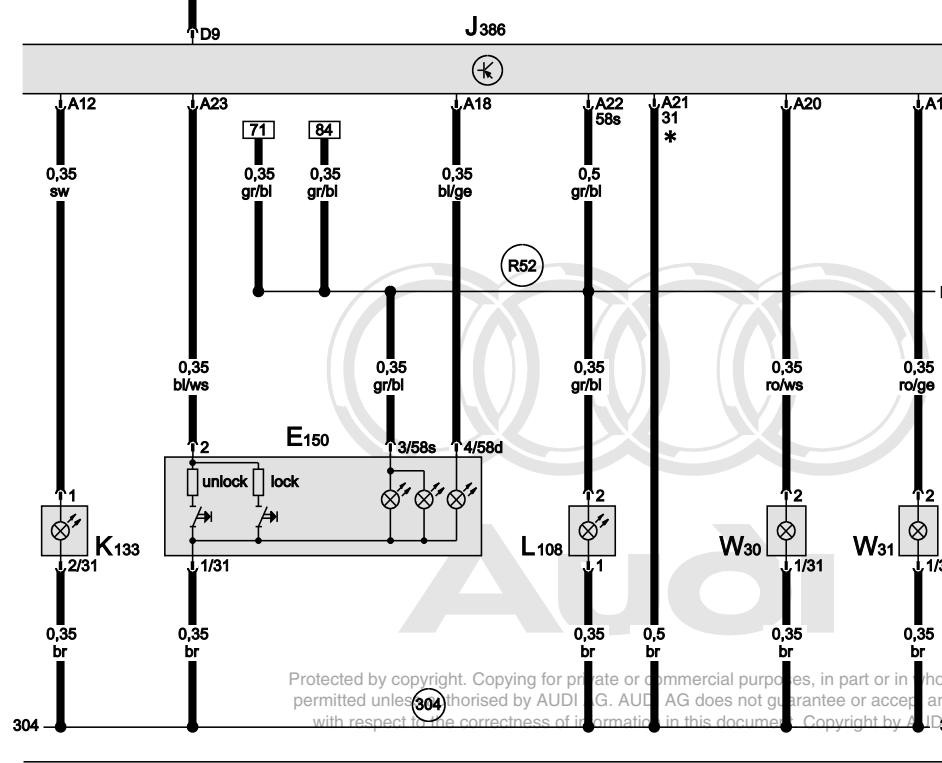

Driver door control unit, central locking deadlock function
warning lamp, driver side interior locking switch, driver side
door warning lamp, front left entry light

- E150 Driver side interior locking switch
- J386 Driver door control unit
- K133 Central locking deadlock function warning lamp
- L108 Driver door opener illumination
- T20a 20-pin connector, black, left A-pillar
- W30 Driver side door warning lamp
- W31 Front left entry light

303 Earth connection 3, in driver door wiring harness


R52 Connection (58s), in driver side door wiring harness

* switch earth output

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink



Driver door control unit, fuel tank flap release button, rear lid remote release button, driver door storage compartment illumination bulb

- A20 Driver door ambient lighting voltage converter
- E233 Rear lid remote release button
- E319 Fuel tank flap release button
- J386 Driver door control unit
- L160 Driver door storage compartment illumination bulb
- L164 Driver door ambient lighting
- T2ae 2-pin connector, on ambient lighting voltage converter
- T2af 2-pin connector, on ambient lighting voltage converter
- T17p 17-pin connector, in driver door
- 303 Earth connection 3, in driver door wiring harness
- R52 Connection (58s), in driver side door wiring harness

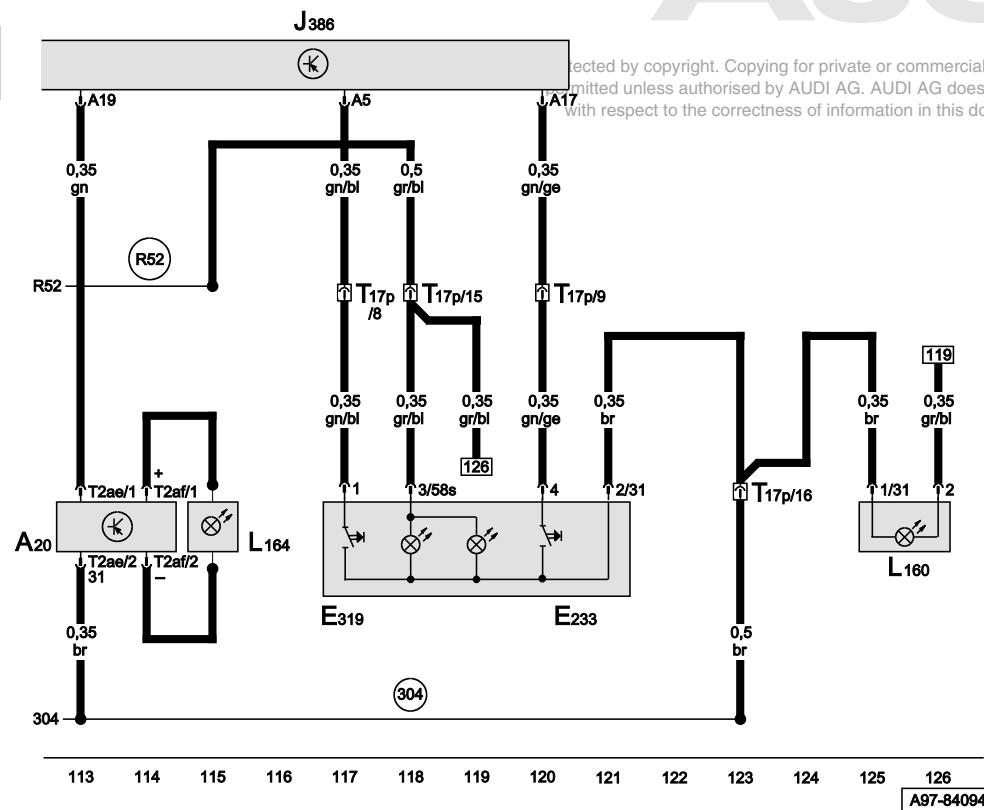


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

 A97-84094

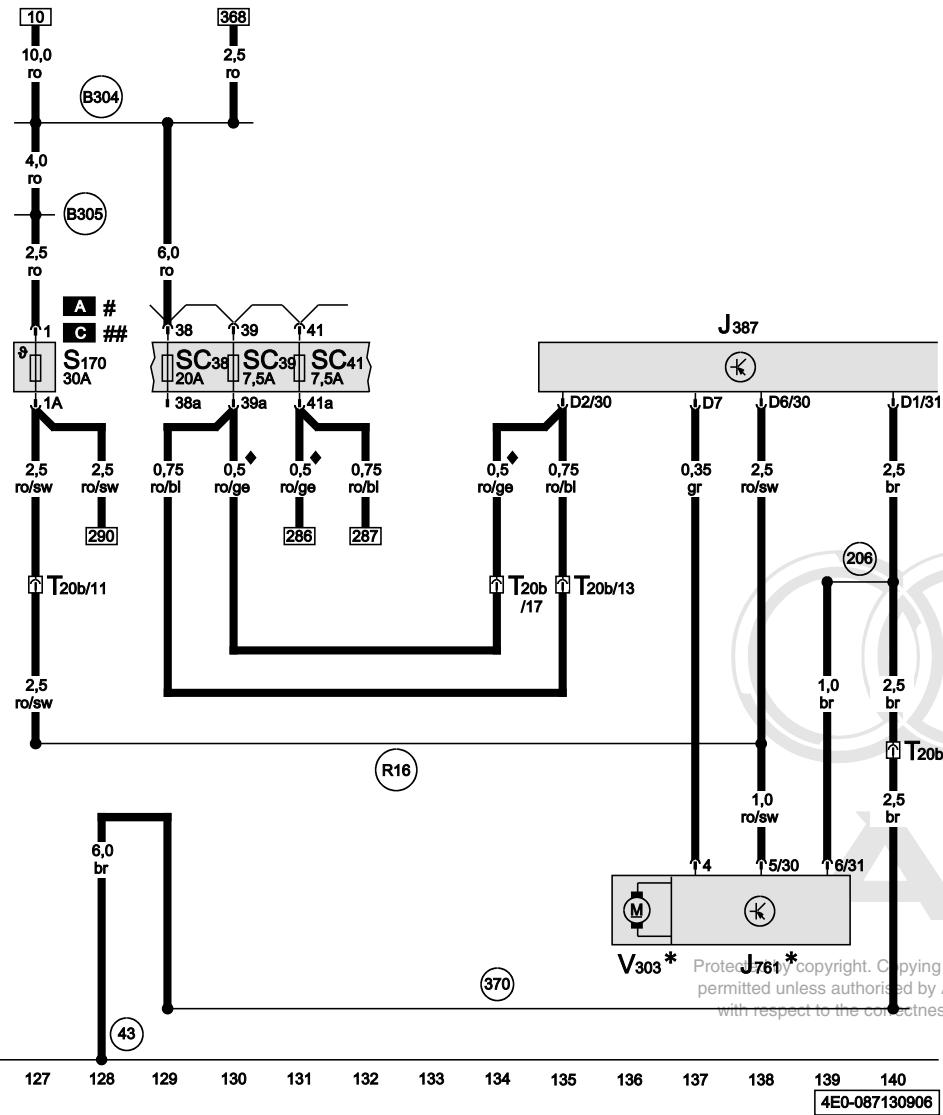

Front passenger door control unit, front passenger side window regulator fuse, front passenger door power latching motor, power latching control unit for front passenger door

- J387 Front passenger door control unit
 - J761 Power latching control unit for front passenger door
 - S170 Front passenger side window regulator fuse
 - SC38 Fuse 38 on fuse holder
 - SC39 Fuse 39 on fuse holder
 - SC41 Fuse 41 on fuse holder
 - T20b 20-pin connector, black, right A-pillar
 - V303 Front passenger door power latching motor
 - 43 Earth point, lower part of right A-pillar
 - 206 Earth connection, in door wiring harness, front passenger side
 - 370 Earth connection 5, in main wiring harness
 - B304 Positive connection 8 (30), in main wiring harness
 - B305 Positive connection 9 (30), in main wiring harness
 - R16 Positive connection 1 (30), in front passenger door wiring harness
- * models with power latching system
 # up to July 2006
 ## from August 2006
 ♦ is dropped, from model year 2006

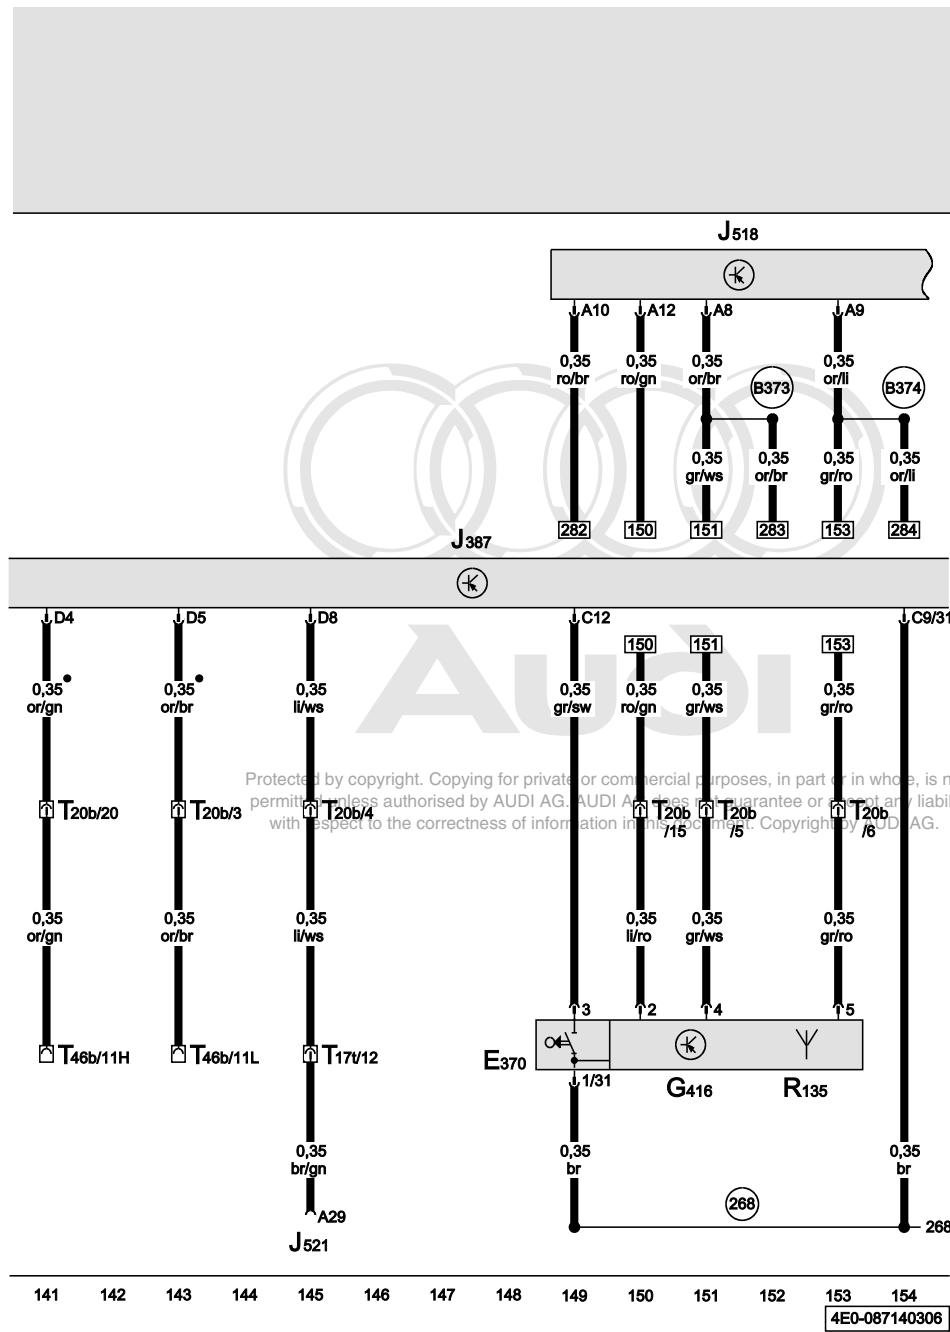

Front passenger door control unit, entry and start authorisation control unit, front passenger door exterior handle touch sensor, front passenger side aerial for entry and start authorisation, front passenger door exterior handle central locking button

- E370 Front passenger door exterior handle central locking button
- G416 Front passenger door exterior handle touch sensor
- J387 Front passenger door control unit
- J518 Entry and start authorisation control unit
- J521 Front passenger seat adjustment with memory control unit
- R135 Front passenger side aerial for entry and start authorisation
- T17t 17-pin connector, brown, under front passenger seat
- T20b 20-pin connector, black, right A-pillar
- T46b 46-pin connector, black, CAN separating connector right
- 268 Earth connection 2, in front passenger side door wiring harness
- B373 Connection 3 (aerial), in main wiring harness
- B374 Connection 4 (aerial), in main wiring harness
- CAN bus (data wire)


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG disclaims any guarantee or liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



J387

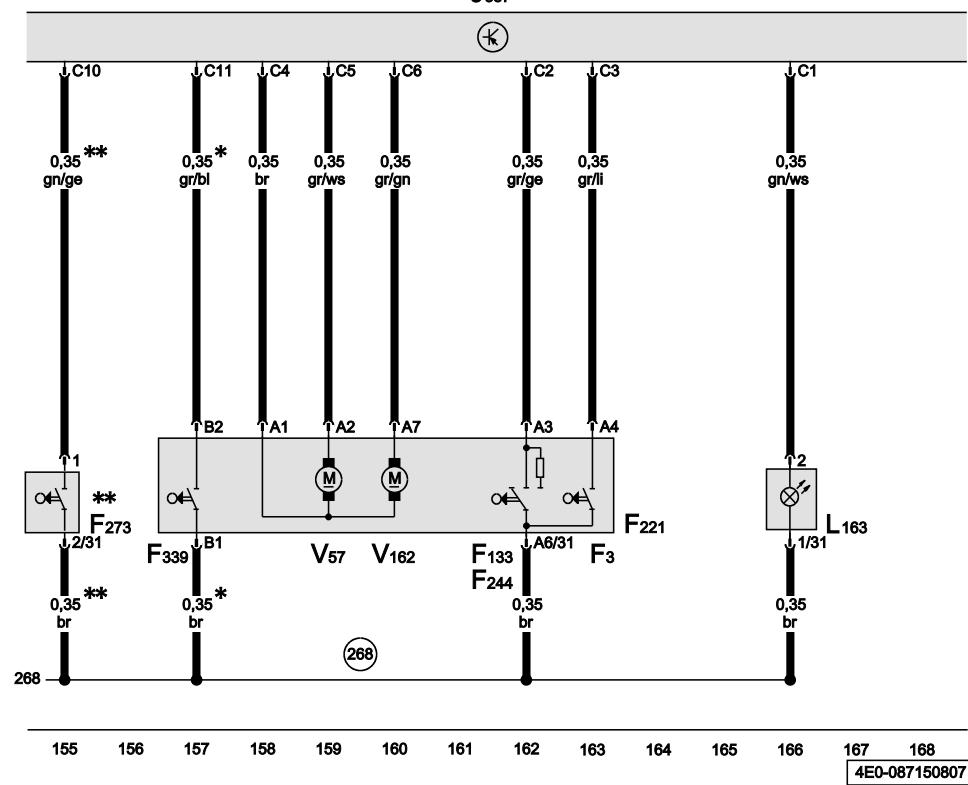

Front passenger side door control unit, front right door exterior handle illumination bulb, front passenger door exterior handle switch, front passenger side central locking lock unit, front passenger door power latching system contact switch


- F3 Front passenger door contact switch
 - F133 Front right central locking actuator
 - F221 Front passenger side central locking lock unit
 - F244 Front passenger door central locking actuator for deadlock function
 - F273 Front passenger door exterior handle switch
 - F339 Front passenger door power latching system contact switch
 - J387 Front passenger door control unit
 - L163 Front right door exterior handle illumination bulb
 - V57 Front passenger door central locking deadlock function motor
 - V162 Front passenger door central locking deadlock function motor
 - 268 Earth connection 2, in front passenger side door wiring harness
- * models with power latching system
** only models with Keyless-Entry (4F2, 4K5)

 ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

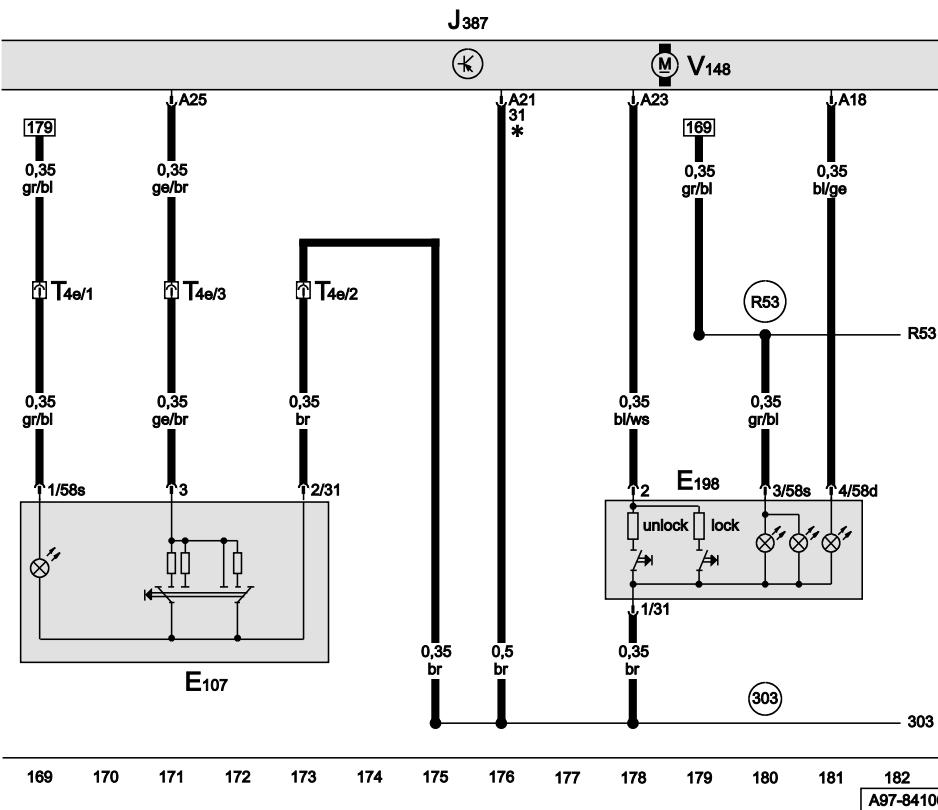

Front passenger door control unit, window regulator switch
in front passenger door, front passenger side interior
locking switch




- E107 Window regulator switch, in front passenger door
- E198 Front passenger side interior locking switch
- J387 Front passenger door control unit
- T4e 4-pin connector, in front passenger door
- V148 Front passenger side window regulator motor
- 304 Earth connection 3, in front passenger side door wiring harness
- R53 Connection (58s), in front passenger side door wiring harness
- * switch earth output

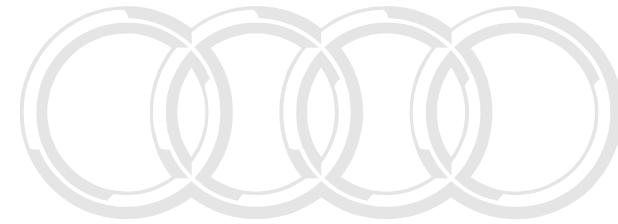

Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

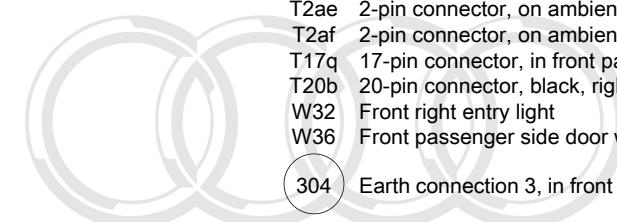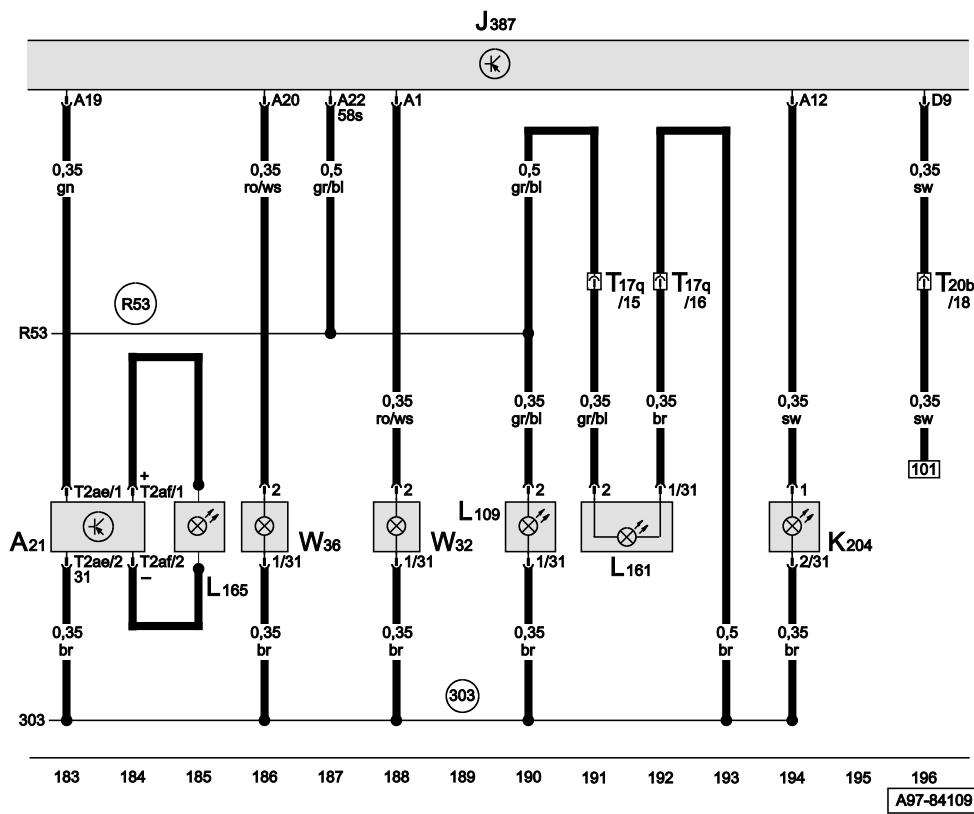 



AUDI

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

Front passenger door control unit, mirror adjustment
motors, heated exterior mirror on front passenger side, front
passenger side entry light in exterior mirror


- J387 Front passenger door control unit
- V25 Front passenger side mirror adjustment motor
- V122 Front passenger side fold-in mirror motor
- V150 Front passenger side mirror adjustment motor
- Y21 Front passenger side automatic anti-dazzle exterior mirror
- W53 Front passenger side entry light in exterior mirror
- Z5 Front passenger side heated exterior mirror
- * mirror with fold-in feature
- ** with automatic anti-dazzle exterior mirror
- *** with entry light in exterior mirror

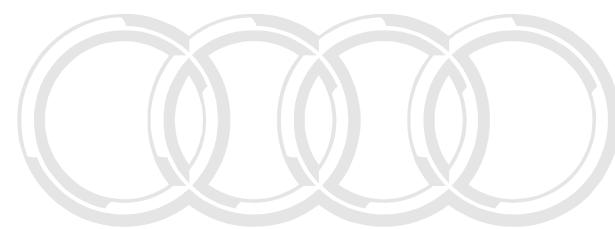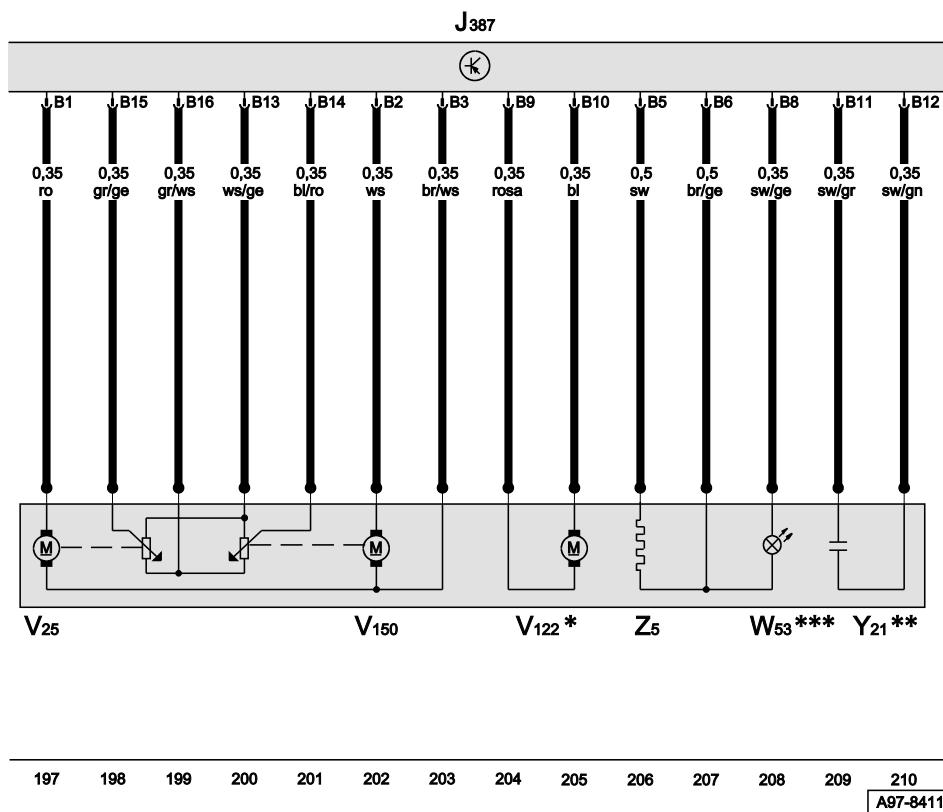

Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- ge = yellow
- or = orange
- rs = pink

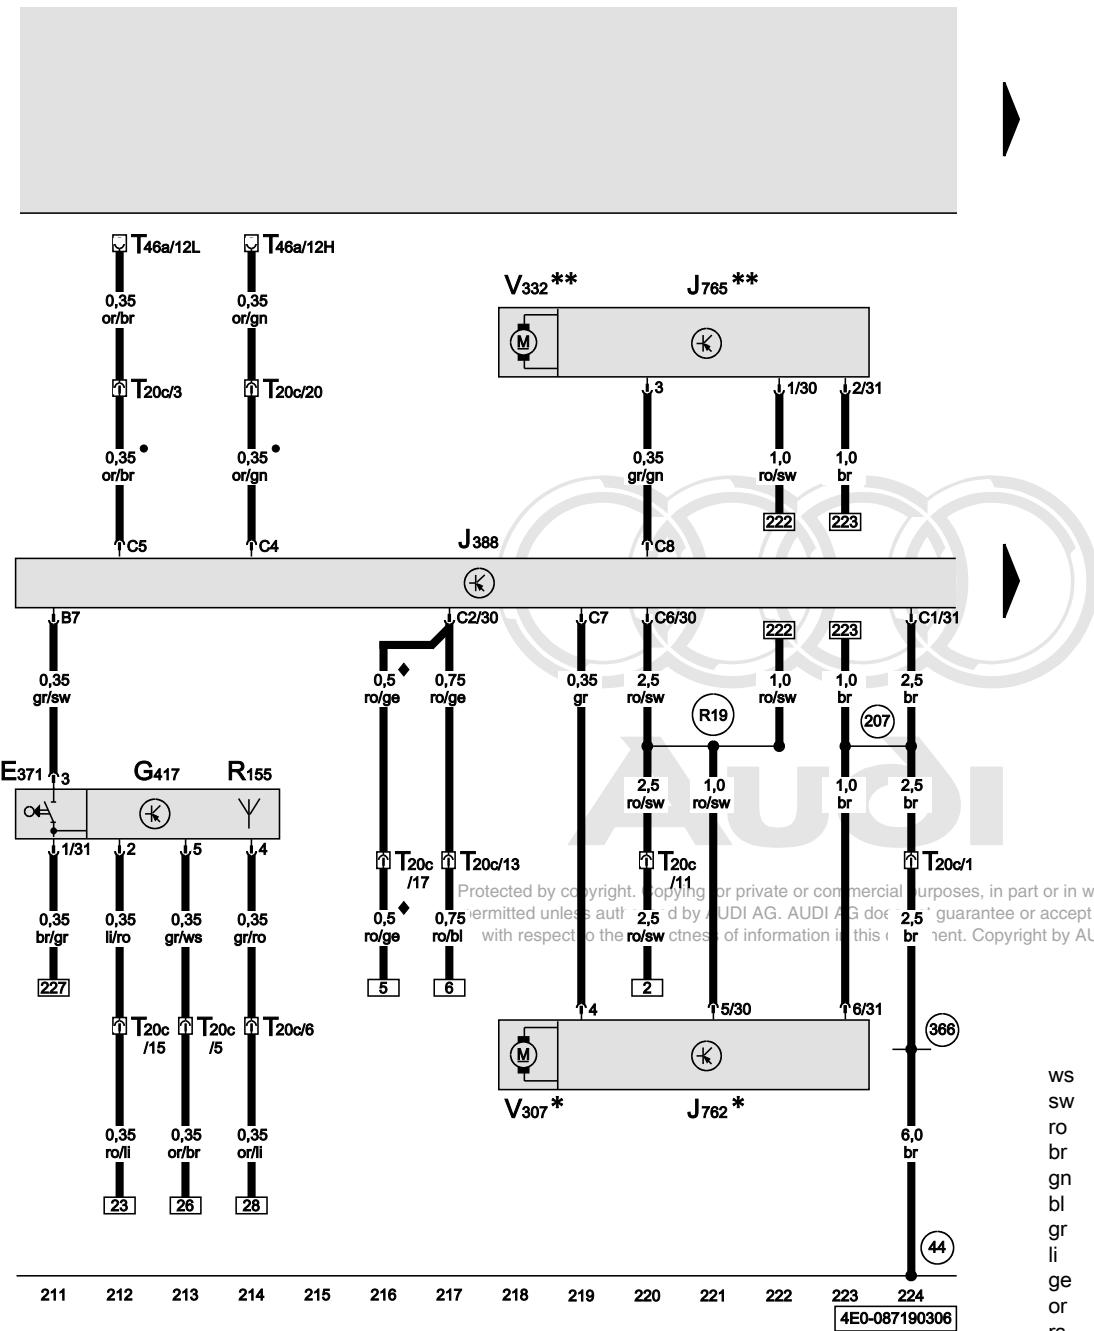

Rear left door control unit, rear left door exterior handle touch sensor, driver side rear entry and start authorisation aerial, power latching control unit for rear left door, rear left door power latching motor, rear left side roller blind control unit

- E371 Rear left door exterior handle central locking button
- G417 Rear left door exterior handle touch sensor
- J388 Rear left door control unit
- J762 Power latching control unit for rear left door
- J765 Rear left side roller blind control unit
- R155 Driver side rear entry and start authorisation aerial
- T20c 20-pin connector, black, left B-pillar
- T46a 46-pin connector, black, CAN separating connector left
- V307 Rear left door power latching motor
- V332 Rear left side roller blind motor
- (44) Earth point, lower part of left A-pillar
- (207) Earth connection, in rear left door wiring harness
- (366) Earth connection 1, in main wiring harness
- (R19) Positive connection 1 (30), in rear left door wiring harness
- CAN bus (data wire)
- * models with power latching system
- ** models with side roller blind
- ◆ is dropped, from model year 2006


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

Rear left door control unit, rear left central locking lock unit, rear left door exterior handle switch, rear left exterior door handle illumination bulb

- F10 Rear left door contact switch
- F132 Rear left central locking actuator
- F222 Rear left central locking lock unit
- F245 Rear left door central locking actuator for deadlock function
- F274 Rear left door exterior handle switch
- J388 Rear left door control unit
- L168 Rear left exterior door handle illumination bulb
- V115 Rear left door central locking motor
- V163 Rear left door central locking deadlock function motor

350 Earth connection 2, in rear left door wiring harness

- * switch earth output
- ** models without entry and start authorisation
- *** models with entry and start authorisation
- # models without power latching system
- ## only models with Keyless-Entry (4F2, 4K5)

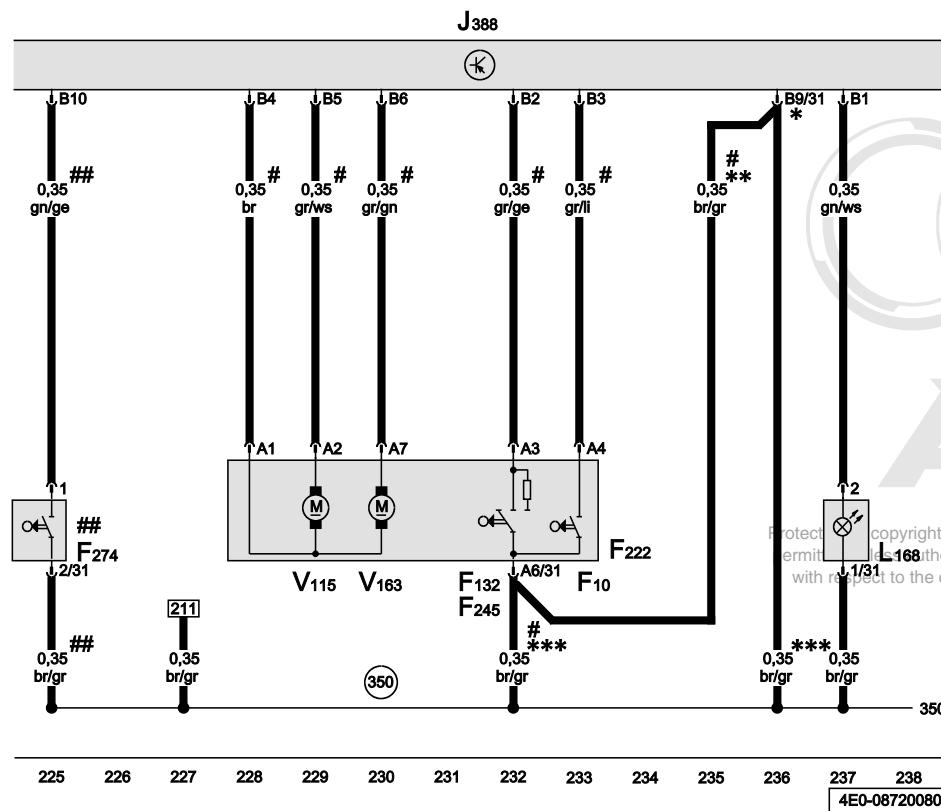

Audi


copyright. Copying for private or commercial purposes, in part or in whole, is not permitted.
Authorised by AUDI AG. white does not guarantee or accept any liability
with respect to the correctness of information in this document. Copyright by AUDI AG.

- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- ge = yellow
- or = orange
- rs = pink

4E0-087200807

Rear left door control unit, rear left central locking lock unit,
rear left door power latching system contact switch

- F10 Rear left door contact switch
 - F132 Rear left central locking actuator
 - F222 Rear left central locking lock unit
 - F245 Rear left door central locking actuator for deadlock function
 - F340 Rear left door power latching system contact switch
 - F344 Rear left childproof lock contact switch
 - J388 Rear left door control unit
 - V115 Rear left door central locking motor
 - V142 Rear left childproof lock motor
 - V163 Rear left door central locking deadlock function motor
 - 350 Earth connection 2, in rear left door wiring harness
- * models with power latching system
** models with childproof lock

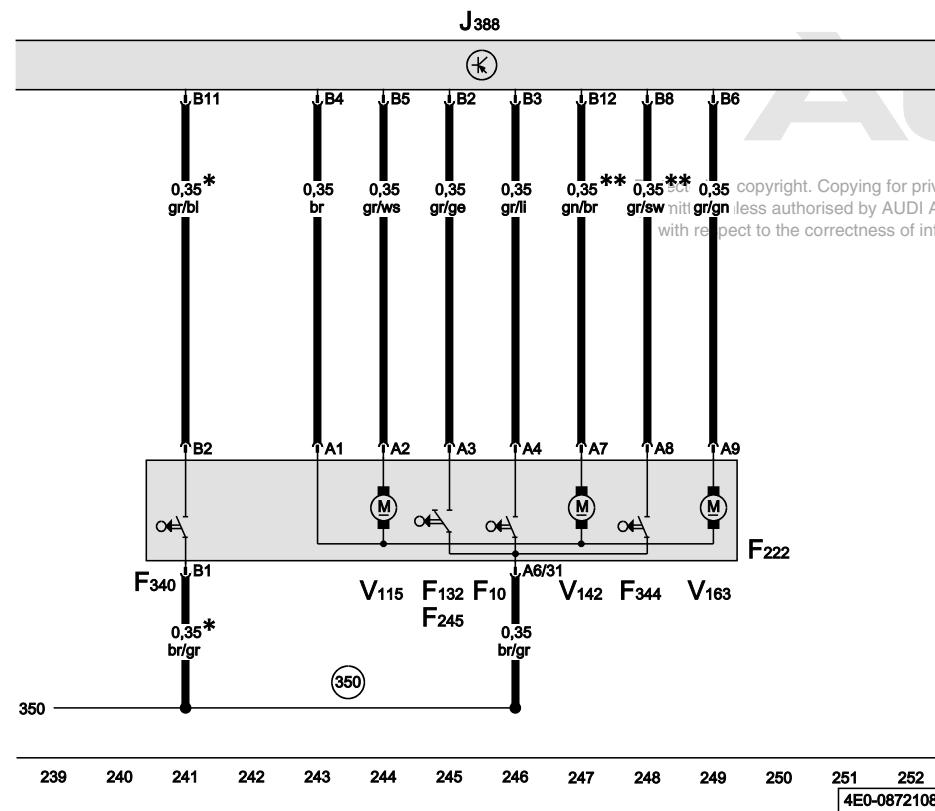


ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

Rear left door control unit, rear left entry light, rear left door warning lamp, rear left interior locking switch


- A22 Rear left door ambient lighting voltage converter
- E273 Rear left interior locking switch
- J388 Rear left door control unit
- L110 Rear left door opener illumination
- L166 Rear left door ambient lighting bulb
- T2ae 2-pin connector, on ambient lighting voltage converter
- T2af 2-pin connector, on ambient lighting voltage converter
- W33 Rear left entry light
- W37 Rear left door warning lamp

- 408 Earth connection 3, in rear left door wiring harness
- R54 Connection (58s), in rear left door wiring harness
- * switch earth output

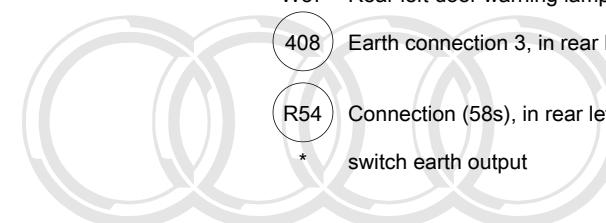

Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

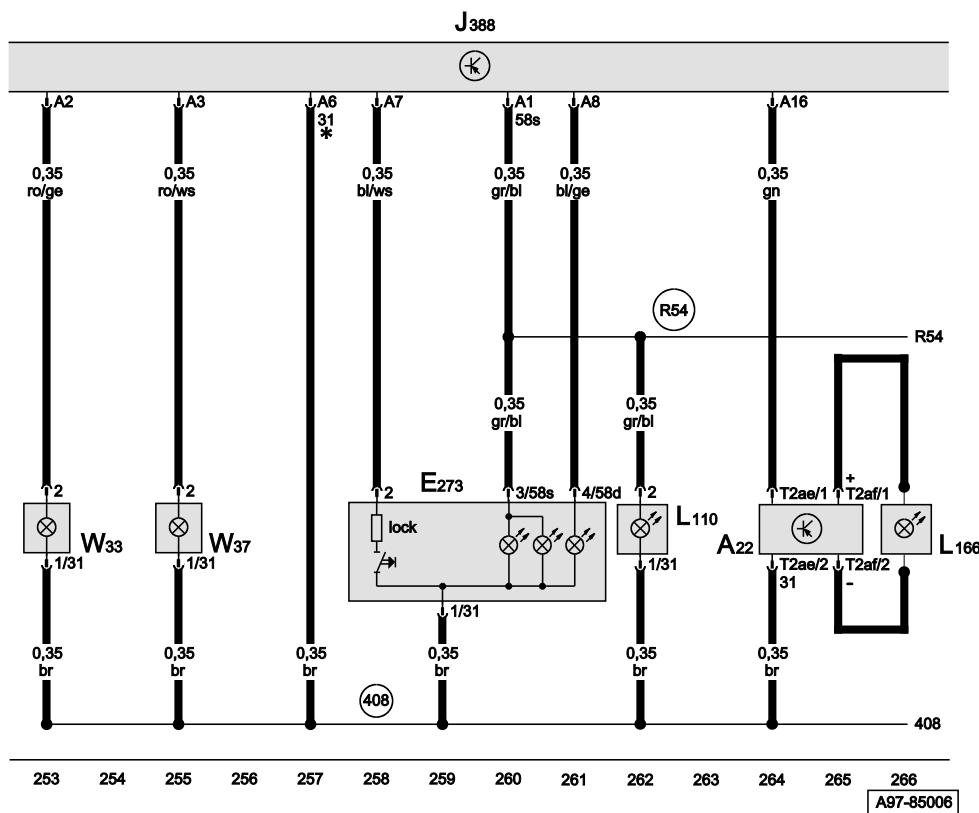

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

Rear left door control unit, rear left window regulator switch, in door, rear left ashtray illumination bulb, rear left window regulator motor, rear left door storage compartment illumination bulb


- E52 Rear left window regulator switch, in door
- J388 Rear left door control unit
- L48 Rear left ashtray illumination bulb
- L170 Rear left door storage compartment illumination bulb
- T4f 4-pin connector, in rear left door
- T4h 4-pin connector, in rear left door
- V26 Rear left window regulator motor

408 Earth connection 3, in rear left door wiring harness


R54 Connection (58s), in rear left door wiring harness

* up to model year 2005

** from model year 2006

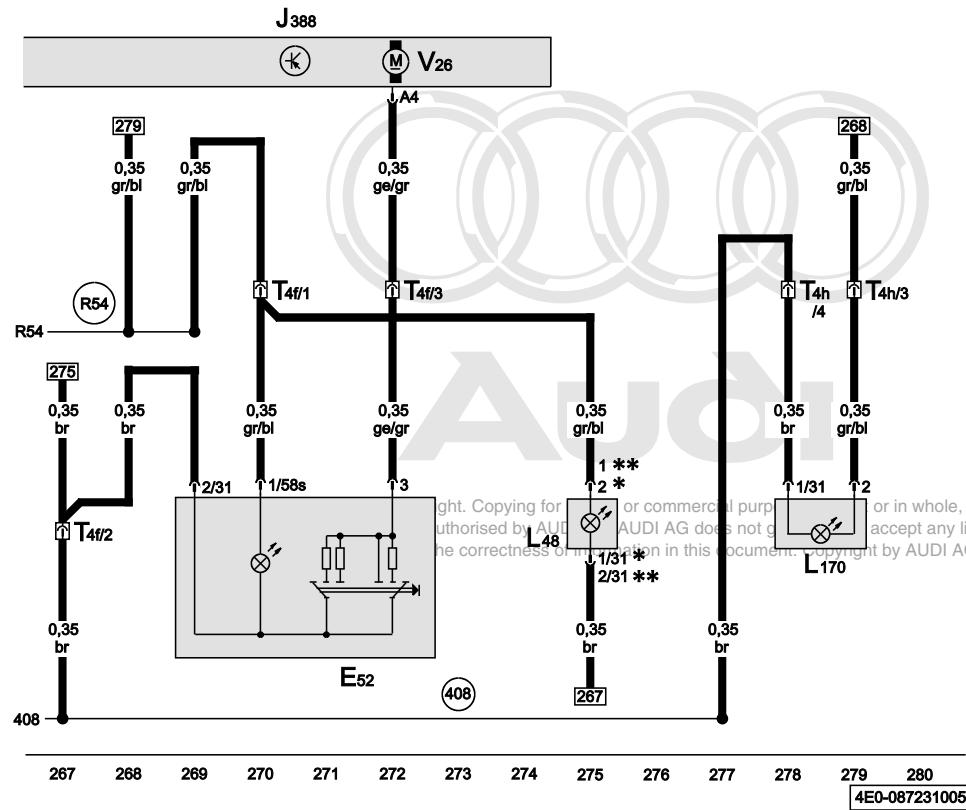


ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

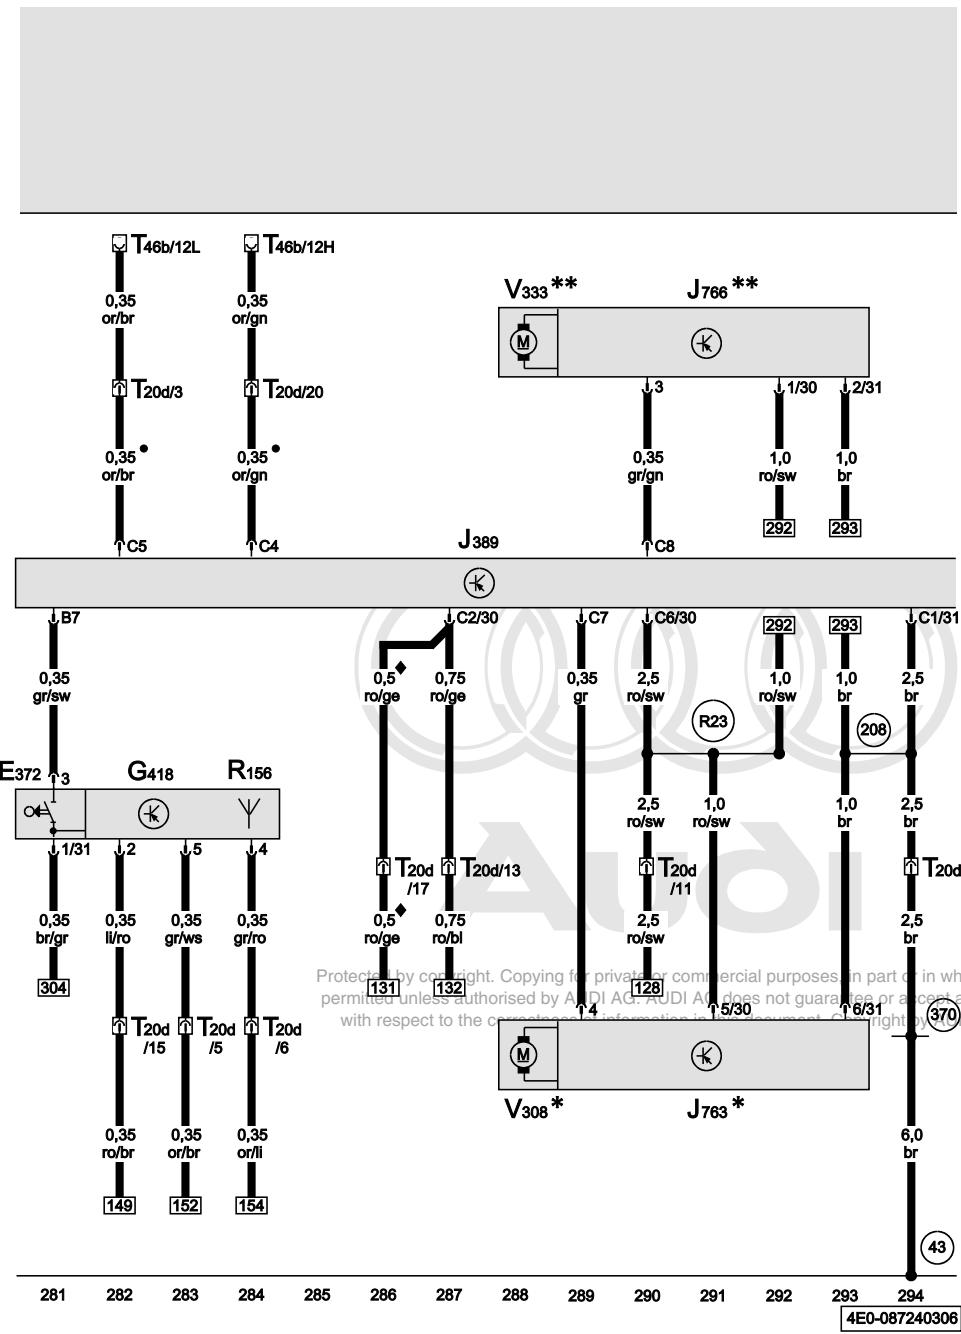

Rear right door control unit, rear right door exterior handle touch sensor, front passenger side rear entry and start authorisation aerial, power latching control unit for rear right door, rear right door power latching motor, rear right side roller blind control unit, rear right door exterior handle central locking button

E372 Rear right door exterior handle central locking button
 G418 Rear right door exterior door handle touch sensor
 J389 Rear right door control unit
 J763 Power latching control unit for rear right door
 J766 Rear right side roller blind control unit
 R156 Front passenger side rear entry and start authorisation aerial
 T20d 20-pin connector, black, right B-pillar
 T46b 46-pin connector, black, CAN separating connector right
 V308 Rear right power latching motor
 V333 Rear right side roller blind motor

 - (43) Earth point, lower part of right A-pillar
- (208) Earth connection, in rear right door wiring harness
- (370) Earth connection 5, in main wiring harness
- (R23) Positive connection 1 (30), in rear right door wiring harness
- CAN bus (data wire)
- * models with power latching system
- ** models with side roller blind
- ◆ is dropped, from model year 2006




Rear right door control unit, rear right door exterior handle central locking button, rear right central locking lock unit

F11 Rear right door contact switch
 F134 Rear right central locking actuator
 F223 Rear right central locking lock unit
 F246 Rear right door central locking actuator for deadlock function
 F275 Rear right door exterior handle switch
 J389 Rear right door control unit
 L169 Rear right exterior door handle illumination bulb
 V97 Rear right door central locking motor
 V164 Rear right door central locking deadlock function motor

351 Earth connection 2, in rear right door wiring harness

* switch earth output
 ** models without entry and start authorisation
 *** models with entry and start authorisation
 # models without power latching system
 ## only models with Keyless-Entry (4F2, 4K5)

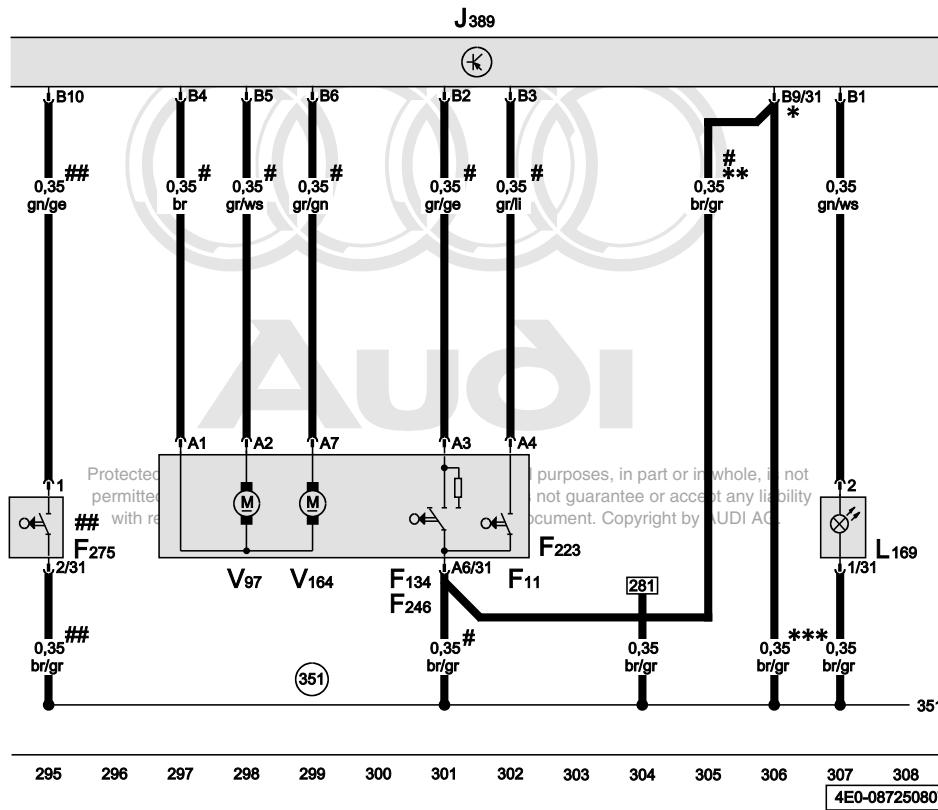

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

4E0-087250807


Rear right door control unit, rear right central locking lock unit

- F11 Rear right door contact switch
- F134 Rear right central locking actuator
- F223 Rear right central locking lock unit
- F246 Rear right door central locking actuator for deadlock function
- F341 Rear right door power latching system contact switch
- F345 Rear right childproof lock contact switch
- J389 Rear right door control unit
- V97 Rear right door central locking motor
- V143 Rear right childproof lock motor
- V164 Rear right door central locking deadlock function motor

351 Earth connection 2, in rear right door wiring harness

* models with power latching system

** models with childproof lock

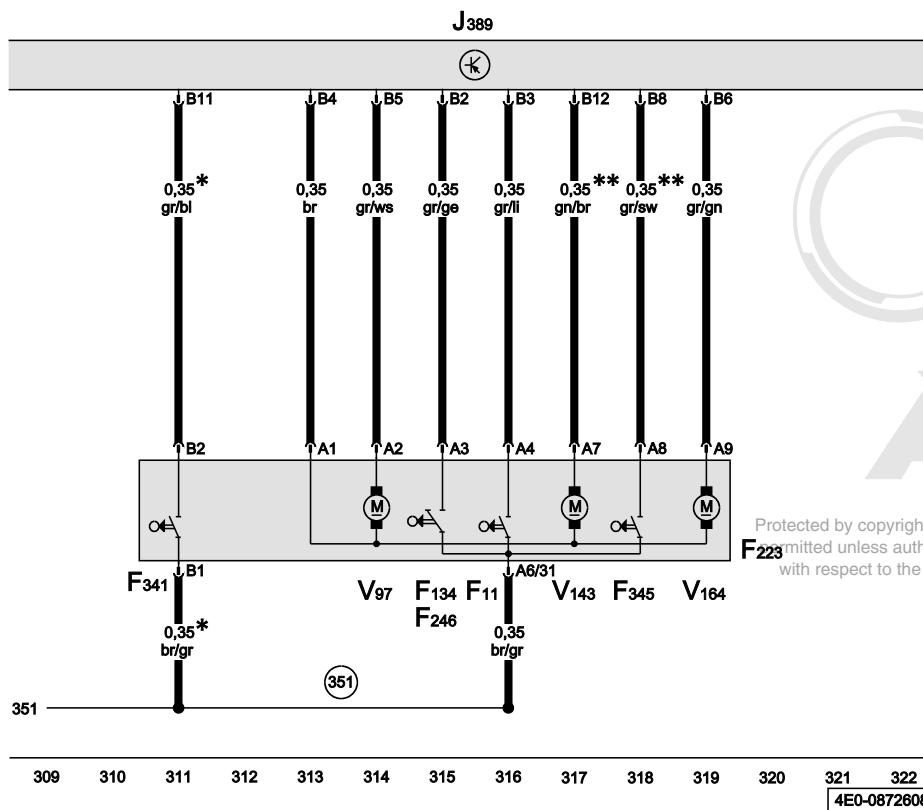

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white

sw = black

ro = red

br = brown

gn = green

bl = blue


 
gr = grey

li = purple


ge = yellow

or = orange

rs = pink

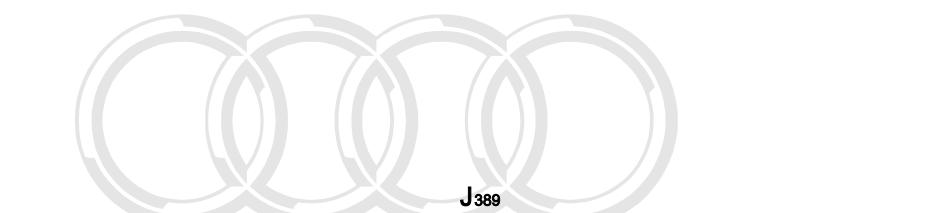

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

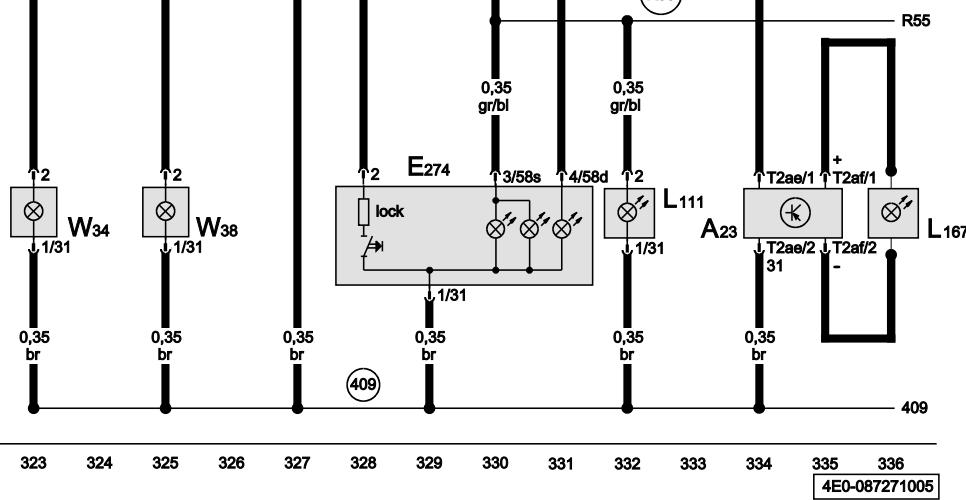

Rear right door control unit, rear right door control unit, rear right door warning lamp, rear right interior locking switch, rear right door opener illumination bulb, rear right door ambient lighting bulb


 
- A23 Rear right door ambient lighting voltage converter
E274 Rear right interior locking switch
J389 Rear right door control unit
L111 Rear right door opener illumination bulb
L167 Rear right door ambient lighting bulb
T2ae 2-pin connector, on ambient lighting voltage converter
T2af 2-pin connector, on ambient lighting voltage converter
W34 Rear right entry light
W38 Rear right door warning lamp

409 Earth connection 3, in rear right door wiring harness

R55 Connection (58s), in rear right door wiring harness

* switch earth output

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

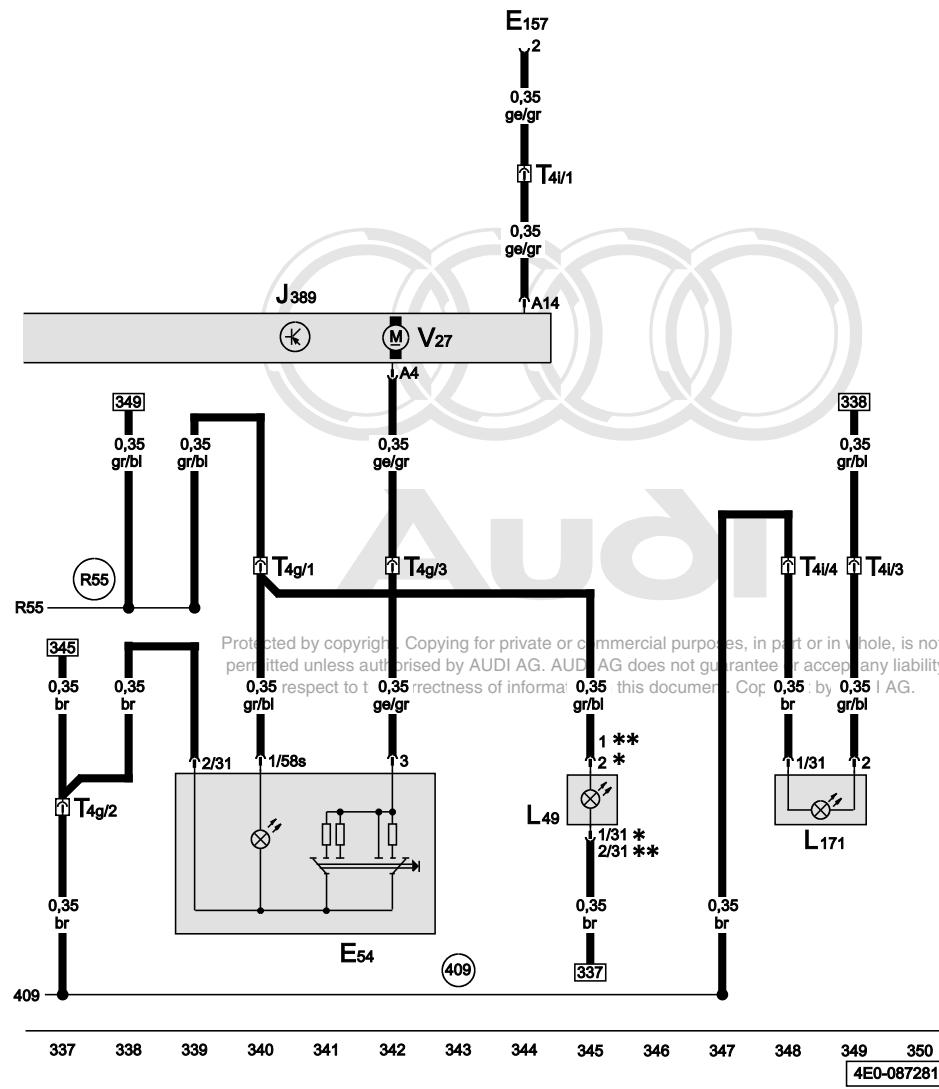

Rear right door control unit, rear right window regulator motor, rear right window regulator switch, in door, rear right ashtray illumination bulb, rear right door storage compartment illumination bulb

- E54 Rear right window regulator switch, in door
- E157 Front passenger seat adjustment switch
- J389 Rear right door control unit
- L49 Rear right ashtray illumination bulb
- L171 Rear right door storage compartment illumination bulb
- T4g 4-pin connector, in rear right door
- T4i 4-pin connector, in rear right door
- V27 Rear right window regulator motor



409 Earth connection 3, in rear right door wiring harness

R55 Connection (58s), in rear right door wiring harness

* up to model year 2005

** from model year 2006


ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

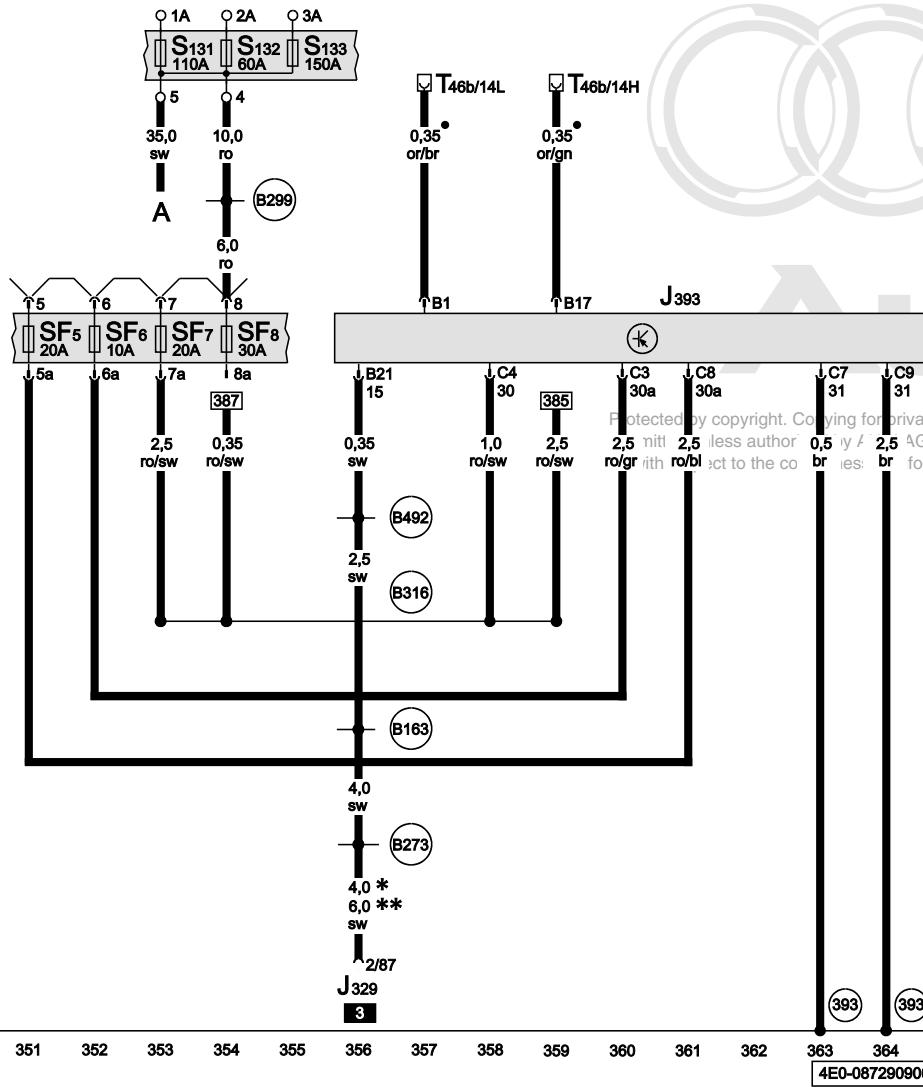 

Convenience system central control unit, fuses

- A Battery
- J329 Terminal 15 voltage supply relay
- J393 Convenience system central control unit
- S131 Fuse 1, 110 A, in luggage compartment, rear right
- S132 Fuse 2, 60 A, in luggage compartment, rear right
- S133 Fuse 3, 150 A, in luggage compartment, rear right
- SF5 Fuse 5 on fuse holder
- SF6 Fuse 6 on fuse holder
- SF7 Fuse 7 on fuse holder
- SF8 Fuse 8 on fuse holder
- T46b 46-pin connector, black, CAN separating connector right
- 393 Earth connection 28, in main wiring harness
- B163 Positive connection 1 (15), in interior wiring harness
- B273 Positive connection (15), in main wiring harness
- B299 Positive connection 3 (30), in main wiring harness
- B316 Positive connection 2 (30a), in main wiring harness
- B492 Positive connection 3 (15), in interior wiring harness
- * CAN bus (data wire)
- * up to April 2006
- ** from May 2006

 
ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink



Audi

J393



Protected by copyright. Private or commercial purpose. Part or in whole is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

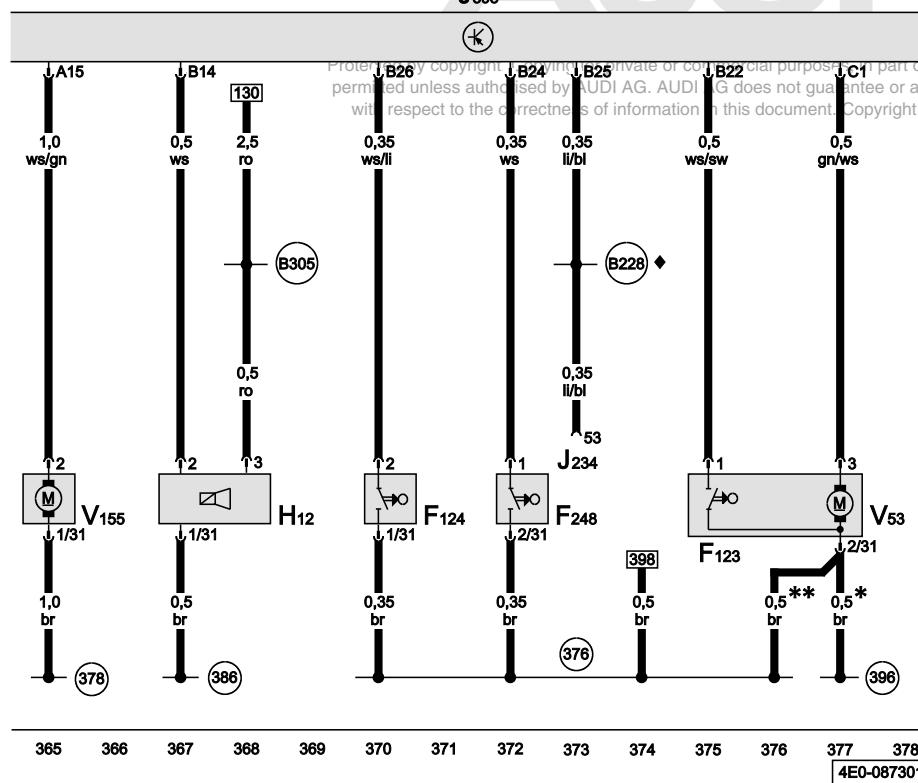

Convenience system central control unit, rear lid, tank filler flap locking motor, switch in lock cylinder for rear lid, anti-theft alarm system, central locking system, release button for rear lid lock cylinder, rear lid central locking motor, alarm horn

- F123 Rear lid contact switch for anti-theft alarm system
F124 Switch in lock cylinder for rear lid, anti-theft alarm system, central locking system
F248 Release button for rear lid lock cylinder
H12 Alarm horn
J234 Airbag control unit
J393 Convenience system central control unit
V53 Rear lid central locking motor
V155 Tank filler flap locking motor
376 Earth connection 11, in main wiring harness
378 Earth connection 13, in main wiring harness
386 Earth connection 21, in main wiring harness
396 Earth connection 31, in main wiring harness
B228 Connection (crash signal), in interior wiring harness
B305 Positive connection 9 (30), in main wiring harness
◆ is dropped, from model year 2006
* up to October 2005
** from November 2005

 ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

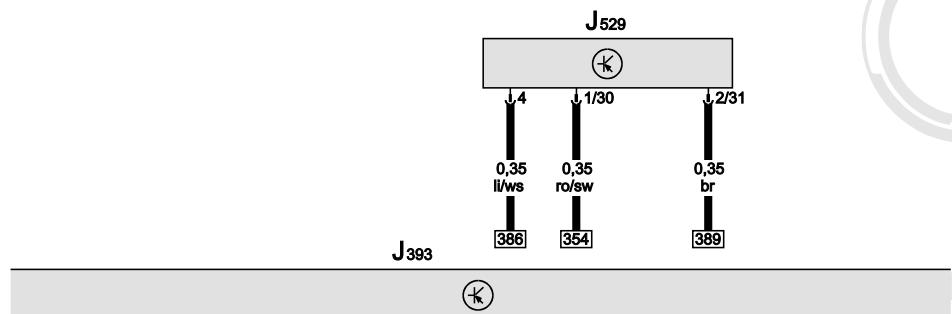


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Convenience system central control unit, rear lid electric release motor, rear lid control unit, power latching system limit switch, luggage compartment locked, anti-theft and tilt system control unit, power latching control unit

- E406 Button to close rear lid in luggage compartment
- F332 Power latching system limit switch, luggage compartment unlocked
- F333 Power latching system limit switch, luggage compartment locked
- J393 Convenience system central control unit
- J529 Anti-theft and tilt system control unit
- J605 Rear lid control unit
- J657 Power latching control unit
- T5c 5-pin connector, in luggage compartment, power latching rear lid
- V120 Rear lid lock motor
- V254 Rear lid electric release motor
- 376 Earth connection 11, in main wiring harness
- 393 Earth connection 28, in main wiring harness
- 394 Earth connection 29, in main wiring harness
- B476 Connection 12 in main wiring harness
- B487 Connection 23 in main wiring harness

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

A97-84147

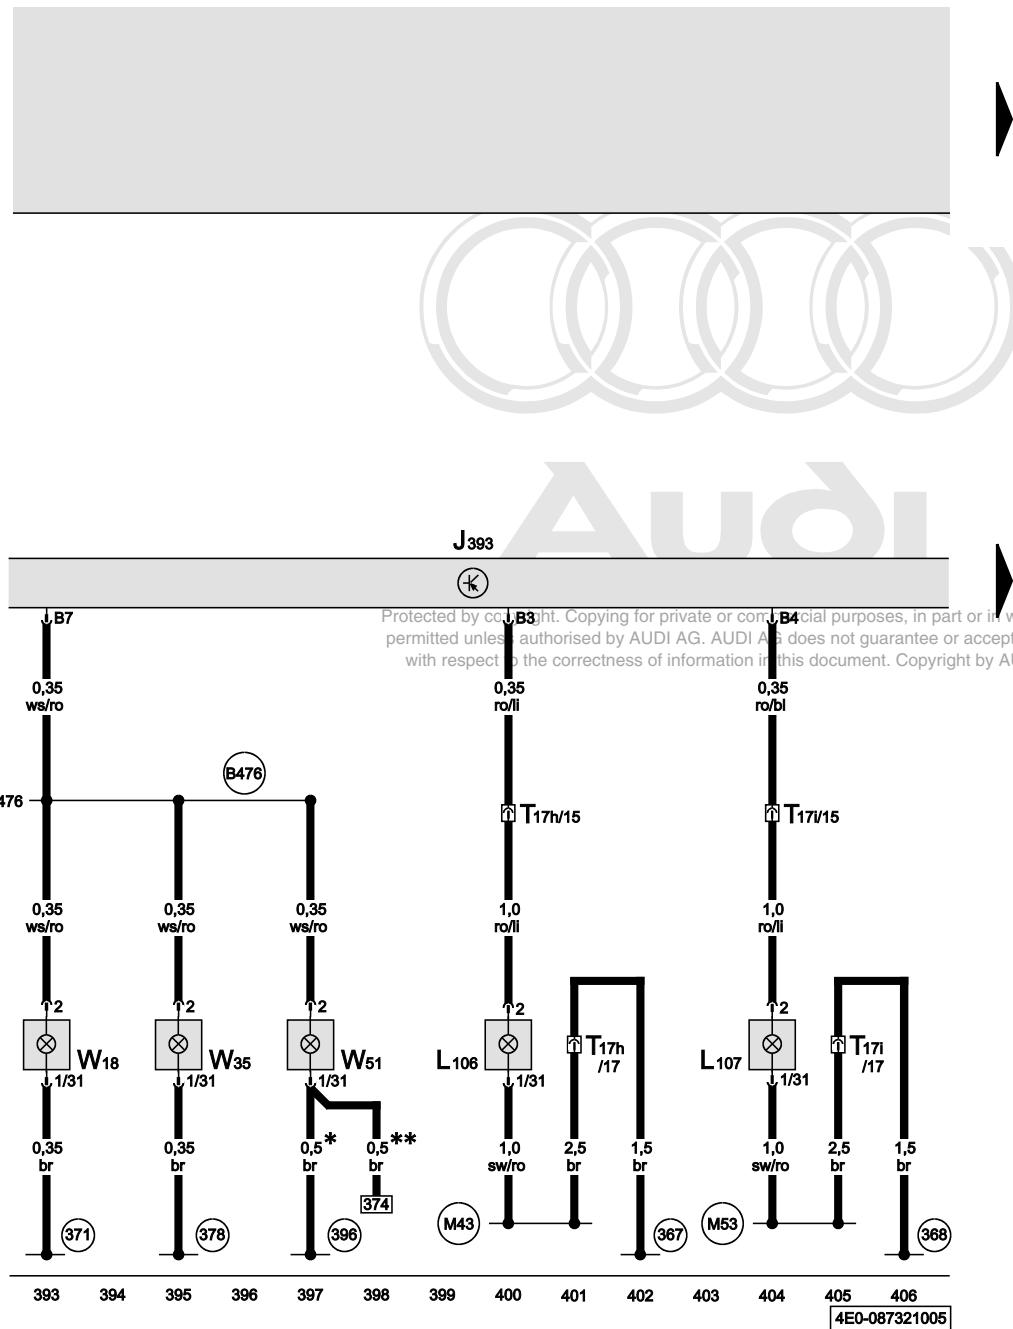

Convenience system central control unit, luggage compartment light, rear lid light, rear left and right footwell illumination bulb

J393 Convenience system central control unit
 L106 Rear left footwell illumination bulb
 L107 Rear right footwell illumination bulb
 T17h 17-pin connector, grey, under driver seat
 T17i 17-pin connector, grey, under front passenger seat
 W18 Luggage compartment light on left
 W35 Right luggage compartment light
 W51 Rear lid light

367 Earth connection 2, in main wiring harness

368 Earth connection 3, in main wiring harness

371 Earth connection 6, in main wiring harness

378 Earth connection 13, in main wiring harness

396 Earth connection 31, in main wiring harness

B476 Connection 12 in main wiring harness


M43 Connection 3, in driver seat wiring harness

M53 Connection 3, in front passenger seat wiring harness

* up to October 2005

** from November 2005


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

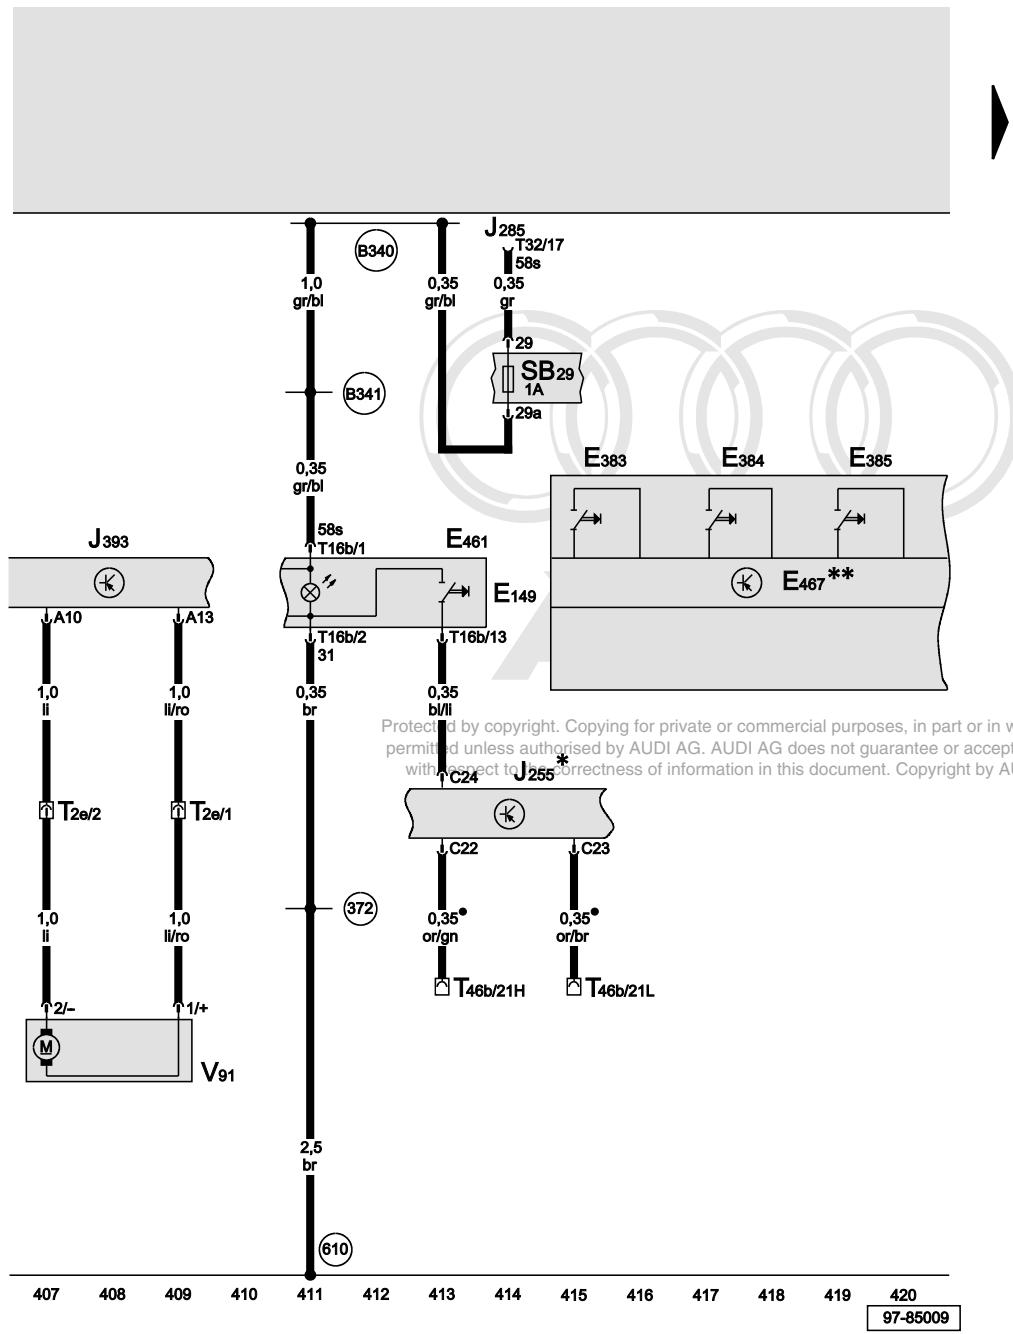

Rear switch for rear roller blind, rear roller blind motor

- E149 Rear roller blind switch
- E383 Rear left roller blind button
- E384 Rear right roller blind button
- E385 Rear switch for rear roller blind
- E461 Operating unit in front of centre console
- E467 Rear operating unit for roof module
- J255 Climatronic control unit
- J285 Control unit in dash panel insert
- J393 Convenience system central control unit
- SB29 Fuse 29 on fuse holder
- T2e 2-pin connector, black, rear roller blind right of D-pillar
- T16b 16-pin connector, black, on operating unit in front of centre console
- T32 32-pin connector, blue, on dash panel insert
- T46b 46-pin connector, black, CAN separating connector right
- V91 Rear roller blind motor
- 372 Earth connection 7, in main wiring harness
- 610 Earth point (audio), under centre console, front
- B340 Connection 1 (58s), in main wiring harness
- B341 Connection 2 (58s), in main wiring harness
- CAN bus (data wire)
- * Front information display and operating unit
- ** See basic equipment Current Flow Diagram


 
ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink


Onboard supply control unit, bonnet contact switch, left footwell light, right footwell light

F266 Bonnet contact switch
 F329 Bonnet contact switch 2
 J519 Onboard supply control unit
 T8b 8-pin connector, black, behind right dash panel
 W9 Left footwell light
 W10 Right footwell light

- (81) Earth connection 1, in dash panel wiring harness (glove box)
- (386) Earth connection 21, in main wiring harness
- (388) Earth connection 23, in main wiring harness
- (B465) Connection 1 in main wiring harness
- (B484) Connection 20 in main wiring harness

* without light equipment
 ** with light equipment
 # up to September 2004
 ## from October 2004

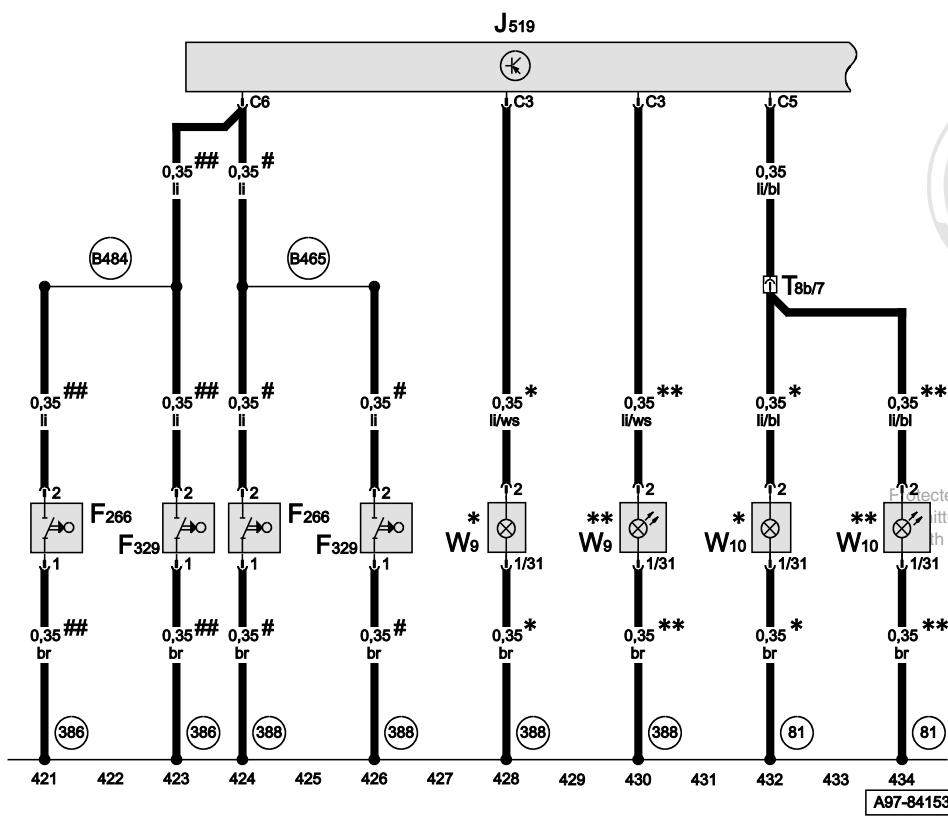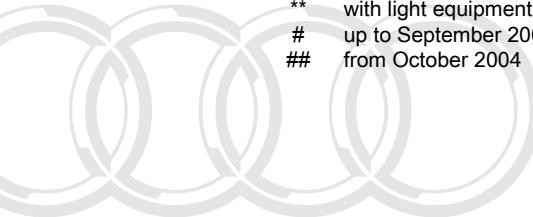

Audi

Selected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

A97-84153

Airbag

from model year 2005

Fuse holder, left dash panel

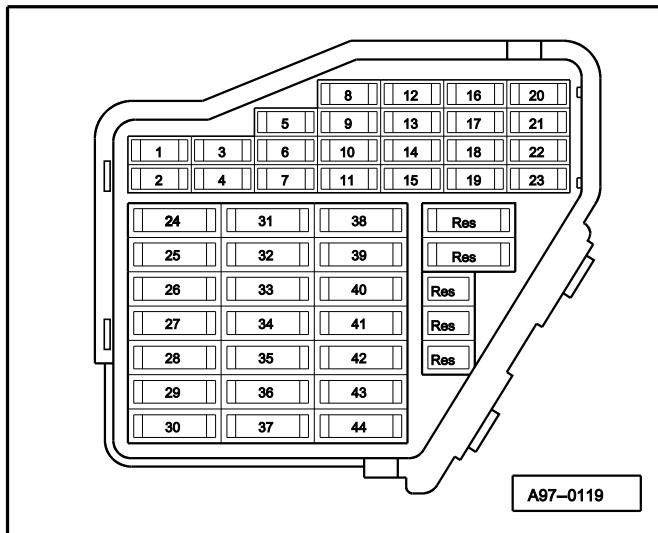

Fuse colours

30 A - green

25 A - white

20 A - yellow

15 A - blue

10 A - red

7,5 A - brown

5 A - beige


1 A - black

SB - Fuses in fuse holder left dash panel

SC - Fuses in fuse holder right dash panel

SD - Fuses in fuse holder left in luggage compartment

SF - Fuses in fuse holder right in luggage compartment

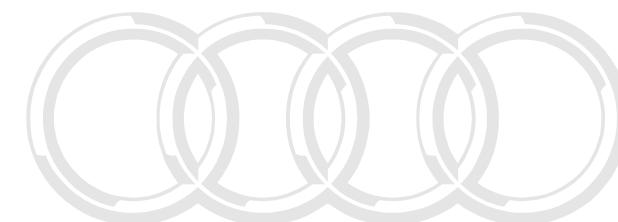


Audi


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Fuse holder right dash panel

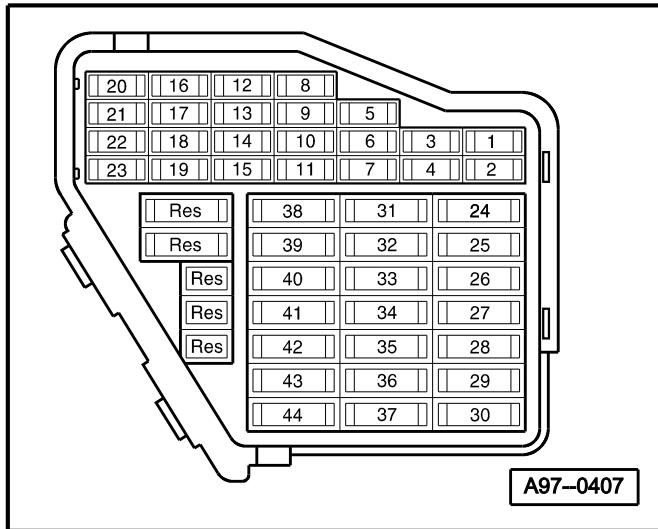


Relay and fuse carrie behind left dash panel

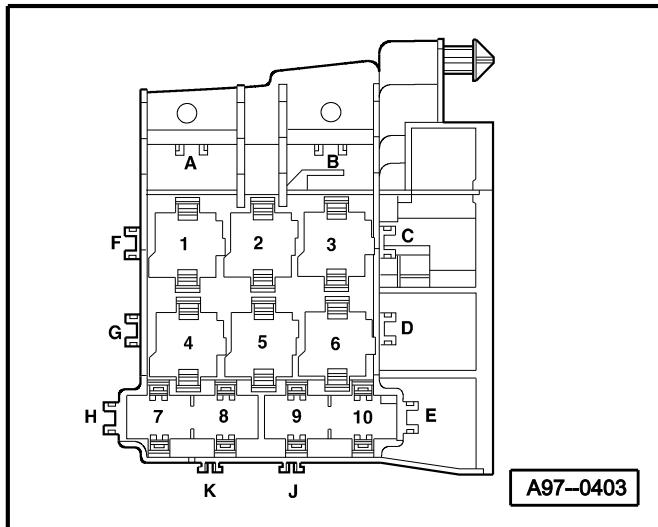


Relay positions

3 - Terminal 15 voltage supply relay (J329)

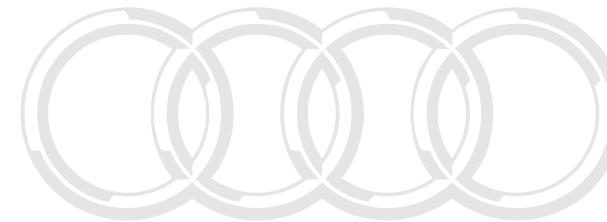

Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

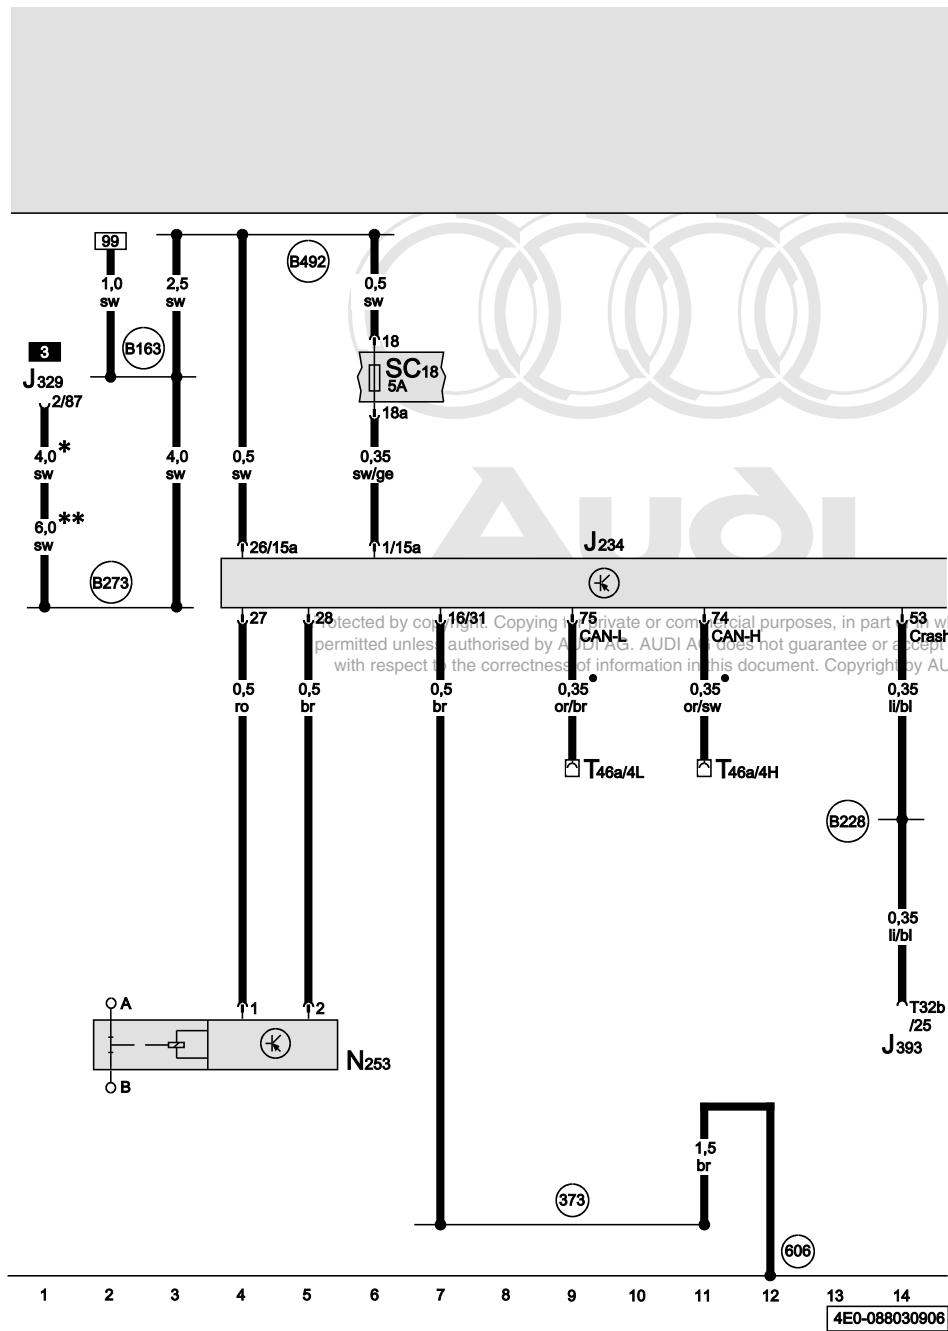

Airbag control unit, battery isolation igniter

- J234 Airbag control unit
- J329 Terminal 15 voltage supply relay
- J393 Convenience system central control unit
- N253 Battery isolation igniter
- SC18 Fuse 18 on fuse holder
- T32b 32-pin connector, connector B, on convenience system central control unit
- T46a 46-pin connector, black, CAN separating connector left
- 373 Earth connection 8, in main wiring harness
- 606 Earth point, under the centre console near gear stick
- B163 Positive connection 1 (15), in interior wiring harness
- B228 Connection (crash signal), in interior wiring harness
- B273 Positive connection (15), in main wiring harness
- B492 Positive connection 3 (15), in interior wiring harness

- CAN bus (data wire)
- * up to April 2006
- ** from May 2006

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

4E0-088030906

Airbag control unit, driver side airbag igniter, front passenger side airbag igniter 1

F138 Airbag coil connector
 J234 Airbag control unit
 N95 Driver side airbag igniter
 N131 Front passenger side airbag igniter 1
 N132 Front passenger side airbag igniter 2
 N250 Driver side airbag igniter 2

T4b 4-pin connector, behind steering column switch trim (airbag)
 T4c 4-pin connector, behind steering column switch trim (coil connector)

T5b 5-pin connector, yellow, behind the dash panel, right
 T12a 12-pin connector, yellow, on steering wheel

374 Earth connection 9, in main wiring harness

606 Earth point, under the centre console near gear stick

<fo:extэр short circuit bridge becomes effective when connector is
 nal- unplugged

graphic

src="./

PDOC/

samba/

tools/

png-

convert/

out/sl/p

ft_icons/

kurzbr_r.

png"

content-

width="2


0pt"

scaling="

uniform"/




>

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

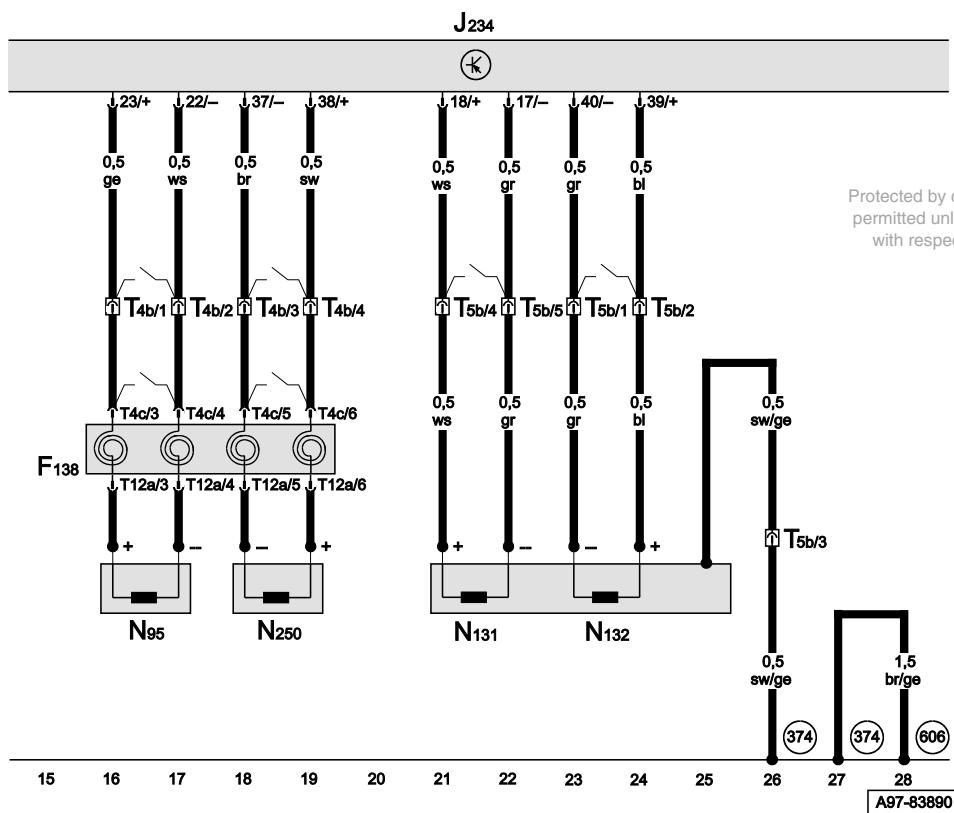

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

 A97-83890

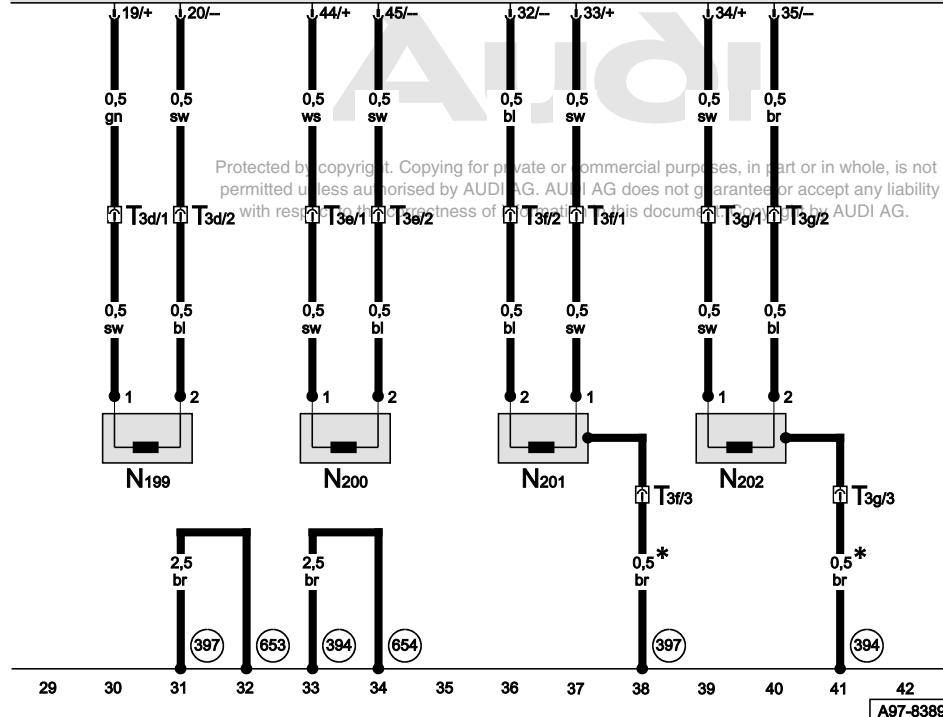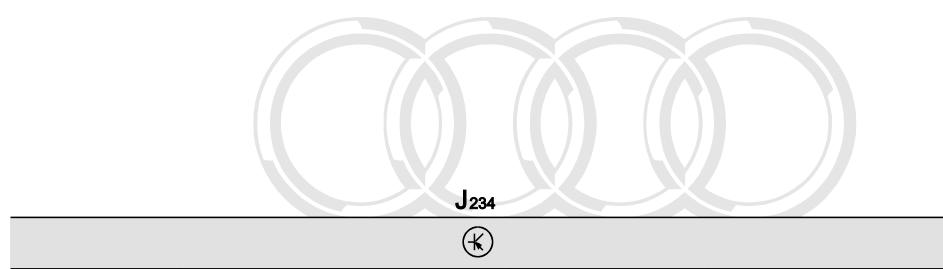**Airbag control unit, side airbag**

- J234 Airbag control unit
- N199 Side airbag igniter on driver side
- N200 Side airbag igniter on front passenger side
- N201 Rear side airbag igniter on driver side
- N202 Rear side airbag igniter on front passenger side
- T3d 3-pin connector, yellow, under driver seat
- T3e 3-pin connector, yellow, under front passenger seat
- T3f 3-pin connector, orange, under left of rear seat
- T3g 3-pin connector, orange, under right of rear seat

394 Earth connection 29, in main wiring harness

397 Earth connection 32, in main wiring harness

653 Earth point, left D-pillar

654 Earth point, right D-pillar

* models without seat heating and without rear seat adjustment

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink


Airbag control unit, curtain airbag, front belt tensioner

J234 Airbag control unit
N153 Driver seat belt tensioner igniter 1
N154 Front passenger side seat belt tensioner igniter 2
N251 Driver side curtain airbag igniter

N252 Front passenger side curtain airbag igniter
T3l 3-pin connector, yellow, left D-pillar
T3m 3-pin connector, yellow, right D-pillar

374 Earth connection 9, in main wiring harness

379 Earth connection 14, in main wiring harness

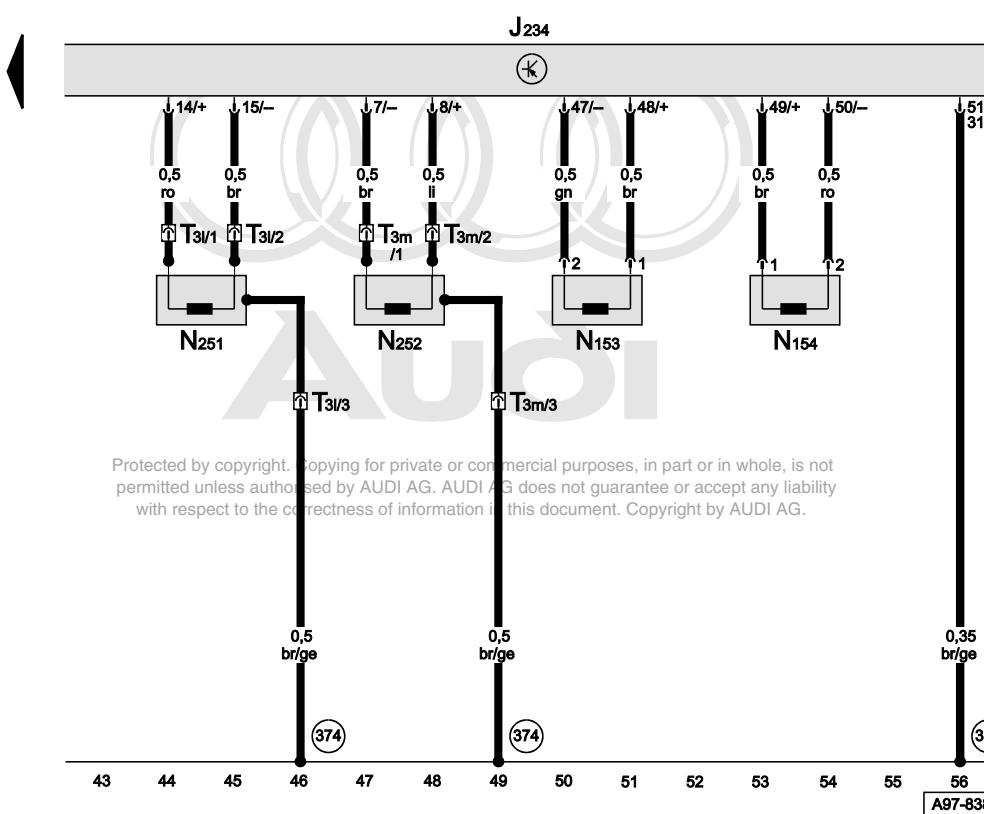

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink


A97-83896

Airbag control unit, rear belt tensioner, belt switch

E24 Driver side belt switch
 E25 Front passenger side belt switch
 J234 Airbag control unit
 N196 Rear belt tensioner igniter on driver side
 N197 Rear belt tensioner igniter on front passenger side
 N198 Rear centre belt tensioner igniter
 T17h 17-pin connector, grey, under driver seat
 T17i 17-pin connector, grey, under front passenger seat



379 Earth connection 14, in main wiring harness

* models with seat belt warning

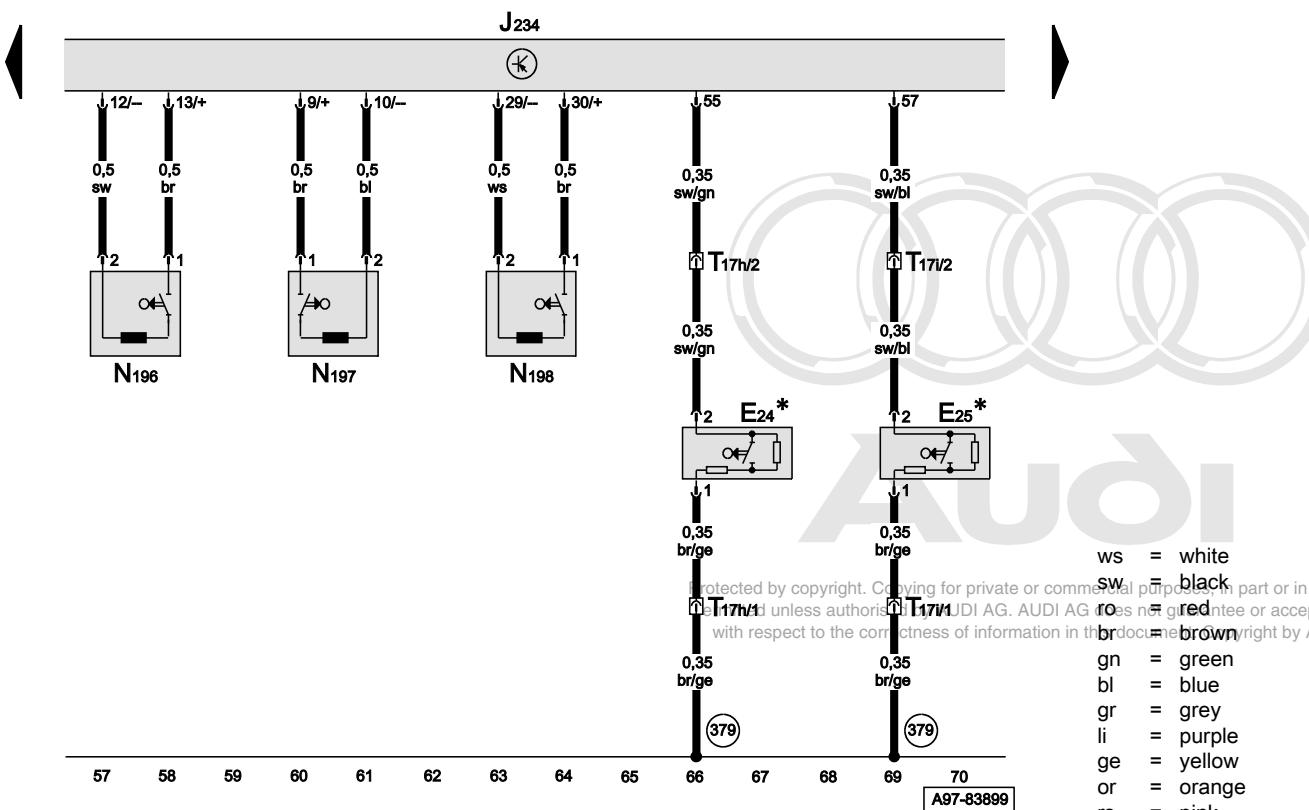

Airbag control unit, crash sensor for side airbag, crash sensor for front airbag

 G179 Side airbag crash sensor on driver side
 G180 Side airbag crash sensor on front passenger side
 G283 Front airbag crash sensor for driver side
 J234 Airbag control unit
 T20a 20-pin connector, black, left A-pillar
 T20b 20-pin connector, black, right A-pillar

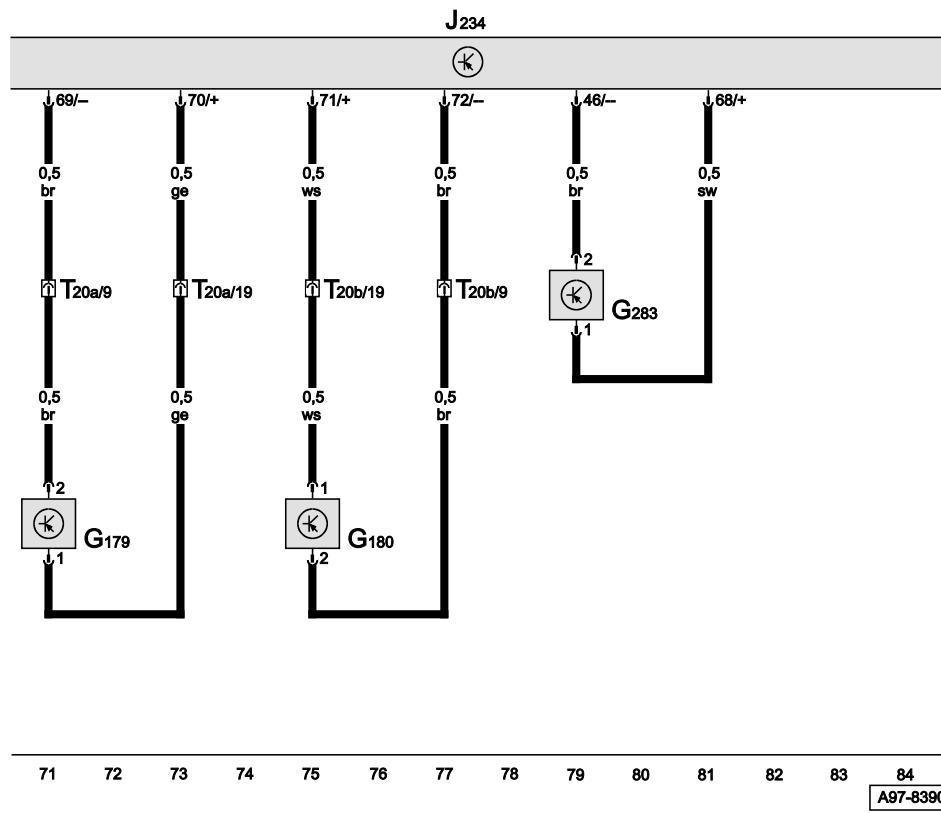



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

Airbag control unit, rear side airbag crash sensor, crash sensor for front airbag



G256 Rear side airbag crash sensor on driver side
 G257 Rear side airbag crash sensor on front passenger side
 G284 Front airbag crash sensor for front passenger side
 J234 Airbag control unit

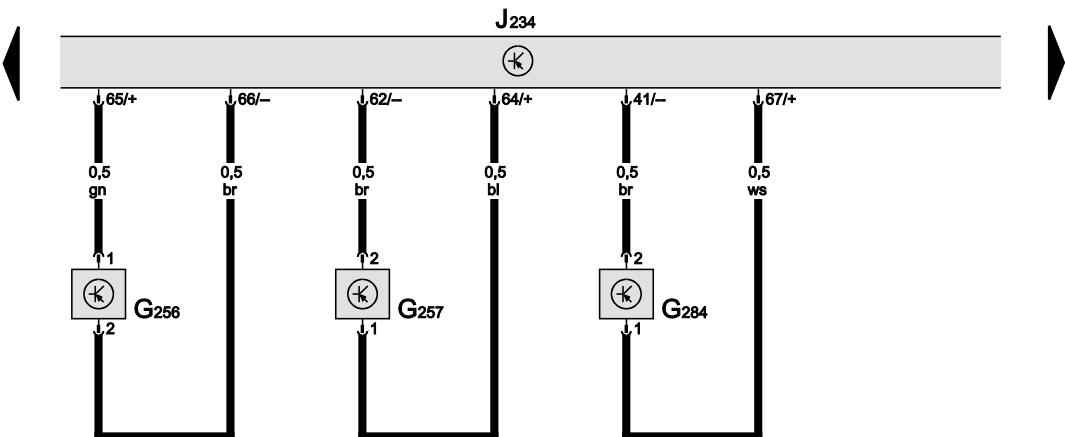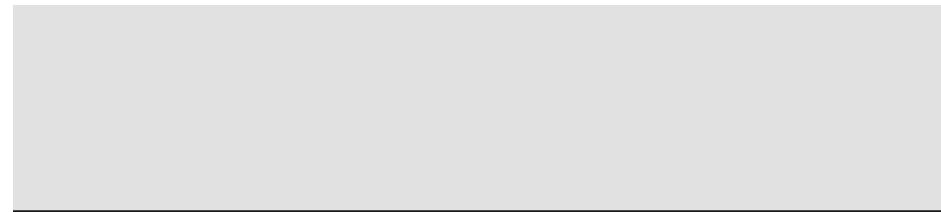

Audi

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

 Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

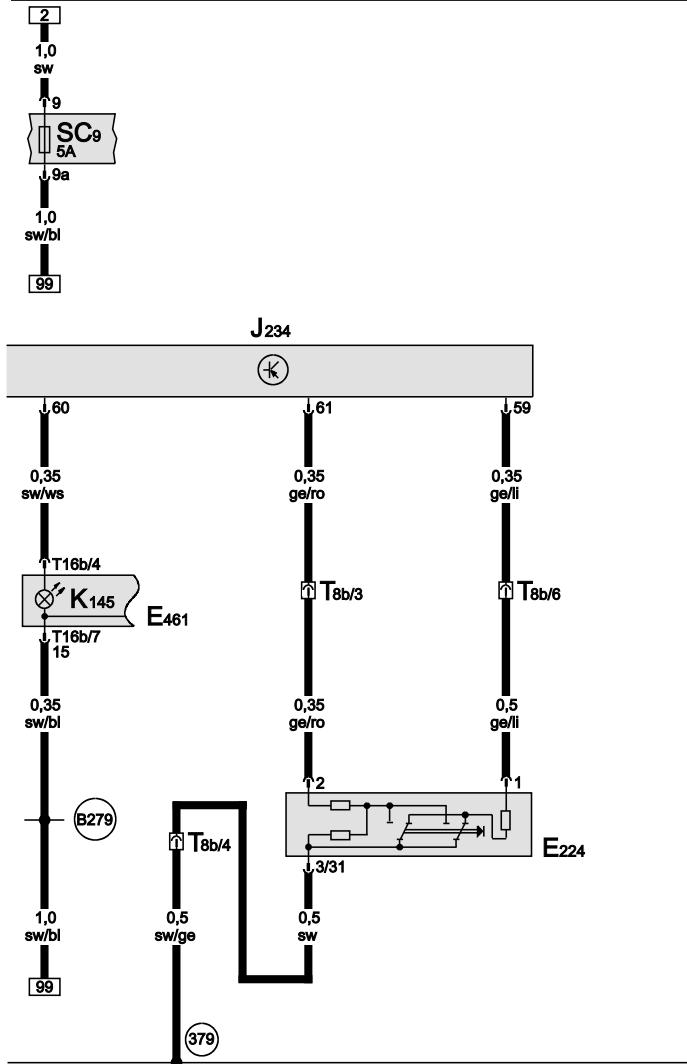

A97-83905

Airbag control unit, key operated switch to deactivate front passenger side airbag, front passenger side airbag deactivated warning lamp

- E224 Key operated switch to deactivate front passenger side airbag
- E461 Operating unit in front of centre console
- J234 Airbag control unit
- K145 Front passenger side airbag deactivated warning lamp
- SC9 Fuse 9 on fuse holder
- T8b 8-pin connector, black, behind right dash panel
- T16b 16-pin connector, black, on operating unit in front of centre console
- (379) Earth connection 14, in main wiring harness
- (B279) Positive connection 3 (15a), in main wiring harness


Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

Anti-lock brake system 5.7 (ABS) with traction control system (TCS) and electronic stabilisation program (ESP)
from model year 2005

Fuse holder, left dash panel

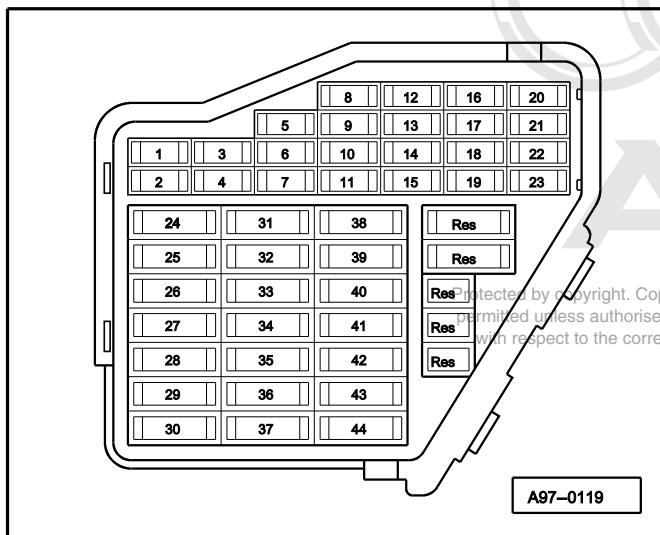

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Fuse colours

30 A - green

25 A - white

20 A - yellow

15 A - blue

10 A - red

7,5 A - brown

5 A - beige


1 A - black

SB - Fuses in fuse holder left dash panel

SC - Fuses in fuse holder right dash panel

SD - Fuses in fuse holder left in luggage compartment


SF - Fuses in fuse holder right in luggage compartment

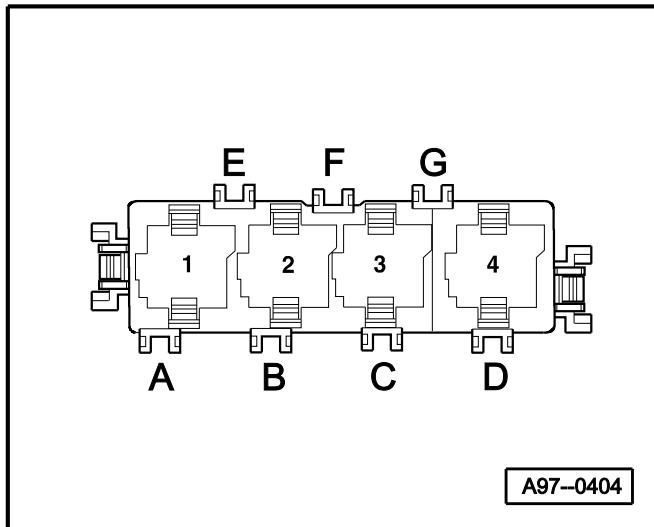Relay carrier electronics box in plenum chamber

Relay positions

- 2 - Terminal 30 voltage supply relay - J317 (317), diesel engines
- 2 - Motronic current supply relay (J271), petrol engines

Relay and fuse carrie behind left dash panel

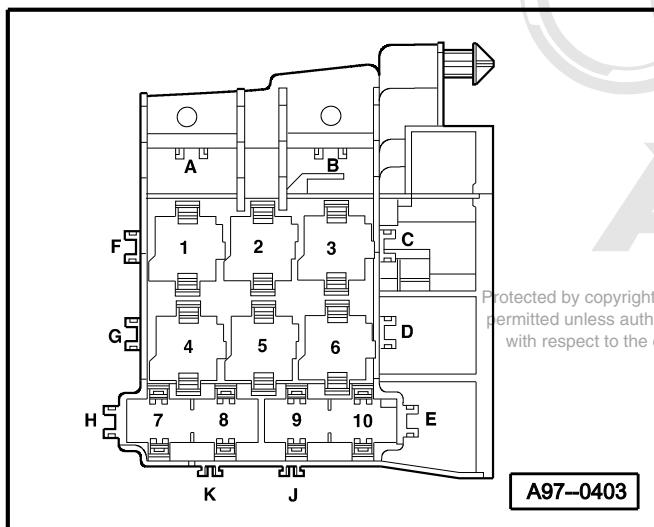

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


Relay positions

3 - Terminal 15 voltage supply relay (J329)

A - ABS control unit fuse 1 (S123)




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

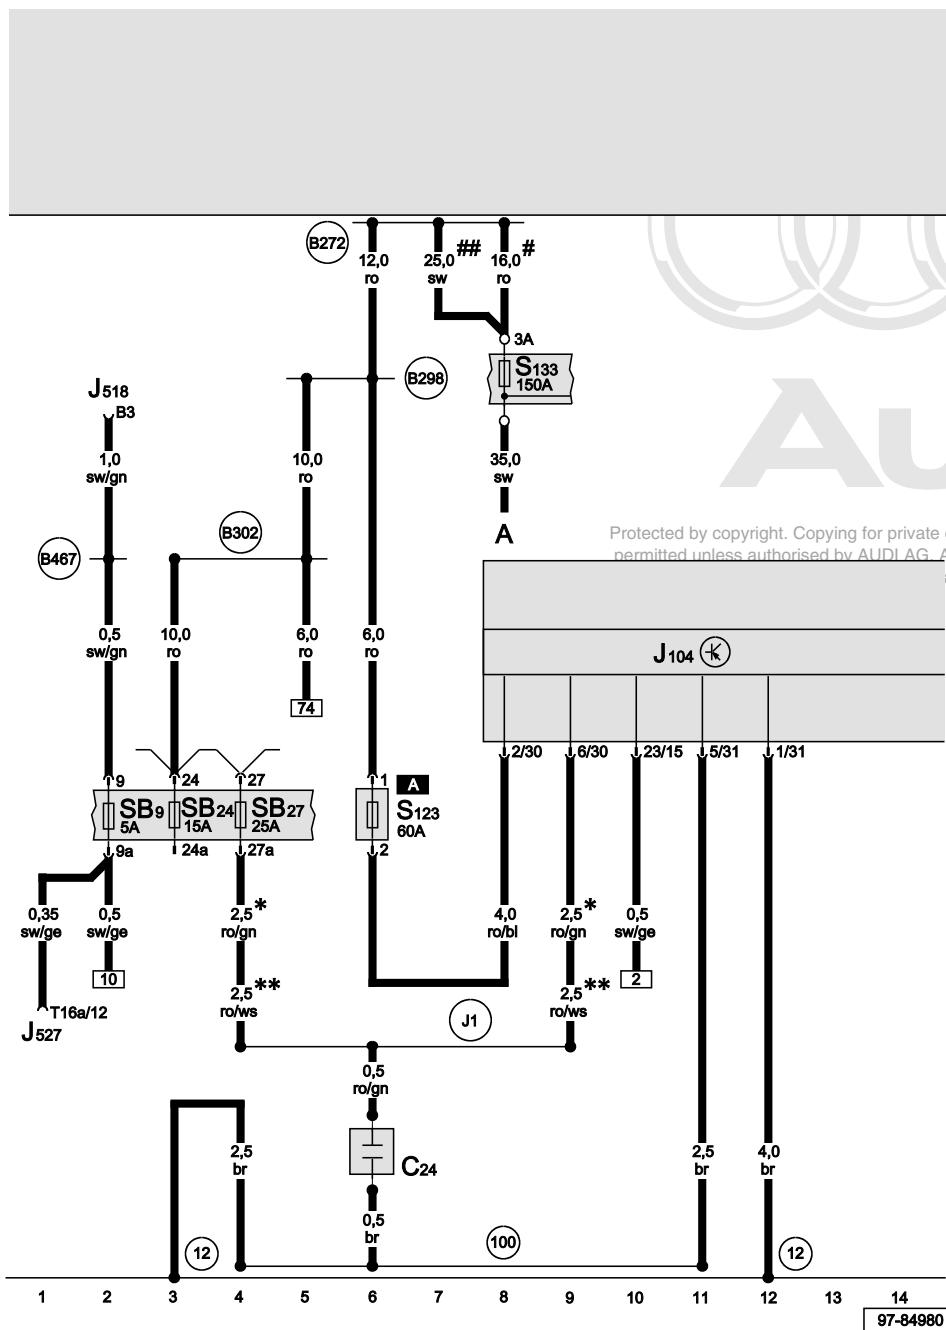

ABS control unit, ABS control unit fuse 1

- A Battery
- C24 Suppression filter
- J104 ABS control unit
- J518 Entry and start authorisation control unit
- J527 Steering column electronics control unit
- S123 ABS control unit fuse 1
- S133 Fuse 3, 150 A, in luggage compartment, rear right
- SB9 Fuse 9 on fuse holder
- SB24 Fuse 24 on fuse holder
- SB27 Fuse 27 on fuse holder
- T16a 16-pin connector, on steering column electronics control unit
- 12 Earth point, on left in engine compartment
- 100 Earth connection 1, in ABS wiring harness
- B272 Positive connection (30), in main wiring harness
- B298 Positive connection 2 (30), in main wiring harness
- B302 Positive connection 6 (30), in main wiring harness
- B467 Connection 3, in main wiring harness
- J1 Positive connection (30), in ABS wiring harness
- * models with front-wheel drive
- ** models with four-wheel drive
- # models with petrol engines
- ## models with diesel engines

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

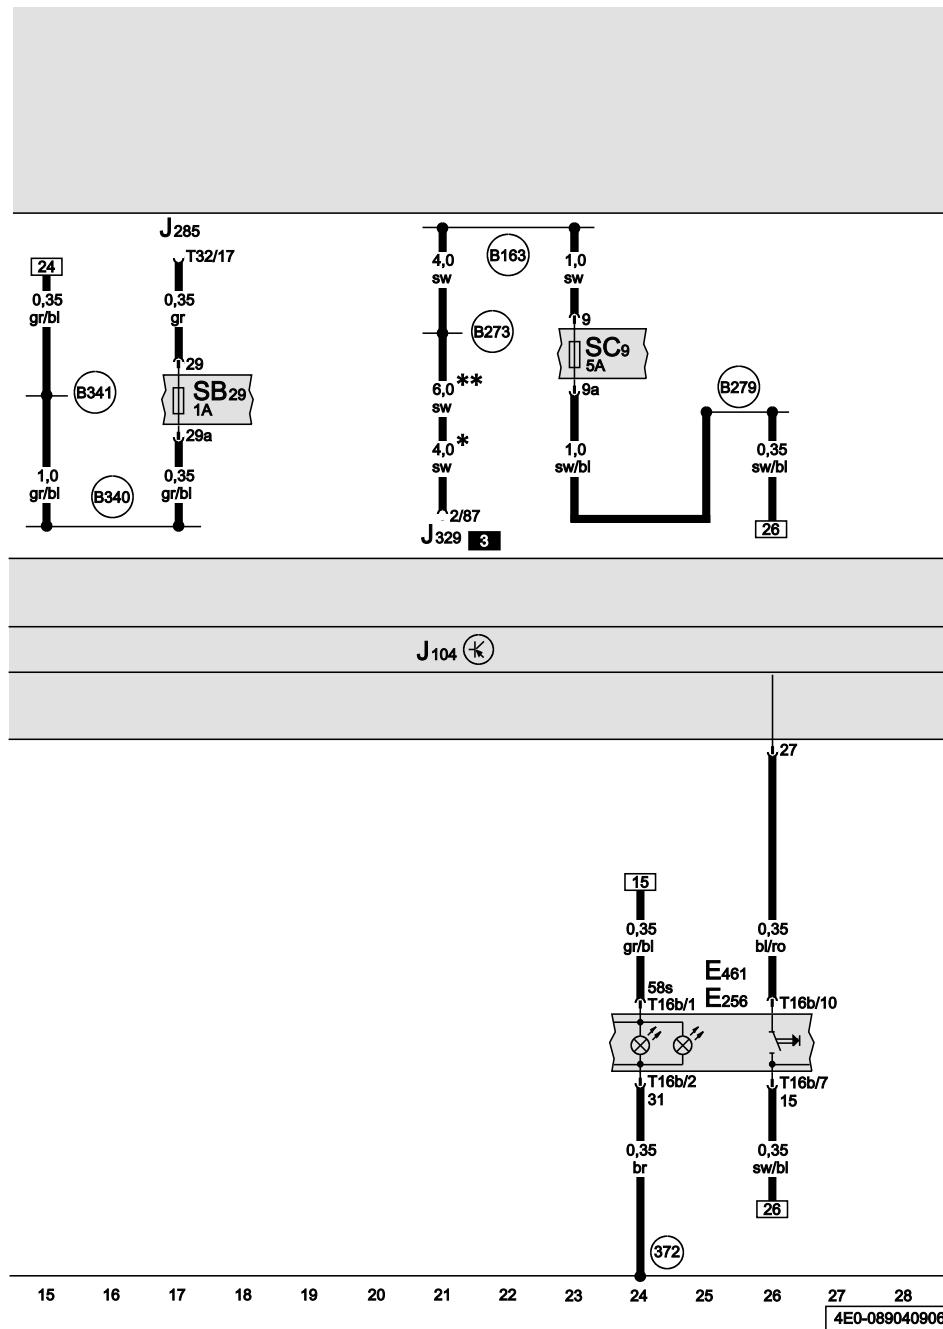

ABS control unit, TCS and ESP button, operating unit in front of centre console

- E256 TCS and ESP button
- E461 Operating unit in front of centre console
- J104 ABS control unit
- J285 Control unit in dash panel insert
- J329 Terminal 15 voltage supply relay
- SB29 Fuse 29 on fuse holder B
- SC9 Fuse 9 on fuse holder C
- T16b 16-pin connector, black, on operating unit in front of centre console
- T32 32-pin connector, blue, on dash panel insert
- 372 Earth connection 7, in main wiring harness

B163 Positive connection 1 (15), in interior wiring harness

B273 Positive connection (15), in main wiring harness

B279 Positive connection 3 (15a), in main wiring harness

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the content of this document. © AUDI AG 2006. All rights reserved.



 
B340 Connection 1 (58s), in main wiring harness

B341 Connection 2 (58s), in main wiring harness

* up to April 2006

** from May 2006

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

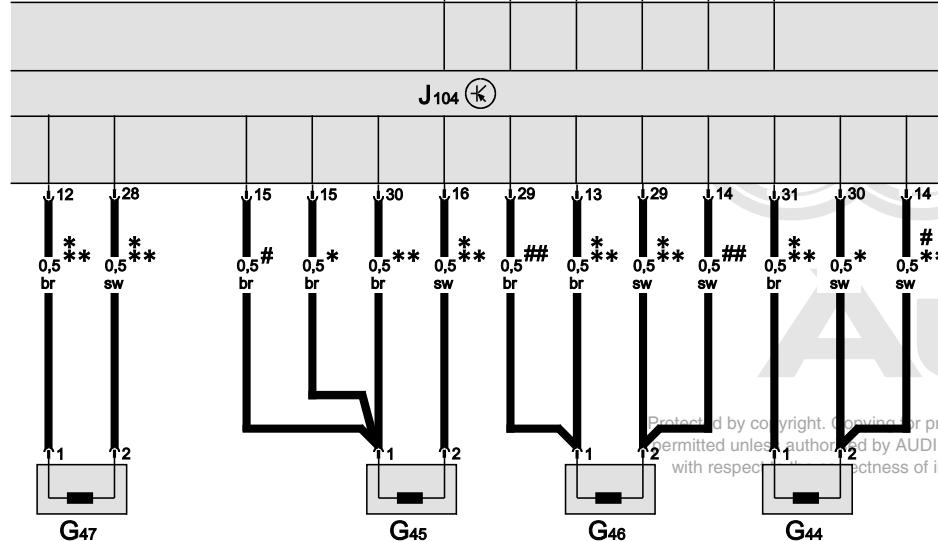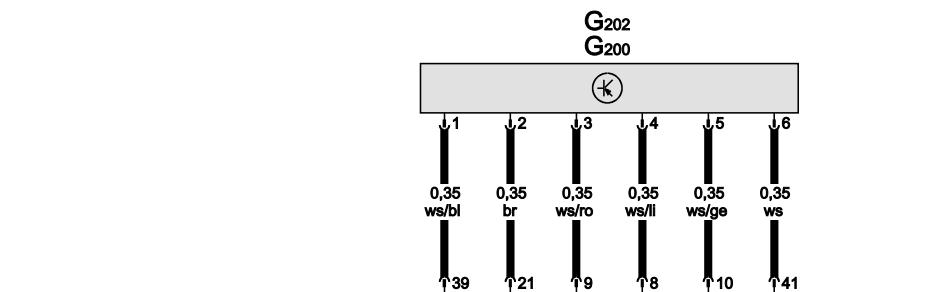

ABS control unit, speed sensor, lateral acceleration sender,
yaw rate sender

G44 Rear right speed sensor

G45 Front right speed sensor

G46 Rear left speed sensor

G47 Front left speed sensor

G200 Lateral acceleration sender

G202 Yaw rate sender

J104 ABS control unit

* models with front-wheel drive, outer 6.0 l engine BHT

** models with four-wheel drive, outer 6.0 l engine BHT

models with 5.2 l engine BSM

models with 4.2 l engine BVJ

Protected by copyright. Copying or private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white

sw = black

ro = red

br = brown

gn = green

bl = blue

gr = grey

li = purple

ge = yellow


or = orange

rs = pink

ABS control unit, speed sensor for 6.0 l engine BHT

- G44 Rear right speed sensor
G45 Front right speed sensor
G46 Rear left speed sensor
G47 Front left speed sensor
J104 ABS control unit
6.0 l Motor, engine code BHT

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

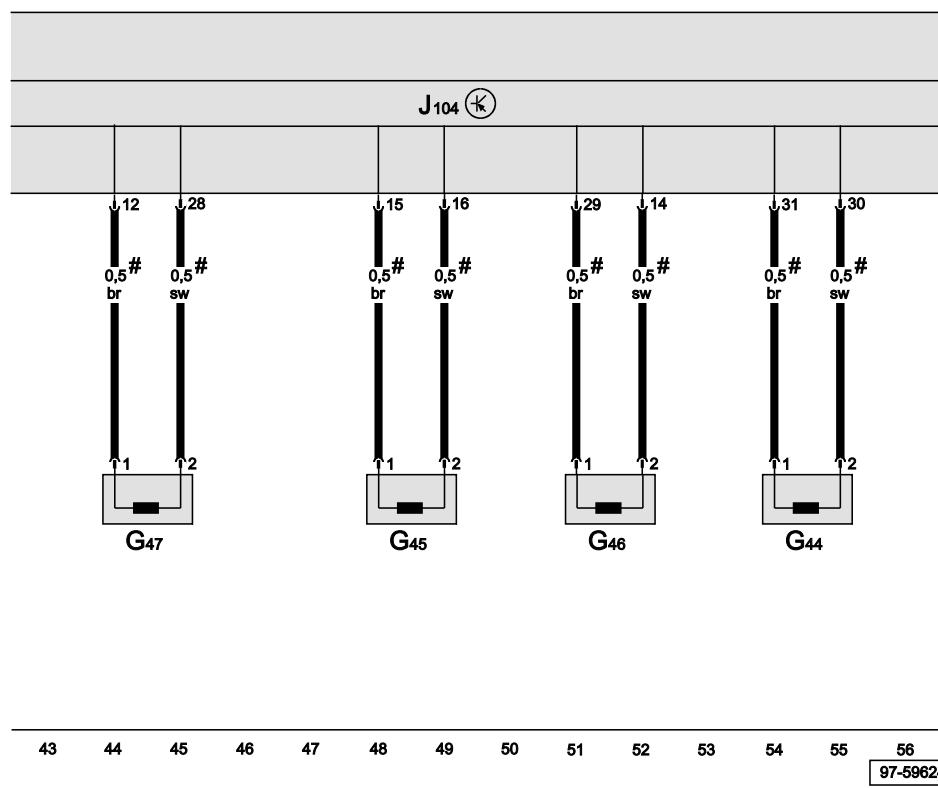


- ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink



AUDI

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG disclaims all liability
with respect to the correctness of information in this document. © AUDI AG.

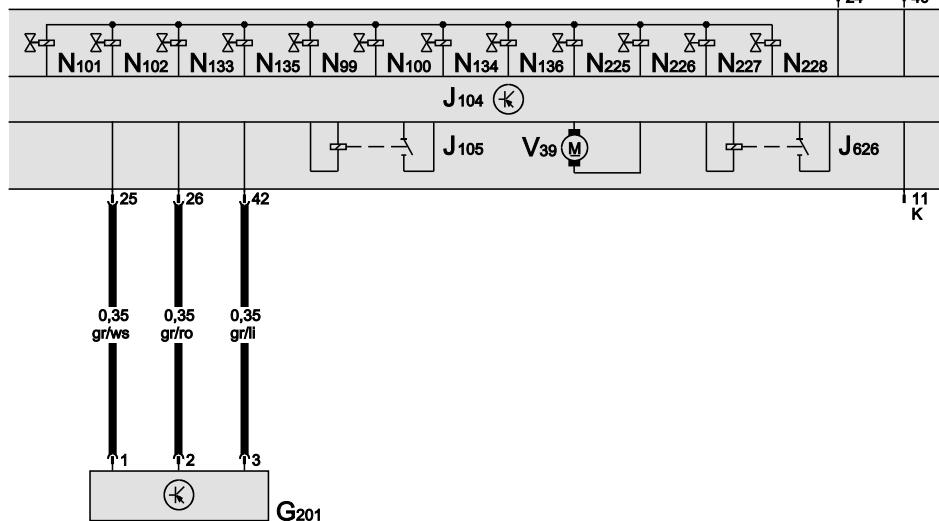


57 58 59 60 61 62 63 64 65 66 67 68 69 70

A97-83935

ABS control unit, ABS return flow pump, inlet and outlet valve, brake pressure sender 1

- G201 Brake pressure sender 1
- J104 ABS control unit
- J105 ABS return flow pump relay
- J626 ABS return flow pump 2 relay
- N99 Front right ABS inlet valve
- N100 Front right ABS outlet valve
- N101 Front left ABS inlet valve
- N102 Front left ABS outlet valve
- N133 Rear right ABS inlet valve
- N134 Rear left ABS inlet valve
- N135 Rear right ABS outlet valve
- N136 Rear left ABS outlet valve
- N225 Vehicle stabilization program switch valve 1
- N226 Vehicle stabilization program switch valve 2
- N227 Vehicle stabilization program high pressure valve 1
- N228 Vehicle stabilization program high pressure valve 2
- T46a 46-pin connector, black, CAN separating connector left
- V39 ABS return flow pump
 - CAN bus (data wire)

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

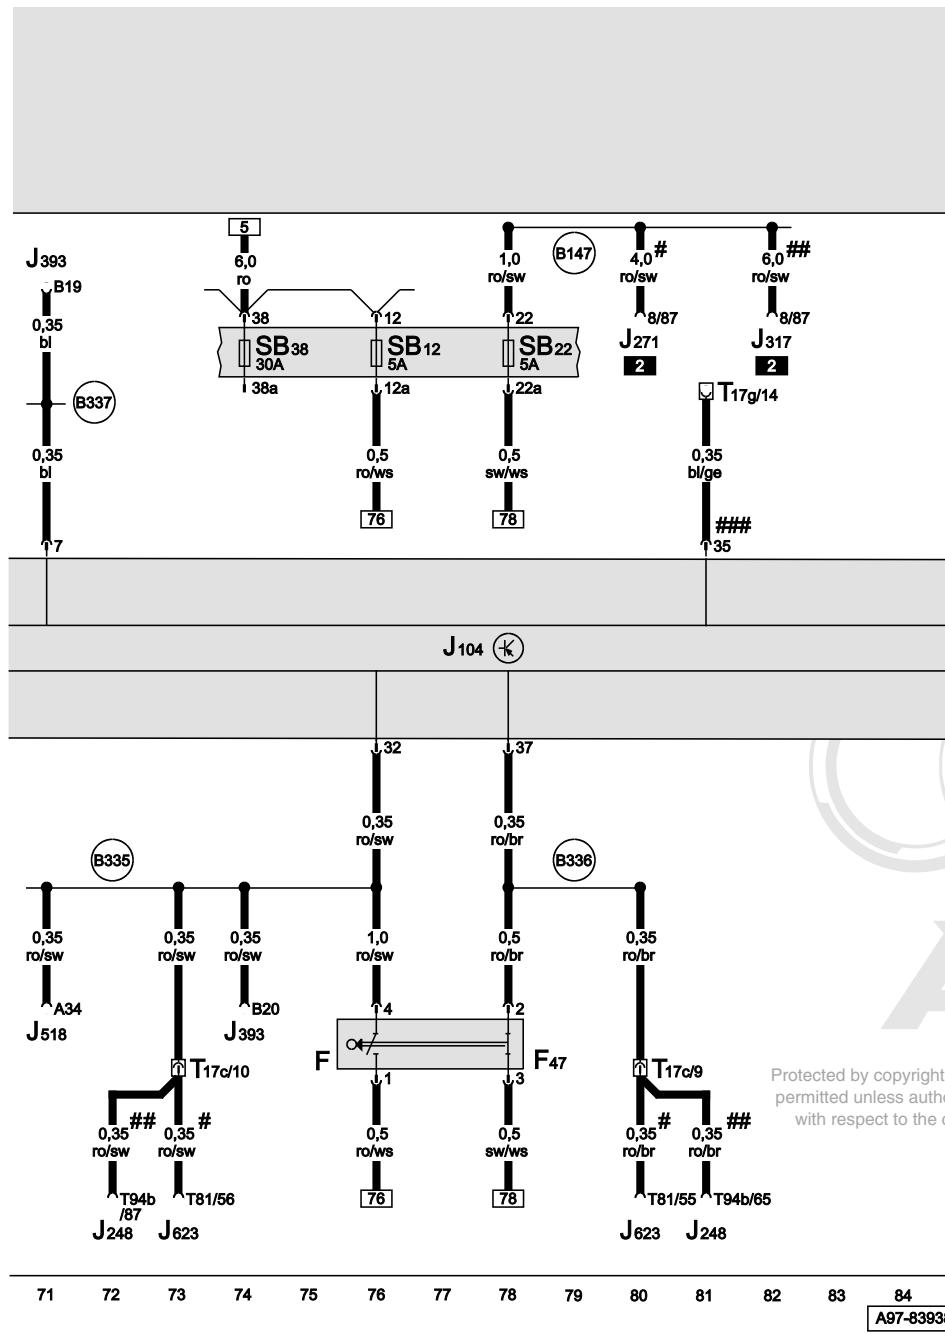

ABS control unit, brake light switch, output speedometer

- F Brake light switch
- F47 Brake pedal switch
- J104 ABS control unit
- J248 Diesel direct injection system control unit
- J271 Motronic current supply relay
- J317 Terminal 30 voltage supply relay
- J393 Convenience system central control unit
- J518 Entry and start authorisation control unit
- J623 Engine control unit
- SB12 Fuse 12 on fuse holder
- SB22 Fuse 22 on fuse holder
- SB38 Fuse 38 on fuse holder
- T17c 17-pin connector, brown, in electronics box in plenum chamber
- T17g 17-pin connector, grey, relay carrier driver footwell
- T81 81-pin connector, black, on engine control unit
- T94b 94-pin connector, black, connector B, on diesel direct injection system control unit

(B147) Positive connection 2 (87), in interior wiring harness

(B335) Connection 1 (54), in main wiring harness

(B336) Connection 2 (54), in main wiring harness

(B337) Connection 3 (54), in main wiring harness

models with petrol engines

models with diesel engines

output, speedometer

Protected by copyright. Copying for private commercial purposes, in part or in whole, is not permitted unless authorised by Audi AG. Audi AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- ge = yellow
- or = orange
- rs = pink

Multifunction steering wheel

from model year 2005

Notes:

For information concerning

- ◆ Position of relays and fuses

- ◆ Multi-pin connections

- ◆ Control units and relays


- ◆ Earth connections

⇒ List of Fitting Locations!


For information concerning

- ◆ Fault Finding Programs

⇒ guided fault finding

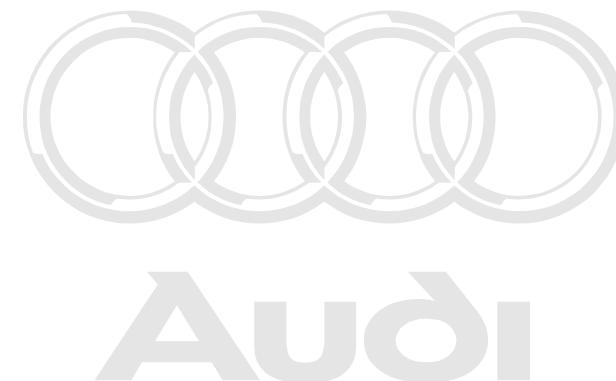

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

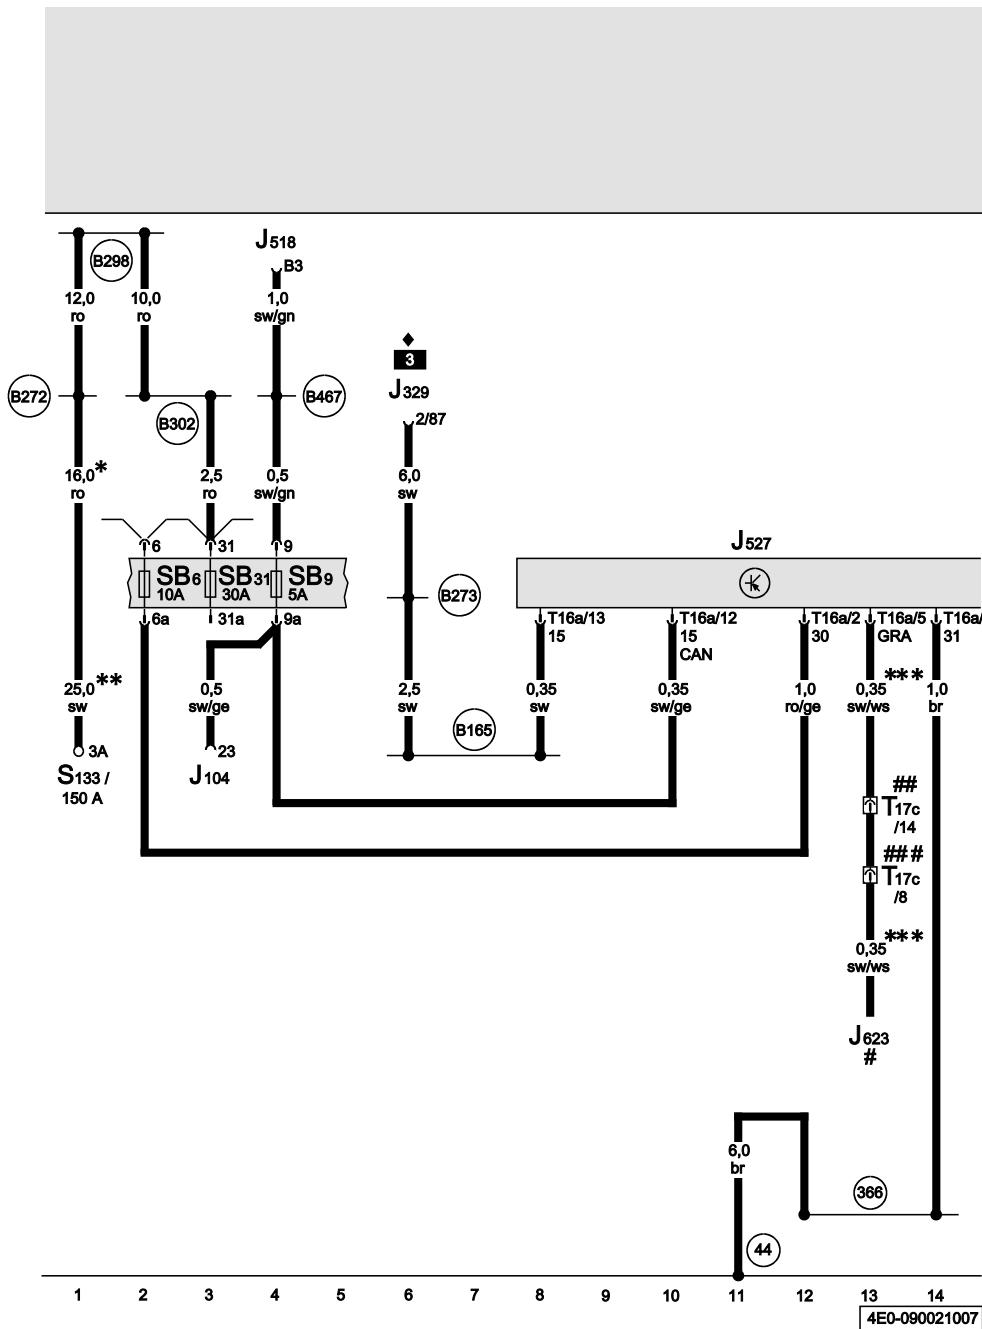




Steering column electronics control unit voltage supply

- J104 ABS control unit
- J329 Terminal 15 voltage supply relay
- J518 Entry and start authorisation control unit
- J527 Steering column electronics control unit
- J623 Engine control unit
- S133 Fuse 3
- SB6 Fuse 6 on fuse holder B
- SB9 Fuse 9 on fuse holder B
- SB31 Fuse 31 on fuse holder B
- T16a 16-pin connector, behind steering column switch trim
- T17c 17-pin connector, brown, in electronics box in plenum chamber
- 44 Earth point, lower part of left A-pillar
- 366 Earth connection 1, in main wiring harness
- B165 Positive connection 2 (15), in interior wiring harness
- B272 Positive connection (30), in main wiring harness
- B273 Positive connection (15), in main wiring harness
- B298 Positive connection 2 (30), in main wiring harness
- B302 Positive connection 6 (30), in main wiring harness
- J467 Connection 3 in main wiring harness

Protected by copyright. Copying, private use and distribution, as well as any other unauthorized processing or transmission, is prohibited unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


- * models with petrol engines
- ** models with diesel engines
- *** models with cruise control system
- # → Engine Current Flow Diagram
- ## up to August 2007
- ### from September 2007
- ◆ Relay and fuse carrier behind left dash panel

 ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

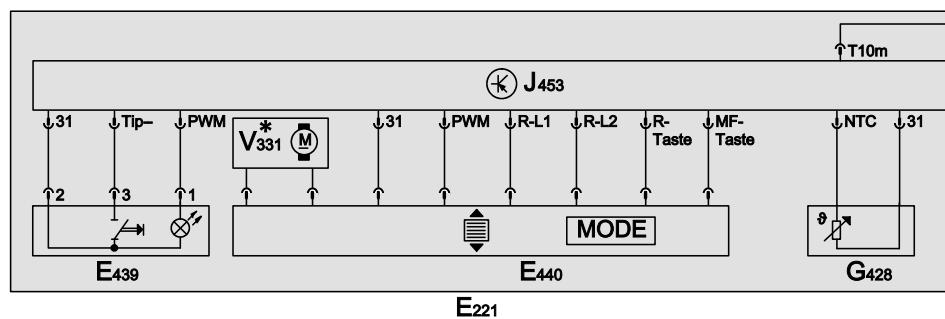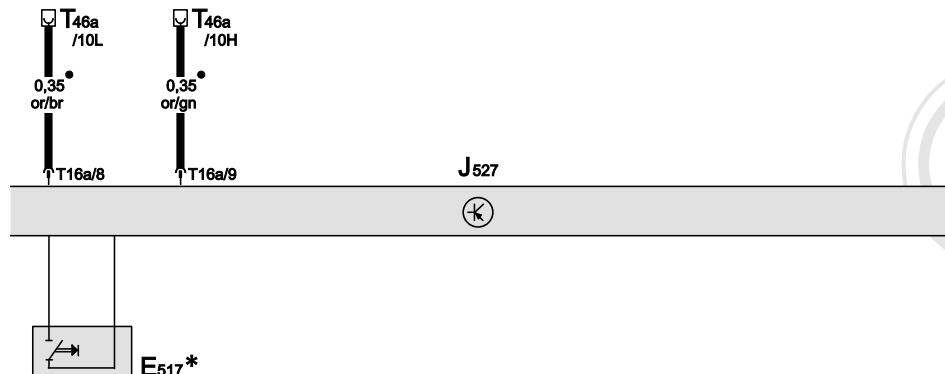

Steering column electronics control unit, operating unit in steering wheel


- E221 Operating unit in steering wheel
- E439 Tiptronic switch in steering wheel to shift down
- E440 Multifunction buttons on left in steering wheel
- E517 Lane departure warning button
- G428 Heated steering wheel sensor
- J453 Multifunction steering wheel control unit
- J527 Steering column electronics control unit
- T10m 10-pin connector, on left steering wheel
- T16a 16-pin connector, behind steering column switch trim
- T46a 46-pin connector, black, CAN disconnector left
- V331 Steering wheel vibration motor
 - CAN bus (data wire)
 - * models with lane departure warning

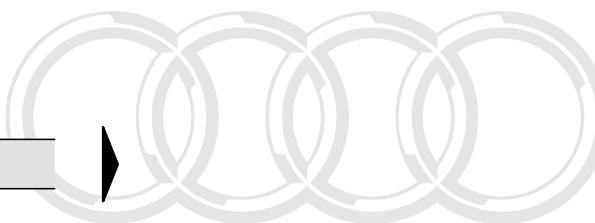

Audi


ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

15 16 17 18 19 20 21 22 23 24 25 26 27 28
4E0-090030409

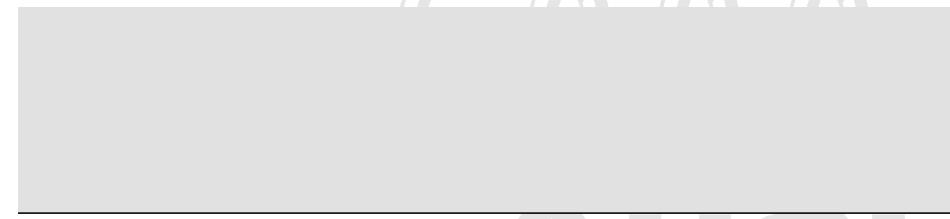


AUOI

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

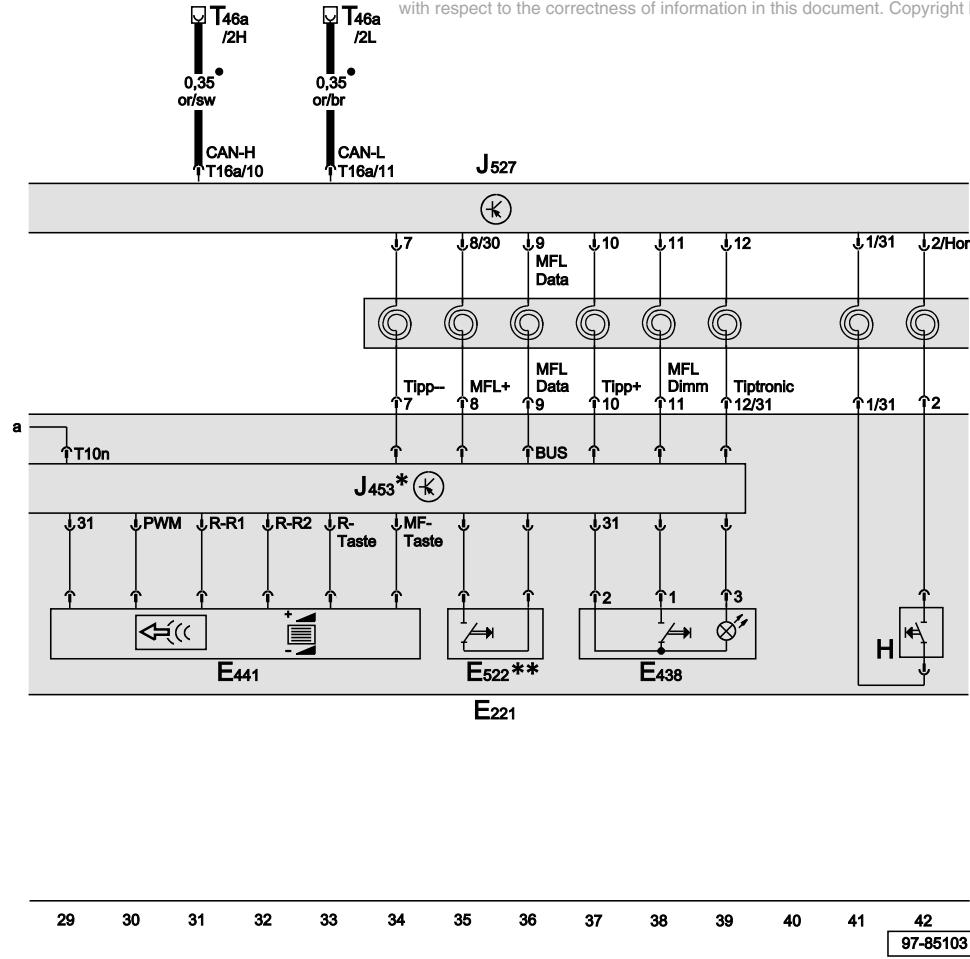

Steering column electronics control unit, operating unit in steering wheel, horn plate

 - E221 Operating unit in steering wheel
- E438 Tiptronic switch in steering wheel to shift up
- E441 Multifunction buttons on right in steering wheel
- E522 Steering wheel heater button
- H Horn plate
- J453 Multifunction steering wheel control unit
- J527 Steering column electronics control unit
- T10n 10-pin connector, on right steering wheel
- T16a 16-pin connector, behind steering column switch trim
- T46a 46-pin connector, black, CAN disconnector left
- CAN bus (data wire)
- * J453-the control unit can only be renewed completely with E441
- ** models with heated steering wheel



Steering column electronics control unit, operating unit in steering wheel, driver side airbag igniter, heated steering wheel


- E221 Operating unit in steering wheel
- F138 Airbag coil connector
- J234 Airbag control unit
- J527 Steering column electronics control unit
- N95 Driver side airbag igniter
- N250 Driver side airbag igniter 2
- T4b 4-pin connector, behind steering column switch trim (airbag)
- Z36 Heated steering wheel

* Operating convenience CAN bus by heated driver seat regulator
 <fo:extern> short circuit bridge becomes effective when connector is unplugged
 with respect to the correctness of information in this document. Copyright by AUDI AG.

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is
 permitted unless authorised by AUDI AG. AUDI AG does not guarantee the
 graphic

```

src="../
PDOC/
samba/
tools/
png-
convert/
out/sl/
ft_icons/
kurzbr_r.
png"
content-
width="2
Opt"
scaling="
uniform"/
>
    
```

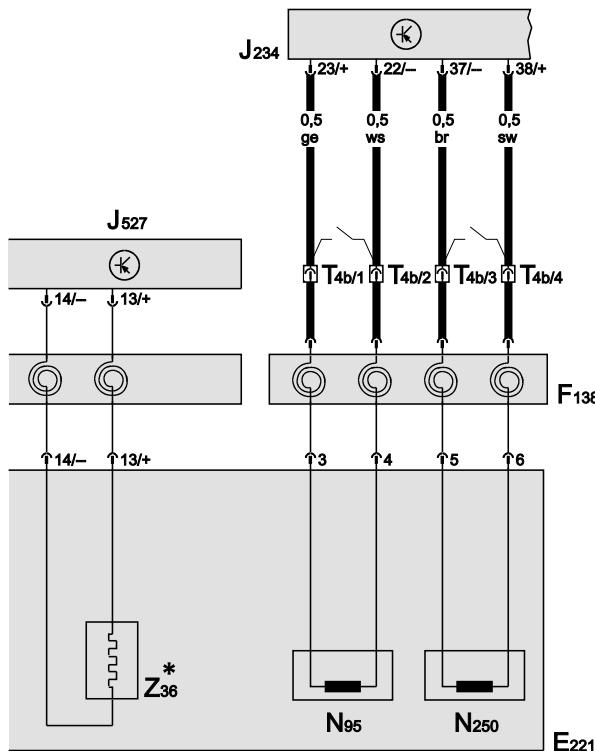


ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

A97-83974

Electric tyre pressure monitor

from model year 2005

Fuse holder, left dash panel

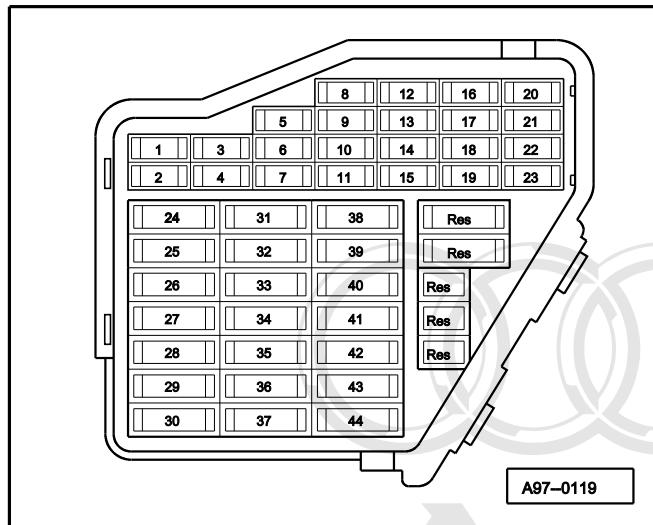

Fuse colours

30 A - green

25 A - white

20 A - yellow

15 A - blue

10 A - red

7,5 A - brown

5 A - beige

1 A - black


SB - Fuses in fuse holder left dash panel

SC - Fuses in fuse holder right dash panel

SD - Fuses in fuse holder left in luggage compartment

SF - Fuses in fuse holder right in luggage compartment

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

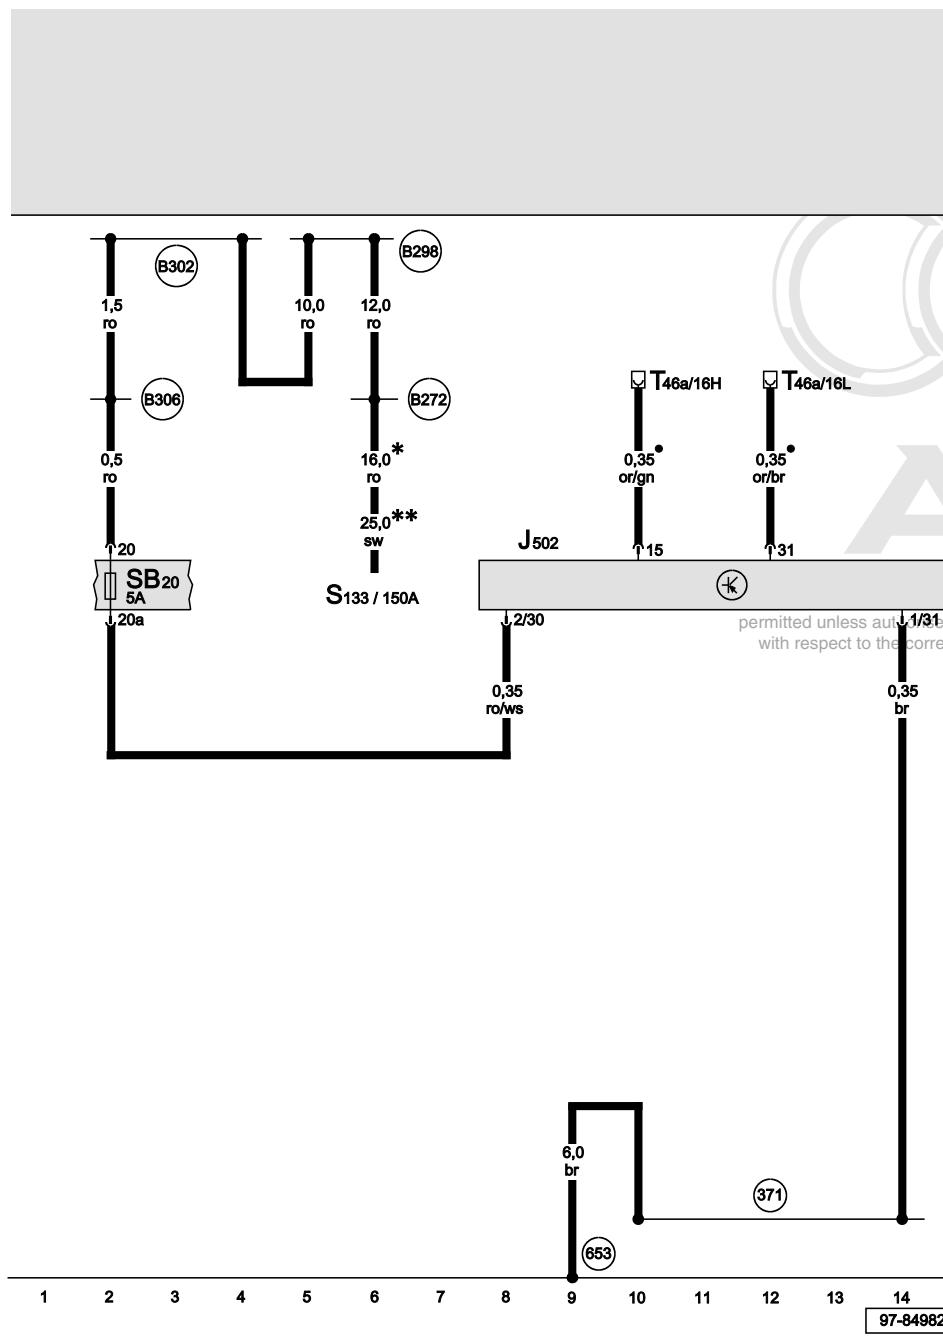


Tyre pressure monitor control unit, fuse

- J502 Tyre pressure monitor control unit
- S133 Fuse 3, 150 A, in luggage compartment, rear right
- SB20 Fuse 20 on fuse holder
- T46a 46-pin connector, black, CAN separating connector left
- 371 Earth connection 6, in main wiring harness
- 653 Earth point, left D-pillar
- B272 Positive connection (30), in main wiring harness
- B298 Positive connection 2 (30), in main wiring harness
- B302 Positive connection 6 (30), in main wiring harness
- B306 Positive connection 10 (30), in main wiring harness


• CAN bus (data wire)
 * models with petrol engines
 ** models with diesel engines

Copying for private or commercial purposes, in part or in whole, is
 permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept responsibility
 with respect to the correctness of information in this document. Copyright by AUDI AG.

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

 
**Tyre pressure monitor control unit, tyre pressure sensors,
tyre pressure monitor aerials**

- G222 Front left tyre pressure sensor
- G223 Front right tyre pressure sensor
- G224 Rear left tyre pressure sensor
- G225 Rear right tyre pressure sensor
- G226 Spare wheel tyre pressure sensor
- J502 Tyre pressure monitor control unit
- R59 Front left tyre pressure monitor aerial
- R60 Front right tyre pressure monitor aerial
- R61 Rear left tyre pressure monitor aerial
- R62 Rear right tyre pressure monitor aerial

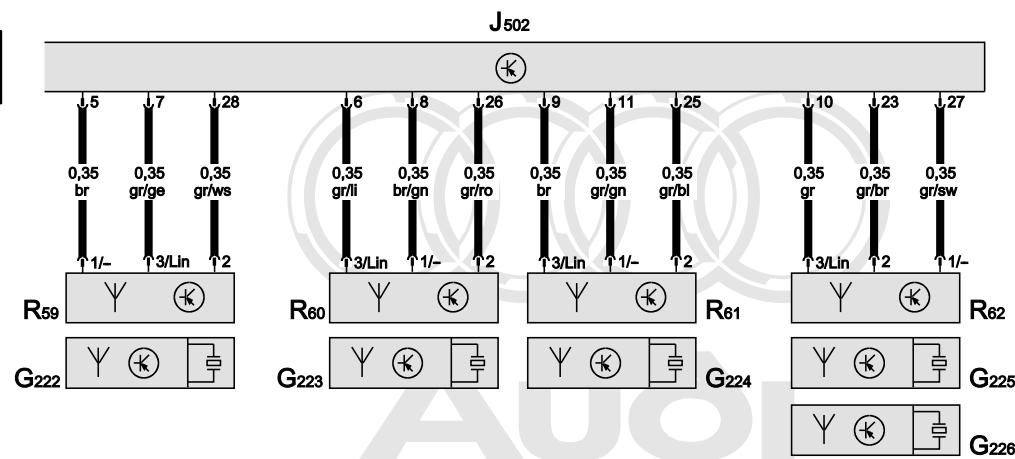

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

15 16 17 18 19 20 21 22 23 24 25 26 27 28

97-84983

Entry and start authorisation, entry and start authorisation with Kessy

from model year 2005

Notes:

For information concerning

- ◆ Position of relays and fuses

- ◆ Multi-pin connections

- ◆ Control units and relays

- ◆ Earth connections

⇒ List of Fitting Locations!


For information concerning

- ◆ Fault Finding Programs

⇒ guided fault finding



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

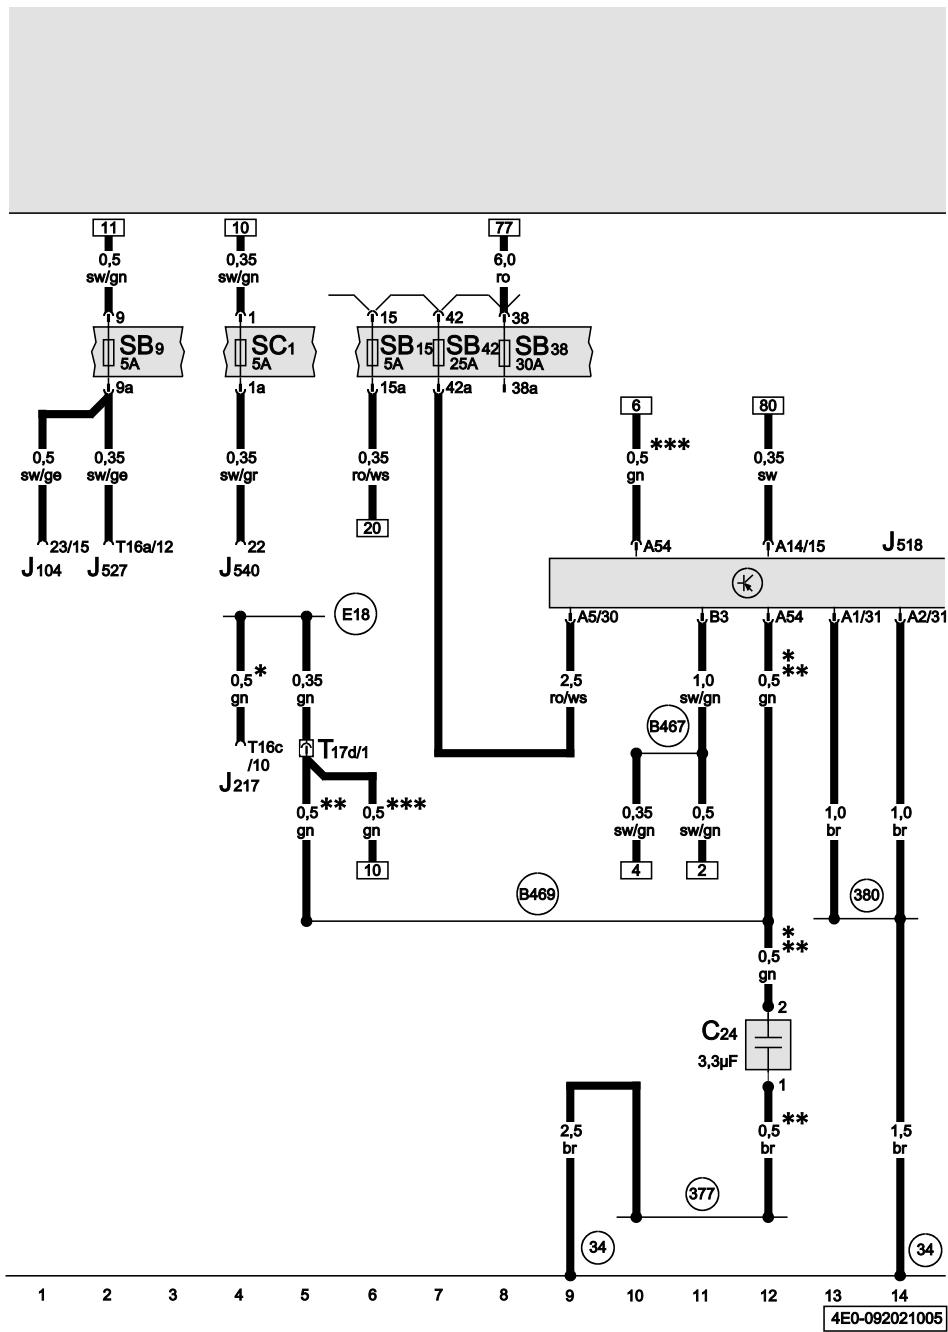

Entry and start authorisation control unit

- C24 Suppression filter
- J104 ABS control unit
- J217 Automatic gearbox control unit
- J518 Entry and start authorisation control unit
- J527 Steering column electronics control unit
- J540 Electric park and handbrake control unit
- SB9 Fuse 9 on fuse holder
- SB15 Fuse 15 on fuse holder
- SB38 Fuse 38 on fuse holder
- SB42 Fuse 42 on fuse holder
- SC1 Fuse 1 on fuse holder
- T16a 16-pin connector, behind steering column switch trim
- T16c 16-pin connector, black, on automatic gearbox control unit
- T17d 17-pin connector, blue, in electronics box in plenum chamber
- 34 Earth point, under driver seat
- 377 Earth connection 12, in main wiring harness
- 380 Earth connection 15, in main wiring harness
- B467 Connection 3 in main wiring harness
- B469 Connection 5 in main wiring harness

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee the acceptability with respect to the correctness of information in this document. Copyright by AUDI AG.


* only automatic gearbox 09E, 09L

** up to October 2005

*** from November 2005

- | | |
|----|----------|
| ws | = white |
| sw | = black |
| ro | = red |
| br | = brown |
| gn | = green |
| bl | = blue |
| gr | = grey |
| li | = purple |
| ge | = yellow |
| or | = orange |
| rs | = pink |

4E0-092021005

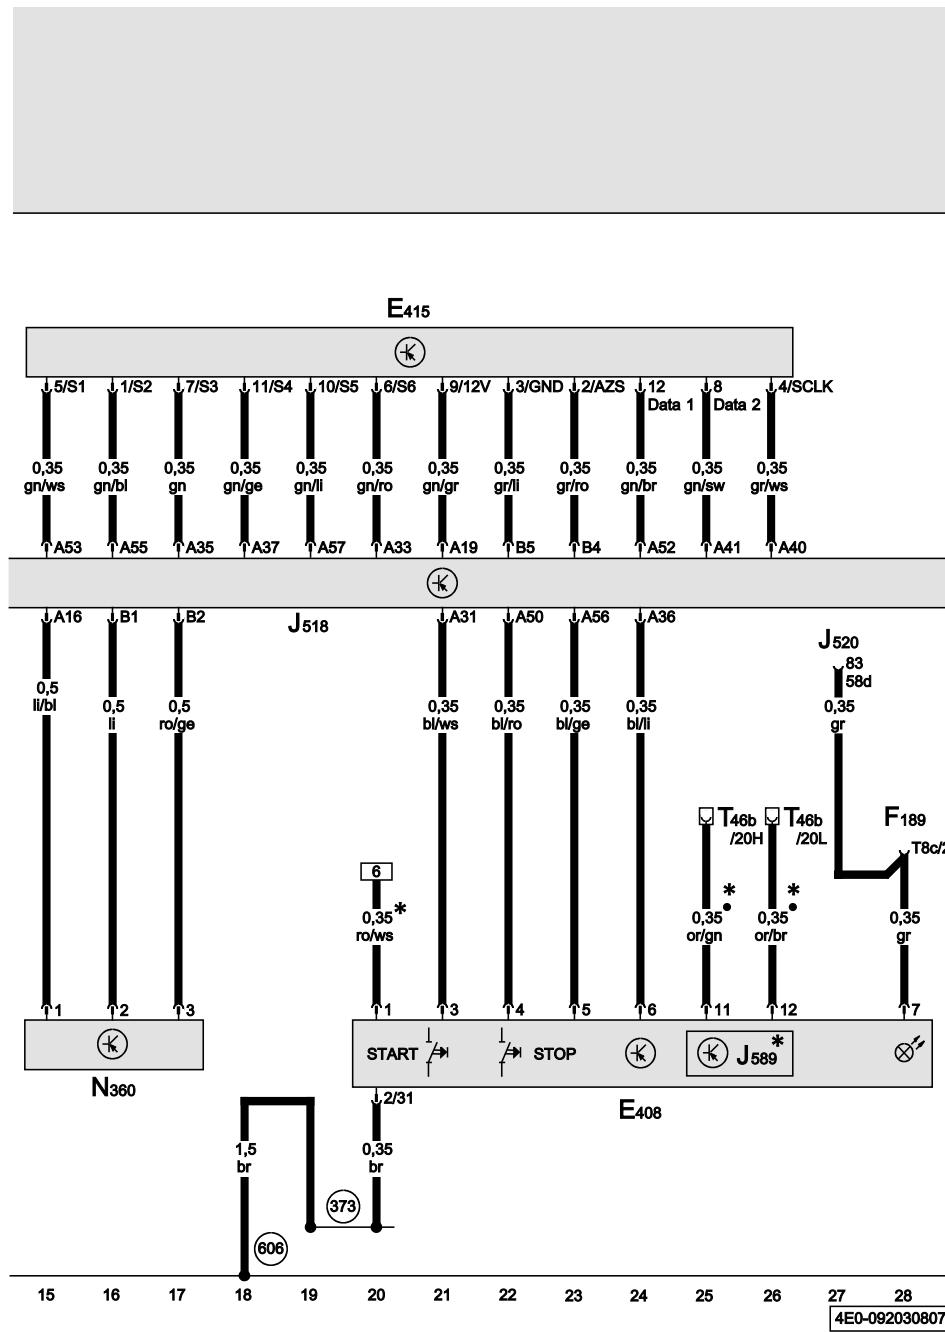

Entry and start authorisation control unit, entry and start authorisation switch, steering column lock control element, start/stop motor button, driver identification control unit


 
- E408 Start/stop motor button
- E415 Entry and start authorisation switch
- F189 Tiptronic switch
- J518 Entry and start authorisation control unit
- J520 Onboard supply control unit 2
- J589 Driver identification control unit
- N360 Steering column lock control element
- T8c 8-pin connector, black, in centre console on selector lever console
- T32 32-pin connector, blue, on dash panel insert
- T46b 46-pin connector, black, CAN disconnector right

373 Earth connection 8, in main wiring harness

606 Earth point, under the centre console near gear stick

Protected by copyright. Commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. All rights reserved. © AUDI AG. CAN bus (data wire) commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. All rights reserved. © AUDI AG. models with driver identification (Finger print) except any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

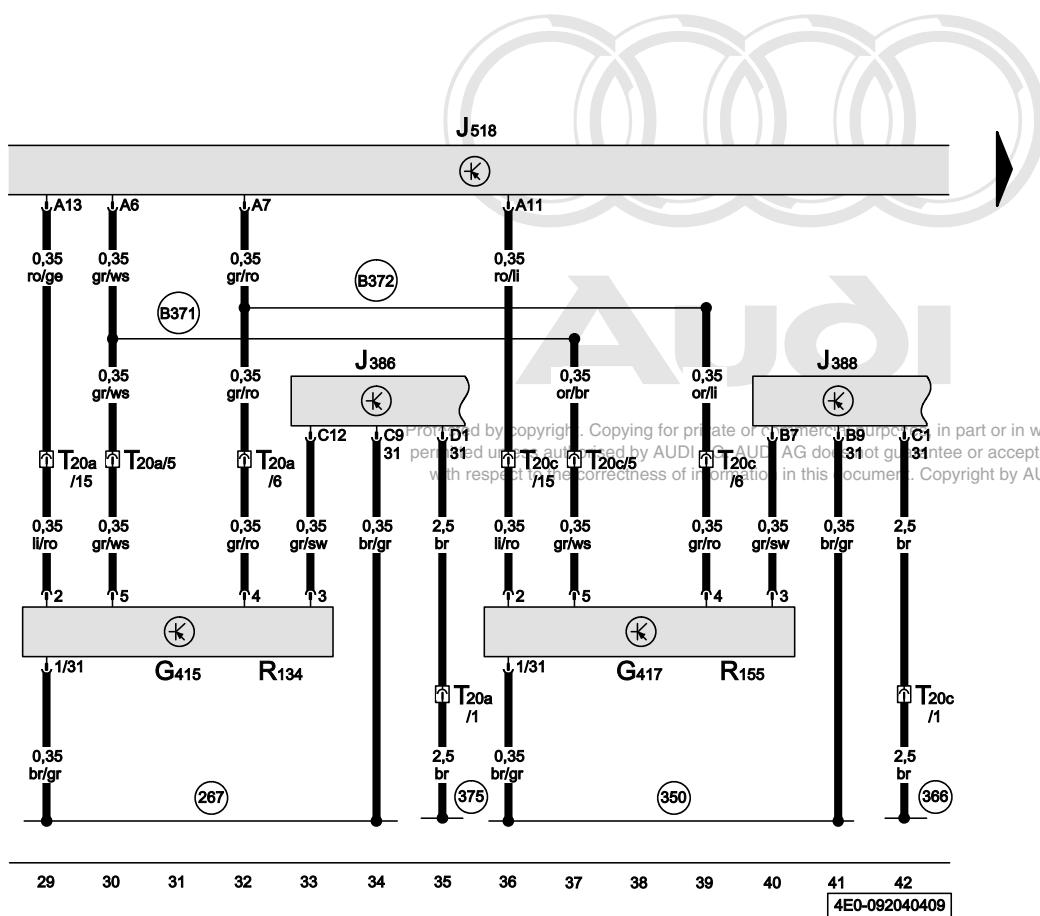



Entry and start authorisation control unit, exterior handle touch sensor, right aerial for entry and start authorisation, door control unit

- G415 Driver door exterior handle touch sensor
- G417 Rear left door exterior handle touch sensor
- J386 Driver door control unit
- J388 Rear left door control unit
- J518 Entry and start authorisation control unit
- R134 Driver side aerial for entry and start authorisation
- R155 Driver side rear entry and start authorisation aerial
- T20a 20-pin connector, black, left A-pillar
- T20c 20-pin connector, black, left B-pillar
- 267 Earth connection 2, in driver door wiring harness
- 350 Earth connection 2, in rear left door wiring harness
- 366 Earth connection 1, in main wiring harness
- 375 Earth connection 10, in main wiring harness
- B371 Connection 1 (aerial), in main wiring harness
- B372 Connection 2 (aerial), in main wiring harness


ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

 4E0-092040409

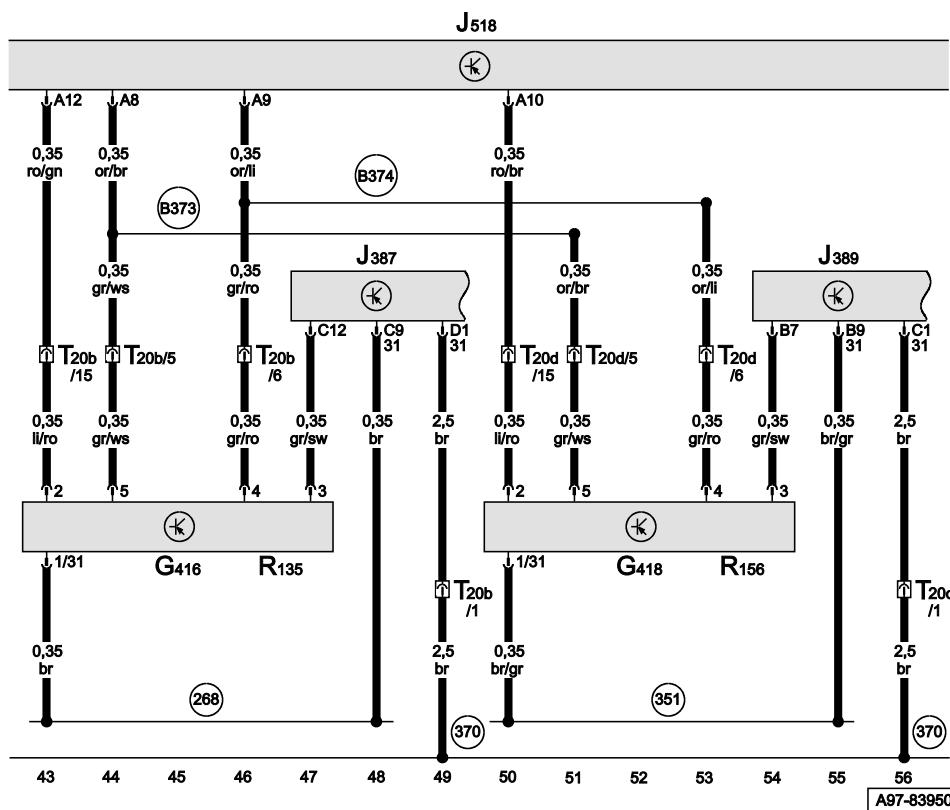

Entry and start authorisation control unit, front passenger door exterior handle touch sensor, front passenger side aerial, door control unit

- G416 Front passenger door exterior handle touch sensor
- G418 Rear right door exterior handle touch sensor
- J387 Front passenger door control unit
- J389 Rear right door control unit
- J518 Entry and start authorisation control unit
- R135 Front passenger side aerial for entry and start authorisation
- R156 Front passenger side rear entry and start authorisation aerial
- T20b 20-pin connector, black, right A-pillar
- T20d 20-pin connector, black, right B-pillar
- 268 Earth connection 2, in front passenger side door wiring harness
- 351 Earth connection 2, in rear right door wiring harness
- 370 Earth connection 5, in main wiring harness
- B373 Connection 3 (aerial), in main wiring harness
- B374 Connection 4 (aerial), in main wiring harness

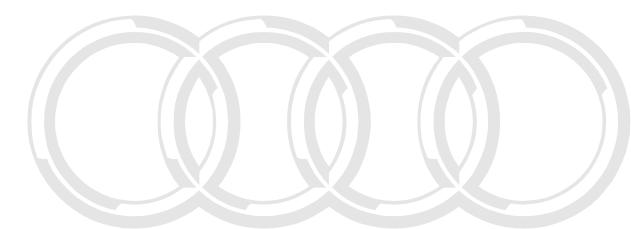


Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

A97-83950

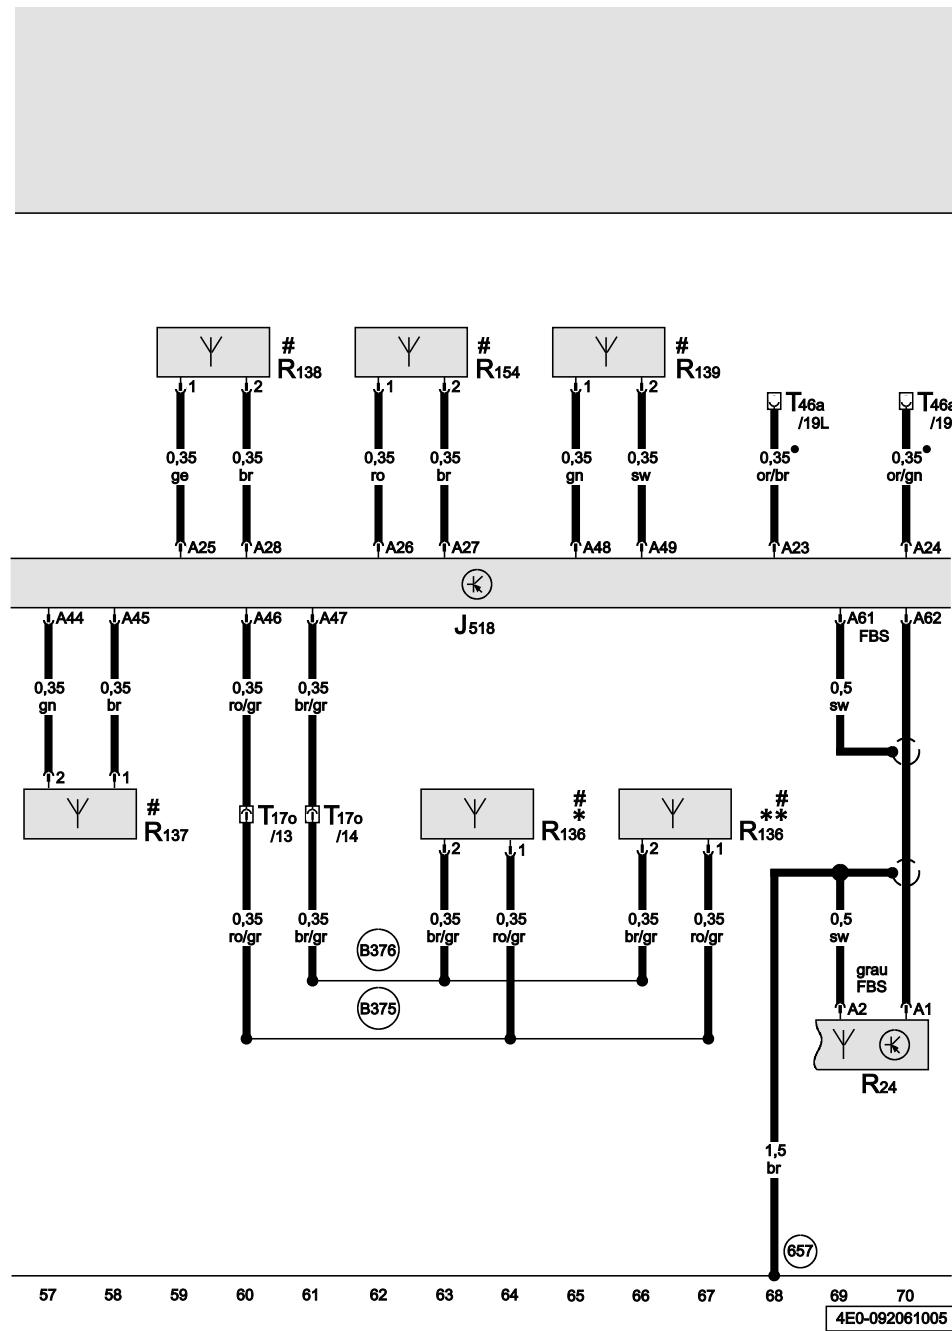

Entry and start authorisation control unit, aerials


- J518 Entry and start authorisation control unit
- R24 Aerial amplifier
- R136 Rear bumper aerial for entry and start authorisation
- R137 Luggage compartment aerial for entry and start authorisation
- R138 Interior aerial 1 for entry and start authorisation
- R139 Interior aerial 2 for entry and start authorisation
- R154 Interior aerial 3 for entry and start authorisation
- T17o 17-pin connector, black, in luggage compartment
- T46a 46-pin connector, black, CAN disconnector left
- 657 Earth point 1, on left near rear window
- B375 Connection 5 (aerial), in main wiring harness
- B376 Connection 6 (aerial), in main wiring harness
 - CAN bus (data wire)
 - * left
 - ** right
- # only Kessy

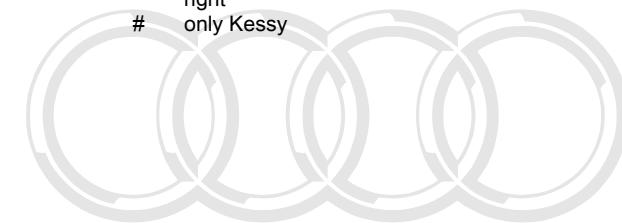

Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

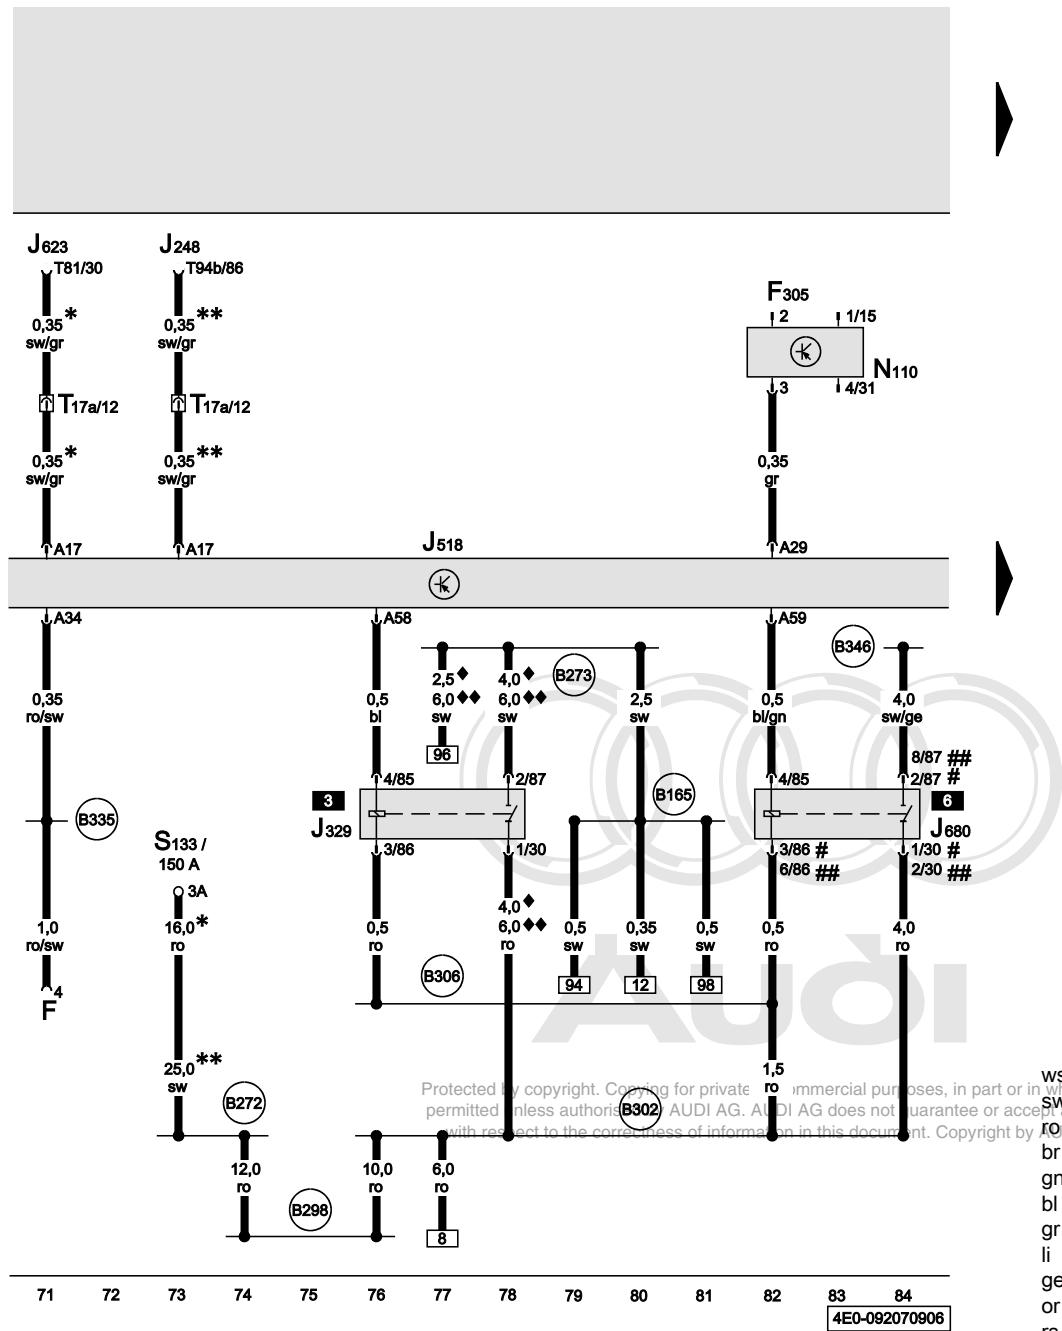

Entry and start authorisation control unit

- F Brake light switch
- F305 Gear selector position P switch
- J248 Diesel direct injection system control unit
- J329 Terminal 15 voltage supply relay
- J518 Entry and start authorisation control unit
- J623 Engine control unit
- J680 Terminal 75 voltage supply relay 1
- N110 Selector lever lock solenoid
- S133 Fuse 3, 150 A, in luggage compartment, rear right
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T81 81-pin connector, black, on engine control unit
- T94b 94-pin connector, black, connector B, on diesel direct injection system control unit

B165 Positive connection 2 (15), in interior wiring harness

B272 Positive connection (30), in main wiring harness

B273 Positive connection (15), in main wiring harness

B298 Positive connection 2 (30), in main wiring harness

B302 Positive connection 6 (30), in main wiring harness

B306 Positive connection 10 (30), in main wiring harness

B335 Connection 1 (54), in main wiring harness

B346 Connection 1 (75), in main wiring harness

* models with petrol engines

** models with diesel engines

up to October 2006

from November 2006

◆ up to April 2006

◆◆ from May 2006

ws = white

sw = black

ro = red

br = brown

gn = green

bl = blue


 
gr = grey

li = purple

ge = yellow

or = orange

rs = pink

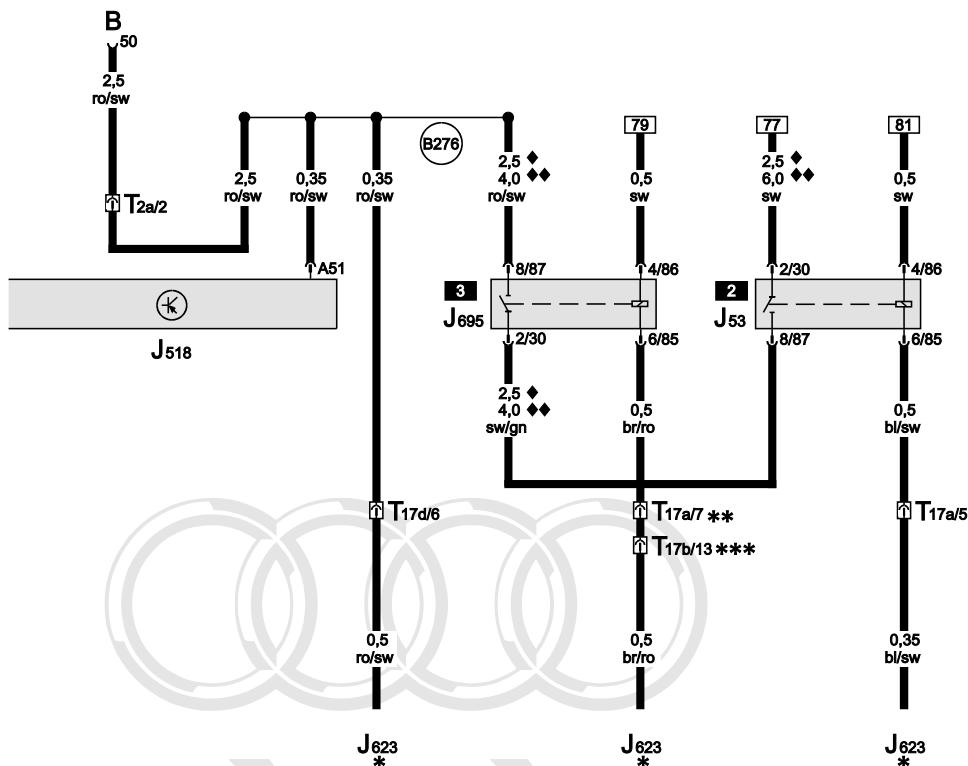

Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

85 86 87 88 89 90 91 92 93 94 95 96 97 98

4E0-092081007

Entry and start authorisation control unit, starter motor relay, starter motor relay 2

- B Starter
- J53 Starter motor relay
- J518 Entry and start authorisation control unit
- J623 Engine control unit
- J695 Starter motor relay 2
- T2a 2-pin connector, black, in front right engine compartment
- T17a 17-pin connector, black, in electronics box in plenum chamber
- T17b 17-pin connector, green, in electronics box in plenum chamber
- T17d 17-pin connector, blue, in electronics box in plenum chamber

(B276) Positive connection (50), in main wiring harness



- * ⇒ Engine Current Flow Diagram
- ** up to August 2007
- *** from September 2007
- ◆ up to April 2006
- ◆◆ from May 2006

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

Trailer towing attachment

from model year 2005

Fuse holder, left dash panel

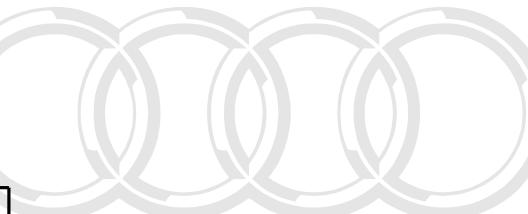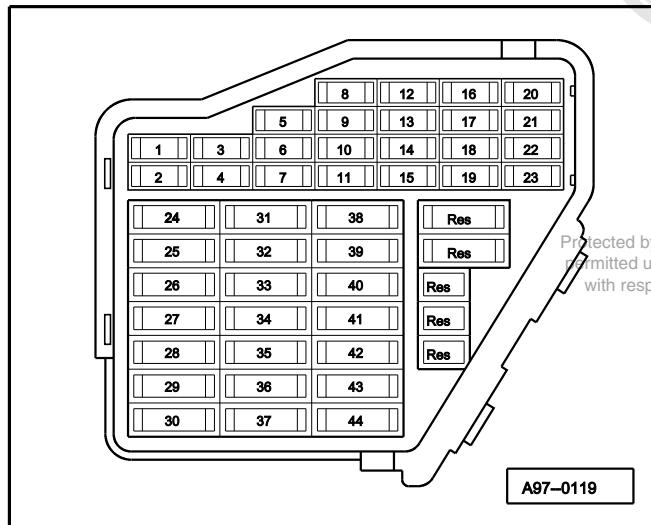

Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Fuse colours

30 A - green

25 A - white

20 A - yellow

15 A - blue

10 A - red

7,5 A - brown

5 A - beige

1 A - black


SB - Fuses in fuse holder left dash panel

SC - Fuses in fuse holder right dash panel

SD - Fuses in fuse holder left in luggage compartment


SF - Fuses in fuse holder right in luggage compartment

Fuse holder right dash panel

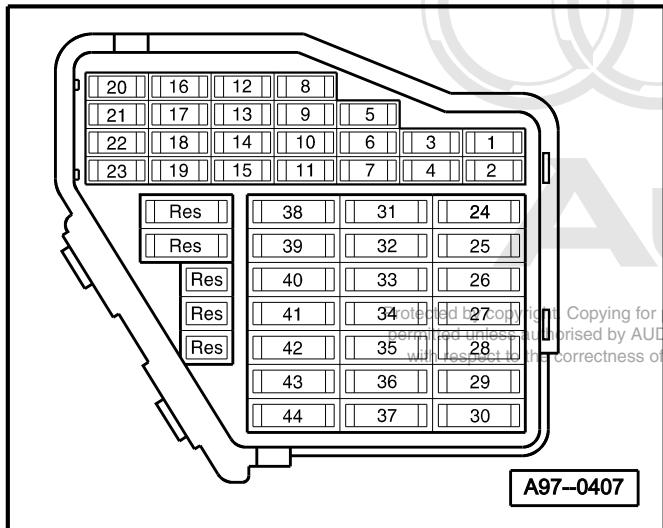


Copying for private or commercial purposes, in part or in whole, is not
authorised by AUDI AG. AUDI AG does not guarantee or accept any liability
whatsoever for the correctness of information in this document. Copyright by AUDI AG.

Relay and fuse carrie behind left dash panel

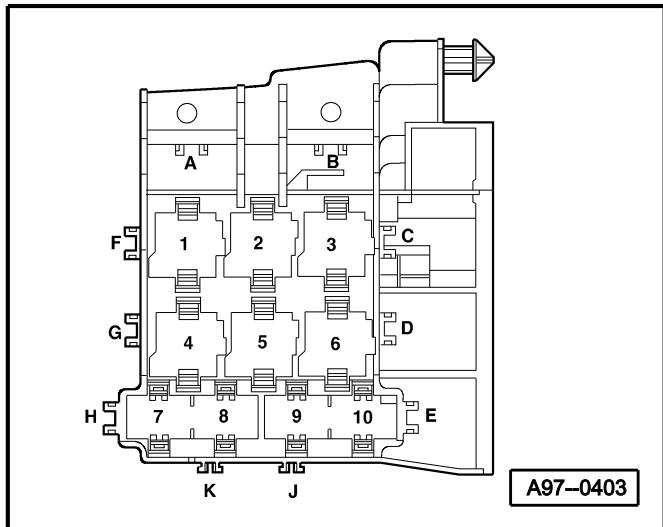

Relay positions


3 - Terminal 15 voltage supply relay (J329)

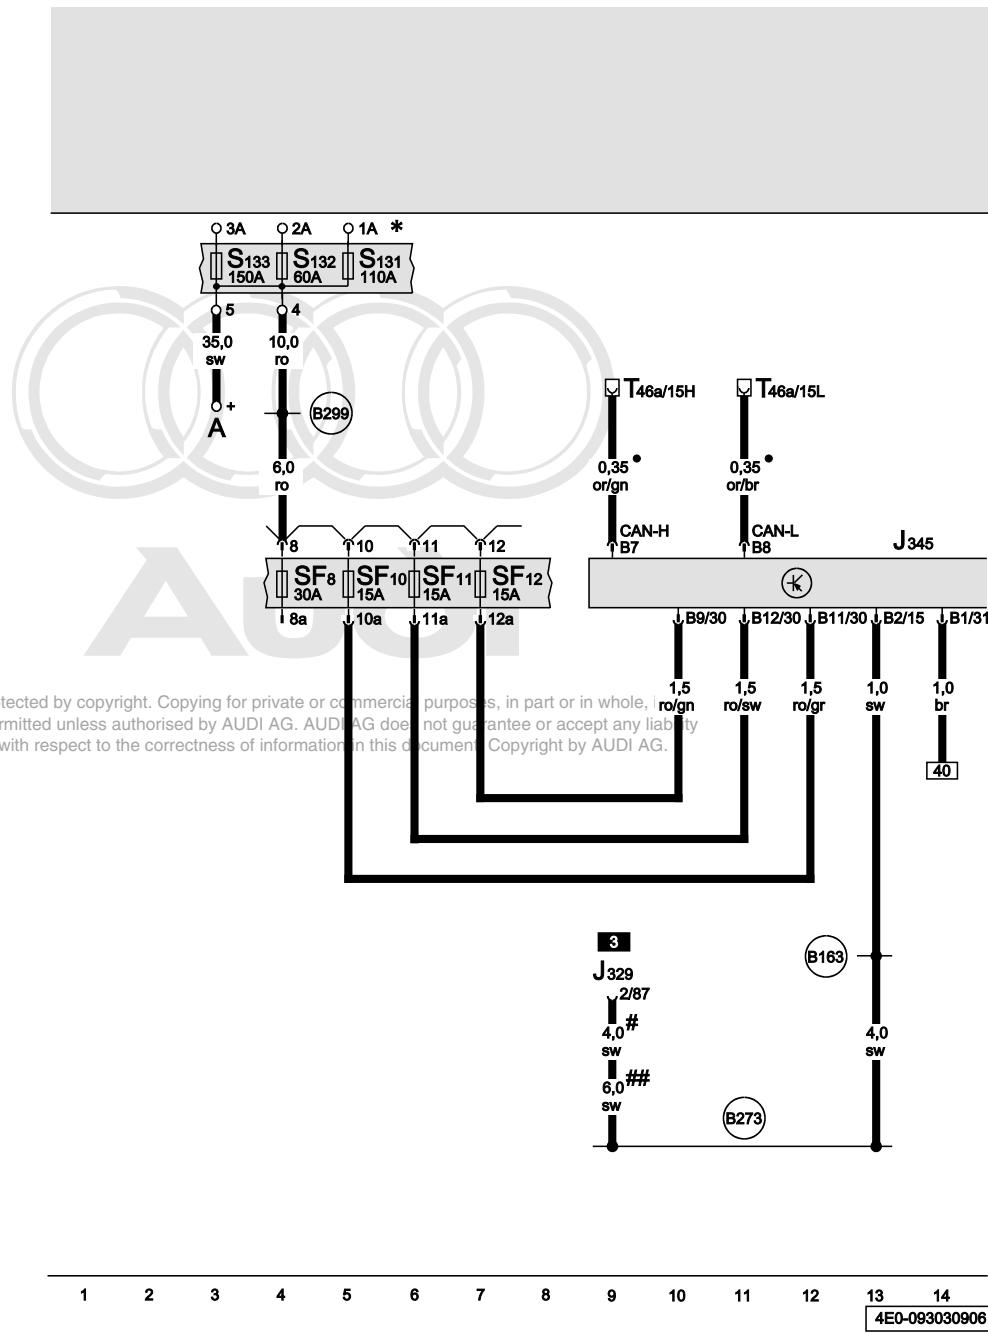
Trailer detector control unit, fuses

- | | |
|------|--|
| A | Battery |
| J329 | Terminal 15 voltage supply relay |
| J345 | Trailer detector control unit |
| S131 | Fuse 1, 110 A, in luggage compartment, rear right |
| S132 | Fuse 2, 60 A, in luggage compartment, rear right |
| S133 | Fuse 3, 150 A, in luggage compartment, rear right |
| SF8 | Fuse 8 on fuse holder F |
| SF10 | Fuse 10 on fuse holder F |
| SF11 | Fuse 11 on fuse holder F |
| SF12 | Fuse 12 on fuse holder F |
| T46a | 46-pin connector, black, CAN separating connector left |
| B163 | Positive connection 1 (15), in interior wiring harness |
| B273 | Positive connection (15), in main wiring harness |
| B299 | Positive connection 3 (30), in main wiring harness |
- CAN bus (data wire)
 * In luggage compartment, rear right
 # up to April 2006
 ## from May 2006

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

1 2 3 4 5 6 7 8 9 10 11 12 13 14 4E0-093030906

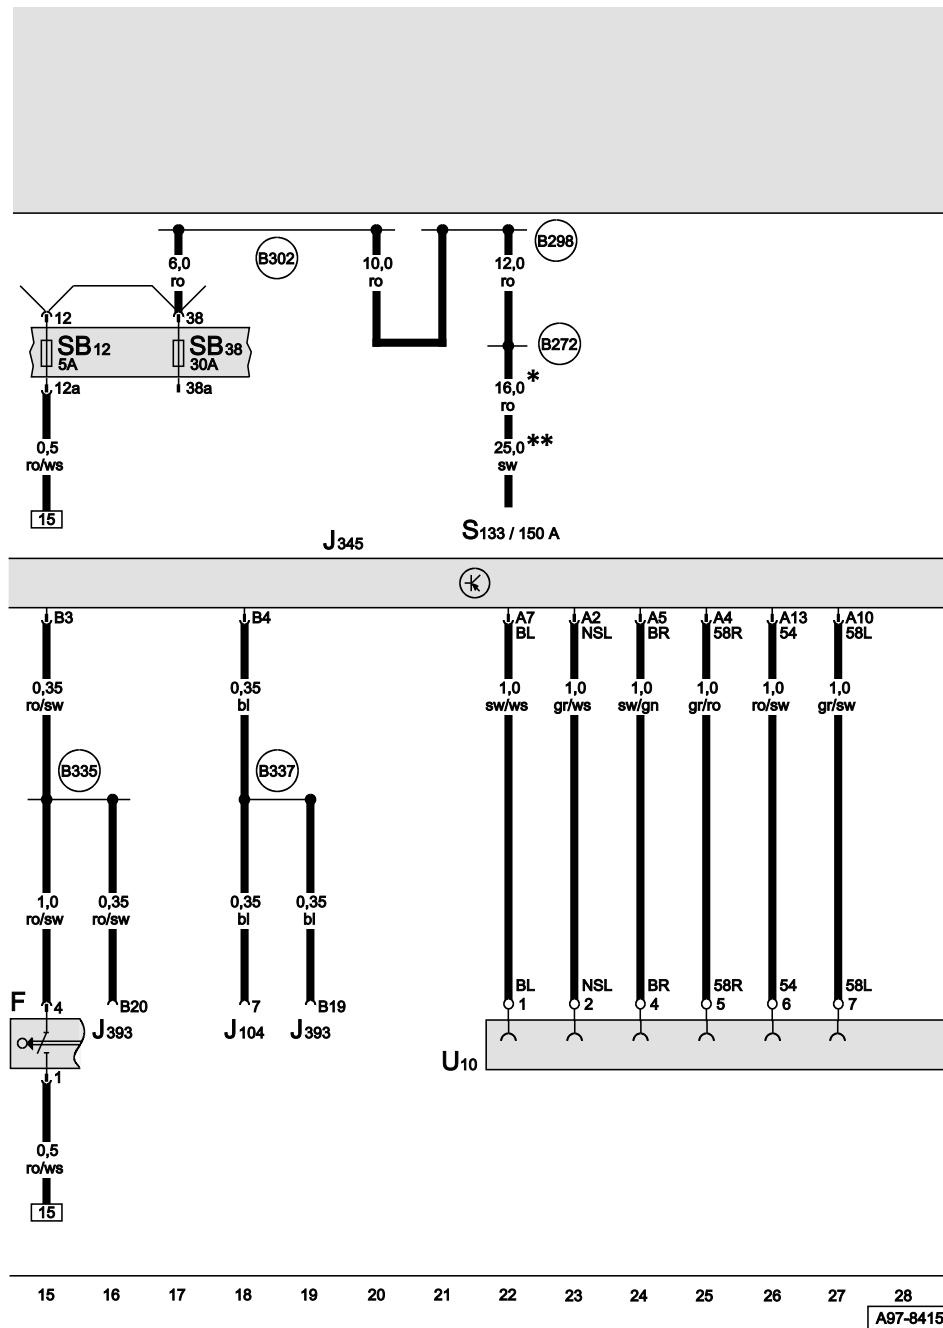

Trailer detector control unit, trailer socket, brake light switch

- F Brake light switch
- J104 ABS control unit
- J345 Trailer detector control unit
- J393 Convenience system central control unit
- S133 Fuse 3, 150 A, in luggage compartment, rear right
- SB12 Fuse 12 on fuse holder
- SB38 Fuse 38 on fuse holder
- U10 Trailer socket

B272 Positive connection (30), in main wiring harness

B298 Positive connection 2 (30), in main wiring harness

B302 Positive connection 6 (30), in main wiring harness

B335 Connection 1 (54), in main wiring harness

B337 Connection 3 (54), in main wiring harness

* models with petrol engines

** models with diesel engines

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information contained in this document. AUDI AG

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink


Trailer detector control unit, trailer socket

J345 Trailer detector control unit

U10 Trailer socket


51 Earth point, on right in luggage compartment

393 Earth connection 28, in main wiring harness

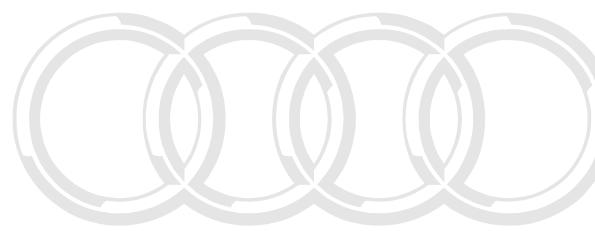

Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

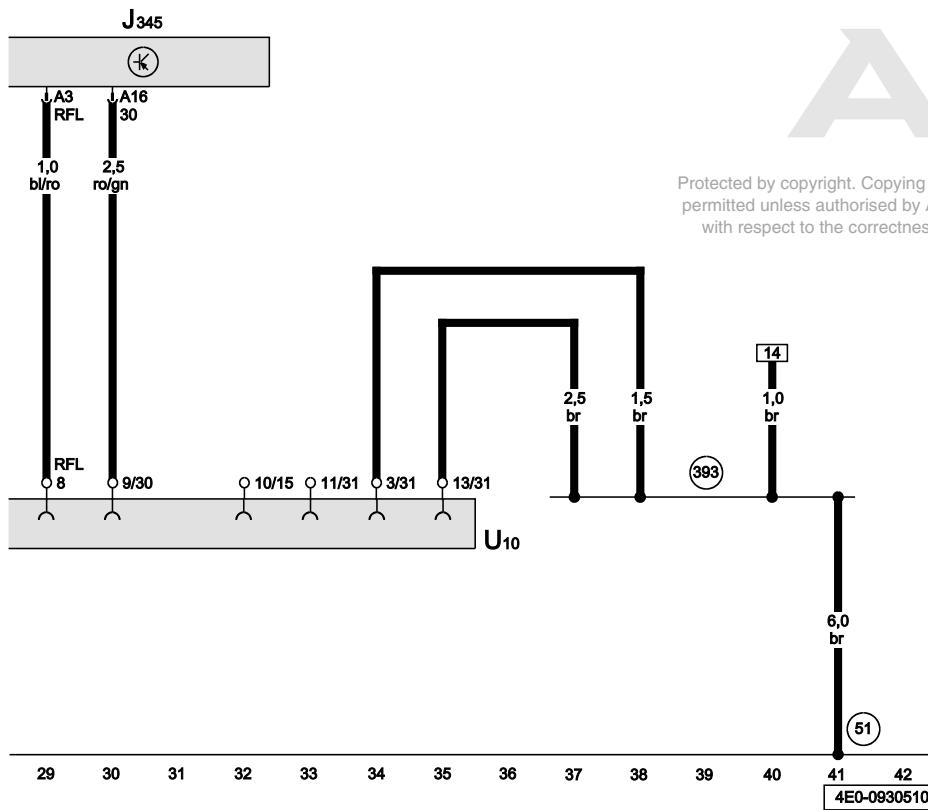


ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

Ultrasonic parking aid, front and rear

from model year 2005

Fuse holder, left dash panel

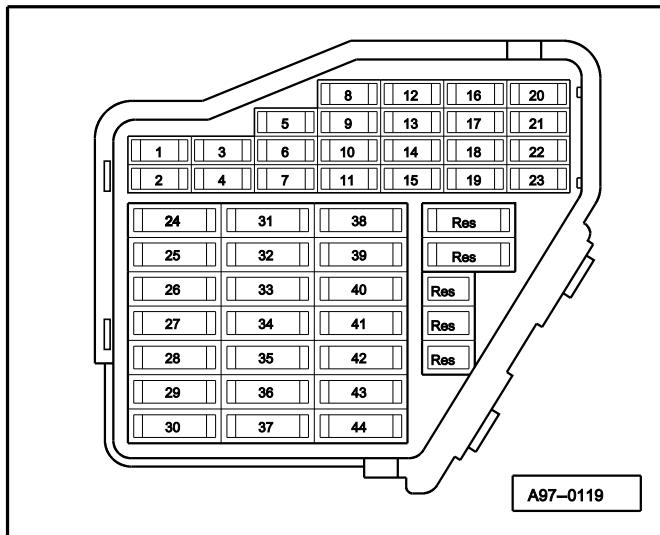

Fuse colours

30 A - green

25 A - white

20 A - yellow

15 A - blue

10 A - red

7,5 A - brown

5 A - beige


1 A - black

SB - Fuses in fuse holder left dash panel

SC - Fuses in fuse holder right dash panel

SD - Fuses in fuse holder left in luggage compartment


SF - Fuses in fuse holder right in luggage compartment

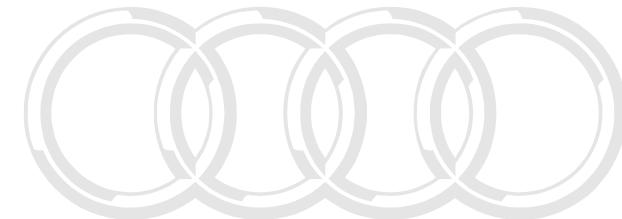


Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Fuse holder right dash panel

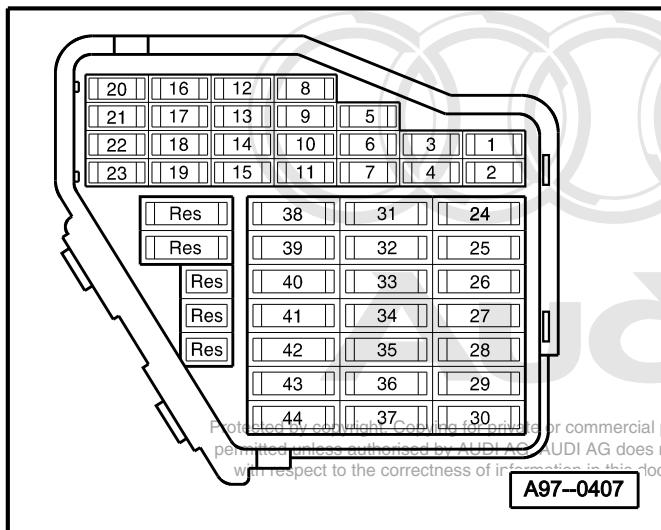


Relay and fuse carrie behind left dash panel

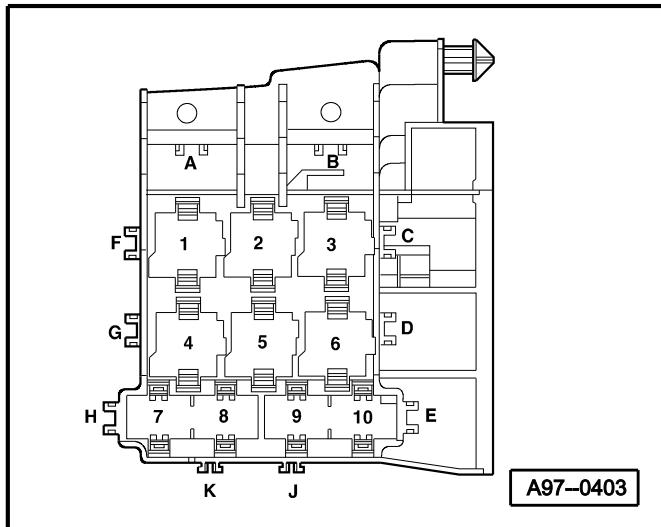

Relay positions



3 - Terminal 15 voltage supply relay (J329)

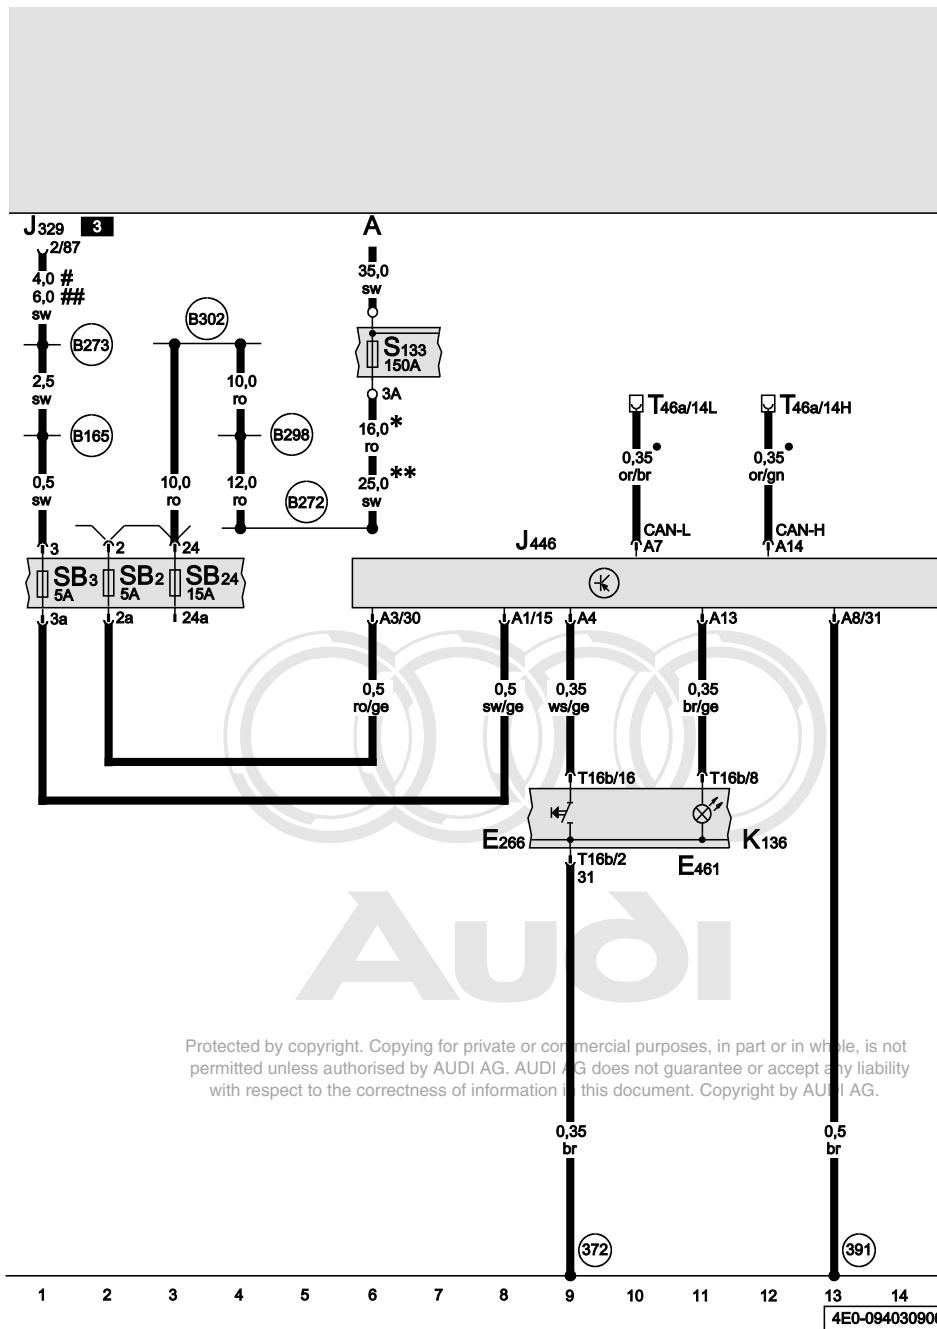
Parking aid control unit, parking aid button, parking aid warning lamp

- A Battery
- E266 Parking aid button
- E461 Operating unit in front of centre console
- J329 Terminal 15 voltage supply relay
- J446 Parking aid control unit
- K136 Parking aid button
- S133 Fuse 3, 150 A, in luggage compartment, rear right
- SB2 Fuse 2 on fuse holder B
- SB3 Fuse 3 on fuse holder B
- SB24 Fuse 24 on fuse holder B
- T16b 16-pin connector, black, on operating unit in front of centre console
- T46a 46-pin connector, black, CAN separating connector left
- 372 Earth connection 7, in main wiring harness
- 391 Earth connection 26, in main wiring harness
- B165 Positive connection 2 (15), in interior wiring harness
- B272 Positive connection (30), in main wiring harness
- B273 Positive connection (15), in main wiring harness
- B298 Positive connection 2 (30), in main wiring harness
- B302 Positive connection 6 (30), in main wiring harness
- CAN bus (data wire)
- * models with petrol engines
- ** models with diesel engines
- # up to April 2006
- ## from May 2006

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

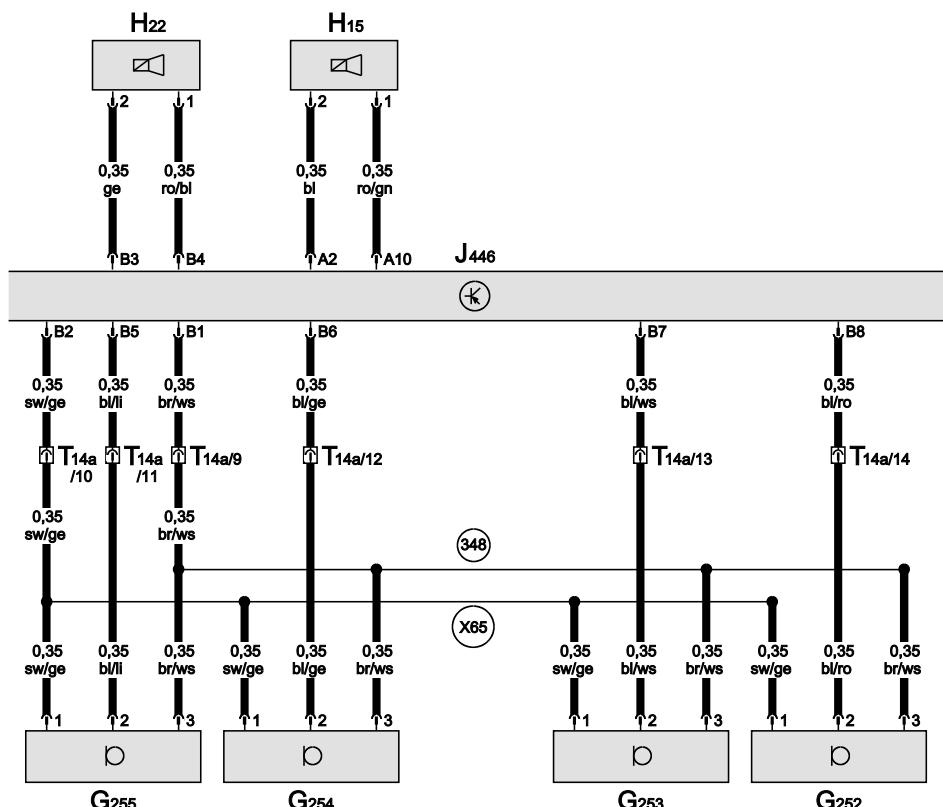 


Parking aid control unit, front parking aid sender, parking aid warning buzzer

- G252 Front right parking aid sender
- G253 Front centre right parking aid sender
- G254 Front centre left parking aid sender
- G255 Front left parking aid sender
- H15 Rear parking aid warning buzzer
- H22 Front parking aid warning buzzer
- J446 Parking aid control unit
- T14a 14-pin connector, black, on front left in engine compartment

348 Earth connection (parking aid), in front bumper wiring harness

X65 Connection (parking aid), in front bumper wiring harness

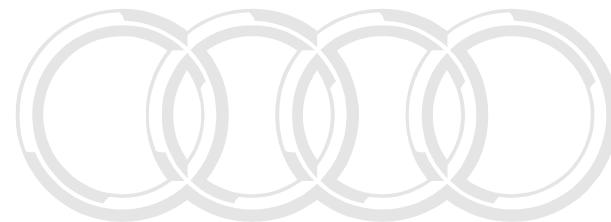


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

Parking aid control unit, rear parking aid sender

- G203 Rear left parking aid sender
 G204 Rear centre left parking aid sender
 G205 Rear centre right parking aid sender
 G206 Rear right parking aid sender
 J446 Parking aid control unit
 T17o 17-pin connector, black, in luggage compartment

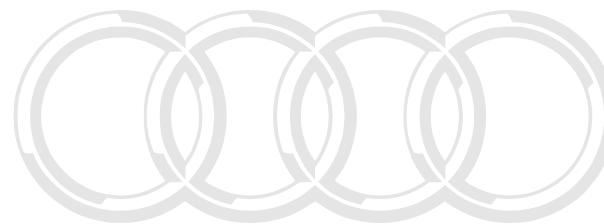

AUDI

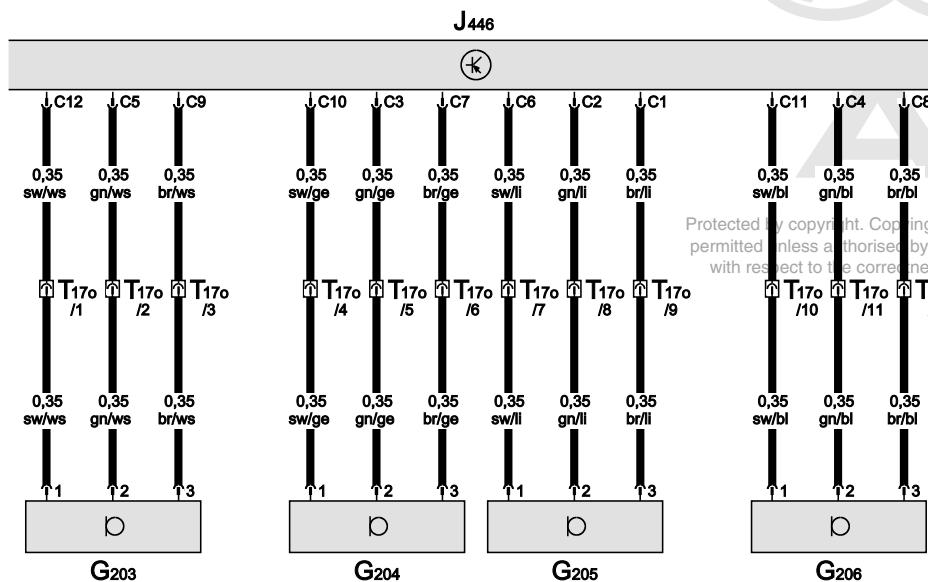

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- ge = yellow
- or = orange
- rs = pink



29 30 31 32 33 34 35 36 37 38 39 40 41 42

97-55625

Telephone

From model year 2005

Fuse box, dash panel, left

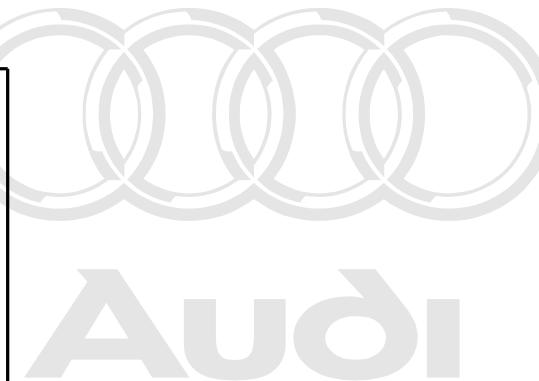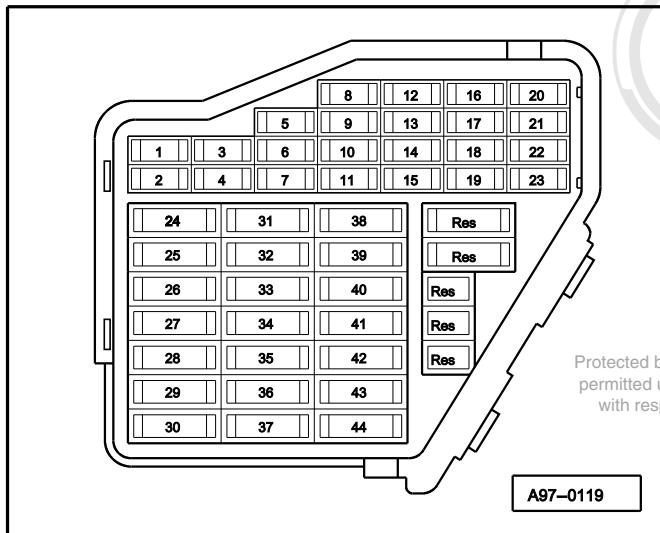

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Fuse colours

30 A - green

25 A - white

20 A - yellow

15 A - blue

10 A - red

7.5 A - brown

5 A - beige

1 A - black



SB - Fuses in fuse box, dash panel, left

SC - Fuses in fuse box, dash panel, right


SD - Fuses in fuse box, luggage compartment, left

SF - Fuses in fuse box, luggage compartment, right


Fuse box, dash panel, right

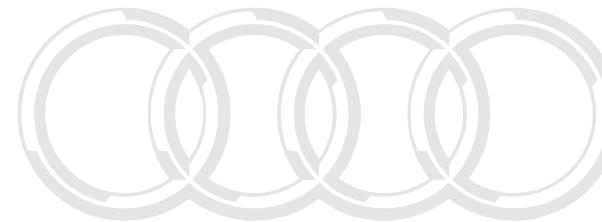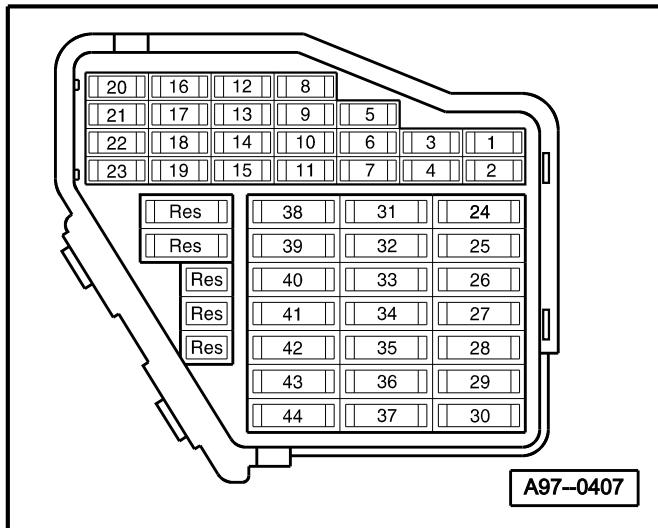

Relay and fuse carrier, behind dash panel, left

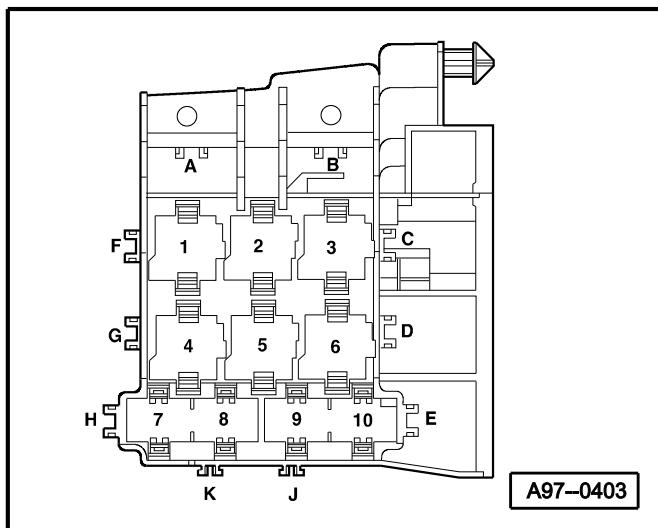

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


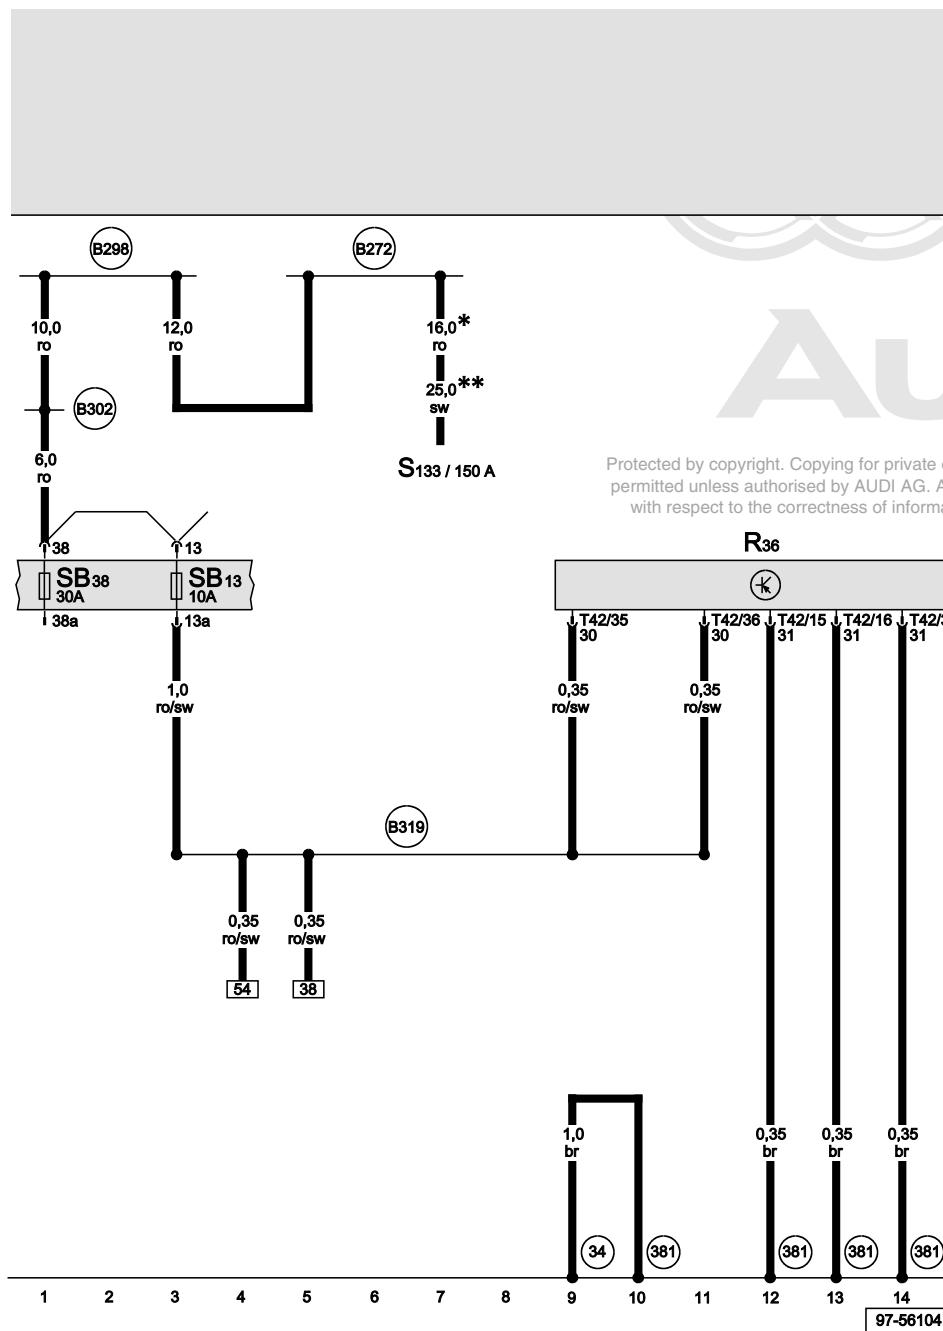

Telephone transmitter and receiver unit, fuses

- R36 Telephone transmitter and receiver unit
- S133 Fuse 3, 150 A, in luggage compartment, rear right
- SB13 Fuse 13 on fuse box
- SB38 Fuse 38 on fuse box
- T42 42-pin connector, on telephone transmitter and receiver unit
- 34 Earth point under driver's seat
- 381 Earth connection 16, in main wiring harness
- B272 Positive (+) connection (30), in main wiring harness
- B298 Positive (+) connection 2 (30), in main wiring harness
- B302 Positive (+) connection 6 (30), in main wiring harness
- B319 Positive (+) connection 5 (30a), in main wiring harness

* Models with petrol engines

** Models with diesel engines

 ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

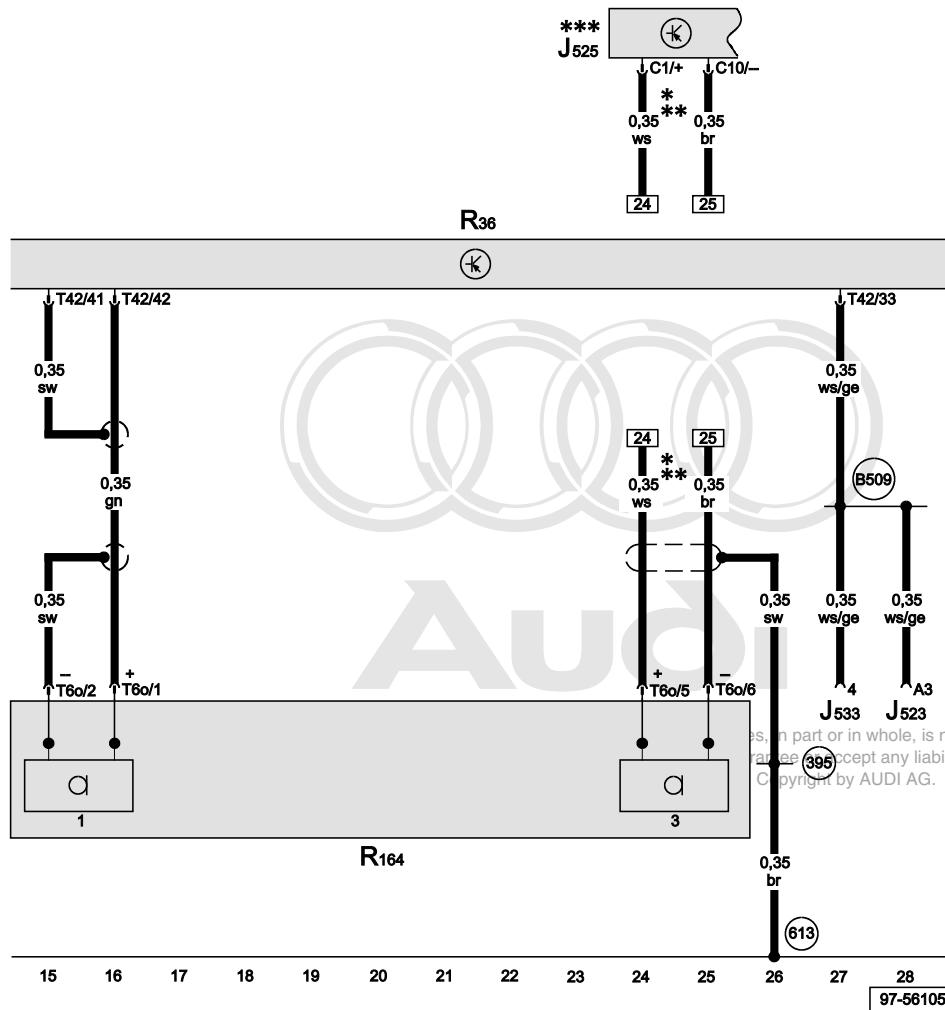

Telephone transmitter and receiver unit, microphone unit in front roof module

- J523 Front information display and operating unit control unit
- J525 Digital sound package control unit
- J533 Data bus diagnostic interface
- R36 Telephone transmitter and receiver unit
- R164 Microphone unit in front roof module
- T6o 6-pin connector, blue, on microphone unit in front roof module
- T42 42-pin connector, on telephone transmitter and receiver unit

395 Earth connection 30, in main wiring harness

613 Earth point (audio), in luggage compartment, left

B509 Connection 3 (diagnosis), in main wiring harness (ring circuit monitor diagnosis)

- * Models without voice control
- ** Models with voice control
- *** Models with radio Bose


ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink


Telephone transmitter and receiver unit, aerial for Bluetooth, telephone handset

- R36 Telephone transmitter and receiver unit
- R37 Telephone handset
- R152 Aerial for Bluetooth
- T12b 12-pin connector, on telephone handset
- T42 42-pin connector, on telephone transmitter and receiver unit
- * In centre armrest
- ** With chip card reader


Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

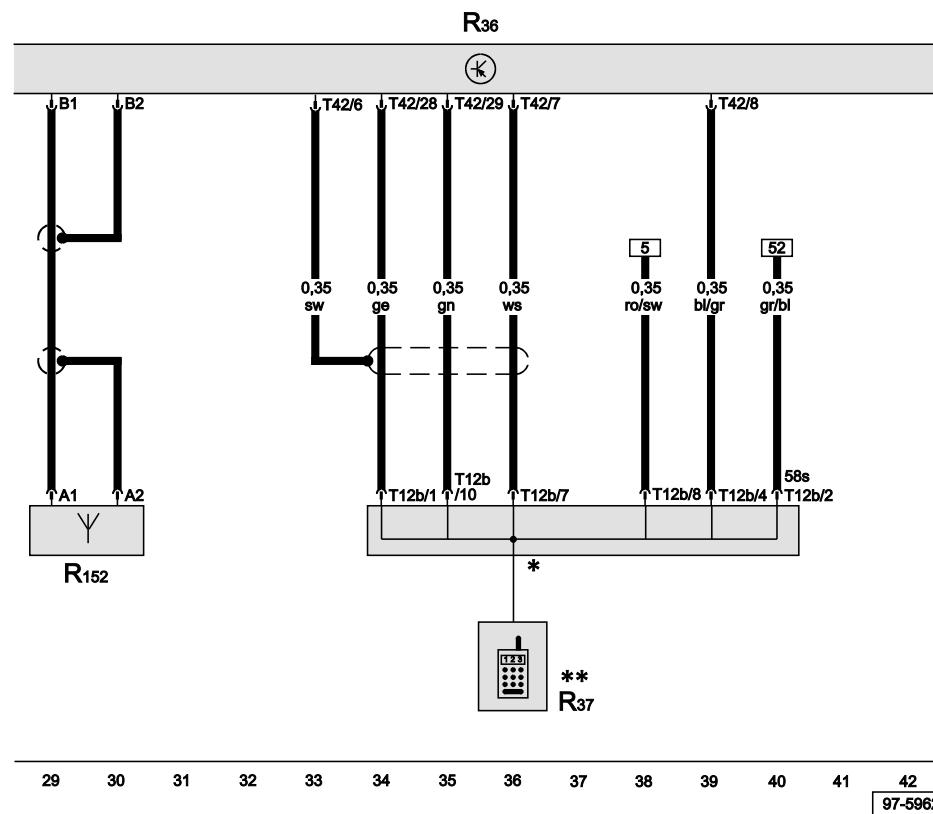

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

97-59626

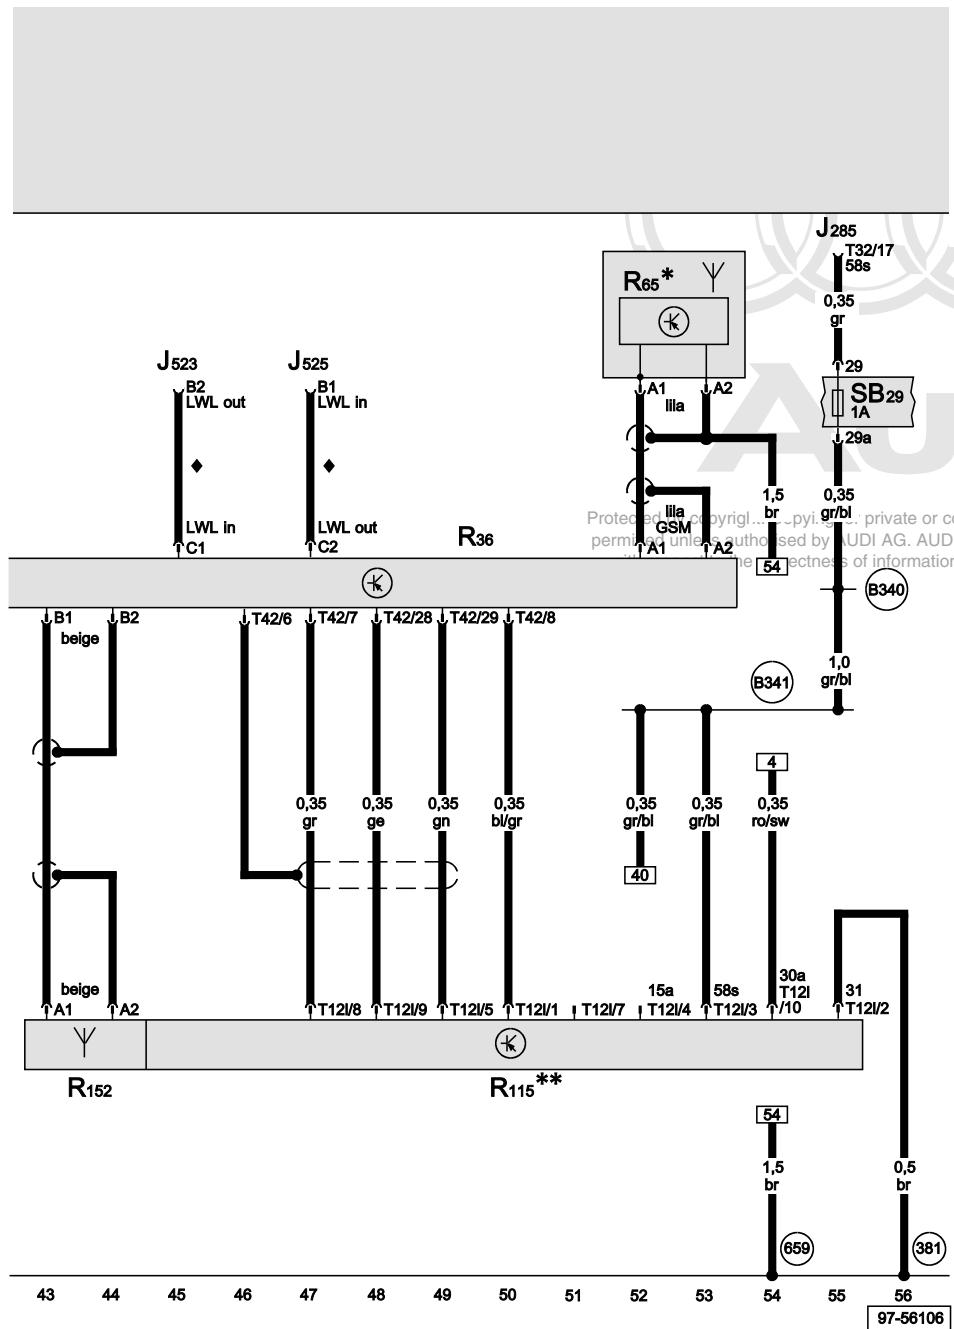

Telephone transmitter and receiver unit, aerial for Bluetooth, telephone aerial, chip card reader for telephone

- J285 Control unit in dash panel insert
- J523 Front information display and operating unit control unit
- J525 Digital sound package control unit
- R36 Telephone transmitter and receiver unit
- R65 Telephone aerial
- R115 Chip card reader for telephone
- R152 Aerial for Bluetooth
- SB29 Fuse 29 on fuse box
- T12I 12-pin connector, on chip card reader for telephone
- T32 32-pin connector, blue, on dash panel insert
- T42 42-pin connector, on telephone transmitter and receiver unit
- (381) Earth connection 16, in main wiring harness
- (659) Earth point 1, on right near rear window
- (B340) Connection 1 (58s), in main wiring harness
- (B341) Connection 2 (58s), in main wiring harness

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

Preparation for mobile telephone

⇒ Preparation for mobile telephone with Bluetooth car phone
from model year 2005

Notes:

For information concerning

- ◆ Position of relays and fuses

- ◆ Multi-pin connections

- ◆ Control units and relays

- ◆ Earth connections

⇒ List of Fitting Locations!


For information concerning

- ◆ Fault Finding Programs

⇒ guided fault finding





Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

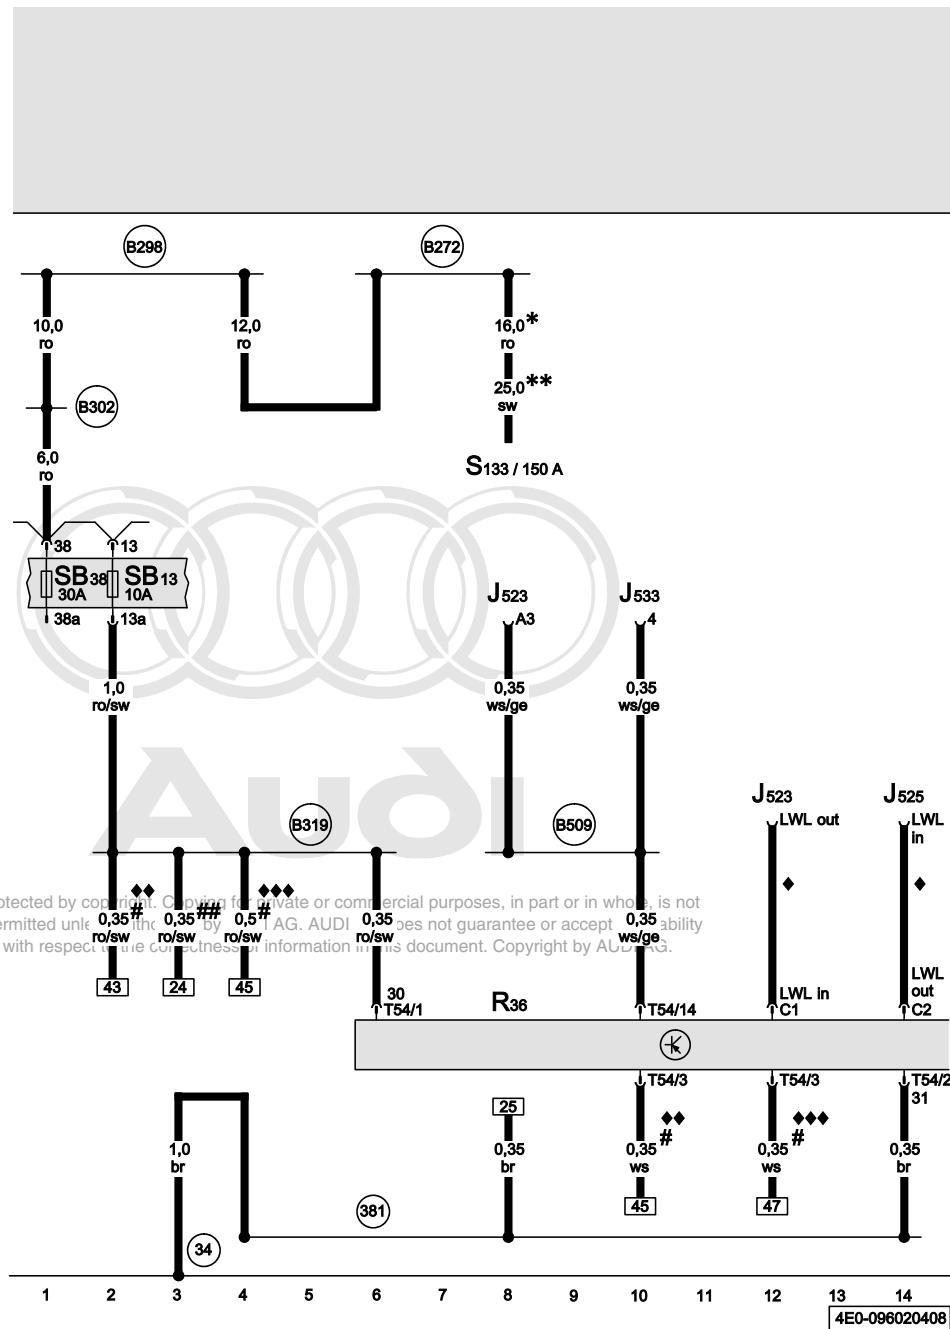

Telephone transmitter and receiver unit, fuses

- J523 Front information display and operating unit control unit
- J525 Digital sound package control unit
- J533 Data bus diagnostic interface
- R36 Telephone transmitter and receiver unit
- S133 Fuse 3
- SB13 Fuse 13 on fuse holder B
- SB38 Fuse 38 on fuse holder B
- T54 54-pin connector, on telephone transmitter and receiver unit
- 34 Earth point, under driver seat
- 381 Earth connection 16, in main wiring harness
- B272 Positive connection (30), in main wiring harness
- B298 Positive connection 2 (30), in main wiring harness
- B302 Positive connection 6 (30), in main wiring harness
- B319 Positive connection 5 (30a), in main wiring harness
- B509 Connection 3 (diagnosis), in main wiring harness (ring brake diagnosis)
- * models with petrol engines
- ** models with diesel engines
- # not for preparation for mobile telephone Bluetooth
- ## preparation for mobile telephone Bluetooth only
- ◆ Fibre optic conductor, ⇒ Current Flow Diagram infotainment data bus (Most Ring)
- ◆◆ up to May 2008
- ◆◆◆ from June 2008

 ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

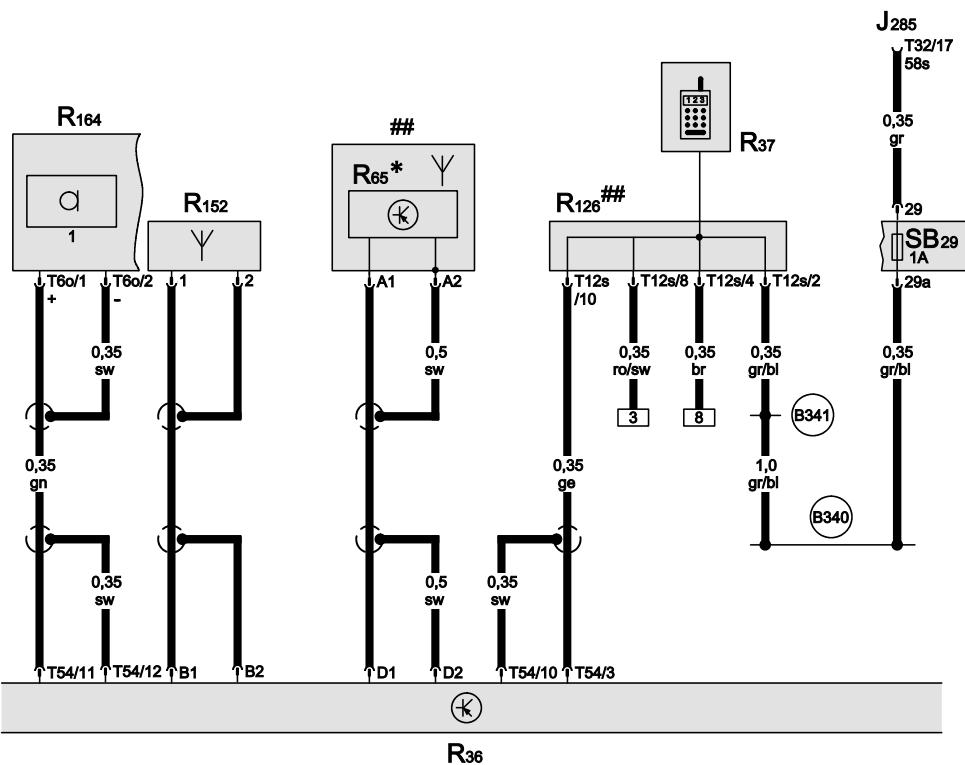

15 16 17 18 19 20 21 22 23 24 25 26 27 28
4E0-096030408

Telephone transmitter and receiver unit, aerial for Bluetooth, microphone unit in front roof module


- J285 Control unit in dash panel insert
 - R36 Telephone transmitter and receiver unit
 - R37 Telephone handset
 - R65 Telephone aerial
 - R126 Telephone bracket
 - R152 Aerial for Bluetooth
 - R164 Microphone unit in front roof module
 - SB29 Fuse 29 on fuse holder B
 - T6o 6-pin connector, blue, on microphone unit in front roof module
 - T12s 12-pin connector, on telephone bracket
 - T32 32-pin connector, blue, on dash panel insert
 - T54 54-pin connector, on telephone transmitter and receiver unit
 - B340** Connection 1 (58s), in main wiring harness
 - B341** Connection 2 (58s), in main wiring harness
- * roof aerial
roof aerial preparation for mobile telephone Bluetooth only

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

Telephone transmitter and receiver unit, mobile telephone


- R36 Telephone transmitter and receiver unit
 R54 Mobile telephone
 R126 Telephone bracket
 T12g 12-pin connector, on mobile telephone
 T54 54-pin connector, on telephone transmitter and receiver unit
 * up to model year 2005
 ** from model year 2006
 # not for preparation for mobile telephone Bluetooth
 ## is dropped from June 2008, models without insulating glass

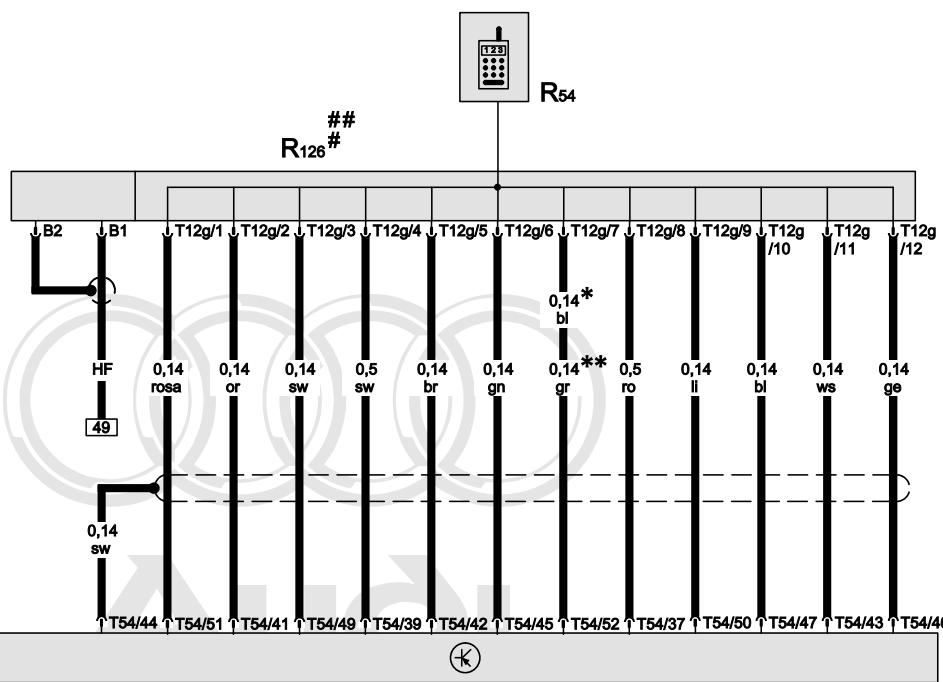

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

 29 30 31 32 33 34 35 36 37 38 39 40 41 42
 4E0-096040408



Aerial amplifier for mobile telephone, telephone aerial

R65 Telephone aerial
R86 Aerial amplifier for mobile telephone
T3ao 3-pin connector, black, on aerial amplifier for mobile telephone
T4ba 4-pin connector, black, on aerial amplifier for mobile telephone

(394) Earth connection 29, in main wiring harness


(654) Earth point, right D-pillar

* roof aerial

** up to May 2008

*** from June 2008

not for preparation for mobile telephone Bluetooth

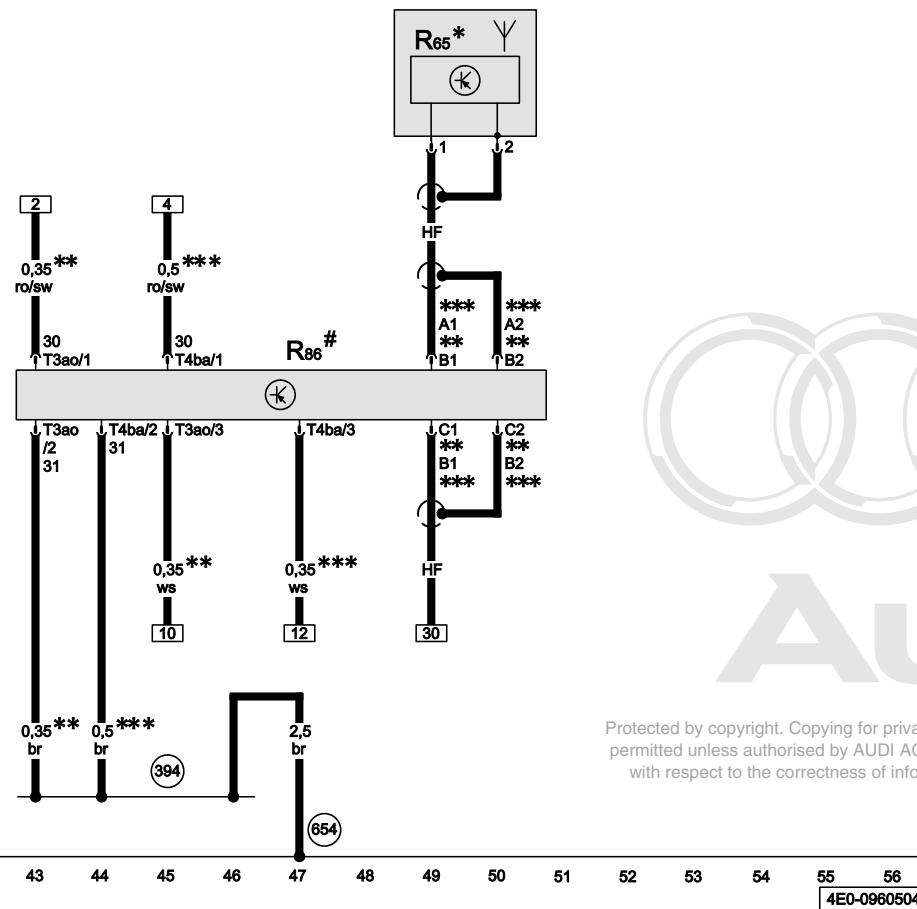


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

4E0-096050408

Navigation system

From model year 2005

Fuse box, dash panel, left

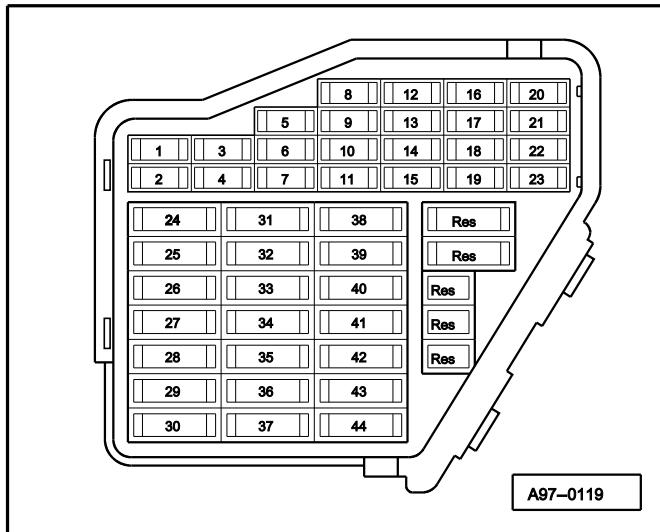

Fuse colours

30 A - green

25 A - white

20 A - yellow

15 A - blue

10 A - red

7.5 A - brown

5 A - beige

1 A - black

SB - Fuses in fuse box, dash panel, left

SC - Fuses in fuse box, dash panel, right


SD - Fuses in fuse box, luggage compartment, left

SF - Fuses in fuse box, luggage compartment, right




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Fuse box, dash panel, right

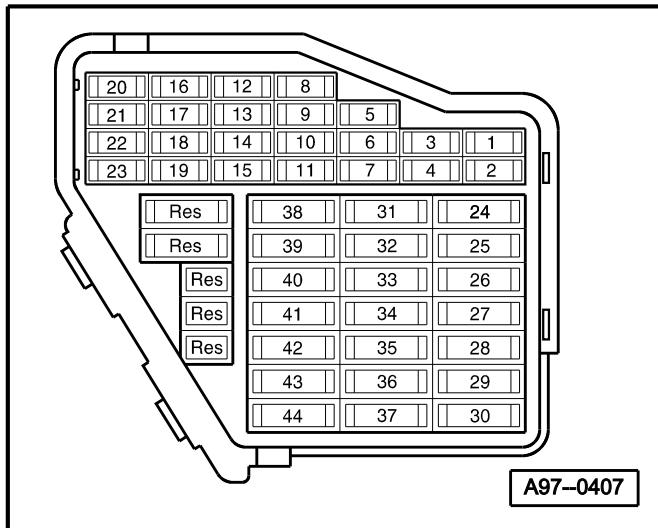


Fuse box in luggage compartment, left

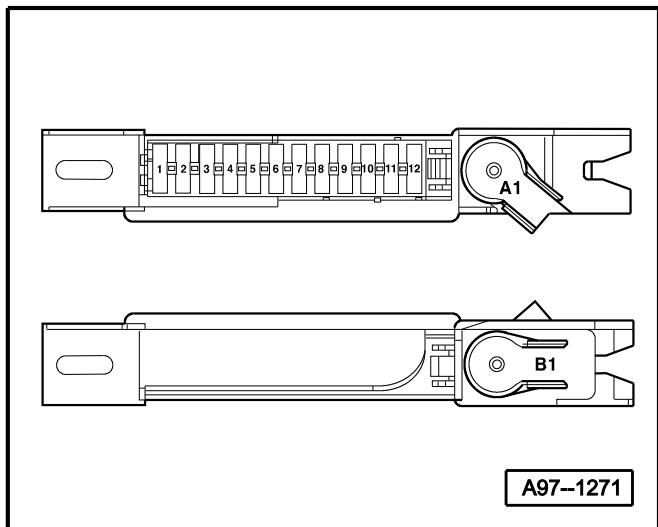

Position of fuses

6 - Navigation system with CD drive control unit (J401)

A1 - Screw connection for terminal 30 (battery)

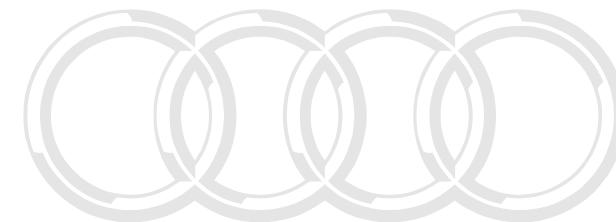


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

B1 - Screw connection for terminal 30




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

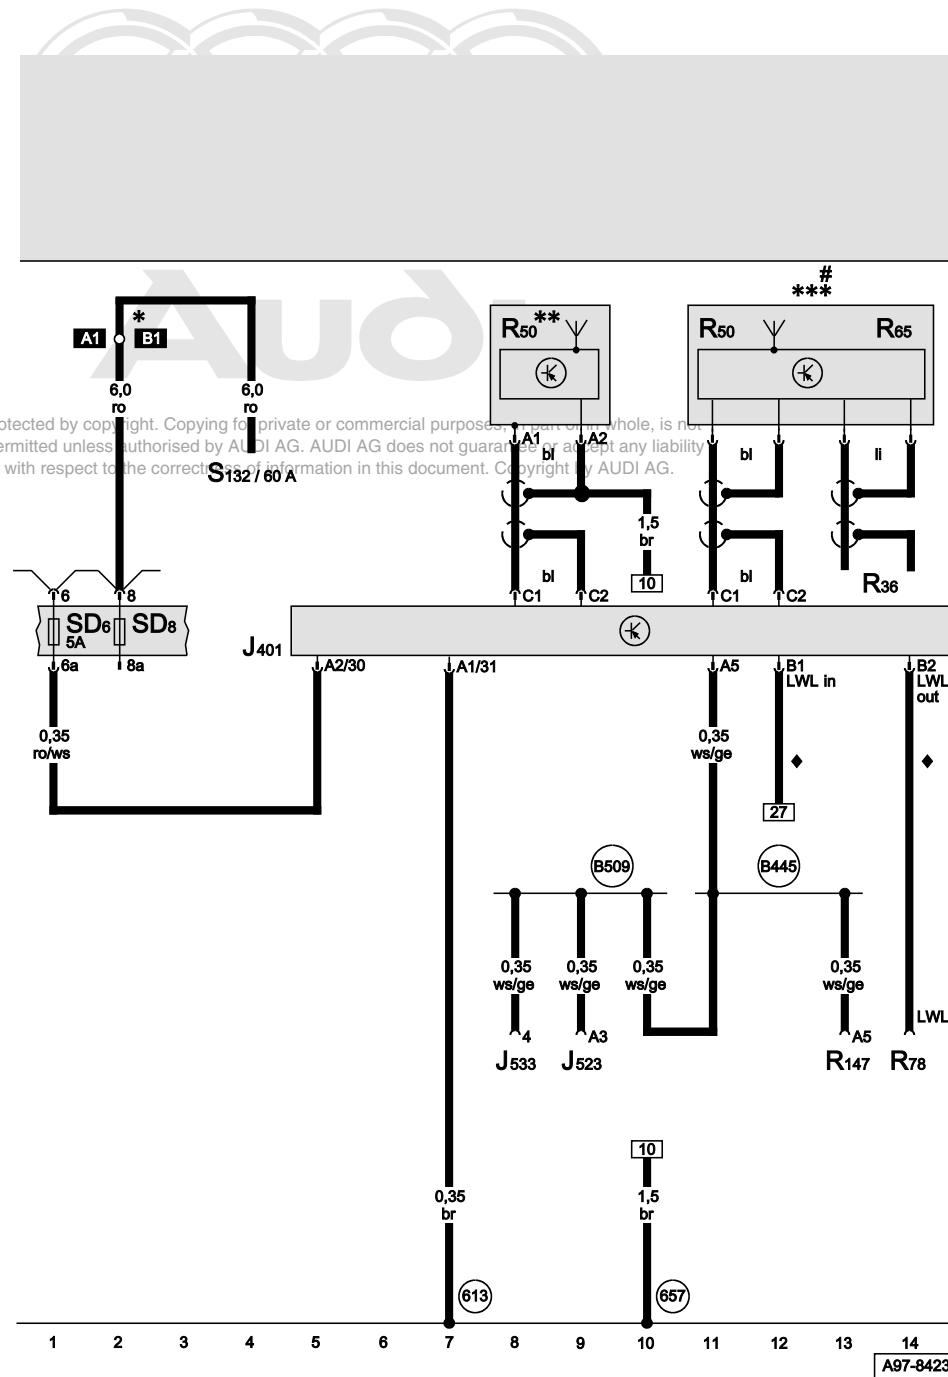

Navigation system with CD drive control unit, fuses, navigation system aerial, telephone aerial

- J401 Navigation system with CD drive control unit
- J523 Front information display and operating unit control unit
- J533 Data bus diagnostic interface
- R36 Telephone transmitter and receiver unit
- R50 Navigation system aerial
- R65 Telephone aerial
- R78 TV tuner
- R147 Digital radio
- S132 Fuse 2, 60 A, in luggage compartment, rear right
- SD6 Fuse 6 on fuse box
- SD8 Fuse 8 on fuse box
- 613 Earth point (audio), in luggage compartment, left
- 657 Earth point 1, on left near rear window
- B445 Connection 2 (diagnosis), in main wiring harness (ring circuit monitor diagnosis)
- B509 Connection 3 (diagnosis), in main wiring harness (ring circuit monitor diagnosis)
- * Screw connection on fuse box, rear left
- ** Behind rear roof trim
- *** Roof aerial
- # Models with telephone and navigation system
- ◆ Fibre optic cable (LWL)

 ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink



Microphone unit in front roof module, digital sound package control unit

J523 Front information display and operating unit control unit
 J525 Digital sound package control unit
 R36 Telephone transmitter and receiver unit
 R164 Microphone unit in front roof module
 T6o 6-pin connector, blue, on microphone unit in front roof module
 T42 42-pin connector, on telephone transmitter and receiver unit

(395) Earth connection 30, in main wiring harness

(613) Earth point (audio), in luggage compartment, left

- * Models without telephone
- ** Models with telephone
- *** Models with radio Bose
- # Models without voice control
- ## Models with voice control
- ◆ Fibre optic cable (LWL)

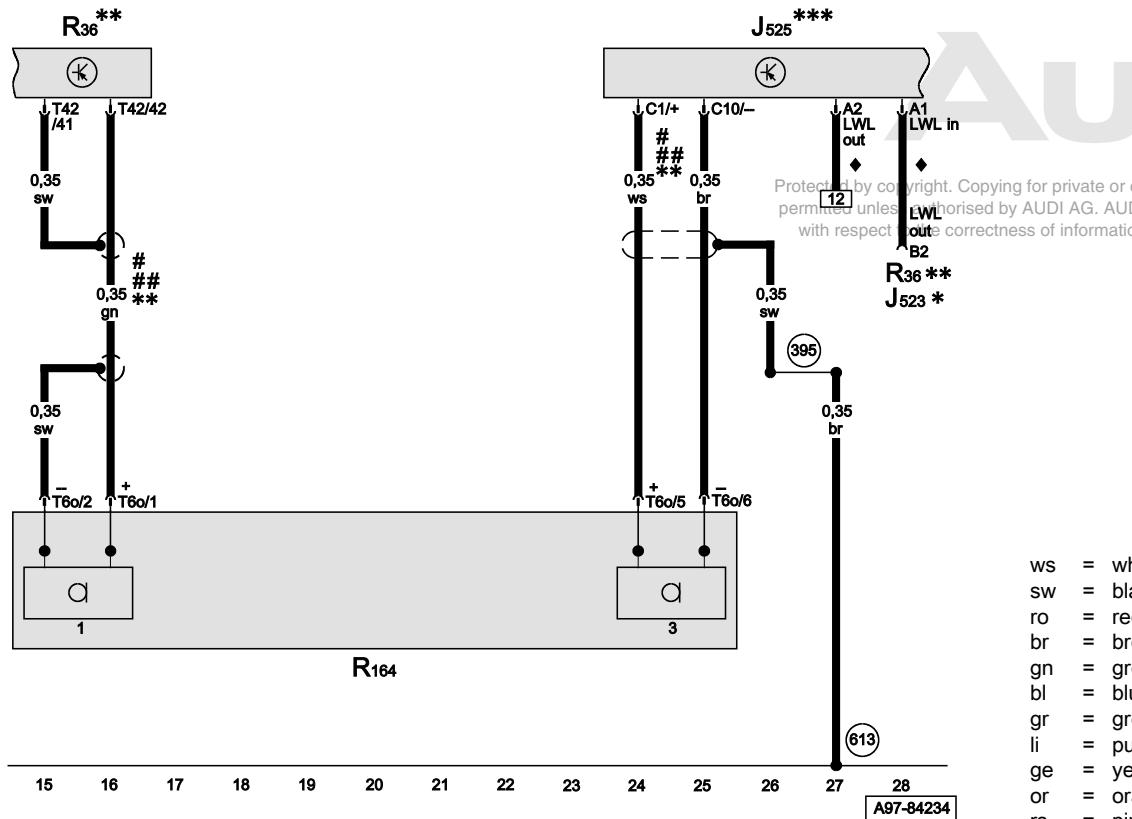


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

Headlights with gas discharge bulbs (xenon, bi-xenon), cornering lights and automatic headlight range control

From model year 2005

Fuse box, dash panel, left

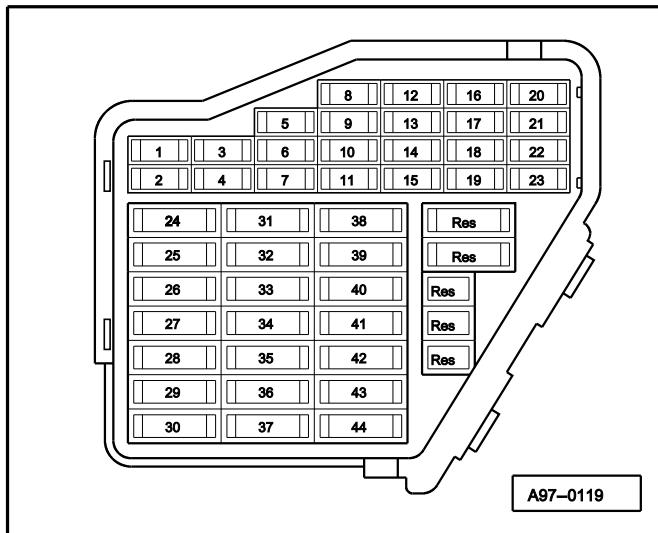

Fuse colours

30 A - green

25 A - white

20 A - yellow

15 A - blue

10 A - red

7.5 A - brown

5 A - beige

1 A - black

SB - Fuses in fuse box, dash panel, left

SC - Fuses in fuse box, dash panel, right



SD - Fuses in fuse box, luggage compartment, left

SF - Fuses in fuse box, luggage compartment, right




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Fuse box, dash panel, right

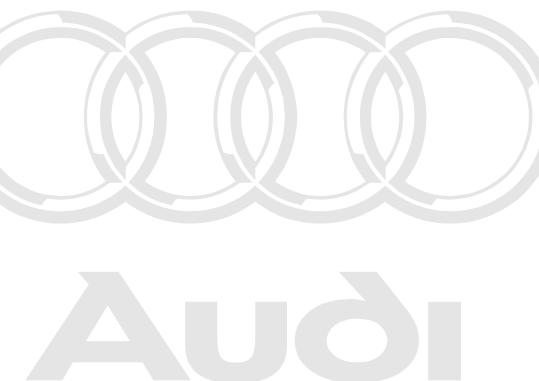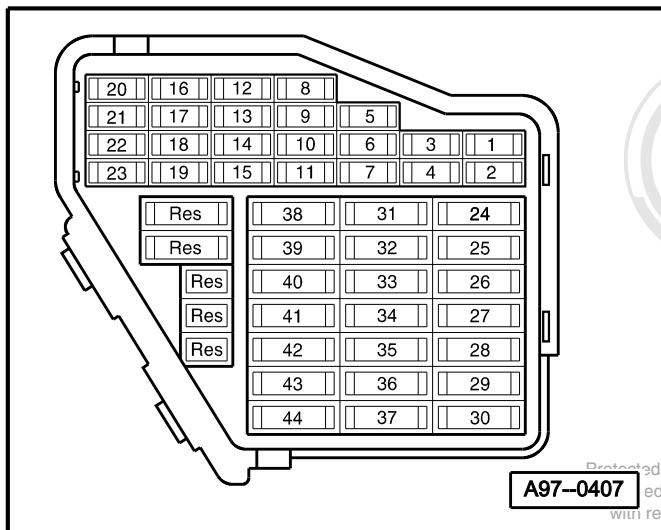


Relay and fuse carrier, behind dash panel, left

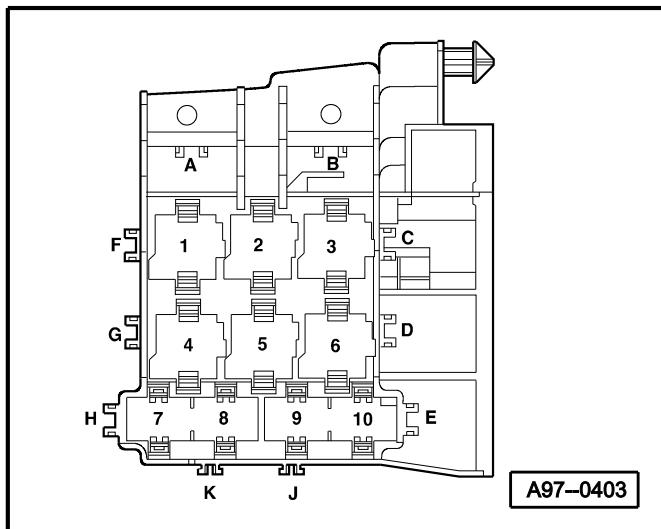


Position of relays

3 - Terminal 15 voltage supply relay (J329)

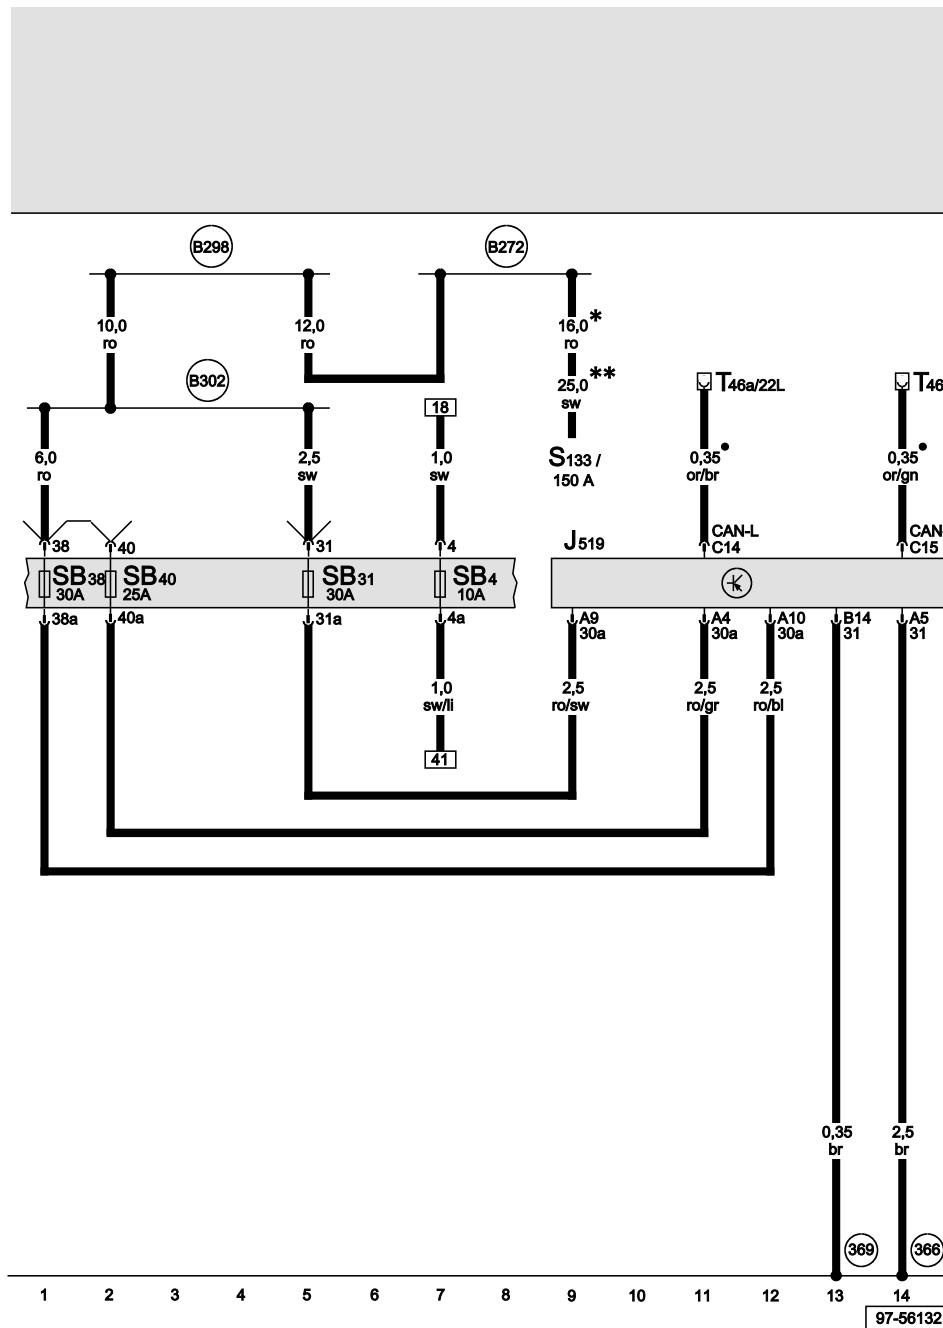

Onboard power supply control unit, fuses


- J519 Onboard power supply control unit
- S133 Fuse 3, 150 A, in luggage compartment, rear right
- SB4 Fuse 4 on fuse box
- SB31 Fuse 31 on fuse box
- SB38 Fuse 38 on fuse box
- SB40 Fuse 40 on fuse box
- T46a 46-pin connector, black, CAN separating connector, left
- 366 Earth connection 1, in main wiring harness
- 369 Earth connection 4, in main wiring harness
- B272 Positive (+) connection (30), in main wiring harness
- B298 Positive (+) connection 2 (30), in main wiring harness
- B302 Positive (+) connection 6 (30), in main wiring harness
- CAN bus (data wire)
- * Models with petrol engines
- ** Models with diesel engines

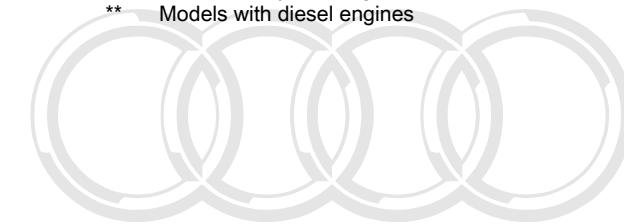

Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

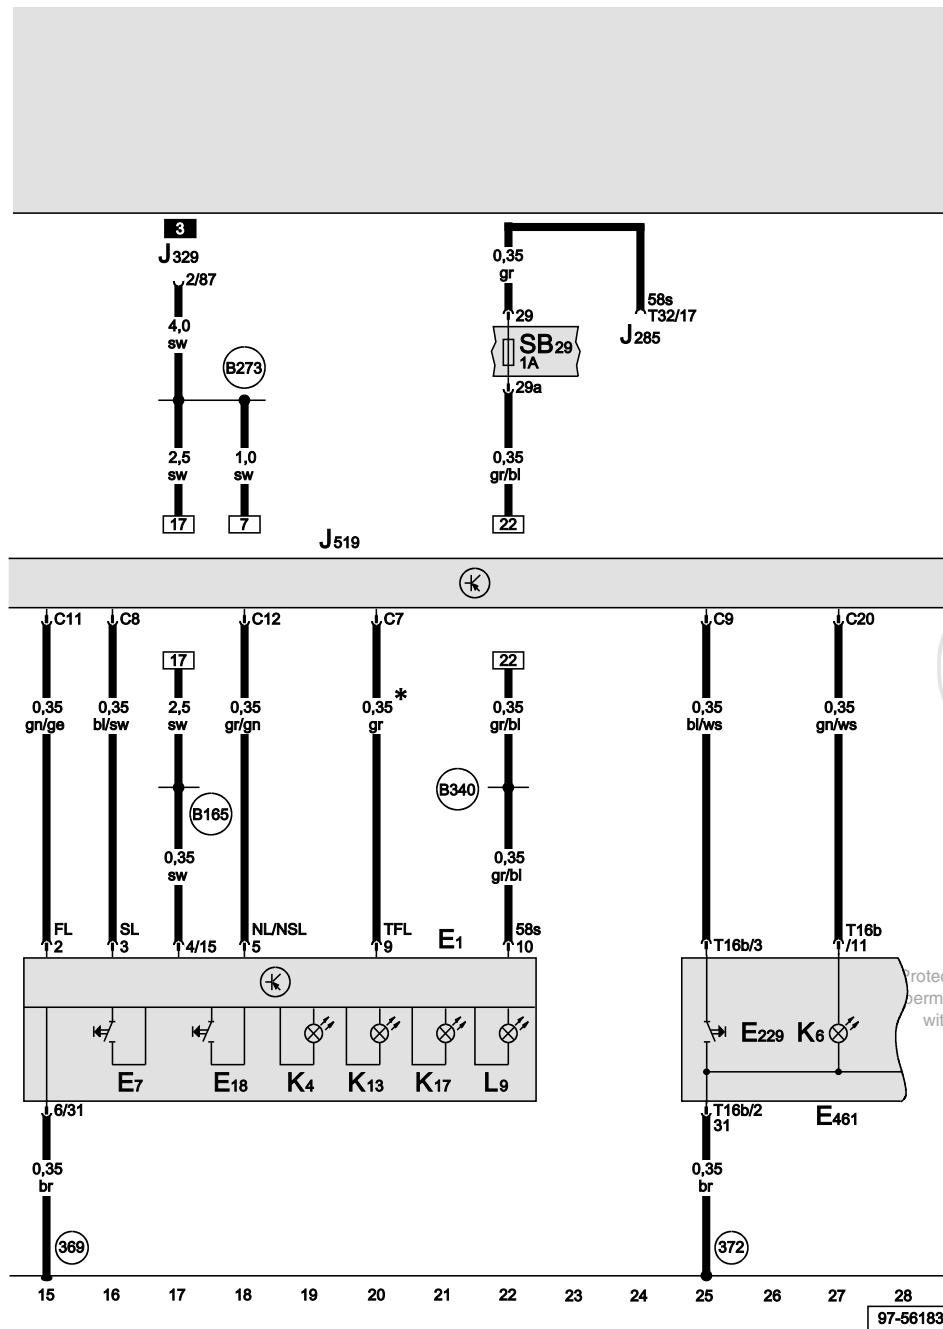



Onboard power supply control unit, light switch, fog light switch, rear fog light switch, hazard warning lights button

- | | |
|------|---|
| E1 | Light switch |
| E7 | Fog light switch |
| E18 | Rear fog light switch |
| E229 | Hazard warning lights button |
| E461 | Operating unit in front of centre console |
| J285 | Control unit in dash panel insert |
| J329 | Terminal 15 voltage supply relay |
| J519 | Onboard power supply control unit |
| K4 | Side light warning lamp |
| K6 | Hazard warning light system warning lamp |
| K13 | Rear fog light warning lamp |
| K17 | Fog light warning lamp |
| L9 | Light switch illumination bulb |
| SB29 | Fuse 29 on fuse box |
| T16b | 16-pin connector, black, on operating unit in front of centre console |
| T32 | 32-pin connector, blue, on dash panel insert |
| 369 | Earth connection 4, in main wiring harness |
| 372 | Earth connection 7, in main wiring harness |
| B165 | Positive (+) connection 2 (15), in interior wiring harness |
| B273 | Positive (+) connection (15), in main wiring harness |
| B340 | Connection 1 (58s), in main wiring harness |
| B466 | Connection 2, in main wiring harness |
- * Models with daytime driving lights

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

 97-56183

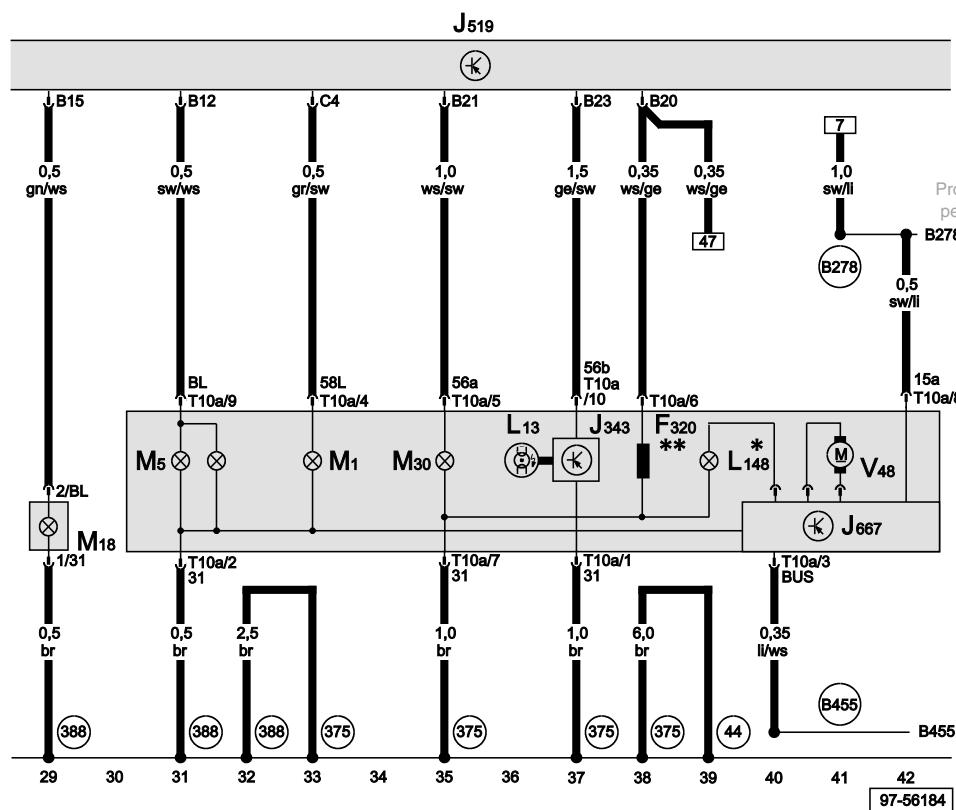

Onboard power supply control unit, left gas discharge light control unit, power output module for left headlight, left side light bulb, front left turn signal bulb, left main beam bulb, left cornering light bulb

- F320 Bi-xenon solenoid switch (masking)
- J343 Left gas discharge light control unit
- J519 Onboard power supply control unit
- J667 Power output module for left headlight
- L13 Left gas discharge bulb
- L148 Left cornering light bulb
- M1 Side light bulb, left
- M5 Turn signal bulb, front left
- M18 Side turn signal bulb, left
- M30 Main beam bulb, left
- T10a 10-pin connector, black, on left headlight
- V48 Headlight range control motor, left

44 Earth point, A pillar, bottom left

375 Earth connection 10, in main wiring harness

388 Earth connection 23, in main wiring harness

B278 Positive (+) connection 2 (15a), in main wiring harness

* Models with cornering lights

** Models with bi-xenon headlights

- | | |
|----|----------|
| ws | = white |
| sw | = black |
| ro | = red |
| br | = brown |
| gn | = green |
| bl | = blue |
| gr | = grey |
| li | = purple |
| ge | = yellow |
| or | = orange |
| rs | = pink |

Onboard power supply control unit, right gas discharge light control unit, power output module for right headlight, right cornering light bulb, front right turn signal bulb, right side light bulb, right main beam bulb

- F320 Bi-xenon solenoid switch (masking)
- J344 Right gas discharge light control unit
- J519 Onboard power supply control unit
- J668 Power output module for right headlight
- L14 Right gas discharge bulb
- L149 Right cornering light bulb
- M3 Side light bulb, right
- M7 Turn signal bulb, front right
- M19 Side turn signal bulb, right
- M32 Main beam bulb, right
- T10b 10-pin connector, black, on right headlight
- V49 Headlight range control motor, right

- 43 Earth point, A pillar, bottom right
- 386 Earth connection 21, in main wiring harness

- 387 Earth connection 22, in main wiring harness


- B278 Positive (+) connection 2 (15a), in main wiring harness


 
- B455 Connection (LWR (headlight range control)), in main wiring harness

* Models with cornering lights

** Models with bi-xenon headlights

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

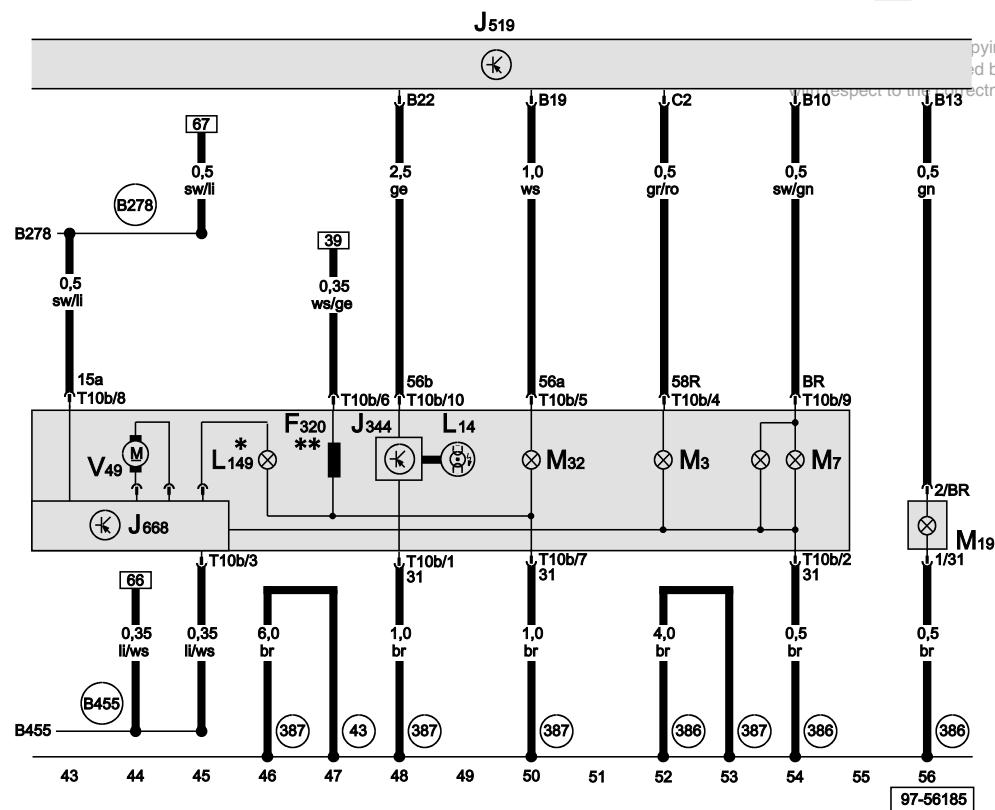

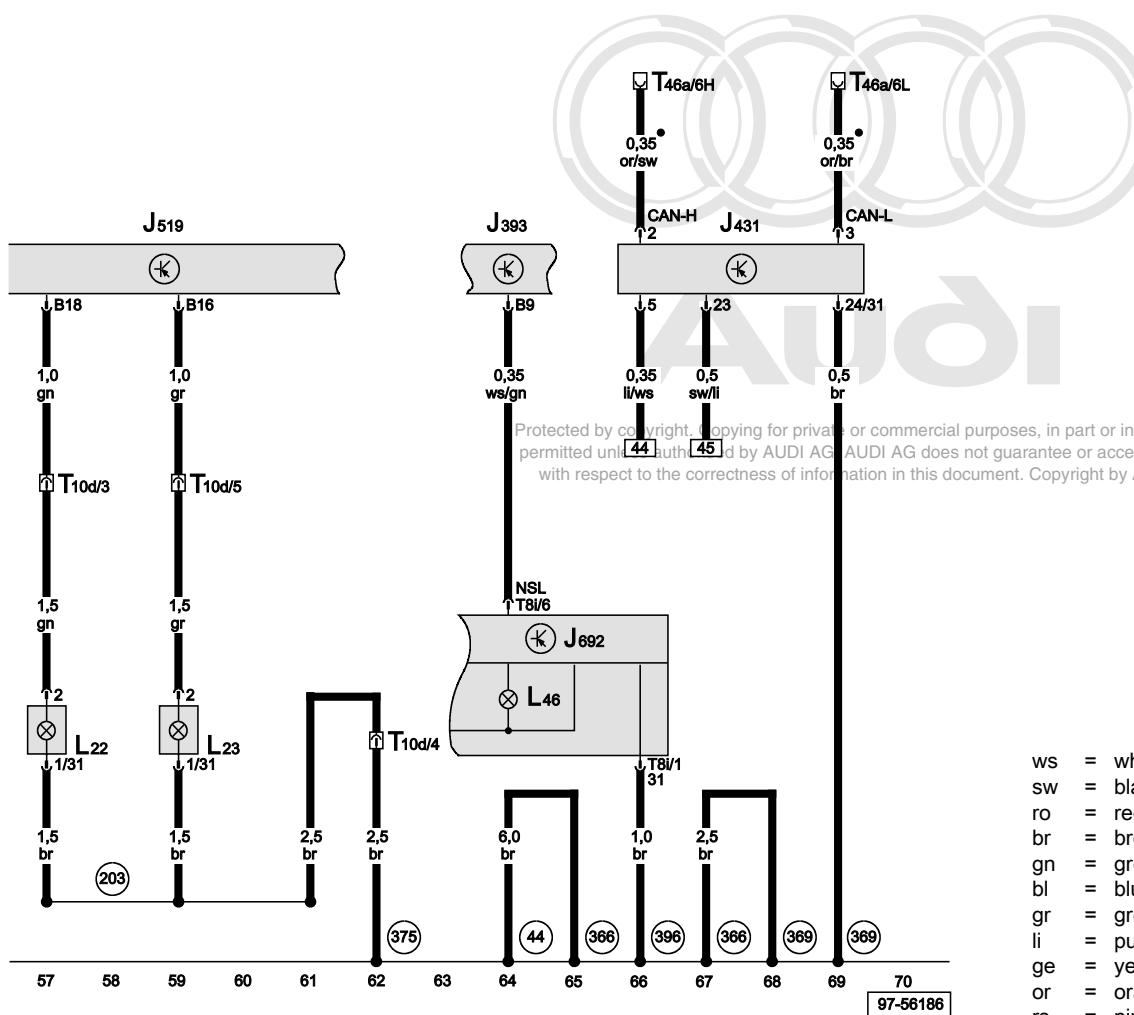

Onboard power supply control unit, control unit for headlight range control, front left fog light bulb, front right fog light bulb

- J393 Convenience system central control unit
- J431 Headlight range control, control unit
- J519 Onboard power supply control unit
- J692 Tail light control unit for lights on left in rear lid
- L22 Fog light bulb, left
- L23 Fog light bulb, right
- L46 Rear fog light bulb, left
- T8i 8-pin connector, black, connector 2, on left tail light, rear lid
- T10d 10-pin connector, black, in engine compartment, front left
- T46a 46-pin connector, black, CAN separating connector, left


- (44) Earth point, A pillar, bottom left
- (203) Earth connection in front fog light wiring harness
- (366) Earth connection 1, in main wiring harness
- (369) Earth connection 4, in main wiring harness
- (375) Earth connection 10, in main wiring harness
- (396) Earth connection 31, in main wiring harness
- CAN bus (data wire)

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

Electronic steering column lock

from model year 2005

Fuse holder, left dash panel

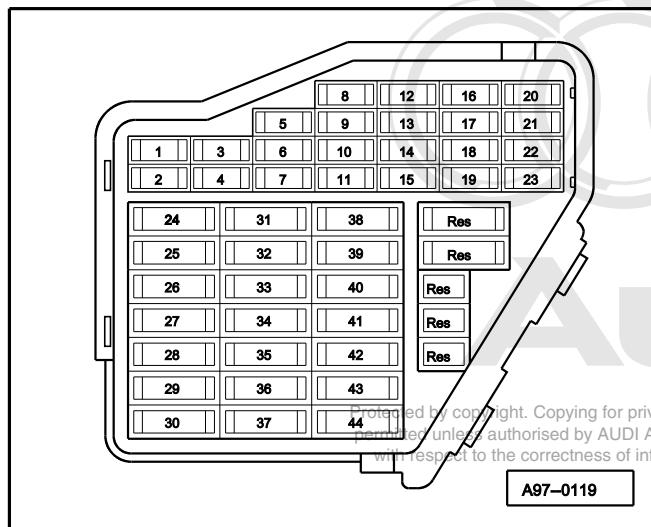

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Fuse colours

30 A - green

25 A - white

20 A - yellow

15 A - blue

10 A - red

7,5 A - brown

5 A - beige

1 A - black


SB - Fuses in fuse holder left dash panel

SC - Fuses in fuse holder right dash panel

SD - Fuses in fuse holder left in luggage compartment

SF - Fuses in fuse holder right in luggage compartment


Relay and fuse carrie behind left dash panel

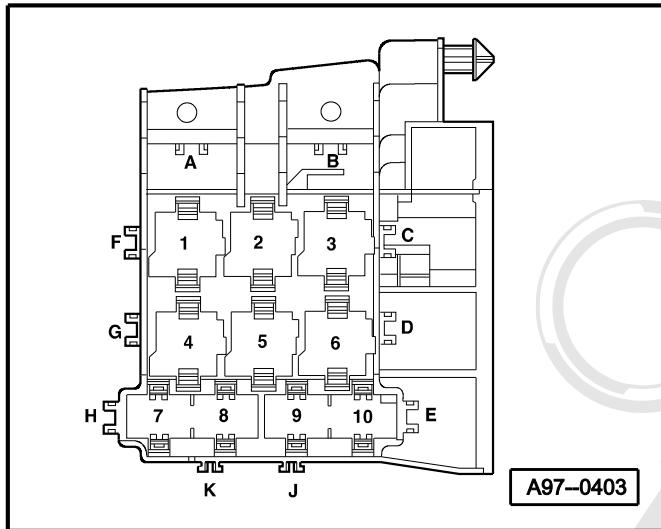

Relay positions

3 - Terminal 15 voltage supply relay (J329)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

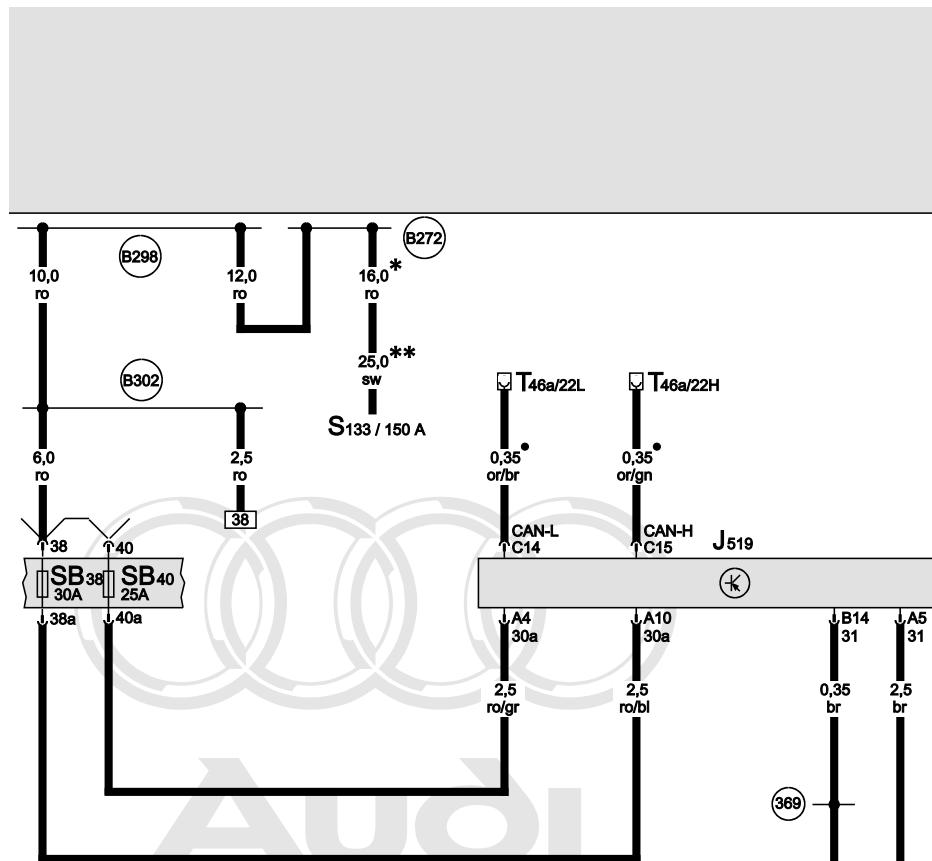

4

100

4E0-099031005

Onboard power supply control unit, fuses

J519 Onboard supply control unit
 S133 Fuse 3, 150 A, in luggage compartment, rear right
 SB38 Fuse 38 on fuse holder
 SB40 Fuse 40 on fuse holder
 T46a 46-pin connector, black, CAN separating connector left

44 Earth point, lower part of left A-pillar

366 Earth connection 1, in main wiring harness

369 Earth connection 4, in main wiring harness

B272 Positive connection (30), in main wiring harness

B298 Positive connection 2 (30), in main wiring harness

B302 Positive connection 6 (30), in main wiring harness

• CAN bus (data wire)

* models with petrol engines

** models with diesel engines



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

Onboard supply control unit, steering column vertical adjustment motor, steering column axial adjustment motor

G357 Steering column vertical adjustment sender
 G358 Steering column axial adjustment sender
 J518 Entry and start authorisation control unit
 J519 Onboard supply control unit
 J540 Electric park and handbrake control unit
 SC1 Fuse 1 on fuse holder
 T8a 8-pin connector, black, relay carrier left dash panel
 V123 Steering column vertical adjustment motor
 V124 Steering column axial adjustment motor

B467 Connection 3, in main wiring harness

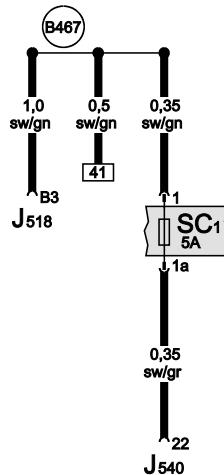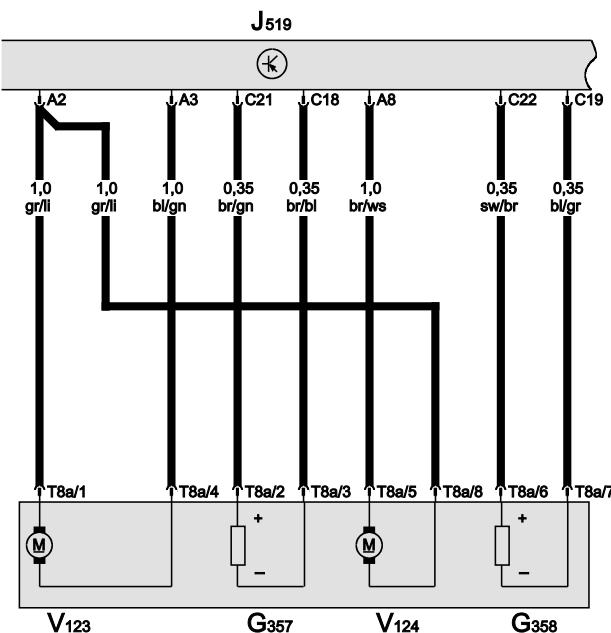


Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

15 16 17 18 19 20 21 22 23 24 25 26 27 28

A97-84215

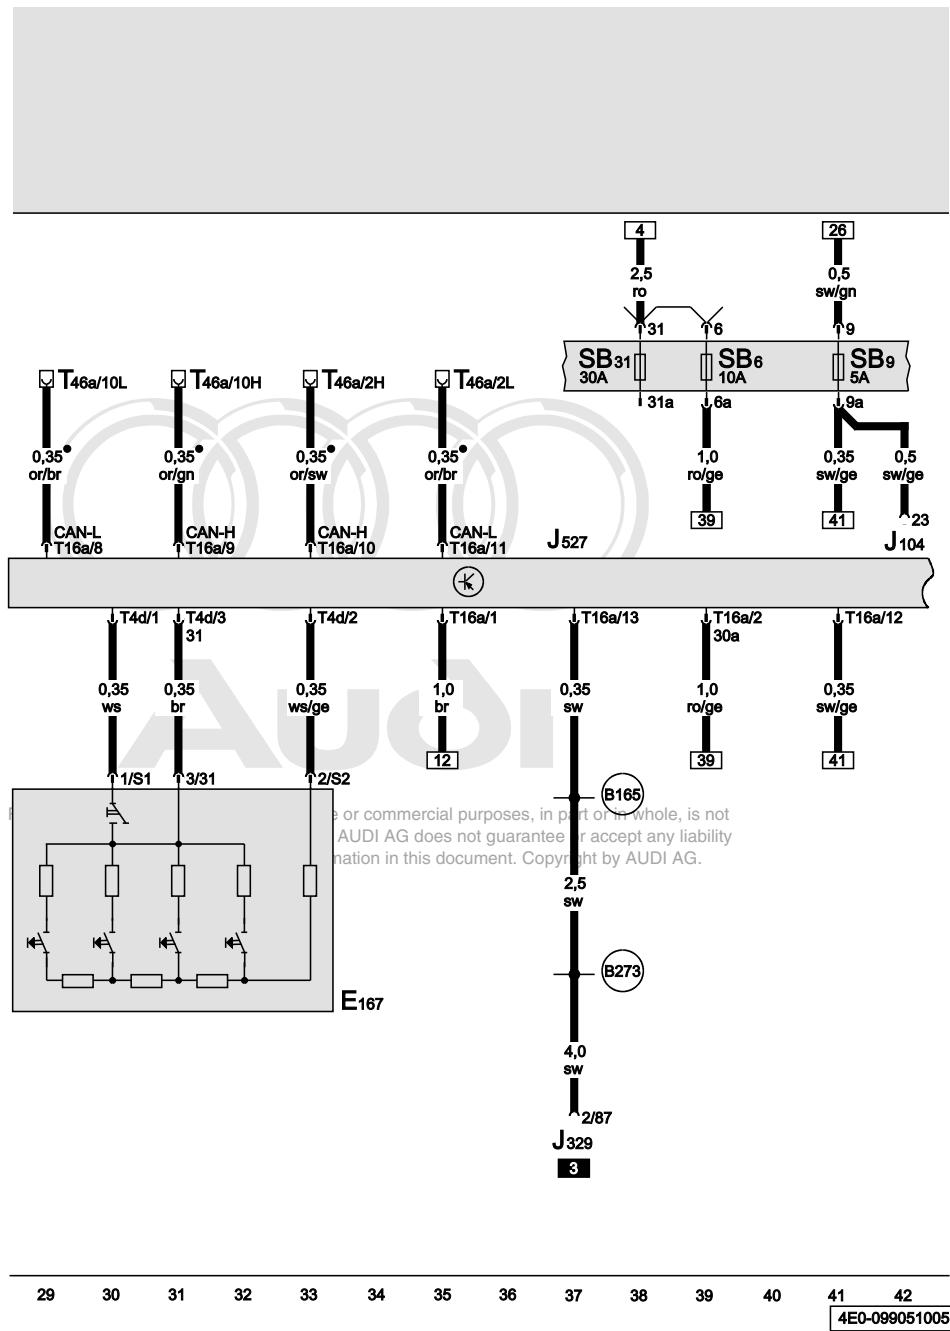


Steering column electronics control unit, steering column adjustment switch

- E167 Steering column adjustment switch
- J104 ABS control unit
- J329 Terminal 15 voltage supply relay
- J527 Steering column electronics control unit
- SB6 Fuse 6 on fuse holder
- SB9 Fuse 9 on fuse holder
- SB31 Fuse 31 on fuse holder
- T4d 4-pin connector, black, on steering column electronics control unit
- T16a 16-pin connector, on steering column electronics control unit
- T46a 46-pin connector, black, CAN separating connector left
- (B165) Positive connection 2 (15), in interior wiring harness
- (B273) Positive connection (15), in main wiring harness
- CAN bus (data wire)

Electrical rear roller blind, rear left and right roller blind

from model year 2005

Fuse holder, left dash panel

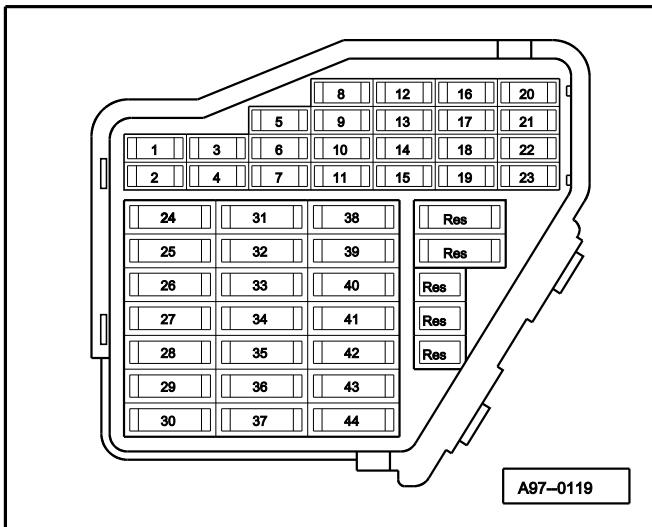

Fuse colours

30 A - green

25 A - white

20 A - yellow

15 A - blue

10 A - red

7,5 A - brown

5 A - beige

1 A - black


SB - Fuses in fuse holder left dash panel

SC - Fuses in fuse holder right dash panel

SD - Fuses in fuse holder left in luggage compartment


SF - Fuses in fuse holder right in luggage compartment

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

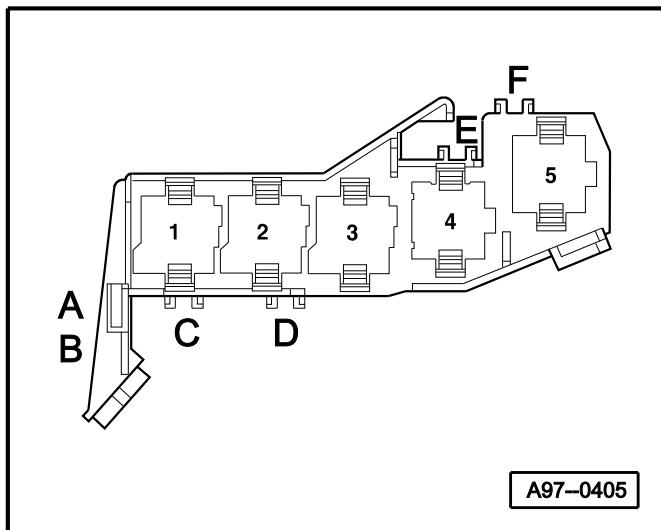Relay carrier, in front right footwell


Relay positions

A - Front passenger side window regulator fuse (S170)

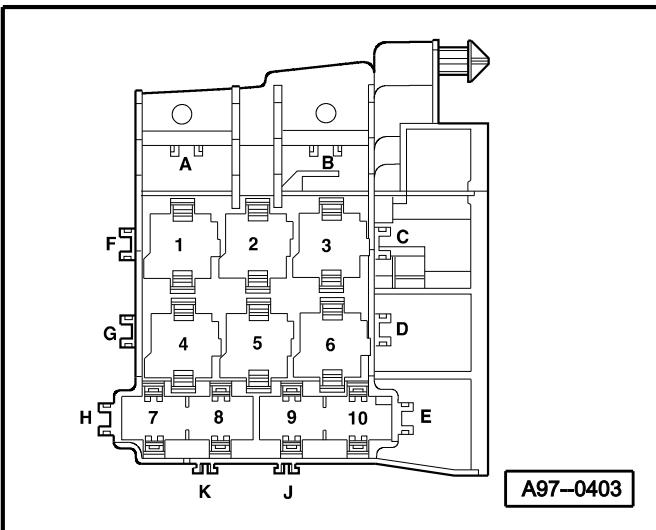Relay and fuse carrier behind left dash panel


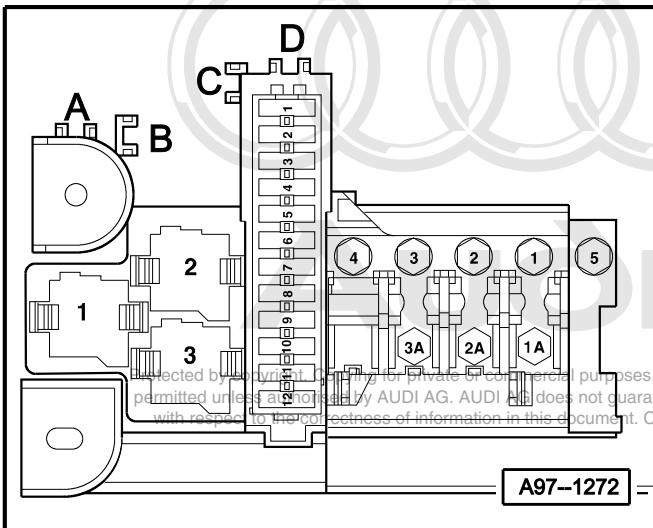
Relay positions



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

C - Window regulator thermal fuse (S43)


Relay and fuse carrier right in luggage compartment



Fuse locations

5 - Convenience system central control unit (J393)


6 - Convenience system central control unit (J393)

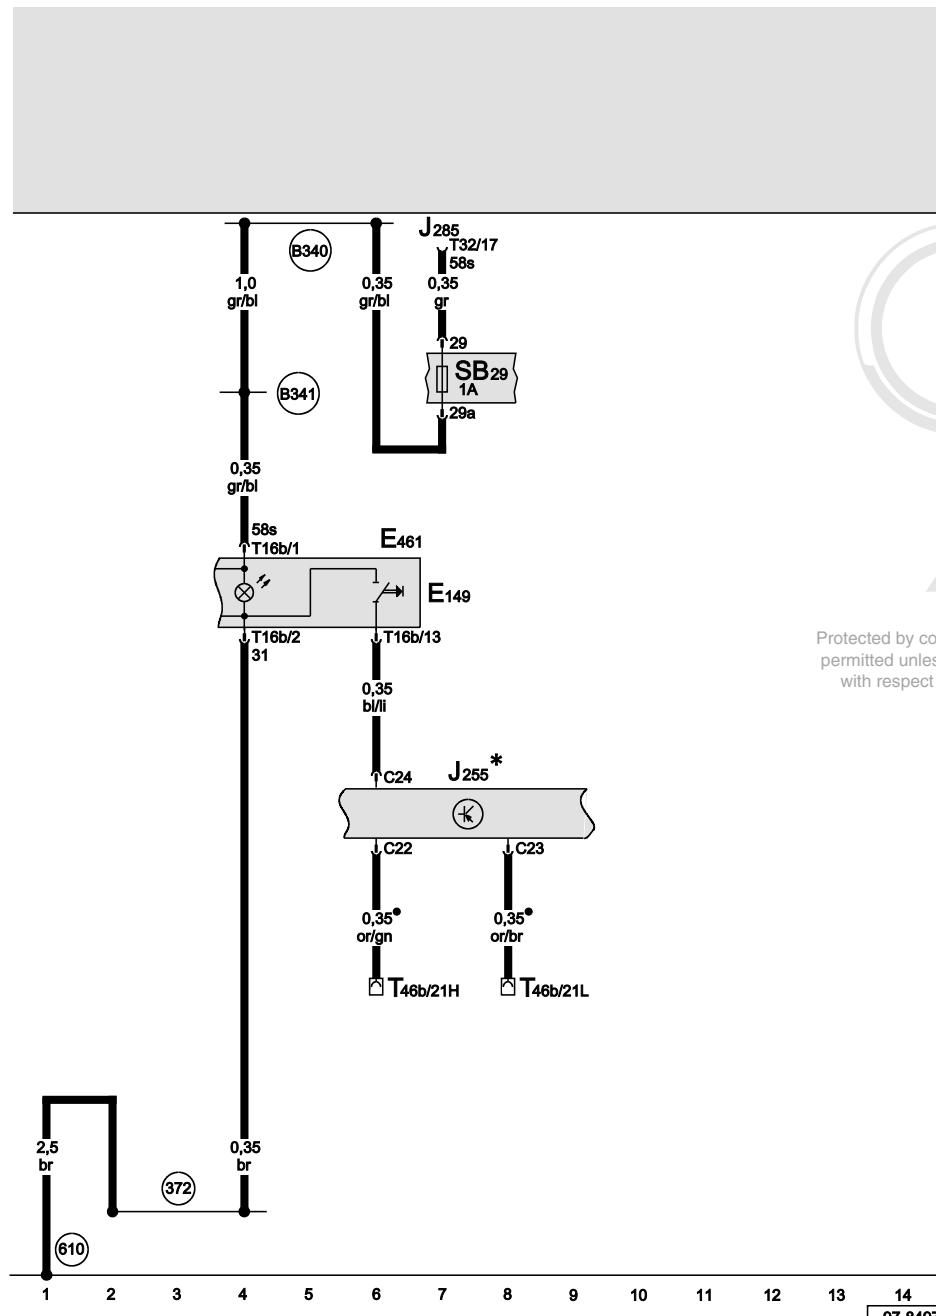
Rear roller blind, rear roller blind switch

- E149 Rear roller blind switch
- E461 Operating unit in front of centre console
- J255 Climatronic control unit
- J285 Control unit in dash panel insert
- SB29 Fuse 29 on fuse holder
- T16b 16-pin connector, black, on operating unit in front of centre console
- T32 32-pin connector, blue, on dash panel insert
- T46b 46-pin connector, black, CAN separating connector right
- 372 Earth connection 7, in main wiring harness
- 610 Earth point (audio), under centre console, front
- B340 Connection 1 (58s), in main wiring harness
- B341 Connection 2 (58s), in main wiring harness
- CAN bus (data wire)
- * Front information display and operating unit

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

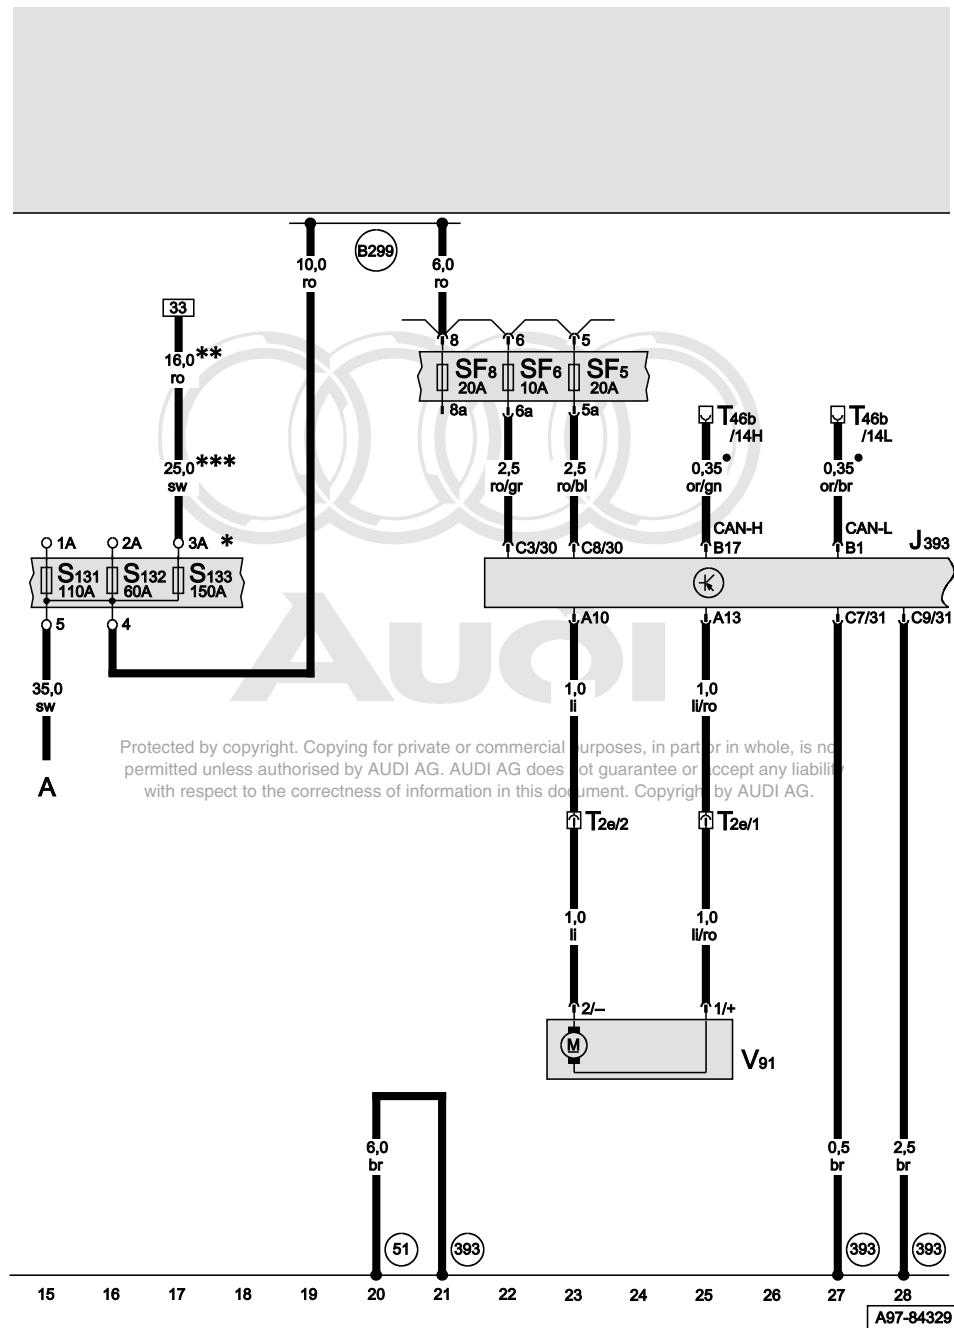

Rear roller blind, rear roller blind motor, fuses

- A Battery
- J393 Convenience system central control unit
- S131 Fuse 1, 110 A, in luggage compartment, rear right
- S132 Fuse 2, 60A, in luggage compartment, rear right
- S133 Fuse 3, 150 A, in luggage compartment, rear right
- SF5 Fuse 5 on fuse holder
- SF6 Fuse 6 on fuse holder
- SF8 Fuse 8 on fuse holder
- T2e 2-pin connector, black, rear roller blind right of D-pillar
- T46b 46-pin connector, black, CAN separating connector right
- V91 Rear roller blind motor
- 51 Earth point, on right in luggage compartment
- 393 Earth connection 28, in main wiring harness
- B299 Positive connection 3 (30), in main wiring harness
- CAN bus (data wire)
- * in luggage compartment, rear left
- ** models with petrol engines
- *** models with diesel engines

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

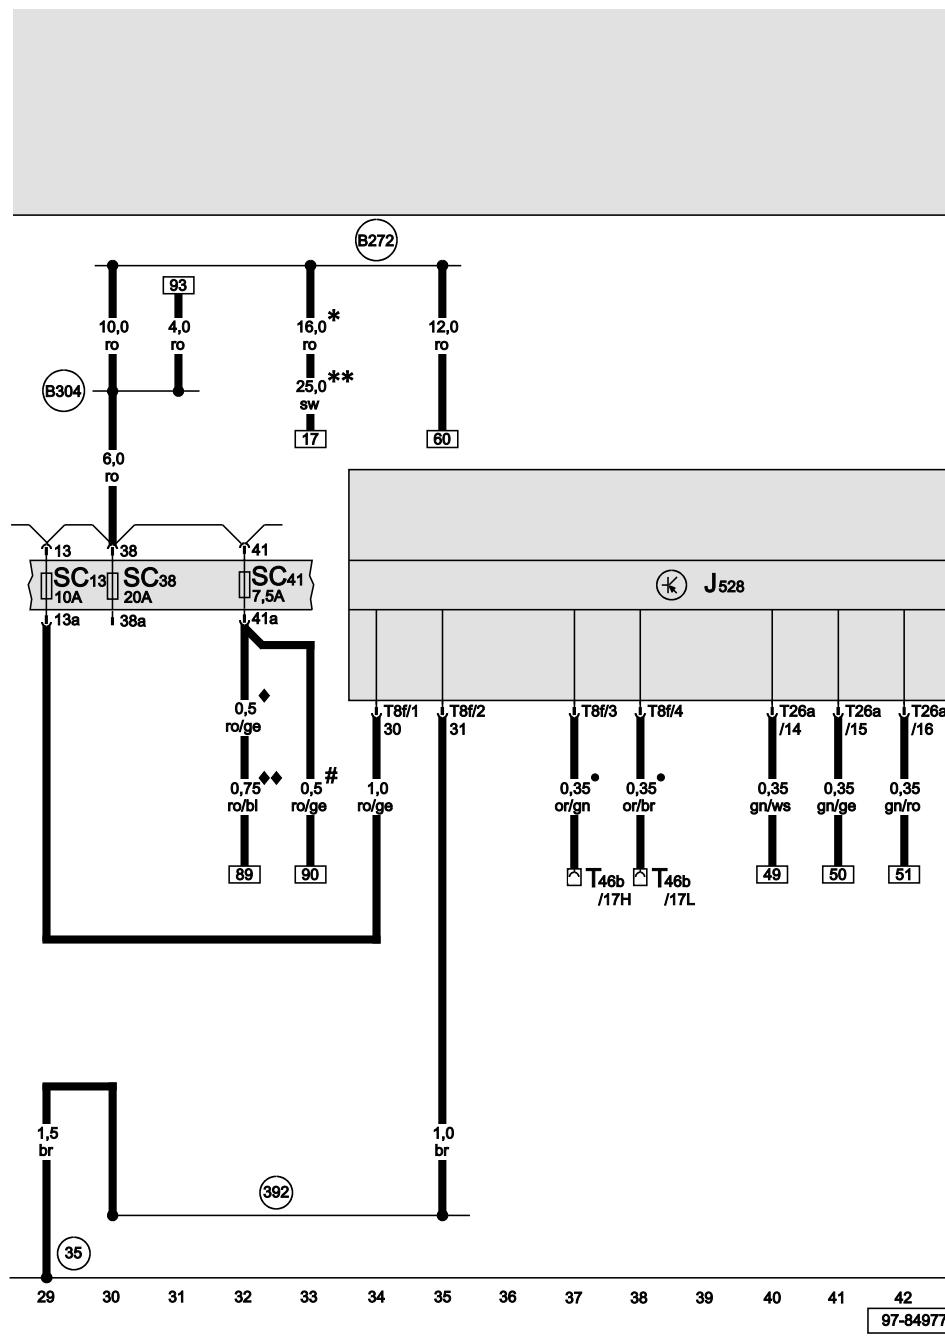
Roof electronics control unit, fuses

J528 Roof electronics control unit
 SC13 Fuse 13 on fuse holder
 SC38 Fuse 38 on fuse holder
 SC41 Fuse 41 on fuse holder
 T8f 8-pin connector, black, near front interior light
 T26a 26-pin connector, on front roof console
 T46b 46-pin connector, black, CAN bus separating connector right

- 35 Earth point, under front passenger seat
- 392 Earth connection 27, in main wiring harness
- B272 Positive connection (30), in main wiring harness
- B304 Positive connection 8 (30), in main wiring harness

- CAN bus (data wire)
- * models with petrol engines
- ** models with diesel engines
- # is dropped, from model year 2006
- ◆ up to model year 2005
- ◆◆ from model year 2006

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.




Roof electronics control unit, rear operating unit for roof module, rear switch for rear roller blind


- E383 Rear left roller blind button
- E384 Rear right roller blind button
- E385 Rear switch for rear roller blind
- E467 Rear operating unit for roof module
- J528 Roof electronics control unit
- T26a 26-pin connector, on front roof console
- T26b 26-pin connector, on rear roof console

Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

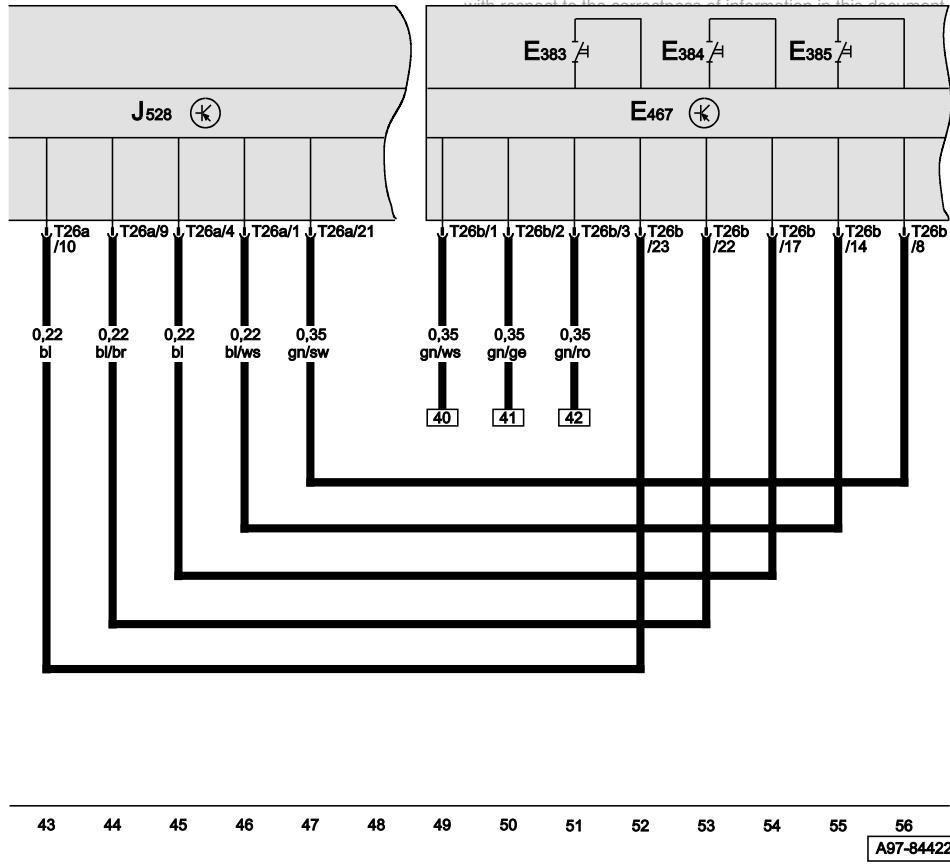

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

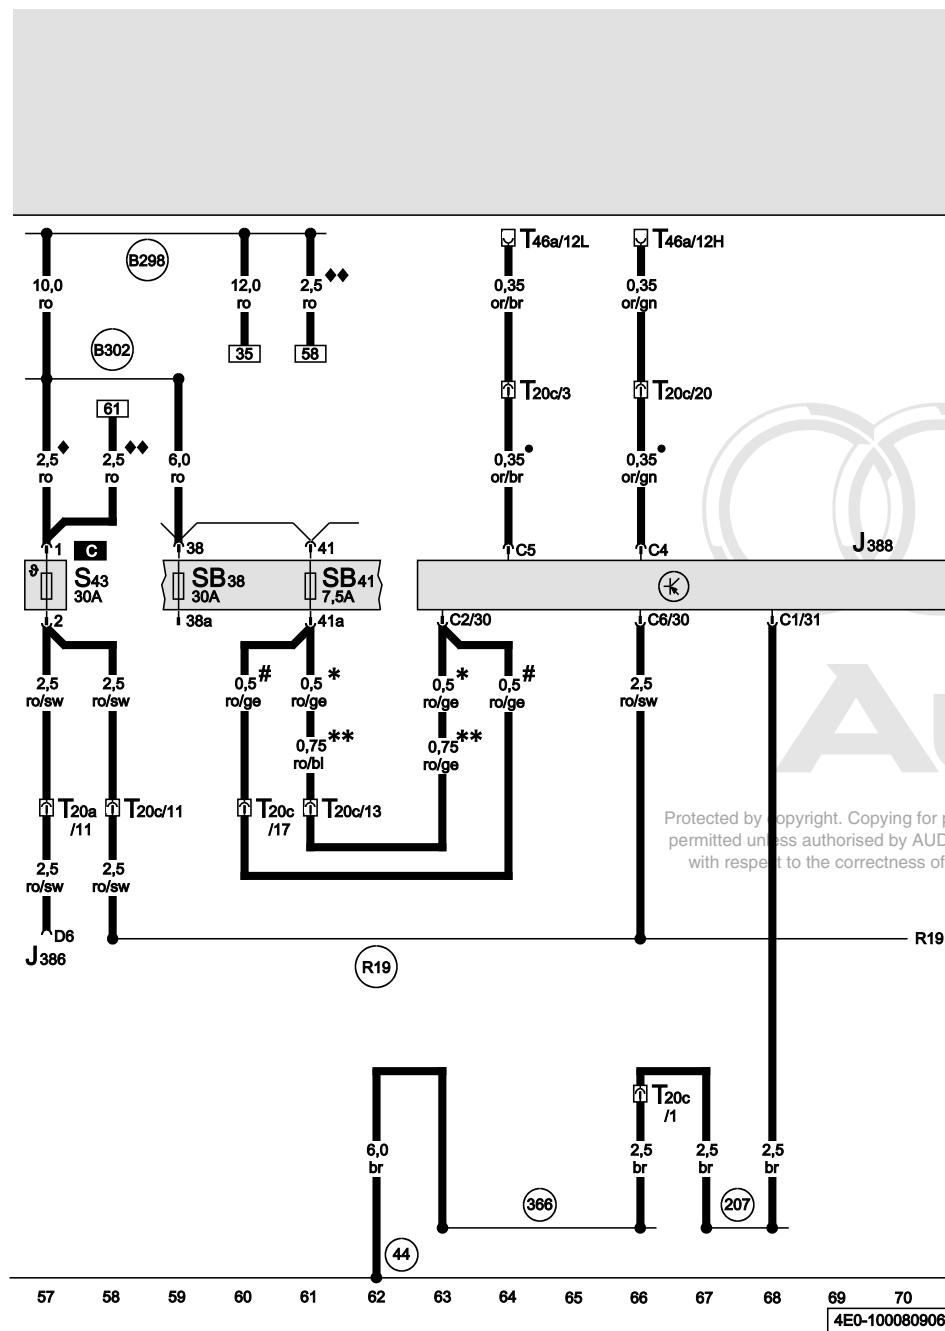


Rear left door control unit, window regulator thermal fuse

J386 Driver door control unit
 J388 Rear left door control unit
 S43 Rear window regulator thermal fuse
 SB38 Fuse 38 on fuse holder B
 SB41 Fuse 41 on fuse holder B
 T20a 20-pin connector, black, left A-pillar
 T20c 20-pin connector, black, left B-pillar
 T46a 46-pin connector, black, CAN bus separating connector left

- (44) Earth point, lower part of left A-pillar
- (207) Earth connection, in rear left door wiring harness
- (366) Earth connection 1, in main wiring harness
- (B298) Positive connection 2 (30), in main wiring harness
- (B302) Positive connection 6 (30), in main wiring harness
- (R19) Positive connection 1 (30), in rear left door wiring harness

- CAN bus (data wire)
- * up to model year 2005
- ** from model year 2006
- # is dropped, from model year 2006
- ◆ up to October 2006
- ◆◆ from November 2006

 ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink



Rear left door control unit, rear right door control unit, side roller blind control unit

J388 Rear left door control unit
 J389 Rear right door control unit
 J765 Rear left side roller blind control unit
 J766 Rear right side roller blind control unit
 V332 Rear left side roller blind motor
 V333 Rear right side roller blind motor


207 Earth connection, in rear left door wiring harness

208 Earth connection, in rear right door wiring harness

R19 Positive connection 1 (30), in rear left door wiring harness


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

R23 Positive connection 1 (30), in rear right door wiring harness

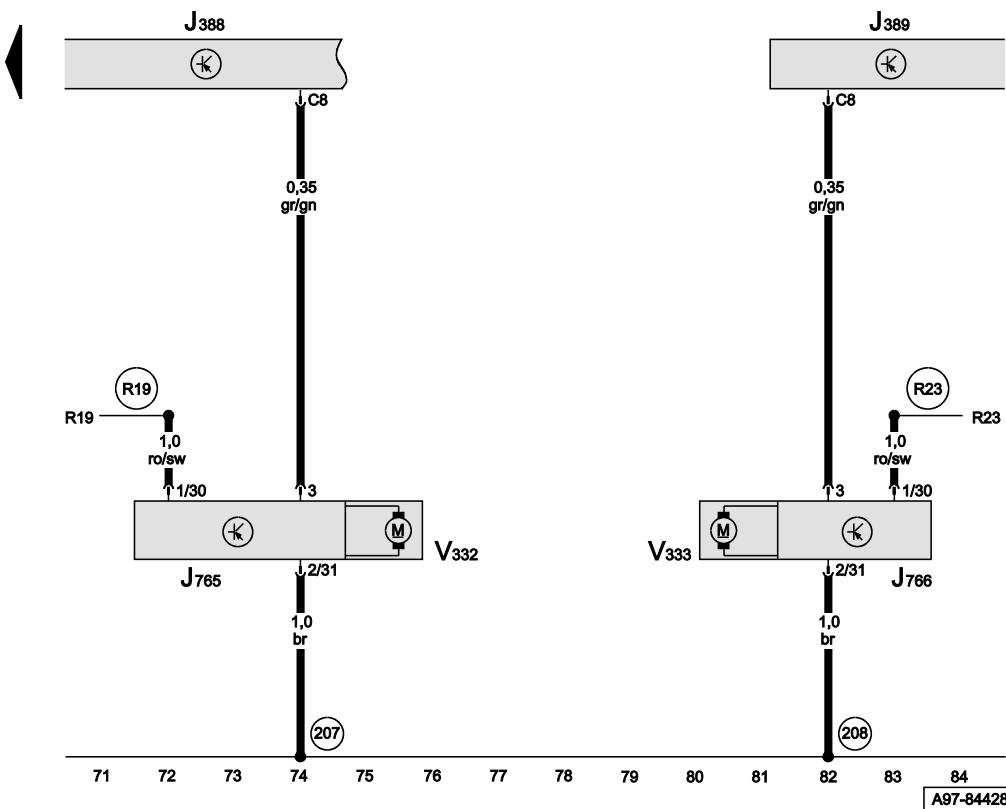

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

A97-84428

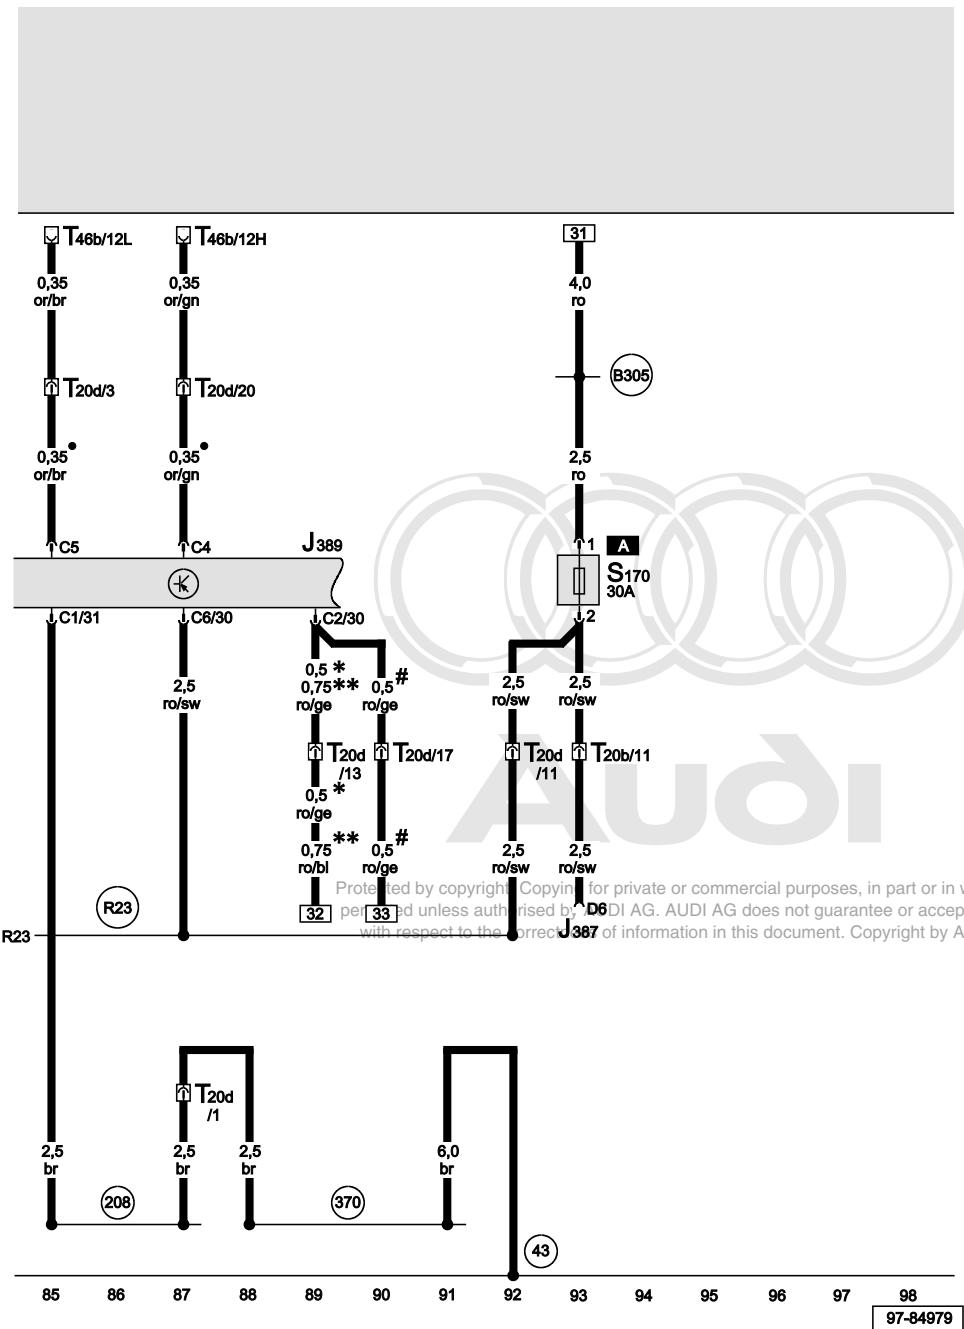

Rear right door control unit, front passenger side window regulator fuse


- J387 Front passenger door control unit
 - J389 Rear right door control unit
 - S170 Front passenger side window regulator fuse
 - T20b 20-pin connector, black, right A-pillar
 - T20d 20-pin connector, black, right B-pillar
 - T46b 46-pin connector, black, CAN bus separating connector right
 - (43) Earth point, lower part of right A-pillar
 - (208) Earth connection, in rear right door wiring harness
 - (370) Earth connection 5, in main wiring harness
 - (B305) Positive connection 9 (30), in main wiring harness
 - (R23) Positive connection 1 (30), in rear right door wiring harness
- CAN bus (data wire)
 * up to model year 2005
 ** from model year 2006
 # is dropped, from model year 2006

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

Communication

- ⇒ Multimedia system operating unit
 - ⇒ CD changer
 - ⇒ Digital radio, radio (K-box)
 - ⇒ Loudspeaker system Bose
 - ⇒ Navigation system
 - ⇒ Telephone
 - ⇒ TV tuner
- from model year 2005

Fuse holder, left dash panel

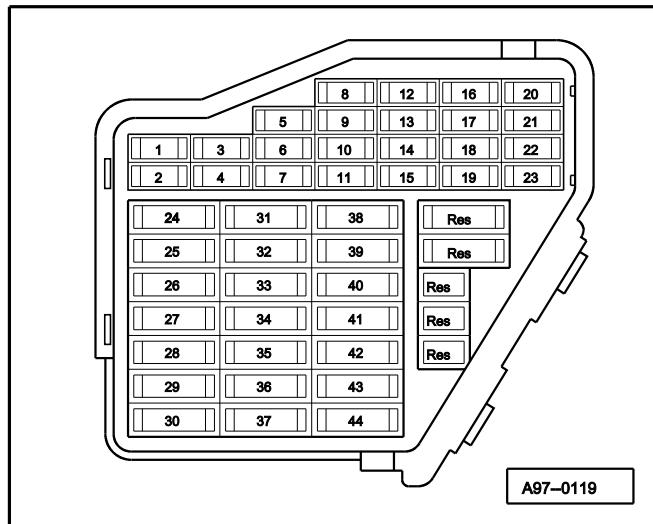


Fuse colours

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 7,5 A - brown
- 5 A - beige
- 1 A - black



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Fuse holder right dash panel

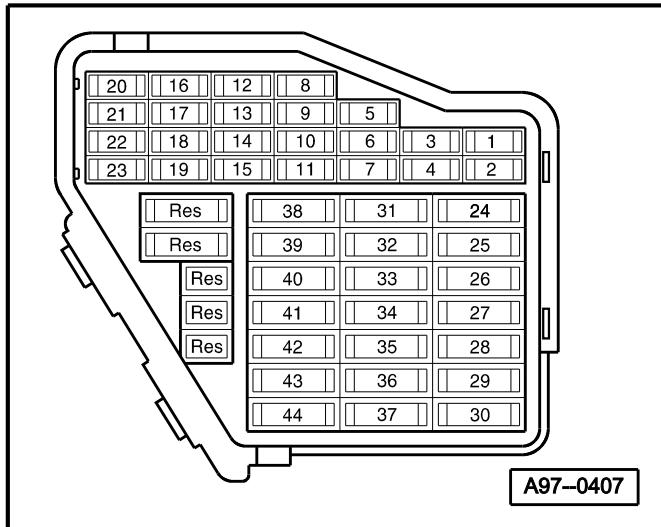


SB - Fuses in fuse holder left dash panel

SC - Fuses in fuse holder right dash panel


SD - Fuses in fuse holder left in luggage compartment

SF - Fuses in fuse holder right in luggage compartment

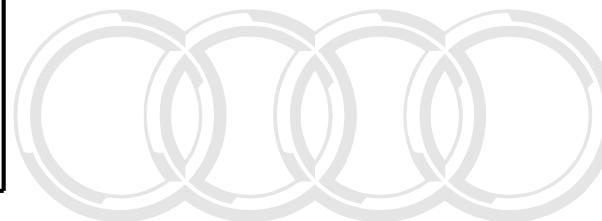

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


Relay and fuse carrie behind left dash panel

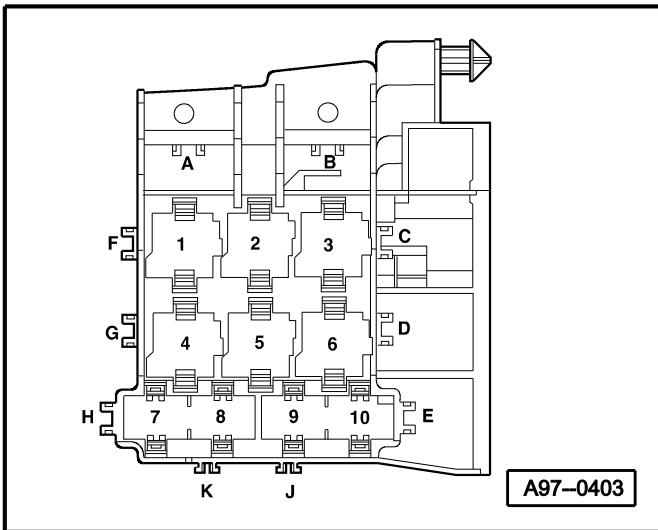

Relay positions

3 - Terminal 15 voltage supply relay (J329)

Fuse holder on left in luggage compartment

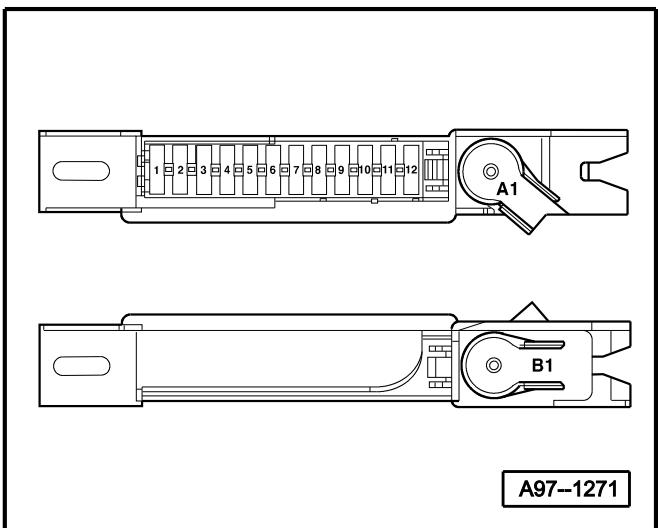

Fuse locations




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- 5 - Digital sound package control unit (J525)
- 6 - Navigation system with CD drive control unit (J401)
- 7 - TV tuner (R78)
- 9 - Radio (K-box) (R), digital radio (R147)
- 10 - Subwoofer in rear shelf (R148)
- A1 - Terminal 30 screw point (battery)
- B1 - Terminal 30 screw point





Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

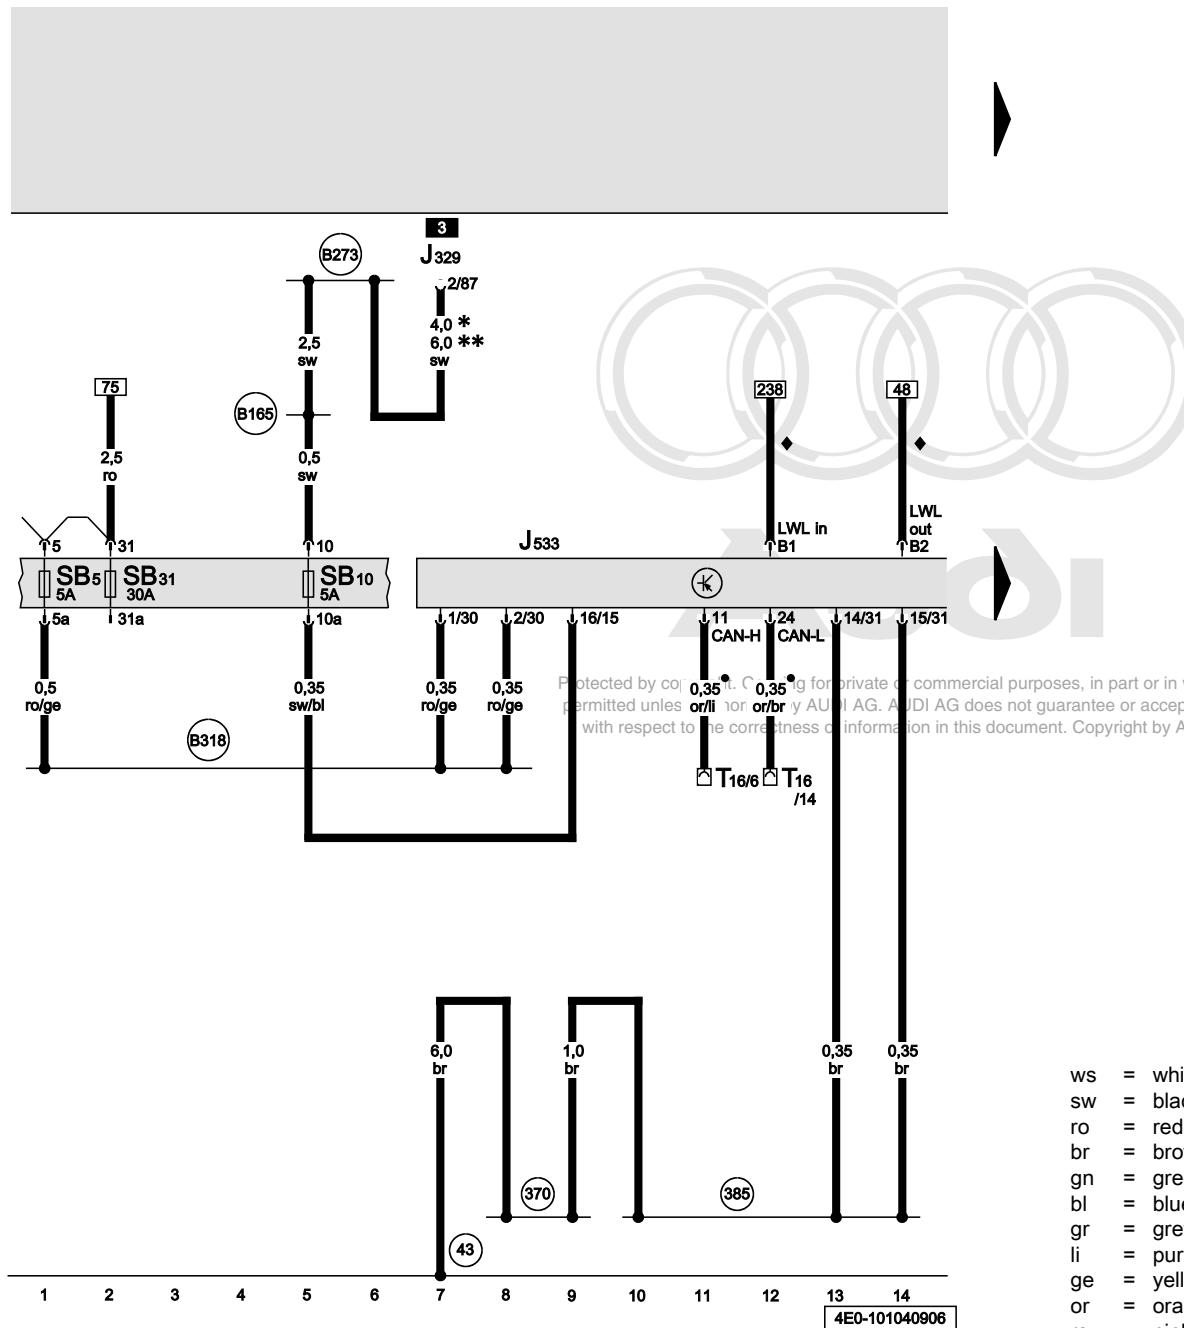

Data bus diagnostic interface, fuses

 - J329 Terminal 15 voltage supply relay
 - J533 Data bus diagnostic interface
 - SB5 Fuse 5 on fuse holder B
 - SB10 Fuse 10 on fuse holder B
 - SB31 Fuse 31 on fuse holder B
 - T16 16-pin connector, black, diagnostic connection
 - 43 Earth point, lower part of right A-pillar
 - 370 Earth connection 5, in main wiring harness
 - 385 Earth connection 20, in main wiring harness
 - B165 Positive connection 2 (15), in interior wiring harness
 - B273 Positive connection (15), in main wiring harness
 - B318 Positive connection 4 (30a), in main wiring harness
- CAN bus (data wire)
 * up to April 2006
 ** from May 2006
 ◆ Fibre optic conductor, see Current Flow Diagram infotainment data bus (Most Ring)

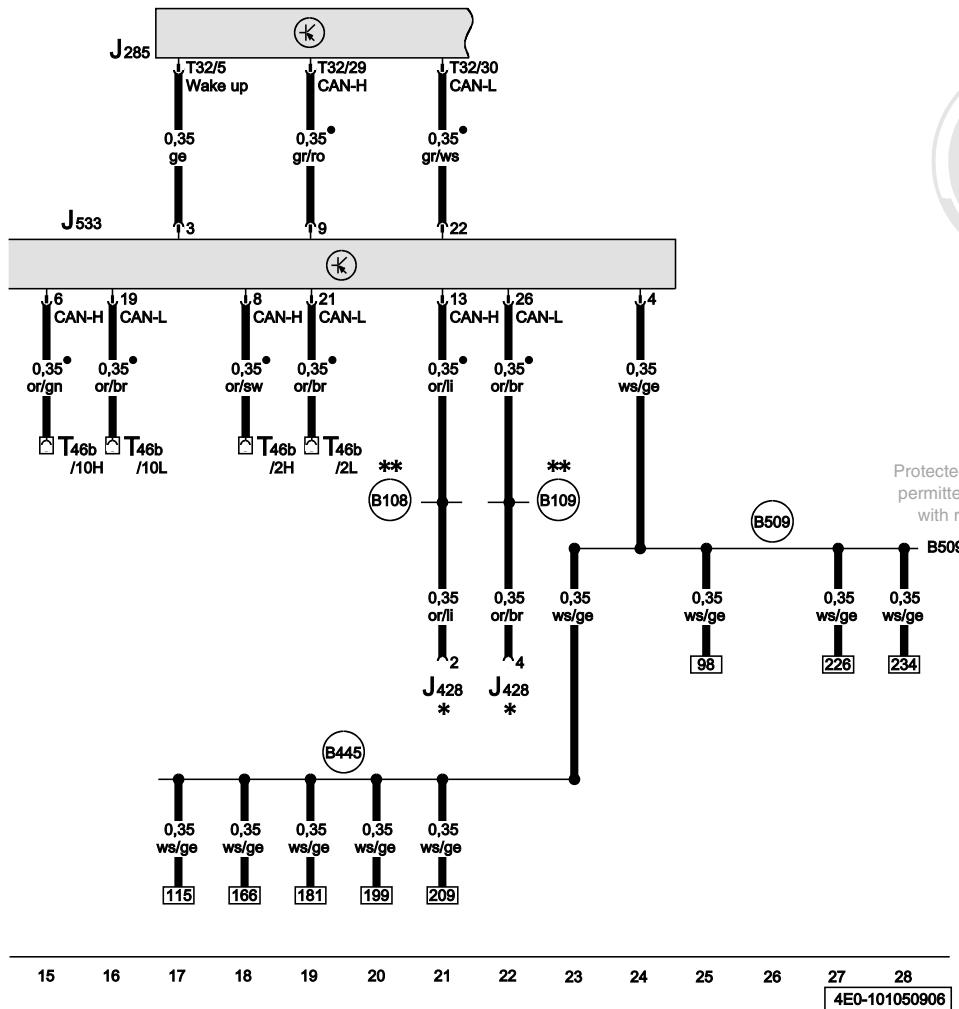

Data bus diagnostic interface, control unit in dash panel insert


 
- J285 Control unit in dash panel insert
- J428 Adaptive cruise control unit
- J533 Data bus diagnostic interface
- T32 32-pin connector, blue, on dash panel insert
- T46b 46-pin connector, black, CAN separating connector right
- B108 Connection 1 (CAN-Bus Extended High), in main wiring harness
- B109 Connection 1 (CAN-Bus Extended Low), in main wiring harness
- B445 Connection 2 (diagnosis), in main wiring harness (ring brake diagnosis)
- B509 Connection 3 (diagnosis), in main wiring harness (ring brake diagnosis)
- : CAN bus (data wire)
- *: models with adaptive cruise
- **: from November 2006

Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

15 16 17 18 19 20 21 22 23 24 25 26 27 28
4E0-101050906

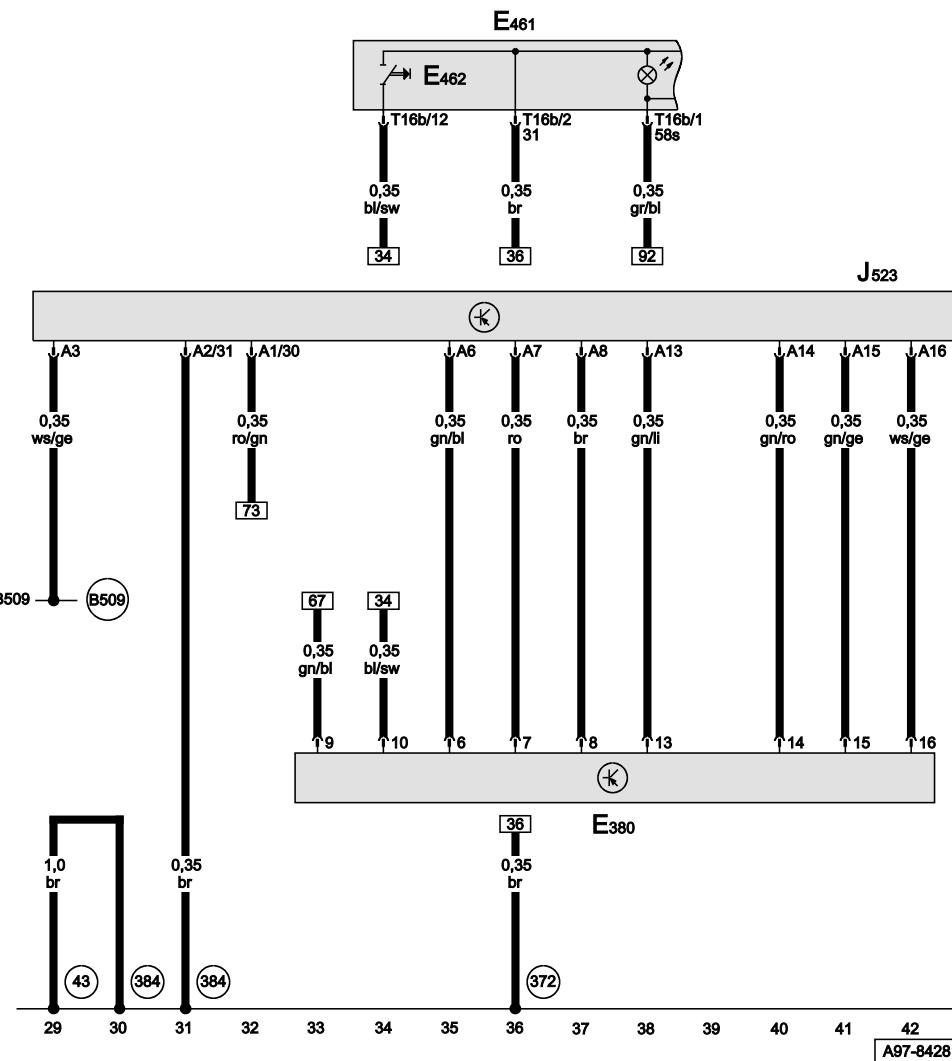

Front information display and operating unit control unit,
multimedia system operating unit, open and close button
for front display

E380 Multimedia system operating unit
E461 Operating unit in front of centre console
E462 Open and close button for front display
J523 Front information display and operating unit control unit
T16b 16-pin connector, black, on operating unit in front of centre console

- 43 Earth point, lower part of right A-pillar
- 372 Earth connection 7, in main wiring harness
- 384 Earth connection 19, in main wiring harness
- B509 Connection 3 (diagnosis), in main wiring harness (ring brake diagnosis)
- CAN bus (data wire)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

A97-84281


Front information display and operating unit control unit,
display unit for front information display and operating unit
control unit

- J523 Front information display and operating unit control unit
- J685 Display unit for front information display and operating unit control unit
- * without video recorder, DVD player
- ** with video recorder, DVD player
- ◆ fibre optic conductor

Protected by copyright. Copying for private or commercial purposes, in part or whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright © AUDI AG.

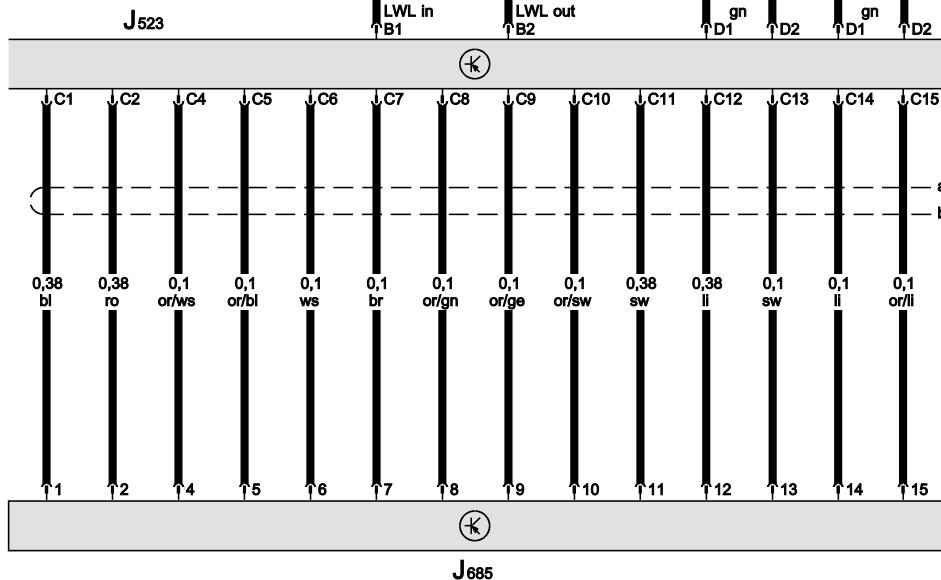


 ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink




Front information display and operating unit control unit,
display unit for front information display and operating unit
control unit, open and close display motor


- F330 Open display limit switch
- F331 Close display limit switch
- J520 Onboard supply control unit 2
- J523 Front information display and operating unit control unit
- J685 Display unit for front information display and operating unit control unit
- T8g 8-pin connector, on display
- T46b 46-pin connector, black, CAN bus separating connector right
- V301 Open and close display motor
- 372 Earth connection 7, in main wiring harness
- 610 Earth point (audio), under centre console, front
 - CAN bus (data wire)
 - * screening on connector housing

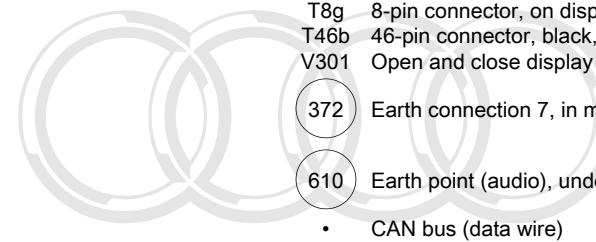

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

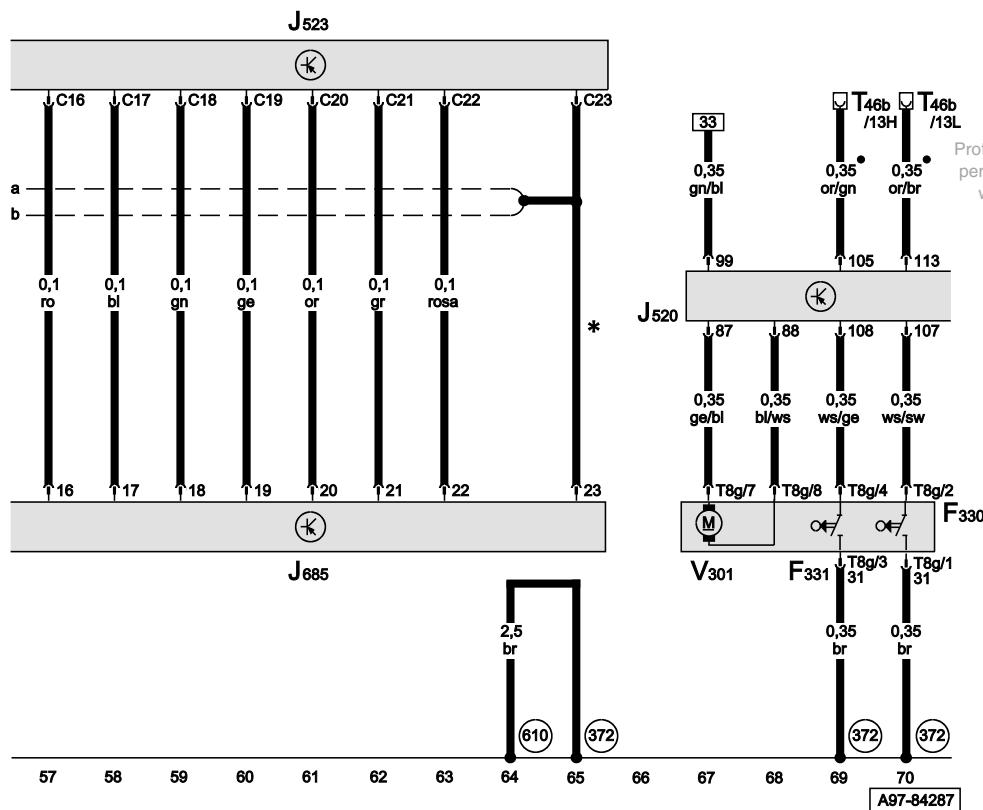


ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

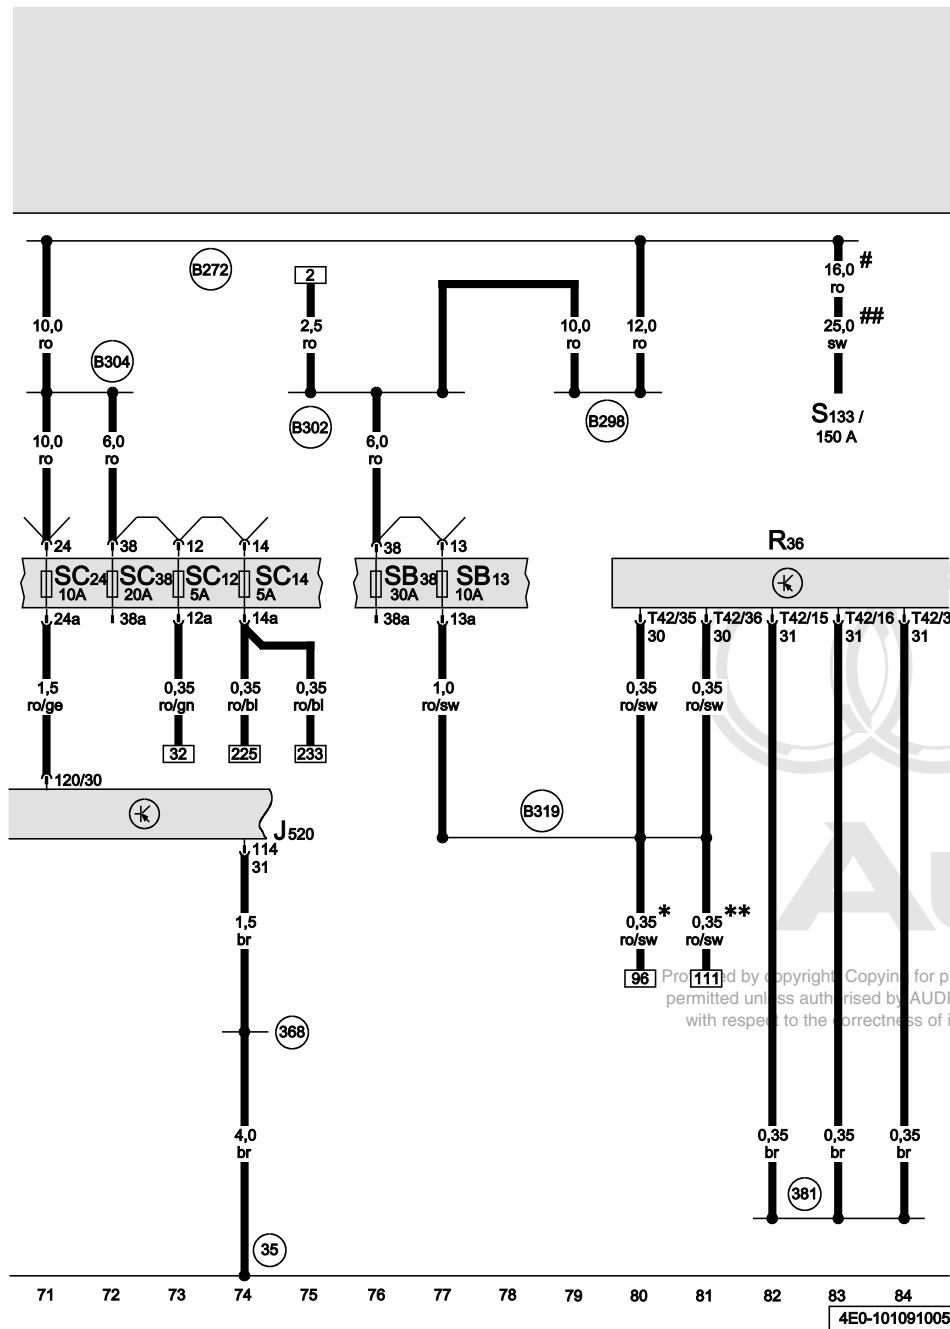

Telephone transmitter and receiver unit, onboard supply control unit 2, fuses



- J520 Onboard supply control unit 2
- R36 Telephone transmitter and receiver unit
- S133 Fuse 3, 150 A, in luggage compartment, rear right
- SB13 Fuse 13 on fuse holder
- SB38 Fuse 38 on fuse holder
- SC12 Fuse 12 on fuse holder
- SC14 Fuse 14 on fuse holder
- SC24 Fuse 24 on fuse holder
- SC38 Fuse 38 on fuse holder
- T42 42-pin connector, on telephone transmitter and receiver unit
- 35 Earth point, under front passenger seat
- 368 Earth connection 3, in main wiring harness
- 381 Earth connection 16, in main wiring harness
- B272 Positive connection (30), in main wiring harness
- B298 Positive connection 2 (30), in main wiring harness
- B302 Positive connection 6 (30), in main wiring harness
- B304 Positive connection 8 (30), in main wiring harness
- B319 Positive connection 5 (30a), in main wiring harness
- CAN bus (data wire)
- * models with chip card reader for telephone in storage compartment
- ** Models with telephone handset in the front centre armrest
- # models with petrol engines
- ## models with diesel engines

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

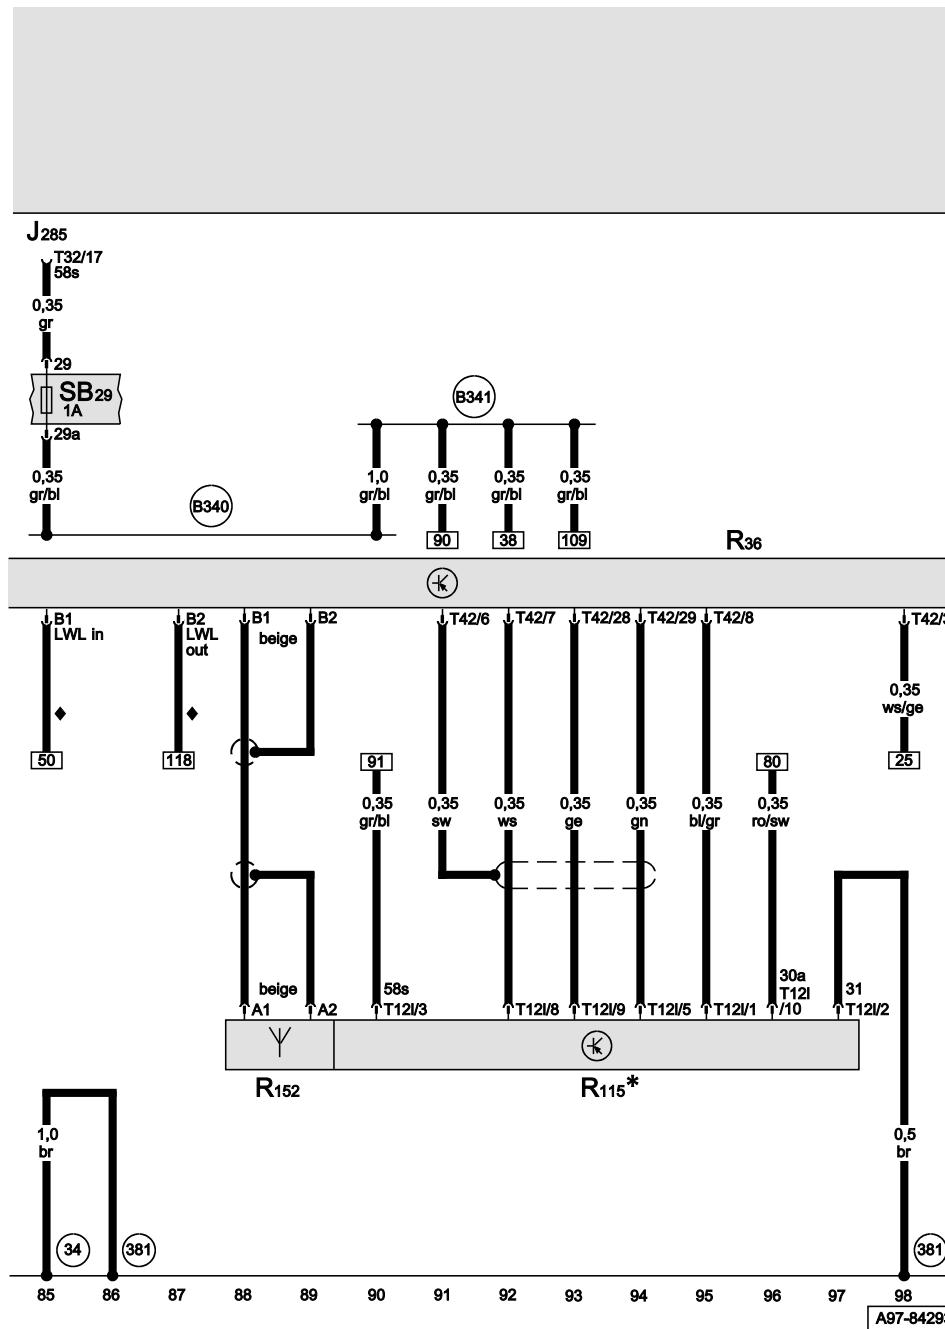

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

 A97-84293

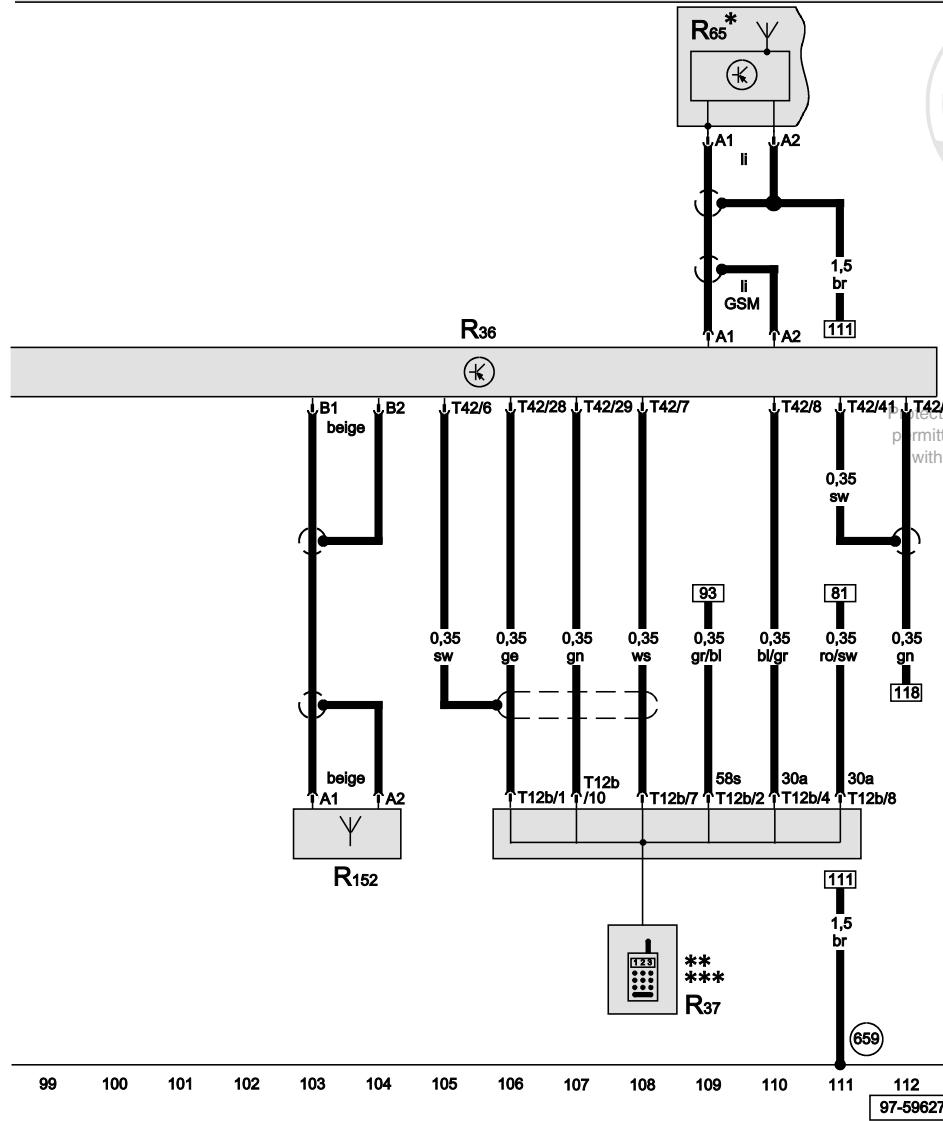

Telephone transmitter and receiver unit, telephone handset, aerial for Bluetooth, telephone aerial

- R36 Telephone transmitter and receiver unit
- R37 Telephone handset
- R65 Telephone aerial
- R152 Aerial for Bluetooth
- T12b 12-pin connector, on telephone handset
- T42 42-pin connector, on telephone transmitter and receiver unit

659 Earth point 1, on right near rear window

◆ fibre optic conductor

* roof aerial

 
** Models with telephone handset in the front centre armrest
with map reading light bulb



Audi

by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- ge = yellow
- or = orange
- rs = pink




Digital sound package control unit, microphone unit in front roof module

J525 Digital sound package control unit
R164 Microphone unit in front roof module
T6o 6-pin connector, blue, on microphone unit in front roof module

395 Earth connection 30, in main wiring harness

613 Earth point (audio), on left in luggage compartment

- * models without microphone
- ** models with microphone
- *** is dropped, from model year 2006
- # models without voice control
- ## models with voice control
- ◆ fibre optic conductor

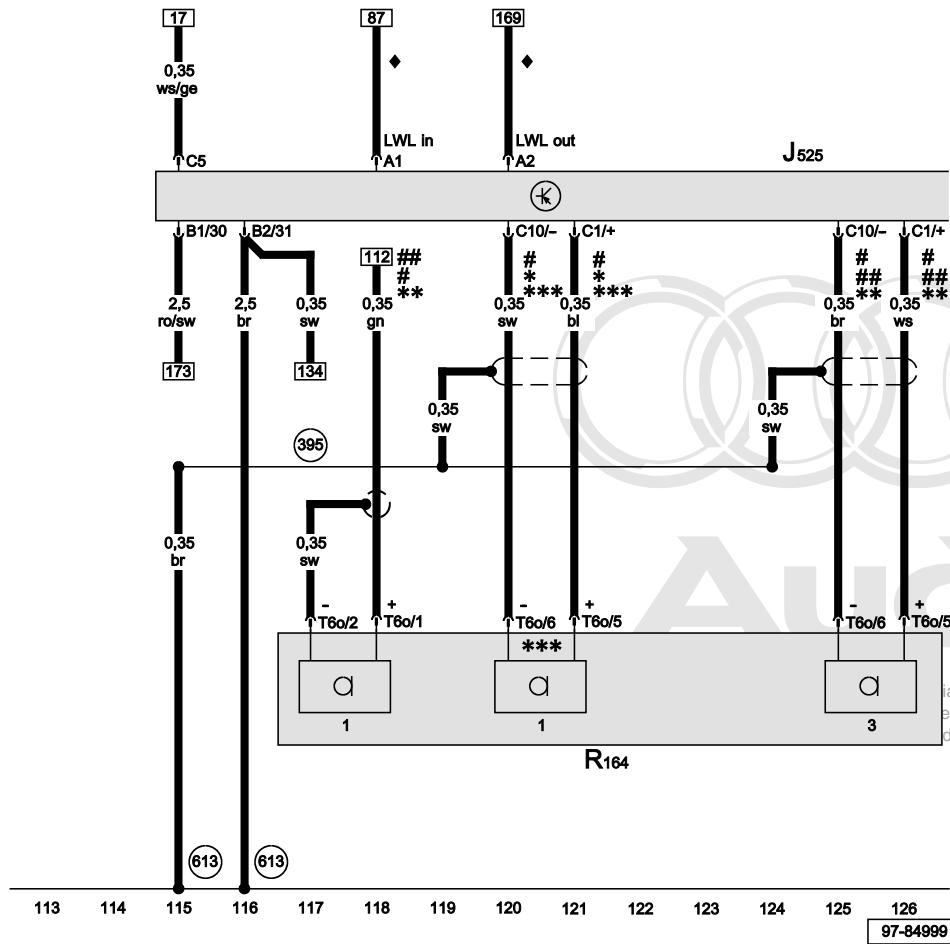


For trial purposes, ws/part or white, is not
guaranteed to be correct. Liability
for damage resulting from the use of this
document. Copyright by red DI AG.

br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

97-84999



Audi

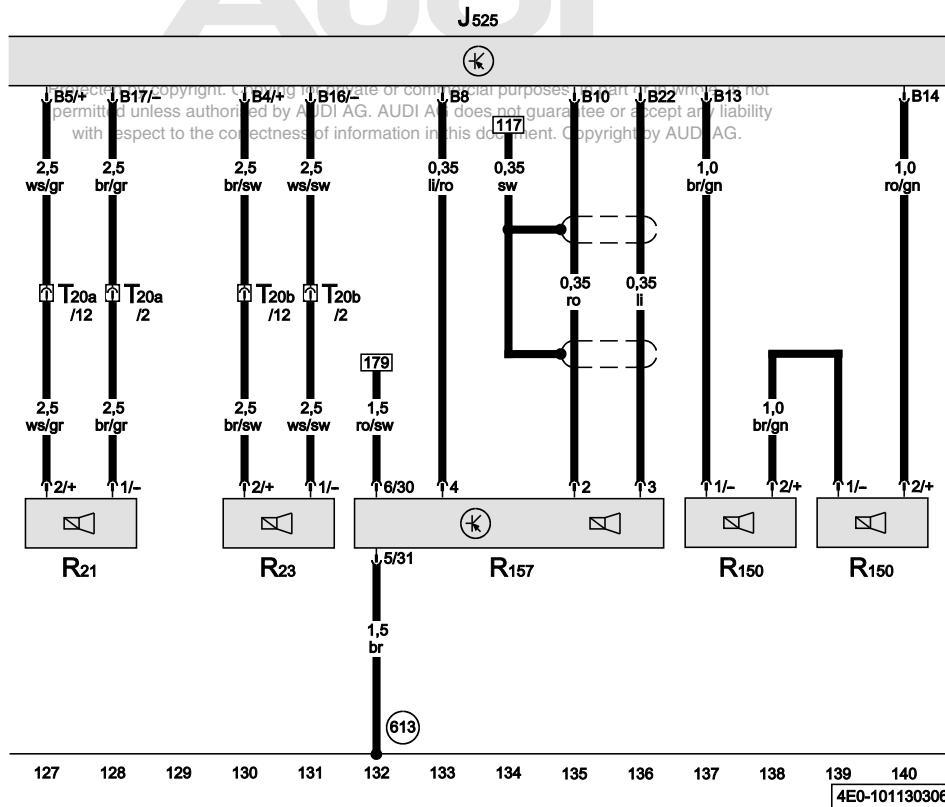

Digital sound package control unit, front left and right bass
loudspeaker, loudspeaker in rear shelf, subwoofer in rear
shelf

J525 Digital sound package control unit

R21 Front left bass loudspeaker

R23 Front right bass loudspeaker

R150 Loudspeaker in rear shelf

R157 Subwoofer in rear shelf

T20a 20-pin connector, black, left A-pillar

T20b 20-pin connector, black, right A-pillar


613 Earth point (audio), on left in luggage compartment

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink



Digital sound package control unit, front left mid-range and treble loudspeaker, front right mid-range and treble loudspeaker, centre mid-range and treble loudspeaker, rear left mid-range and bass loudspeaker, rear left treble loudspeaker


- J525 Digital sound package control unit
- R14 Rear left treble loudspeaker
- R26 Front left mid-range and treble loudspeaker
- R27 Front right mid-range and treble loudspeaker
- R158 Centre mid-range and treble loudspeaker
- R159 Rear left mid-range and bass loudspeaker
- T6a 6-pin connector, black, relay carrier driver footwell
- T20c 20-pin connector, black, left B-pillar

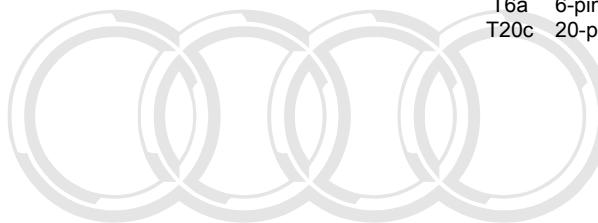

Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

R14

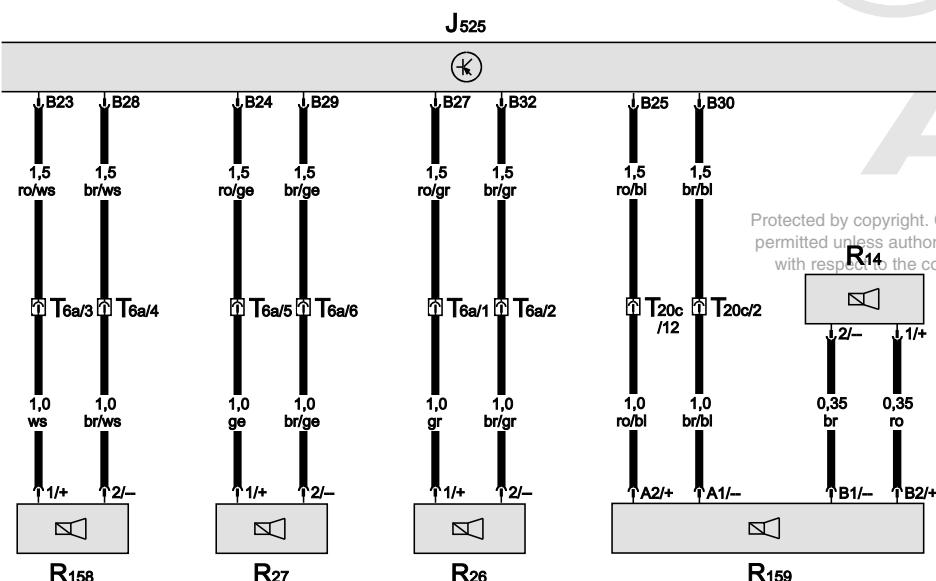

141 142 143 144 145 146 147 148 149 150 151 152 153 154

A97-84302

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- ge = yellow
- or = orange
- rs = pink

Digital sound package control unit, rear right mid-range and bass loudspeaker, rear right treble loudspeaker, navigation system with CD drive control unit

J401 Navigation system with CD drive control unit


J525 Digital sound package control unit

R16 Rear right treble loudspeaker

R160 Rear right mid-range and bass loudspeaker

T20d 20-pin connector, black, right B-pillar

613 Earth point (audio), on left in luggage compartment

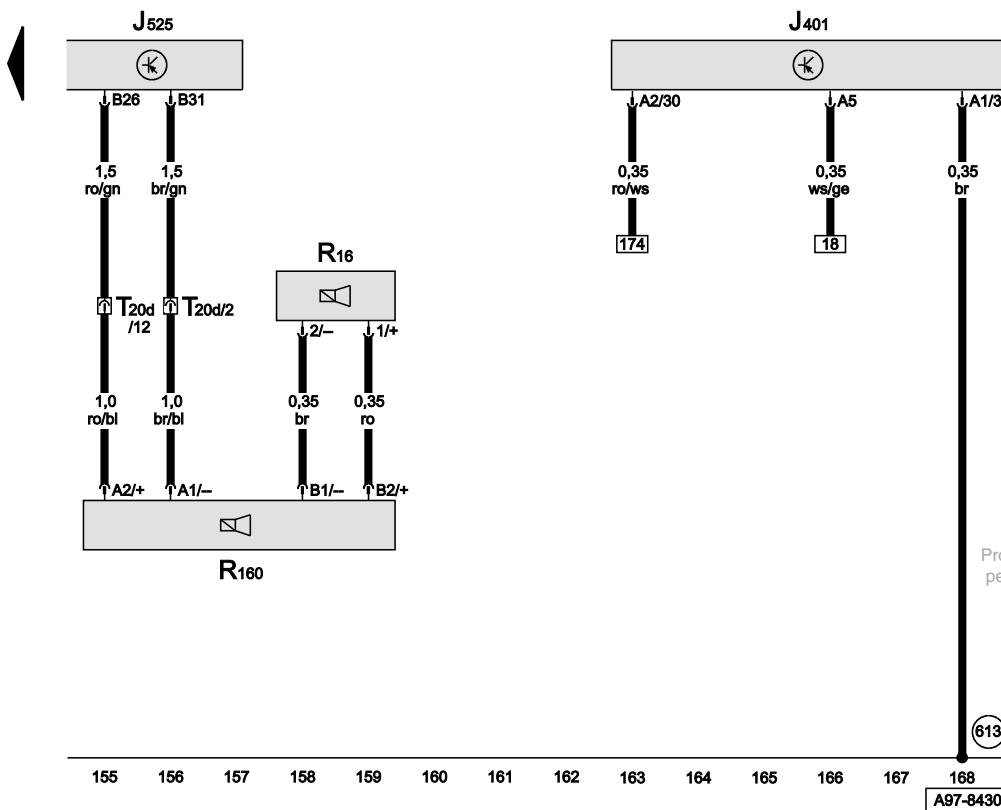


Audi

Protected by copyright = white for private or commercial purposes, in part or in whole, is not permitted unless authorized by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	purple
ge	=	yellow
or	=	orange
rs	=	pink

Navigation system with CD drive control unit, navigation system aerial, TV tuner, fuses left luggage compartment

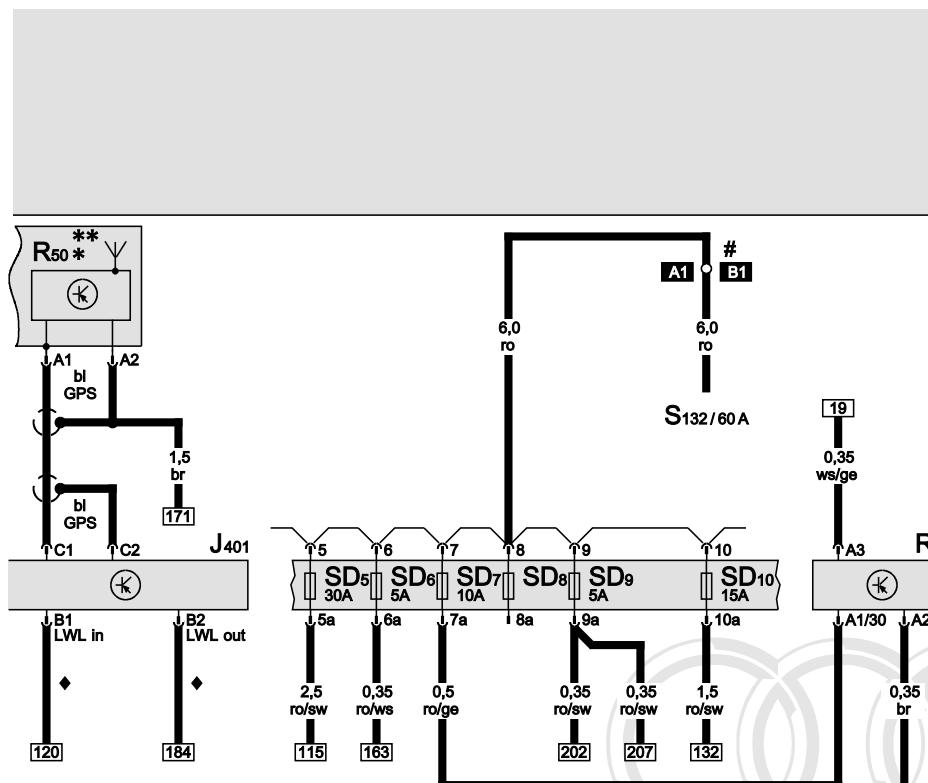

J401 Navigation system with CD drive control unit

R50 Navigation system aerial

R78 TV tuner

S132 Fuse 2, 60 A, in luggage compartment, rear right

SD5 Fuse 5 on fuse holder

SD6 Fuse 6 on fuse holder

SD7 Fuse 7 on fuse holder

SD8 Fuse 8 on fuse holder

SD9 Fuse 9 on fuse holder

SD10 Fuse 10 on fuse holder

613 Earth point (audio), on left in luggage compartment

657 Earth point 1, on left near rear window


* without telephone, under rear roof trim

** with telephone, roof aerial

Screw connection, on rear left fuse holder

◆ fibre optic conductor

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not accept any liability with respect to the correctness of information in this document. Copyright © AUDI AG.

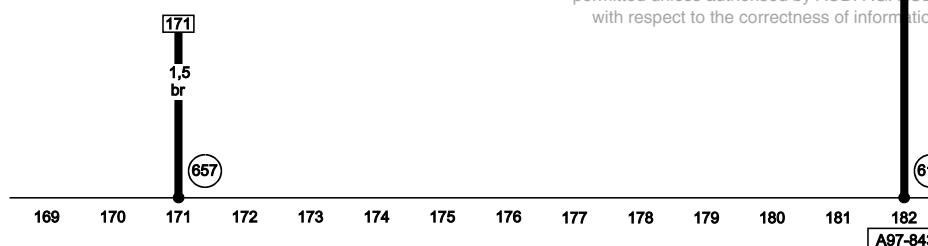

ro = red

br = brown

gn = green

bl = blue

gr = grey

li = purple

ge = yellow

or = orange

rs = pink


TV tuner, aerial amplifier

J518 Entry and start authorisation control unit
 R24 Aerial amplifier
 R64 Remote control receiver for auxiliary heating
 R78 TV tuner

657 Earth point 1, on left near rear window



658 Earth point 2, on left near rear window

* models with auxiliary heater
 ** without video recorder, DVD player
 *** with video recorder, DVD player
 # models without digital radio
 ## models with digital radio
 ♦ fibre optic conductor

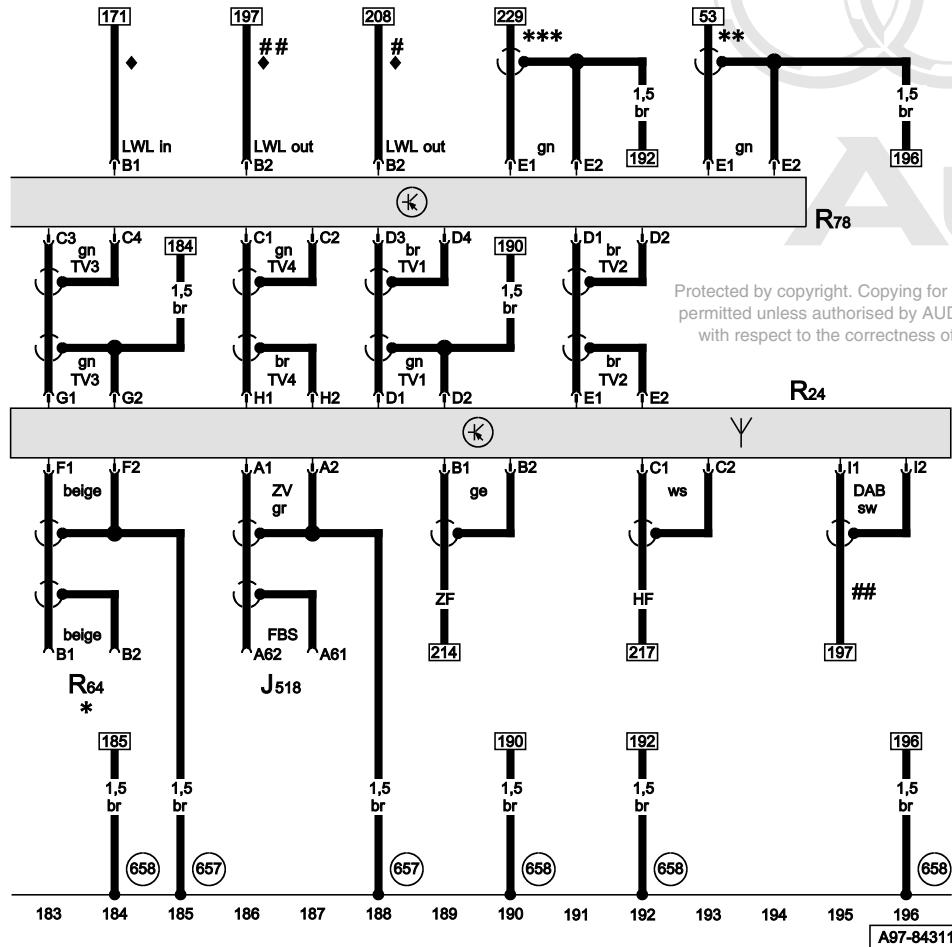

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

 A97-84311

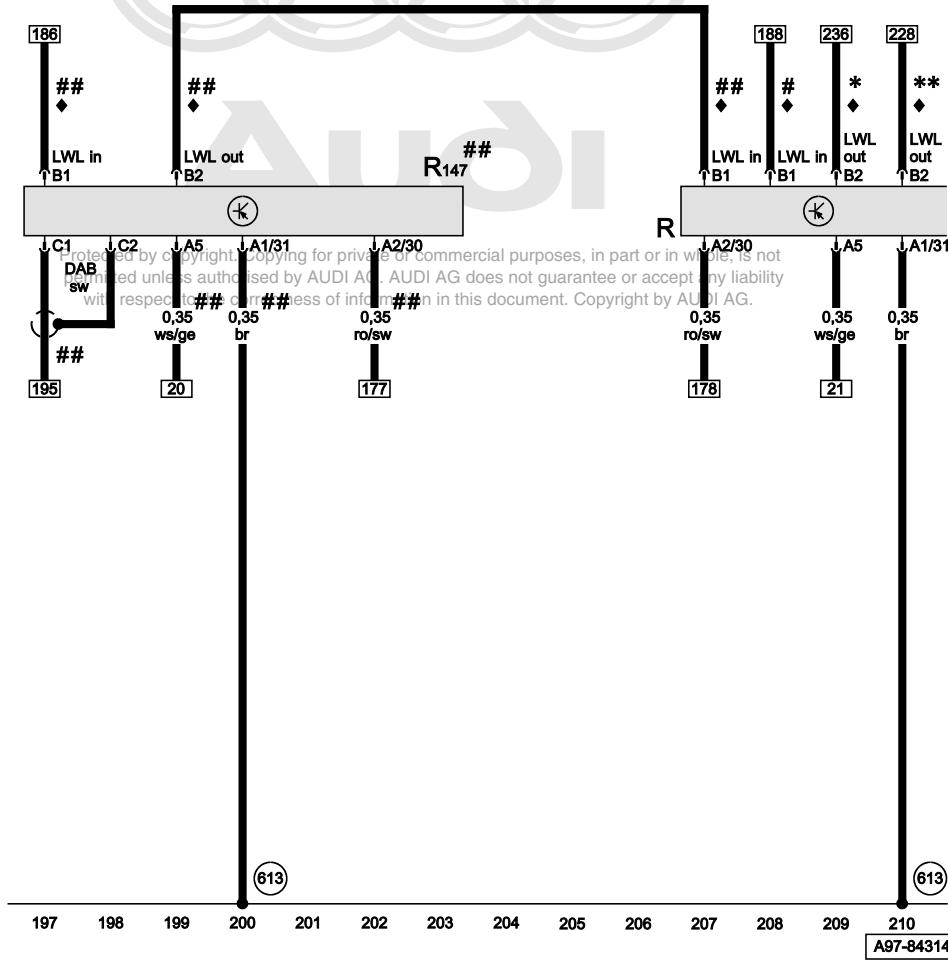

Digital radio, radio (K-box)

R Radio
R147 Digital radio


613 Earth point (audio), on left in luggage compartment

- * models with media player in position 1
- ** models with media player in position 1 and 2
- # models without digital radio
- ## models with digital radio
- ◆ fibre optic conductor

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink


Radio, language input control unit

J507 Language input control unit
 R Radio
 T12c 12-pin connector, on radio (K-box)
 T12d 12-pin connector, on language input control unit
 * models with voice control

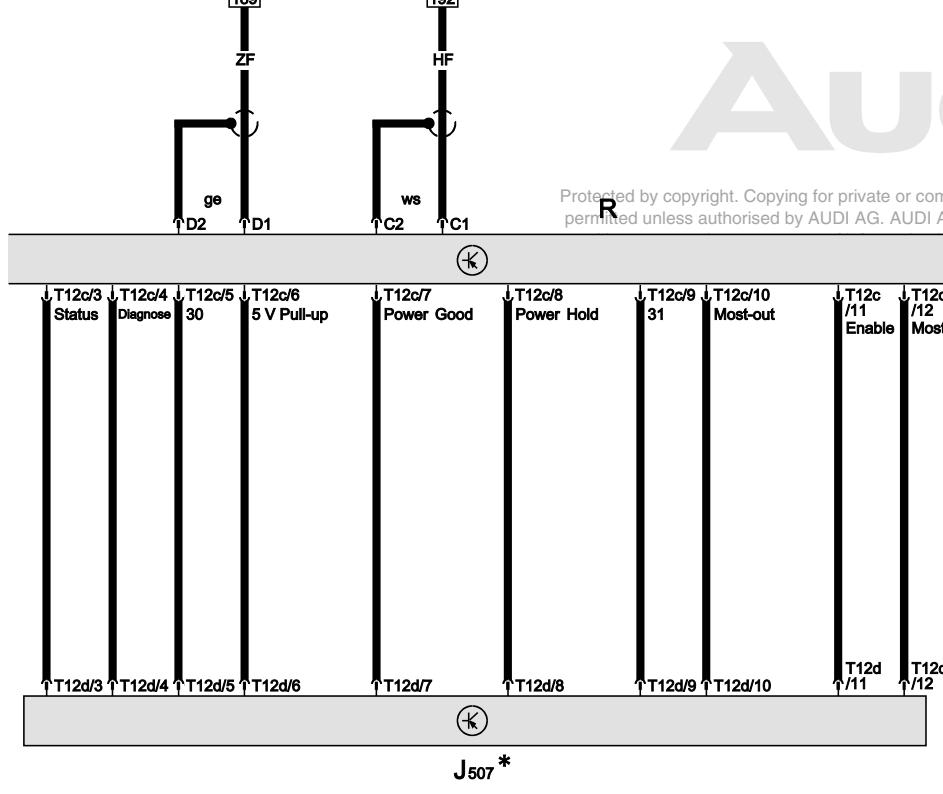

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not
 permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability
 for any damage that may result from the incorrect use of the information contained in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

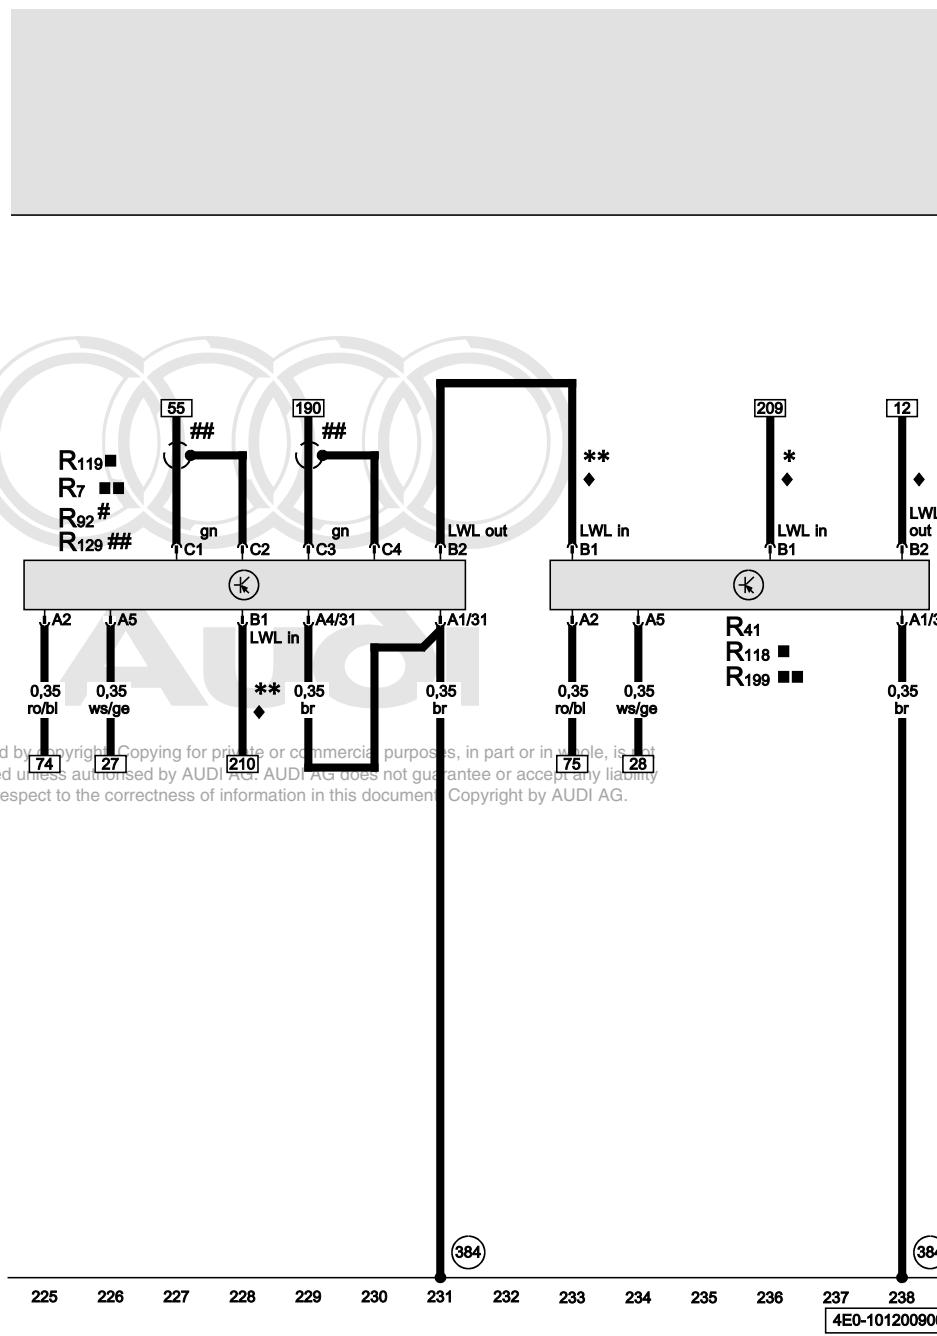

Media player, CD changer, CD ROM drive

R7 DVD player
 R41 CD changer
 R92 CD ROM drive
 R118 Media player in position 1
 R119 Media player in position 2
 R129 Video recorder and DVD player
 R199 Connection for external audio source

(384) Earth connection 19, in main wiring harness

- * models with media player in position 1
- ** models with media player in position 1 and 2
- # without video recorder, DVD player
- ## with video recorder, DVD player
- ◆ fibre optic conductor
- ◆ up to October 2006
- ◆◆ from November 2006

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

4E0-101200906

Digital TV tuner

from model year 2005

Notes:

For information concerning

- ◆ Position of relays and fuses

- ◆ Multi-pin connections

- ◆ Control units and relays

- ◆ Earth connections

⇒ List of Fitting Locations!


For information concerning

- ◆ Fault Finding Programs

⇒ guided fault finding




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

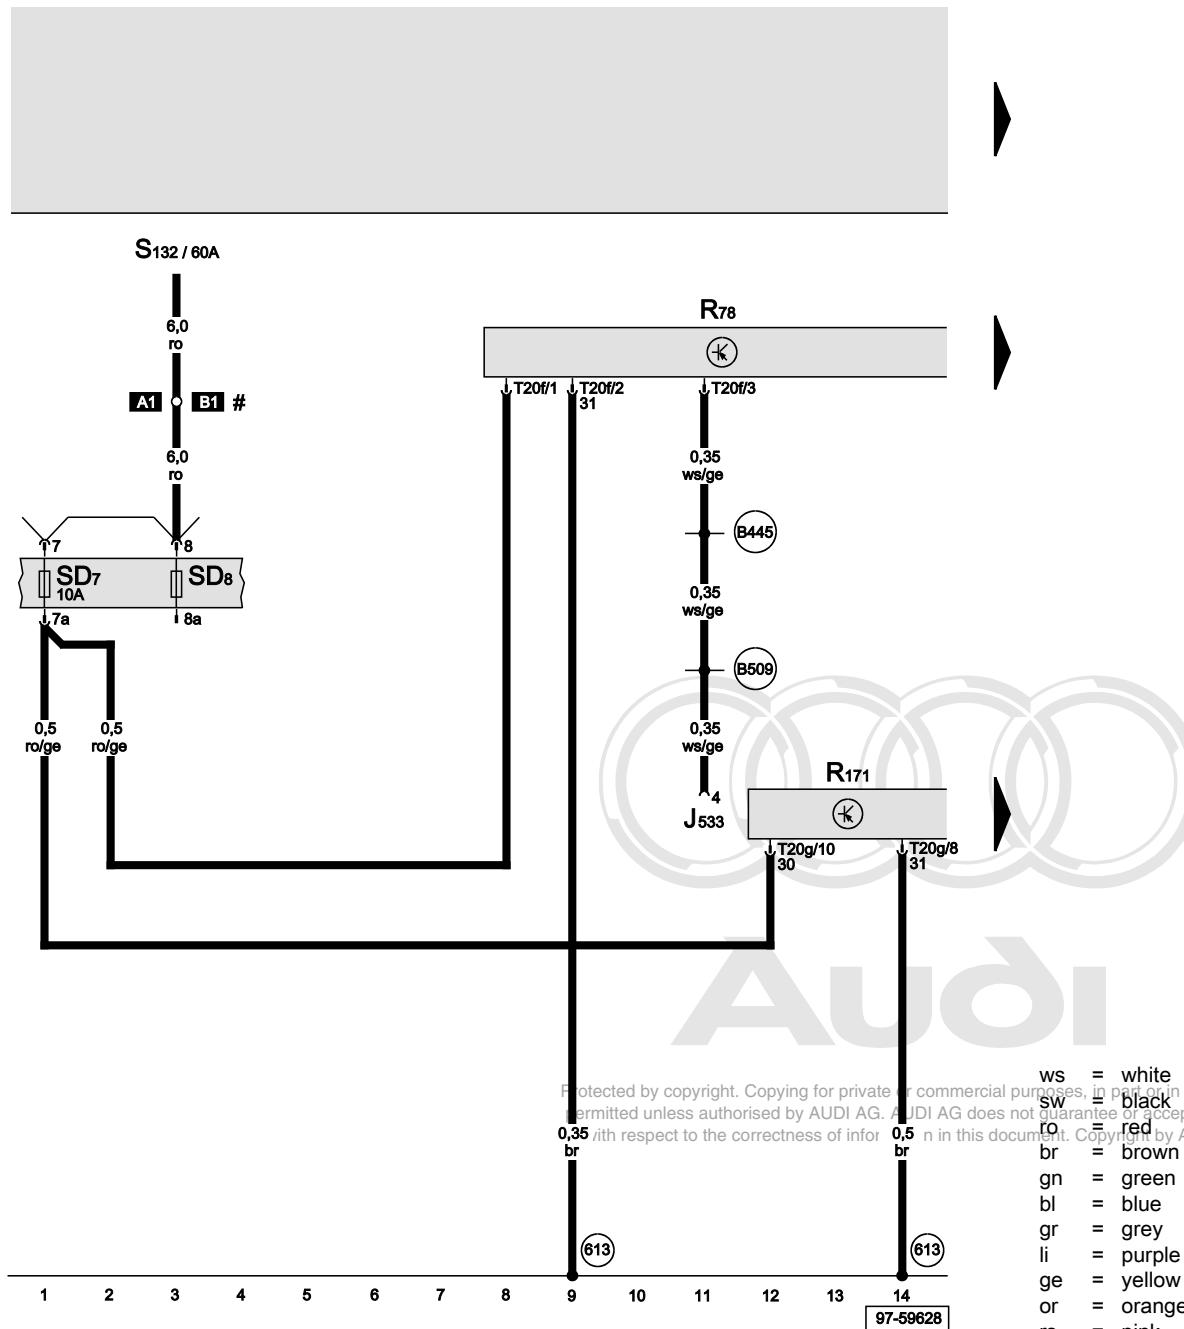

TV tuner, digital TV tuner, fuses

- J533 Data bus diagnostic interface
- R78 TV tuner
- R171 Digital TV tuner
- S132 Fuse 2
- SD7 Fuse 7 on fuse holder
- SD8 Fuse 8 on fuse holder
- T20f 20-pin connector, red, on TV tuner
- T20g 20-pin connector, red, on digital TV tuner
- 613 Earth point (audio), on left in luggage compartment
- B445 Connection 2 (diagnosis), in main wiring harness (ring brake diagnosis)
- B509 Connection 3 (diagnosis), in main wiring harness (ring brake diagnosis)
- # Screw connection, on rear left fuse holder

ws = white
 black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

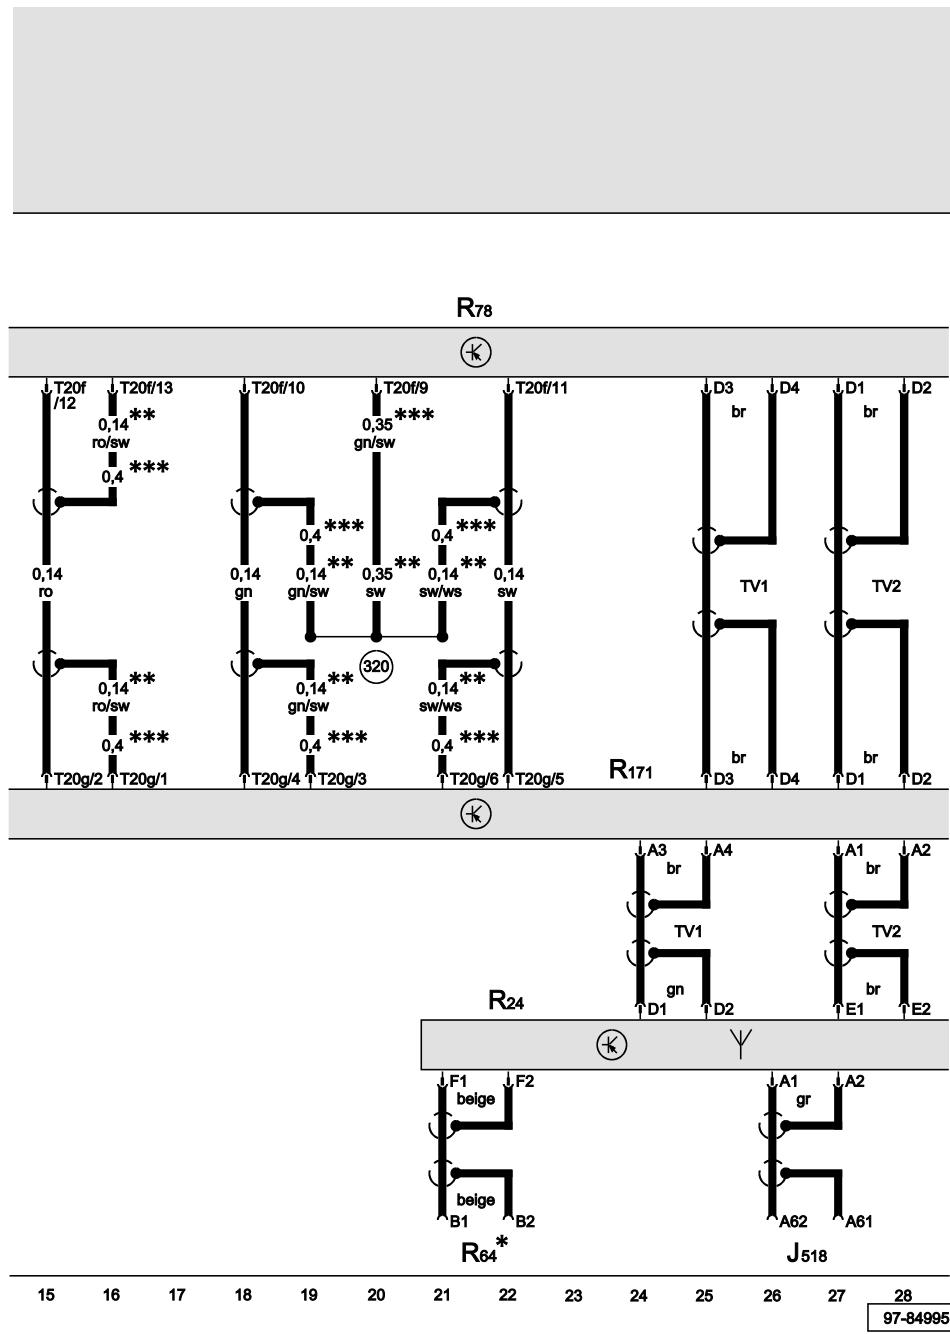

TV tuner, digital TV tuner, aerial amplifier


- J518 Entry and start authorisation control unit
- R24 Aerial amplifier
- R64 Remote control receiver for auxiliary heating
- R78 TV tuner
- R171 Digital TV tuner
- T20f 20-pin connector, red, on TV tuner
- T20g 20-pin connector, red, on digital TV tuner
- 320 Earth connection (screening 1, TV), in communication wiring harness
- * models with auxiliary heater
- ** up to model year 2005
- *** from model year 2006

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

TV tuner, digital TV tuner, aerial amplifier

- J523 Front information display and operating unit control unit
 R Radio
 R24 Aerial amplifier
 R78 TV tuner
 R129 Video recorder and DVD player
 R147 Digital radio
 R171 Digital TV tuner
 * models without video recorder / DVD player
 ** models with video recorder / DVD player
 # models with digital radio
 ♦ fibre optic conductor

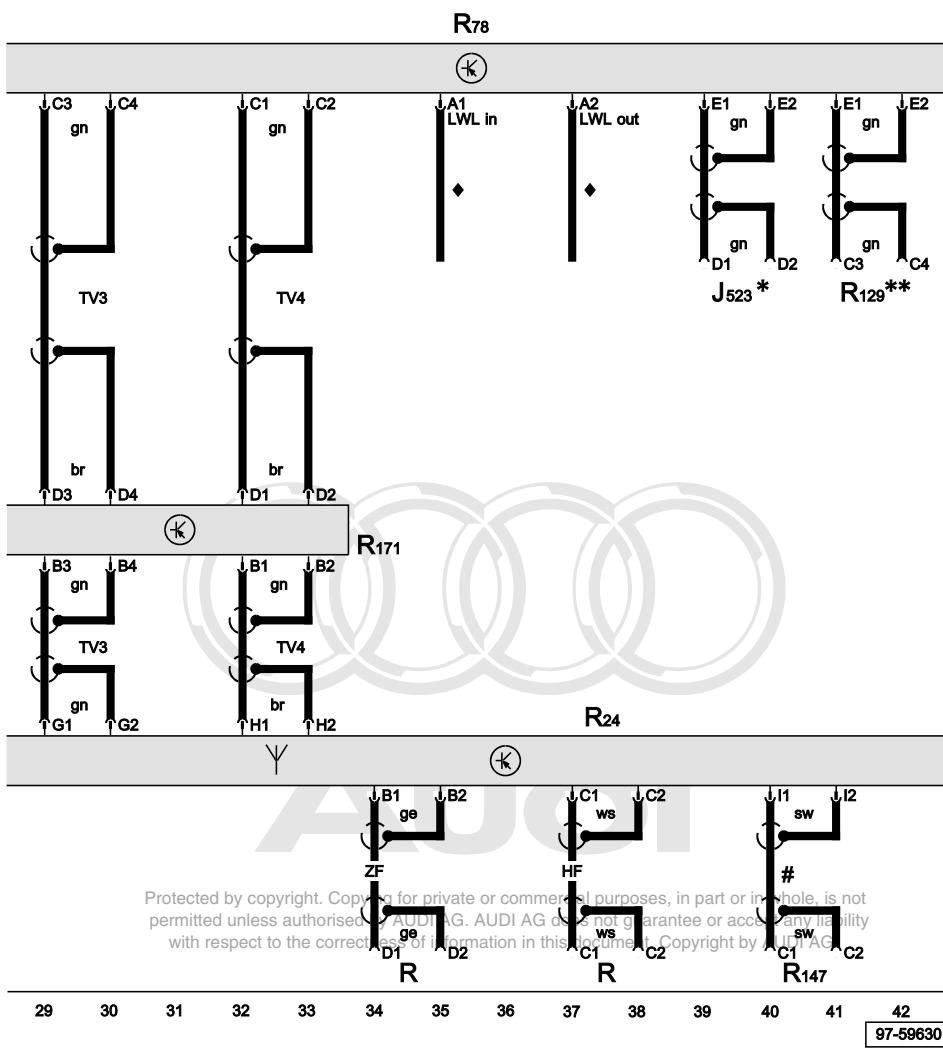

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

Rear-Seat-Entertainment (RSE)

⇒ Rear DVD changer

⇒ Fax unit

from model year 2005

Notes:

For information concerning

- ◆ Position of relays and fuses

- ◆ Multi-pin connections

- ◆ Control units and relays

- ◆ Earth connections

⇒ List of Fitting Locations!


For information concerning

- ◆ Fault Finding Programs

⇒ guided fault finding




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

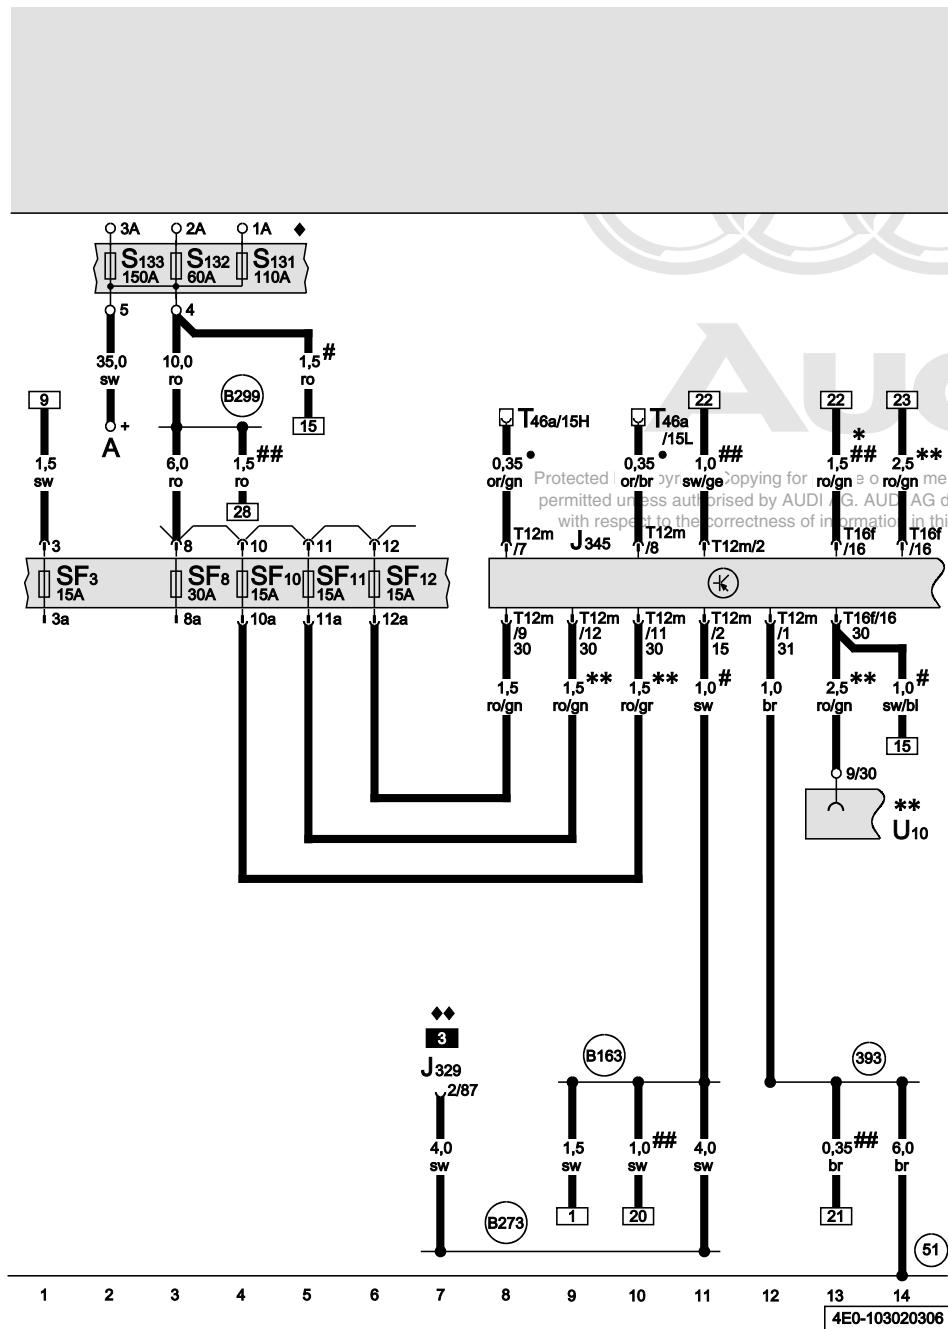

Trailer detector control unit, fuses

- | | |
|------|--|
| A | Battery |
| J329 | Terminal 15 voltage supply relay |
| J345 | Trailer detector control unit |
| S131 | Fuse 1, 110 A, in luggage compartment, rear right |
| S132 | Fuse 2, 60 A, in luggage compartment, rear right |
| S133 | Fuse 3, 150 A, in luggage compartment, rear right |
| SF3 | Fuse 3 on fuse holder |
| SF8 | Fuse 8 on fuse holder |
| SF10 | Fuse 10 on fuse holder |
| SF11 | Fuse 11 on fuse holder |
| SF12 | Fuse 12 on fuse holder |
| T12m | 12-pin connector, red, connector B, on trailer detector control unit |
| T16f | 16-pin connector, black, connector A, on trailer detector control unit |
| T46a | 46-pin connector, black, CAN separating connector left |
| U10 | Trailer socket |
| 51 | Earth point, on right in luggage compartment |
| 393 | Earth connection 28, in main wiring harness |
| B163 | Positive connection 1 (15), in interior wiring harness |
| B273 | Positive connection (15), in main wiring harness |
| B299 | Positive connection 3 (30), in main wiring harness |
- Protected by copyright. Copying for commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.
- CAN bus (data wire)
 * models without trailer towing attachment
 ** models with trailer towing attachment
 # up to model year 2005
 ## from model year 2006
 ◆ In luggage compartment, rear right
 ◆◆ Relay and fuse carrie behind left dash panel

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink


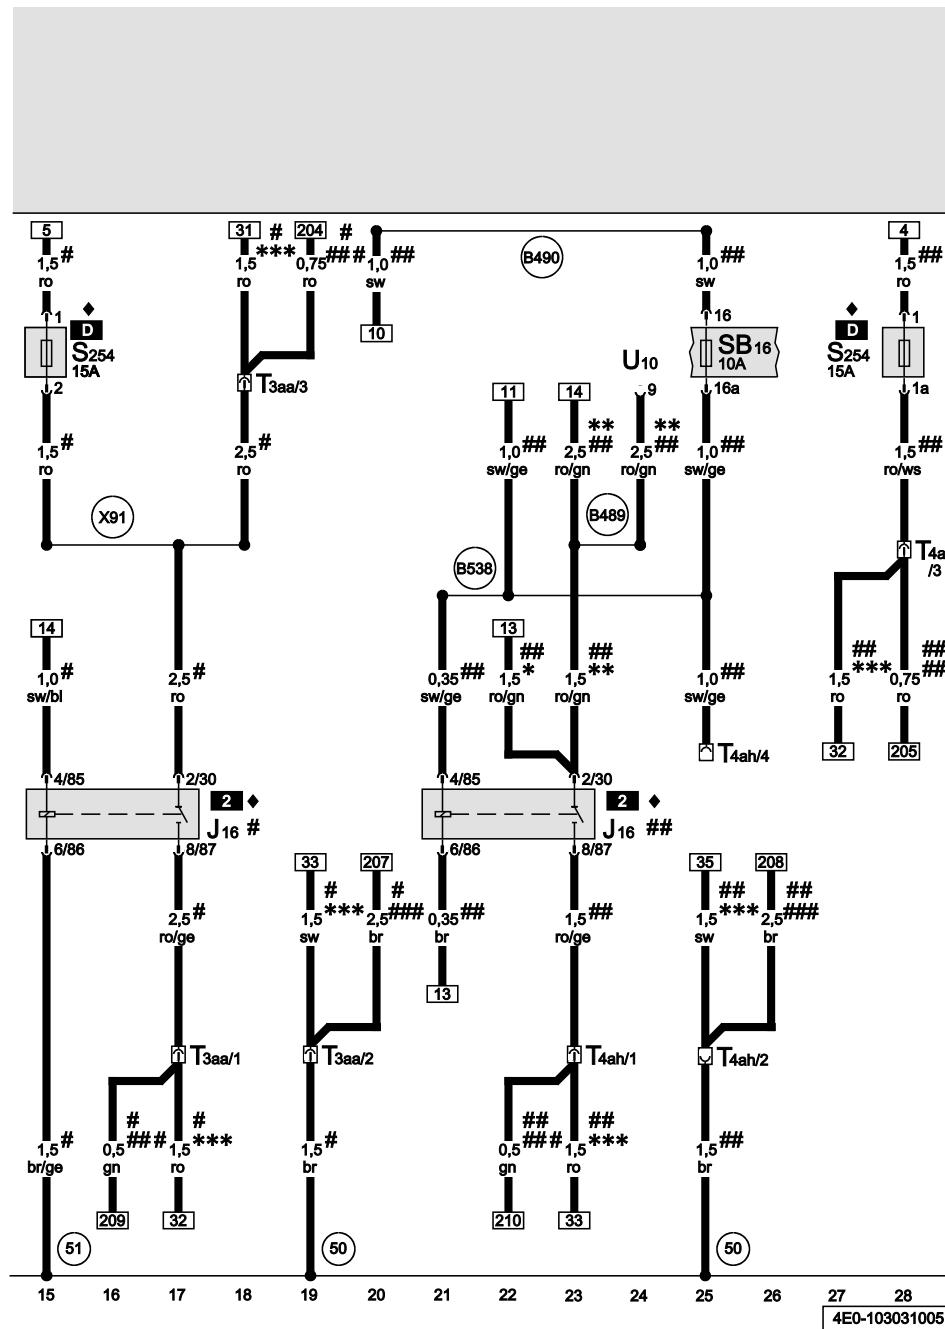


Current supply relay, communications fuse

- J16 Current supply relay
- S254 Communications fuse
- SB16 Fuse 16 on fuse holder
- T3aa 3-pin connector, black, on left in luggage compartment
- T4ah 4-pin connector, black, on left in luggage compartment
- U10 Trailer socket
- 50 Earth point, on left in luggage compartment
- 51 Earth point, on right in luggage compartment
- B489 Connection 25, in main wiring harness
- B490 Connection 26, in main wiring harness
- B538 Connection 29, in main wiring harness
- X91 Connection 1 (communication), in optional equipment wiring harness
- * models without trailer towing attachment
- ** models with trailer towing attachment
- *** models with Rear-Seat-Entertainment (RSE)
- # up to model year 2005
- ## from model year 2006
- ### models with fax unit
- ◆ Relay and fuse carrier right in luggage compartment

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

 ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

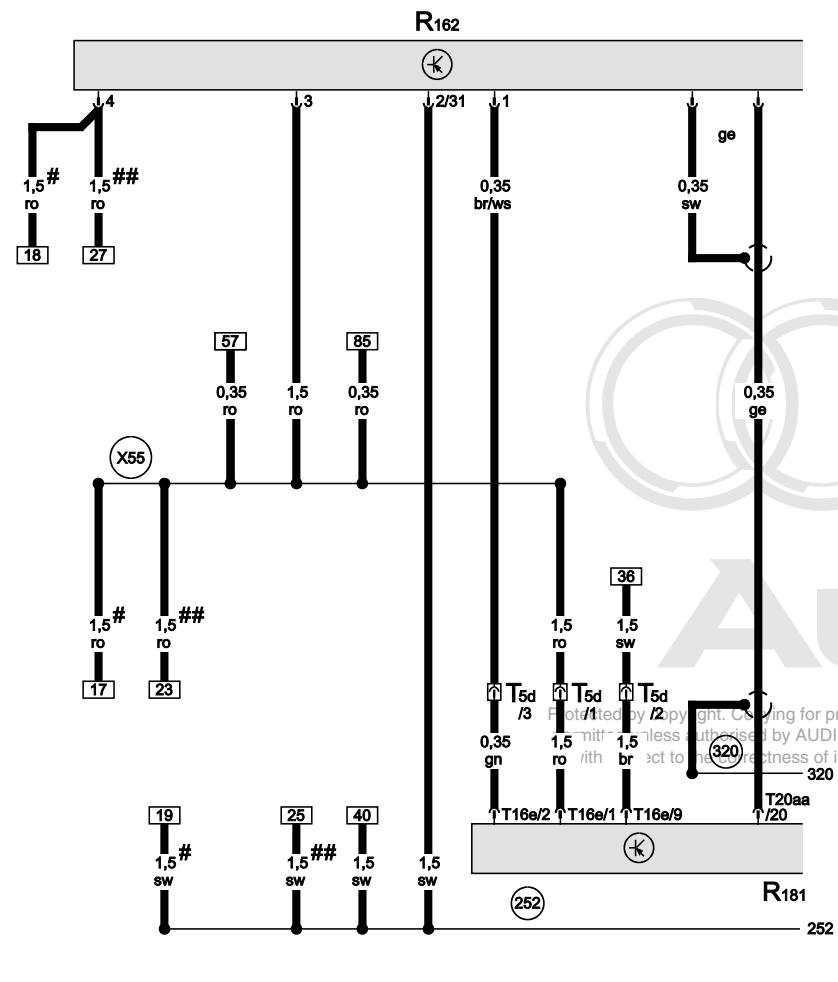
Rear-Seat-Entertainment voltage supply, rear DVD changer, multimedia system signal splitter

R162 Rear DVD changer
 R181 Multimedia system signal splitter
 T5d 5-pin connector, black, on left in luggage compartment
 T16e 16-pin connector, brown, on multimedia system signal splitter
 T20aa 20-pin connector, red, on multimedia system signal splitter

(252) Earth connection, in optional equipment wiring harness

(320) Earth connection (screening 1, TV), in communication wiring harness

(X55) Positive connection (15), in optional equipment wiring harness

* phased-in modification
 # up to model year 2005
 ## from model year 2006

Printed by /2, Copyright © AUDI AG. Copying for private or commercial purposes, in part or in whole, is not permitted without authorisation by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

29 30 31 32 33 34 35 36 37 38 39 40 41 42


97-80166

Rear DVD changer, multimedia system signal splitter,
multimedia system display unit 1 control unit

J744 Multimedia system display unit 1 control unit
 R162 Rear DVD changer
 R181 Multimedia system signal splitter
 T5d 5-pin connector, black, on left in luggage compartment
 T16e 16-pin connector, brown, on multimedia system signal splitter
 T20aa 20-pin connector, red, on multimedia system signal splitter

(252) Earth connection, in optional equipment wiring harness

(320) Earth connection (screening 1, TV), in communication wiring harness

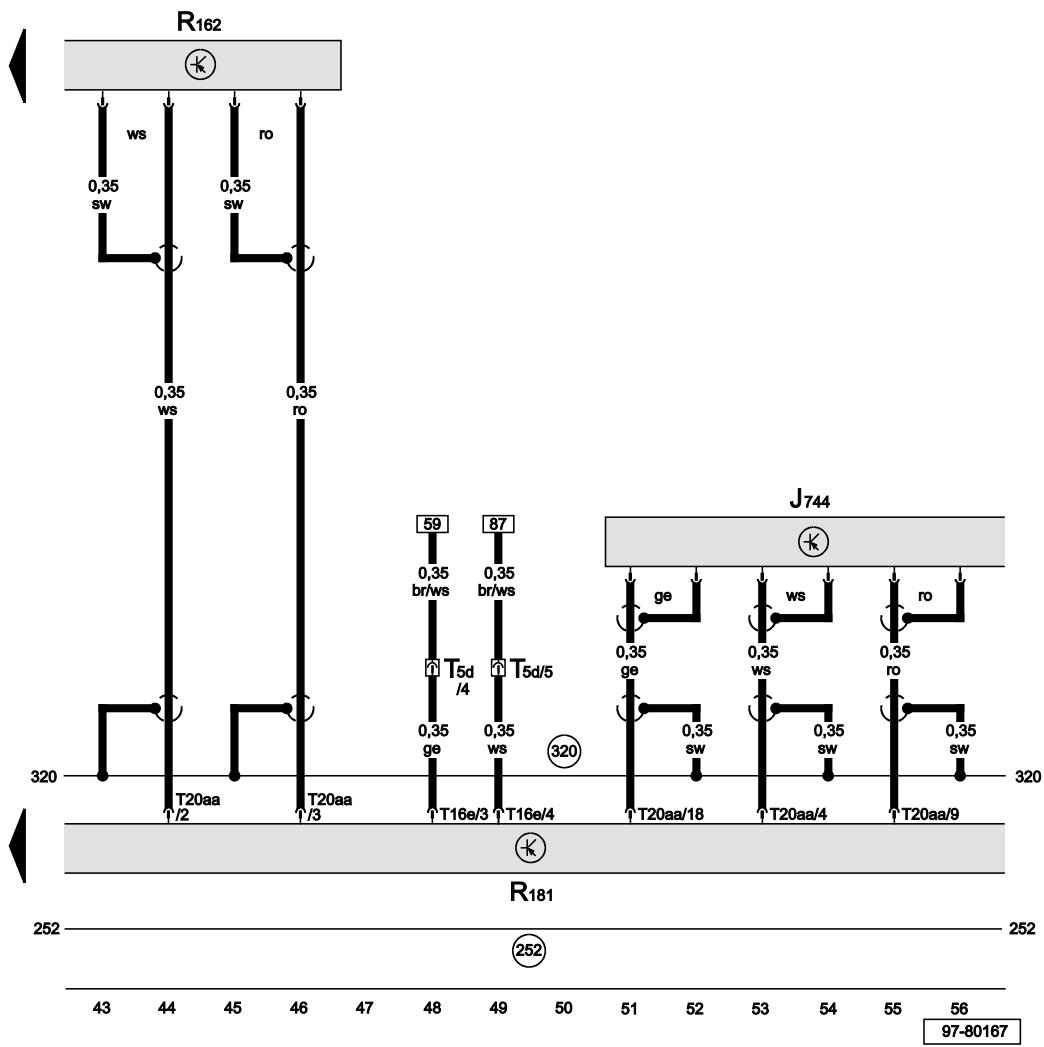

Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted.
green
bluerepresents the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 br = brown
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

97-80167

Multimedia system signal splitter, multimedia system display unit 1 control unit


J744 Multimedia system display unit 1 control unit
 R181 Multimedia system signal splitter
 T3ad 3-pin connector, on multimedia system display unit 1 control unit
 T8aa 8-pin connector, on multimedia system display unit 1 control unit
 T20aa 20-pin connector, red, on multimedia system signal splitter

(252) Earth connection, in optional equipment wiring harness


(320) Earth connection (screening 1, TV), in communication wiring harness

Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

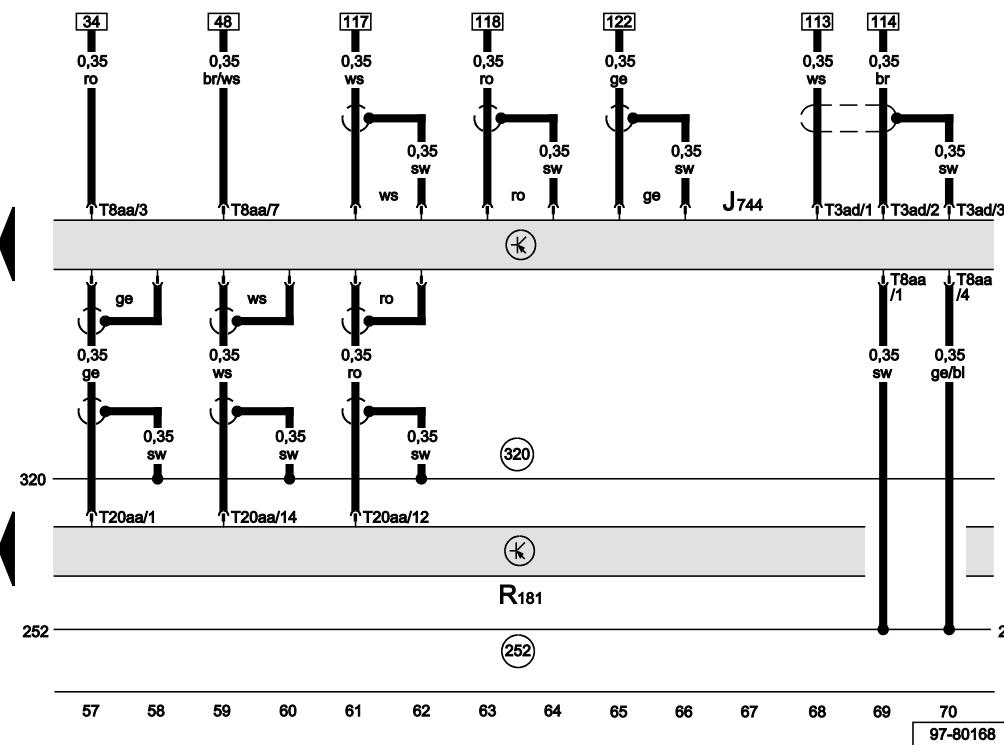

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

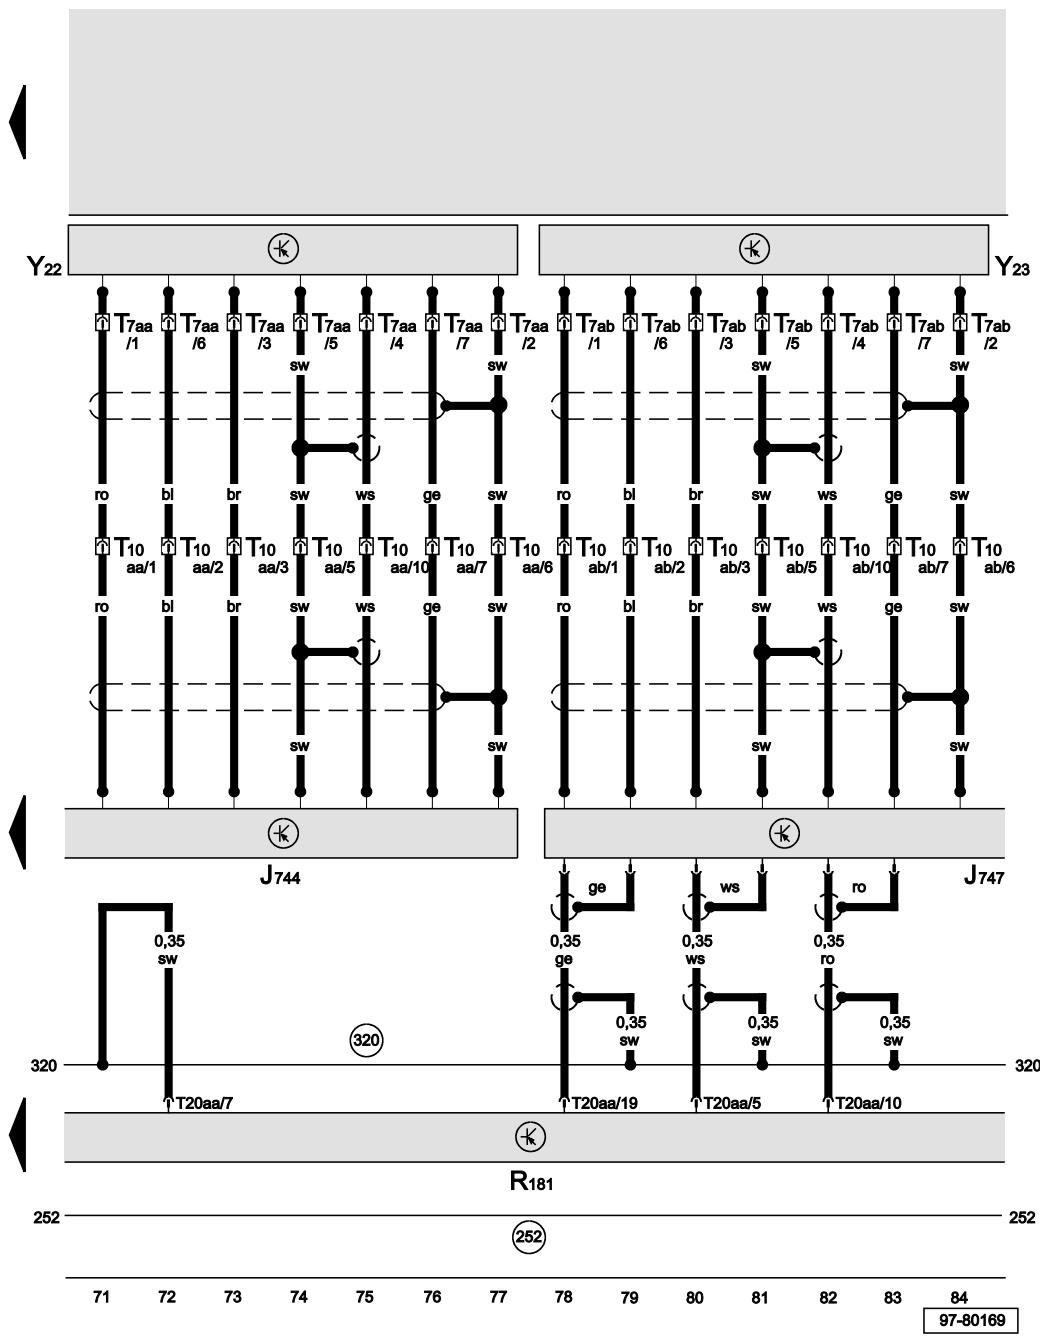

Multimedia system signal splitter, multimedia system display unit 1 control unit, multimedia system display unit 2 control unit, multimedia display unit 1, multimedia display unit 2

- J744 Multimedia system display unit 1 control unit
- J747 Multimedia system display unit 2 control unit
- R181 Multimedia system signal splitter
- T7aa 7-pin connector, green, in driver seat backrest
- T7ab 7-pin connector, green, in front passenger seat backrest
- T10aa 10-pin connector, black, under driver seat
- T10ab 10-pin connector, black, under front passenger seat
- T20aa 20-pin connector, red, on multimedia system signal splitter
- Y22 Multimedia display unit 1
- Y23 Multimedia display unit 2

 
(252) Earth connection, in optional equipment wiring harness

(320) Earth connection (screening 1, TV), in communication wiring harness

Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- ge = yellow
- or = orange
- rs = pink




Multimedia system signal splitter, multimedia system display unit 2 control unit

J747 Multimedia system display unit 2 control unit
 R181 Multimedia system signal splitter
 T3ae 3-pin connector, on multimedia system display unit 2 control unit
 T8ab 8-pin connector, on multimedia system display unit 2 control unit
 T20aa 20-pin connector, red, on multimedia system signal splitter

(252) Earth connection, in optional equipment wiring harness

(320) Earth connection (screening 1, TV), in communication wiring harness

* without DVB-T-Set Top-Box
 ** with DVB-T-Set Top-Box

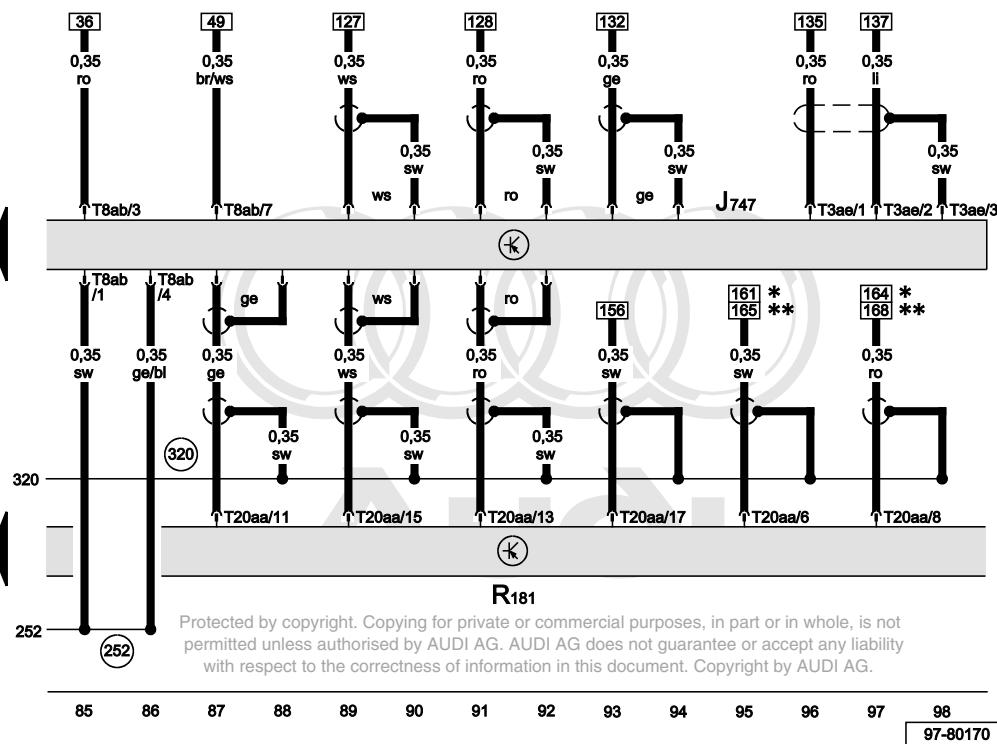


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

Multimedia system signal splitter

R181 Multimedia system signal splitter
 T16e 16-pin connector, brown, on multimedia system signal splitter
 321 Earth connection (screening 2, TV), in communication wiring harness



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

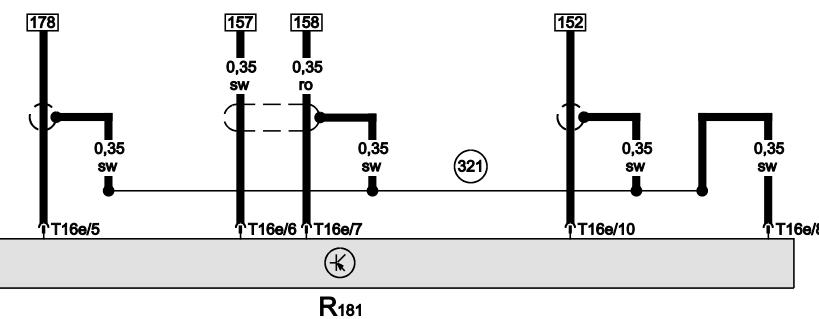


ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

97-80171

99 100 101 102 103 104 105 106 107 108 109 110 111 112

Additional connections unit for audio and video, multimedia headphones for left side

- R123 Multimedia headphones for left side
 R176 Additional connections unit for audio and video
 T4af 4-pin connector, on left in luggage compartment
 T4ag 4-pin connector, under rear centre console
 T12aa 12-pin connector, black, in left luggage compartment
 T12ab 12-pin connector, black, under rear centre console

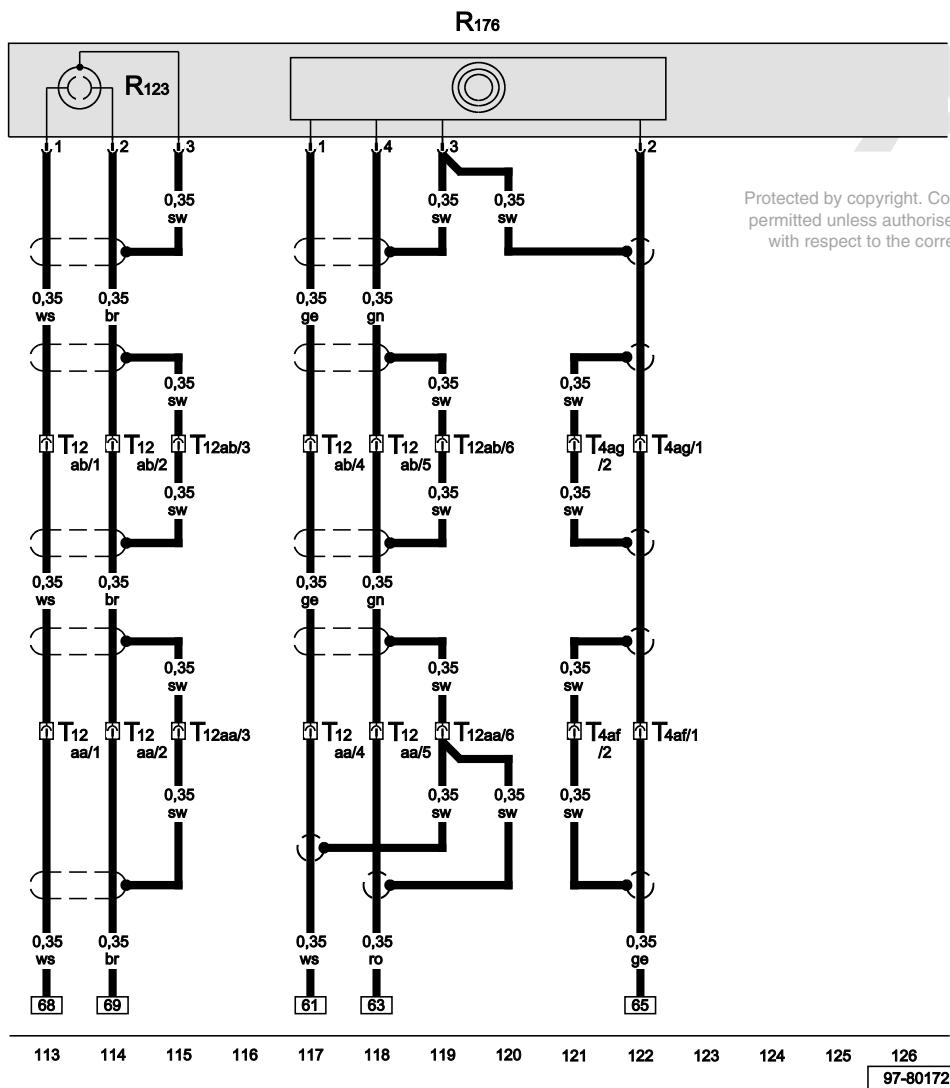


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- | | |
|----|----------|
| ws | = white |
| sw | = black |
| ro | = red |
| br | = brown |
| gn | = green |
| bl | = blue |
| gr | = grey |
| li | = purple |
| ge | = yellow |
| or | = orange |
| rs | = pink |

97-80172


Additional connections unit for audio and video, multimedia headphones for right side

- R124 Multimedia headphones for right side
- R176 Additional connections unit for audio and video
- T4af 4-pin connector, on left in luggage compartment
- T4ag 4-pin connector, under rear centre console
- T12aa 12-pin connector, black, in left luggage compartment
- T12ab 12-pin connector, black, under rear centre console

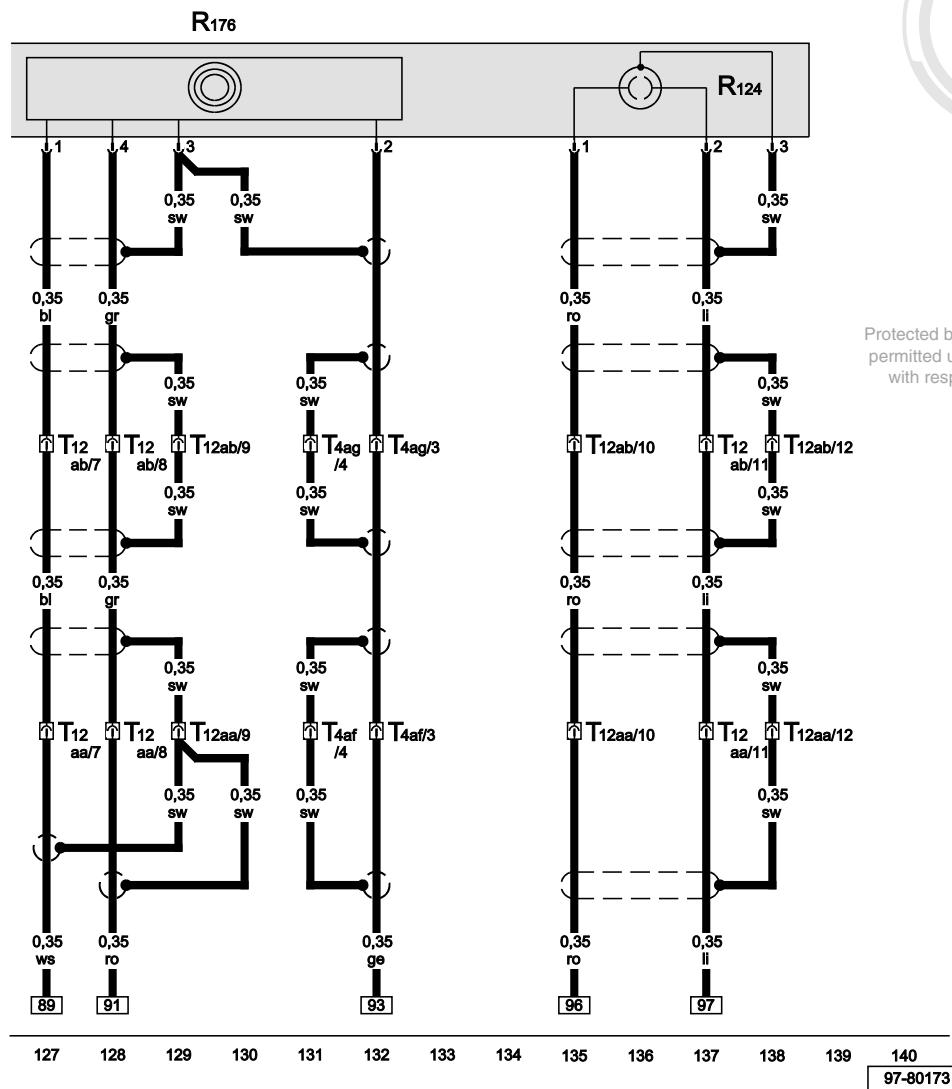



TV tuner, fuses left luggage compartment

- R78 TV tuner
- S132 Fuse 2, 60 A, in luggage compartment, rear right
- SD7 Fuse 7 on fuse holder
- SD8 Fuse 8 on fuse holder
- T20f 20-pin connector, red, on TV tuner
- 613 Earth point (audio), on left in luggage compartment
- # Screw connection, on rear left fuse holder
- ♦ Fibre optic conductor, see Current Flow Diagram infotainment data bus (Most Ring)

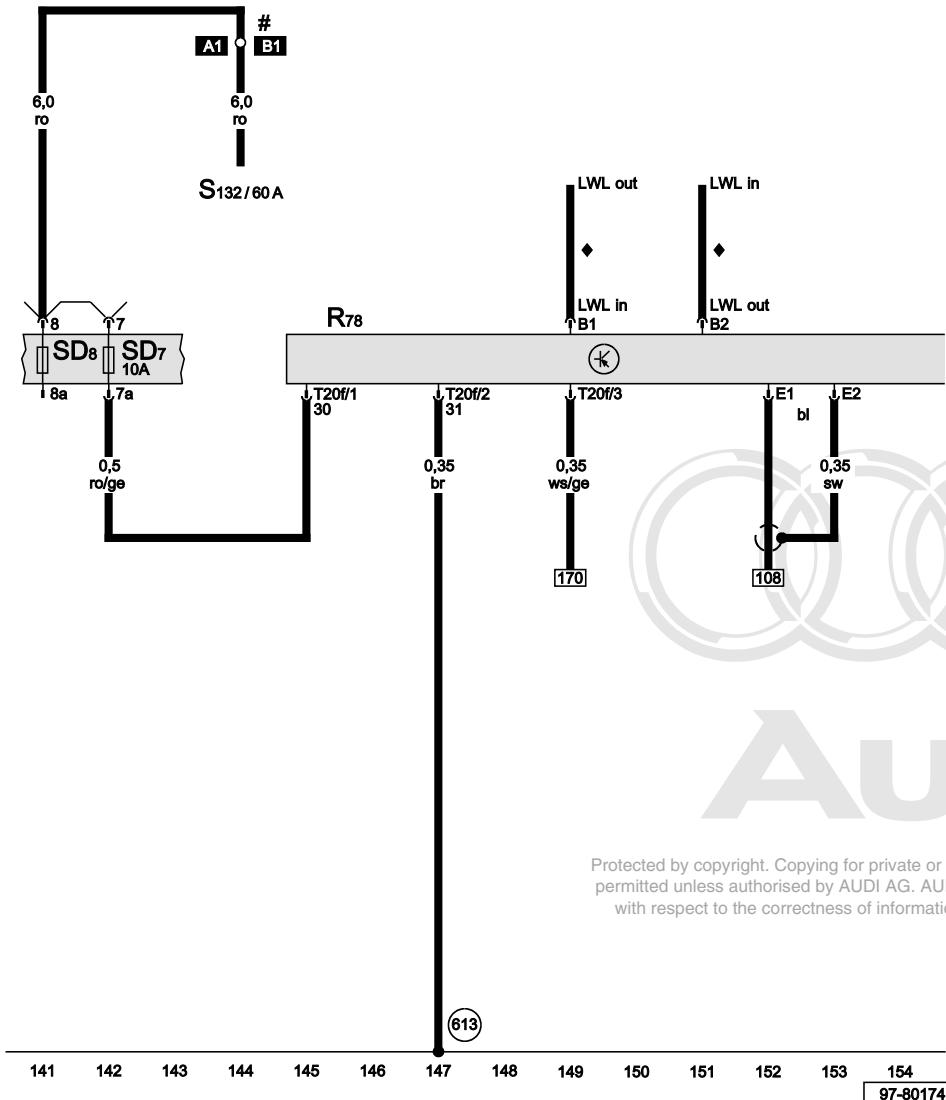

TV tuner




 
R78 TV tuner
 T20f 20-pin connector, red, on TV tuner
 * without DVB-T-Set Top-Box
 ** with DVB-T-Set Top-Box

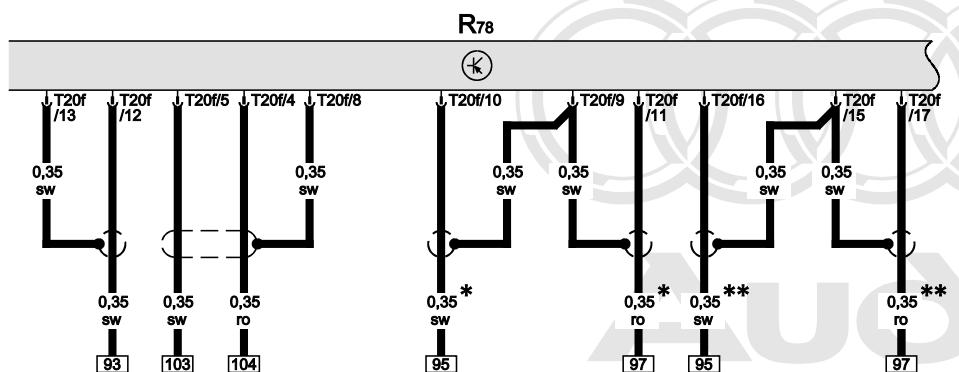

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

 155 156 157 158 159 160 161 162 163 164 165 166 167 168
 97-80175

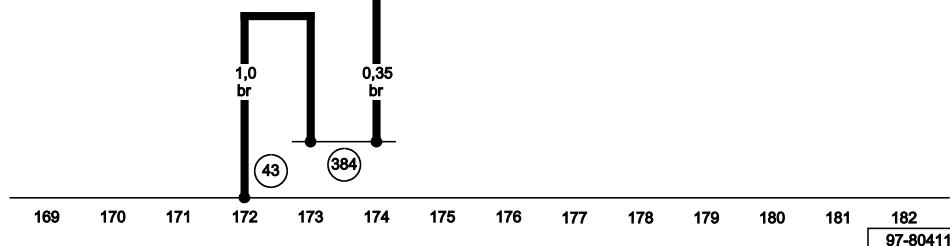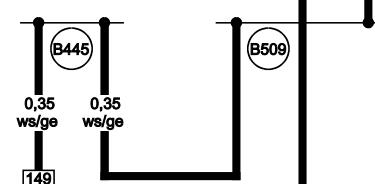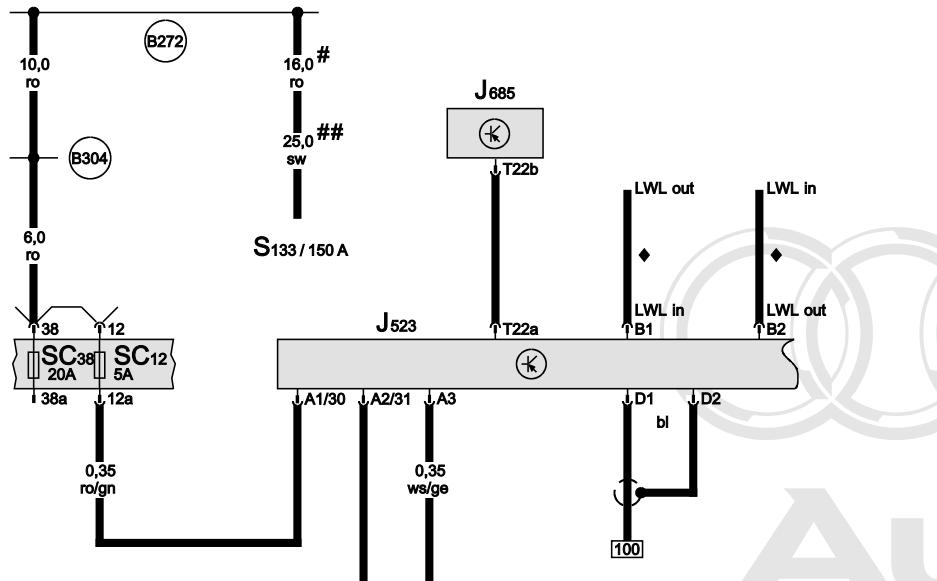

Front information display and operating unit control unit, display unit for front information display and operating unit control unit, fuses

- J523 Front information display and operating unit control unit
- J685 Display unit for front information display and operating unit control unit
- S133 Fuse 3
- SC12 Fuse 12 on fuse holder
- SC38 Fuse 38 on fuse holder
- T22a 22-pin connector, connector C, on front information display and operating unit control unit
- T22b 22-pin connector, on display unit for front information display and operating unit control unit
- 43 Earth point, lower part of right A-pillar
- 384 Earth connection 19, in main wiring harness
- B272 Positive connection (30), in main wiring harness
- B304 Positive connection 8 (30), in main wiring harness
- B445 Connection 2 (diagnosis), in main wiring harness (ring brake diagnosis)
- B509 Connection 3 (diagnosis), in main wiring harness (ring brake diagnosis)
- # models with petrol engines
- ## models with diesel engines
- ◆ Fibre optic conductor, see Current Flow Diagram infotainment data bus (Most Ring)


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

97-80411

Fax unit, telephone and navigation systems loudspeaker,
telephone handset 2 (fax), rear right microphone, rear
charger unit for telephone


- F86 Contact switch for fax device
- R39 Telephone and navigation systems loudspeaker
- R73 Fax unit
- R116 Telephone handset 2 (fax)
- R145 Rear right microphone
- R151 Rear charger unit for telephone
- T6af 6-pin connector, black, in rear centre console
- T10ae 10-pin connector, red, on rear charger unit for telephone (fax)

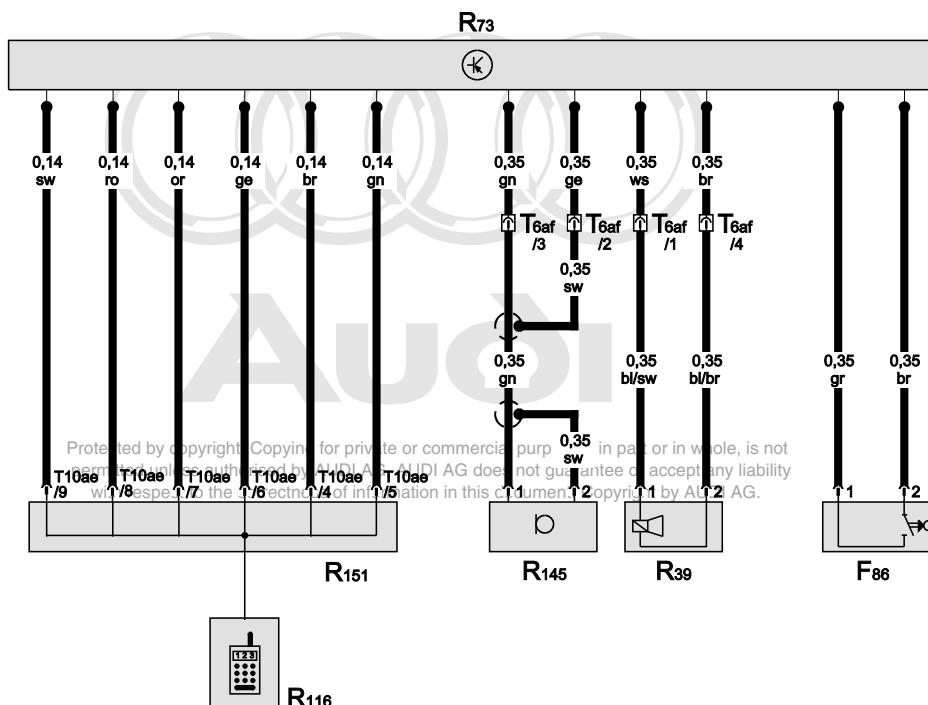

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- ge = yellow
- or = orange
- rs = pink

183 184 185 186 187 188 189 190 191 192 193 194 195 196

97-80412

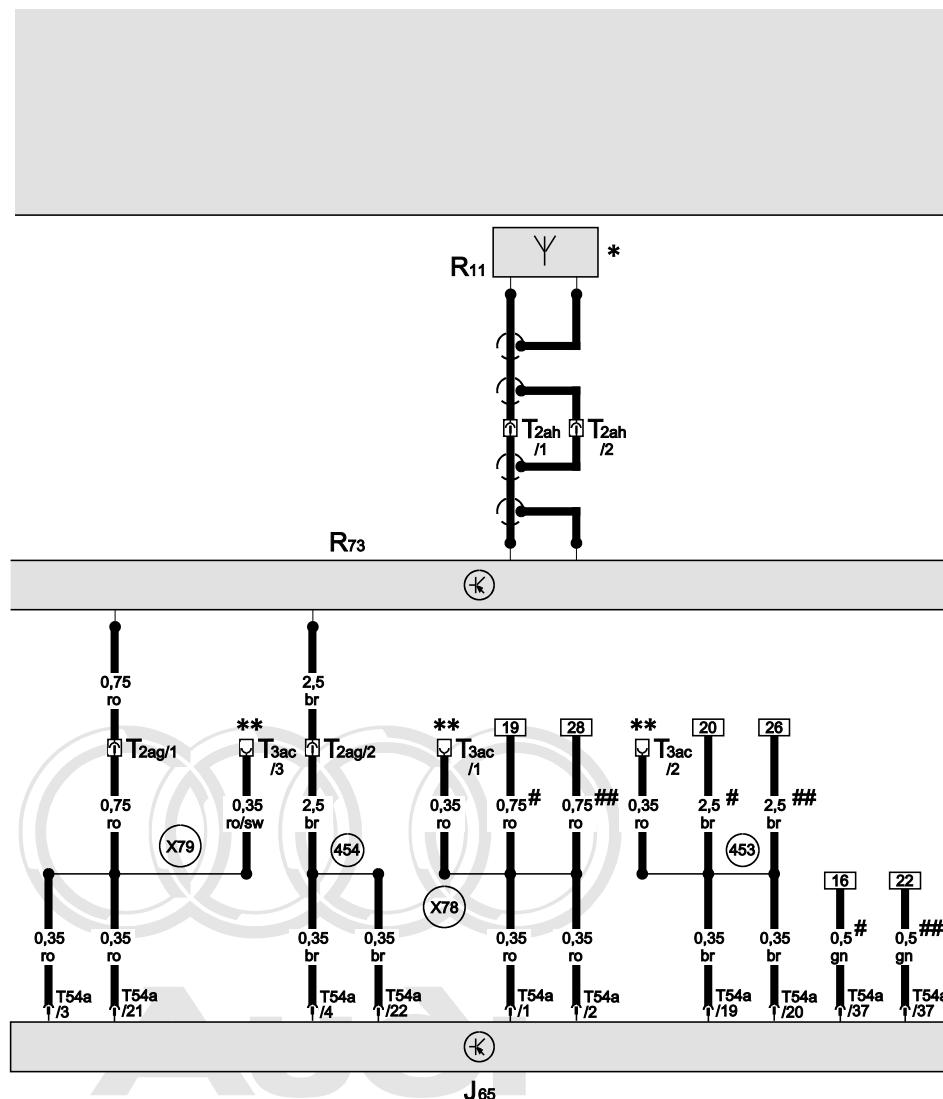

Fax unit, fax device control unit, aerial

- J65 Fax device control unit
 - R11 Aerial
 - R73 Fax unit
 - T2ag 2-pin connector, under rear centre console
 - T2ah 2-pin connector, purple, under rear centre console
 - T3ac 3-pin connector, in luggage compartment compensator
 - T54a 54-pin connector, on fax device control unit
 - 453 Earth connection 3, in optional equipment wiring harness
 - 454 Earth connection 4, in optional equipment wiring harness
 - X78 Connection 1, in optional equipment wiring harness
 - X79 Connection 2, in optional equipment wiring harness
- * under rear bumper
 ** no compensator installed
 # up to model year 2005
 ## from model year 2006


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.




Fax unit, fax device control unit

J65 Fax device control unit
 R73 Fax unit
 T15 15-pin connector, under rear centre console
 T54a 54-pin connector, on fax device control unit
 * screening on connector housing

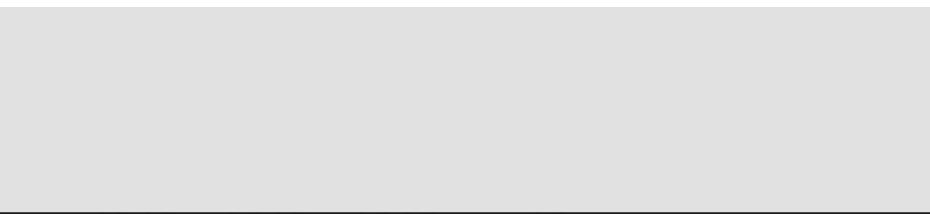

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Right by AUDI AG.

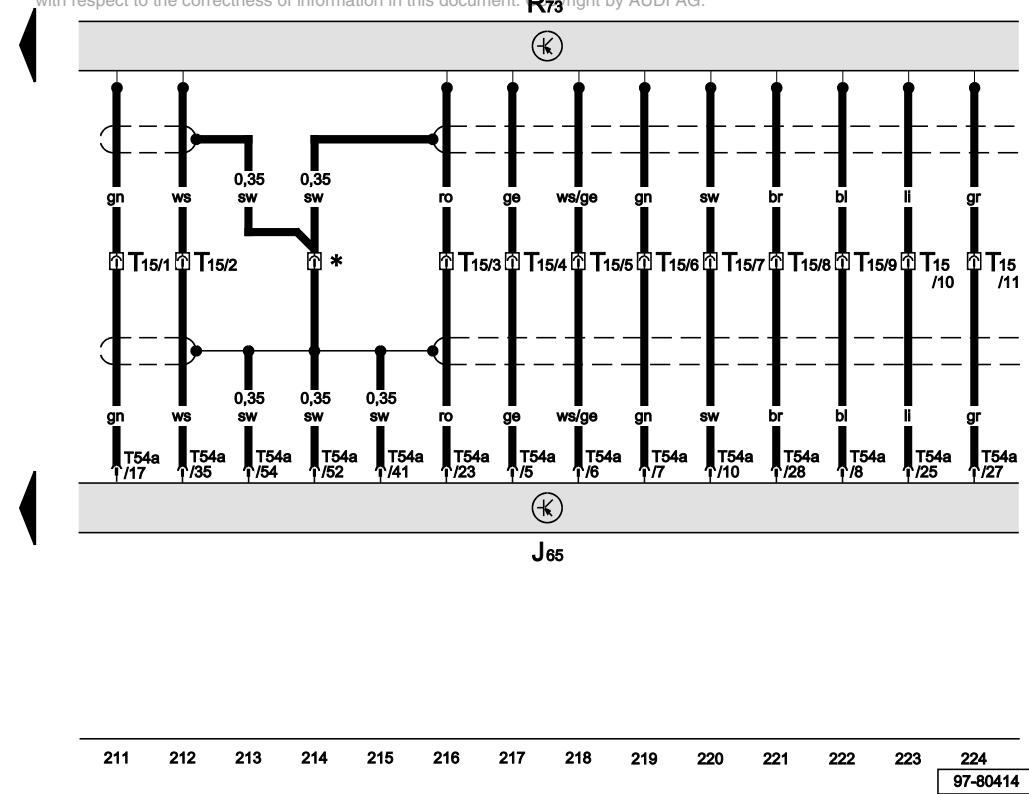


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

Fax unit, fax device control unit, ethernet socket

J65 Fax device control unit
 R73 Fax unit
 T15 15-pin connector, under rear centre console
 T54a 54-pin connector, on fax device control unit
 U21 Ethernet socket



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

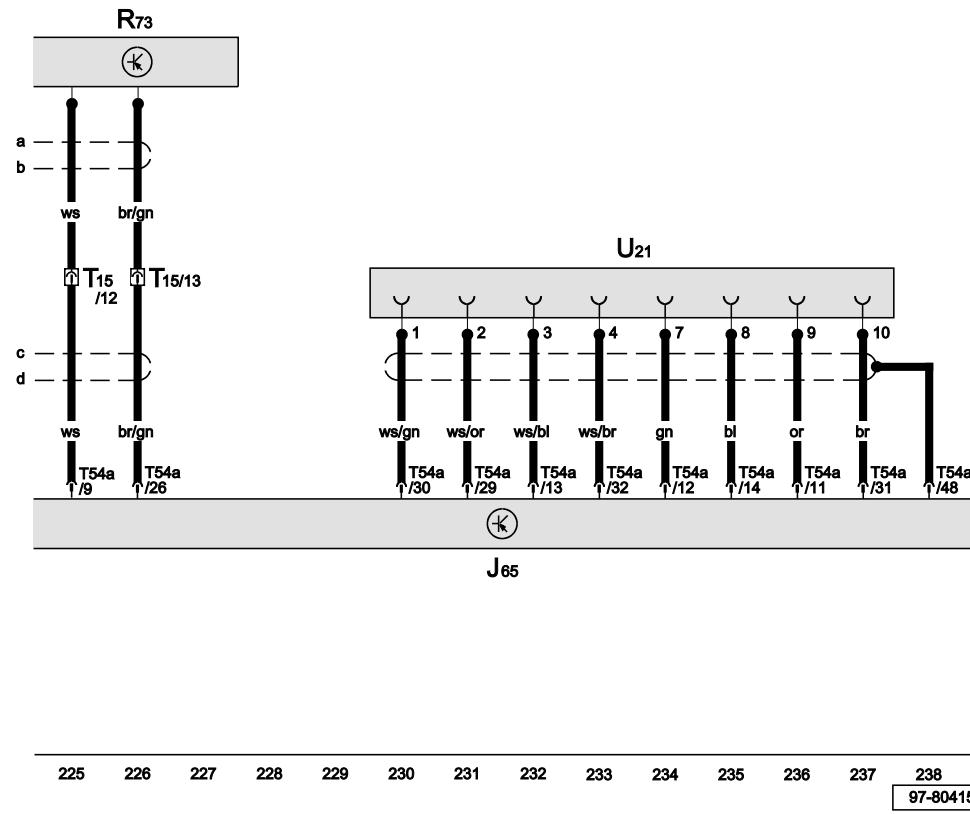

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink

Voltage supply external equipment

from model year 2005

Notes:

For information concerning

- ◆ Position of relays and fuses

- ◆ Multi-pin connections

- ◆ Control units and relays

- ◆ Earth connections

⇒ List of Fitting Locations!


For information concerning

- ◆ Fault Finding Programs


⇒ guided fault finding



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

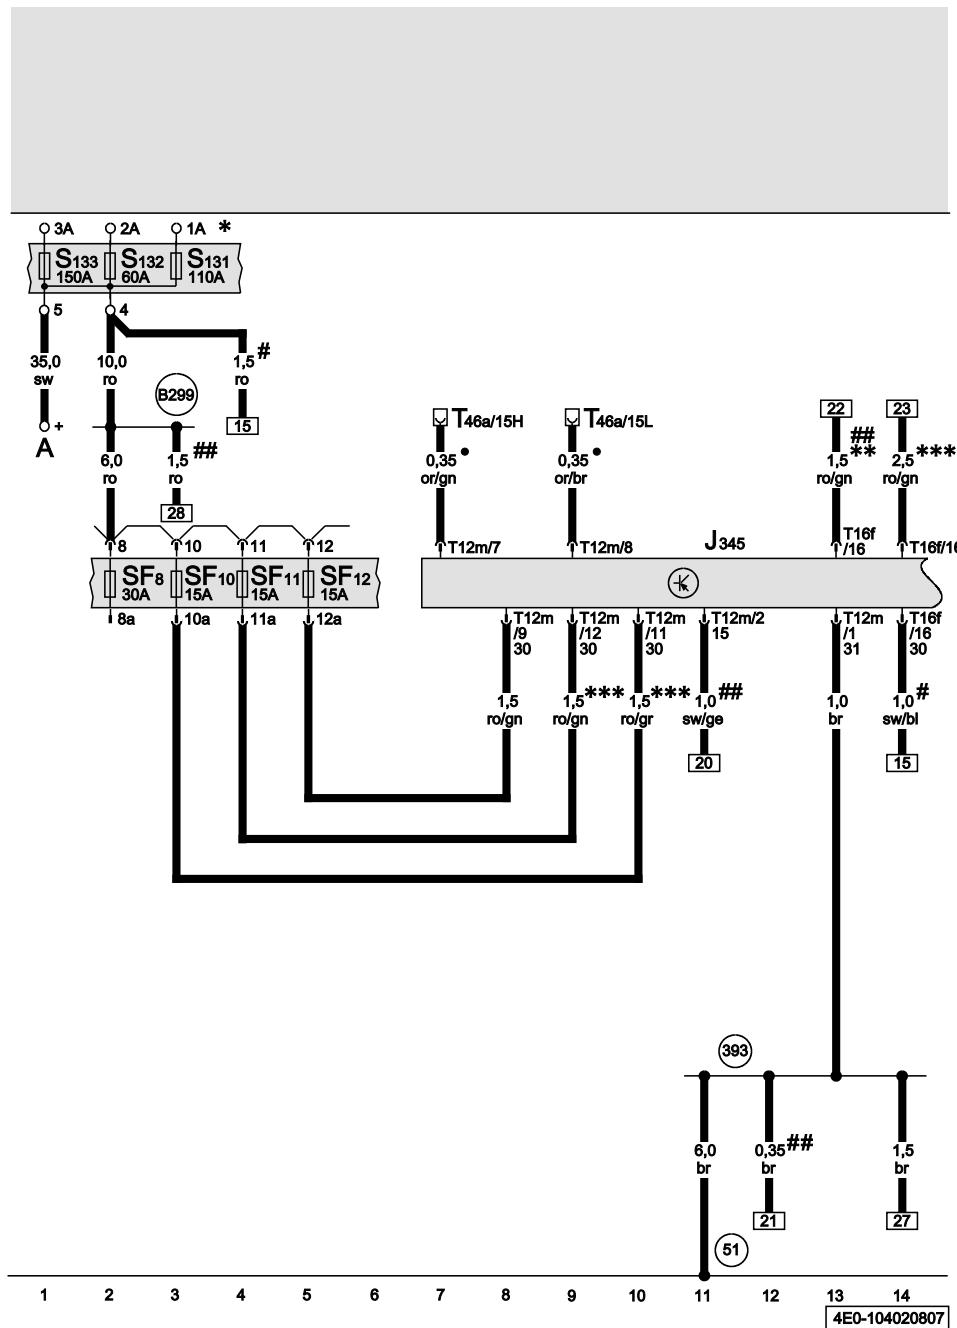


Trailer detector control unit, fuses

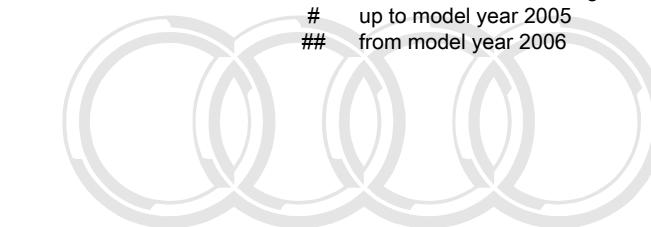**Audi**

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

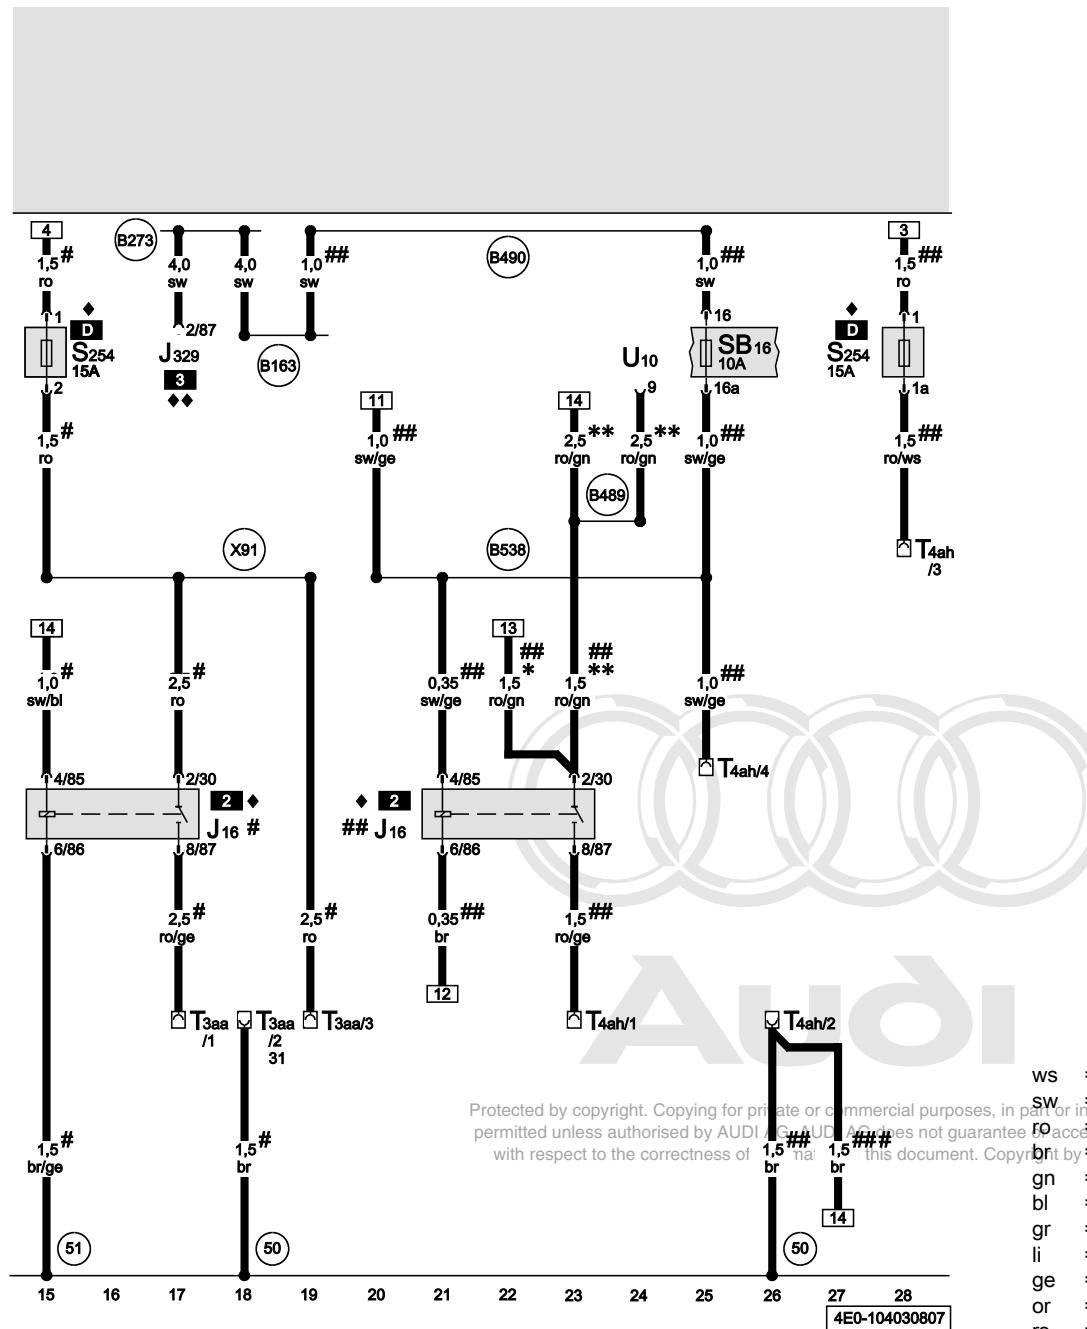

Current supply relay, communications fuse

- J16 Current supply relay
- J329 Terminal 15 voltage supply relay
- S254 Communications fuse
- SB16 Fuse 16 on fuse holder B
- T3aa 3-pin connector, black, on left in luggage compartment
- T4ah 4-pin connector, black, on left in luggage compartment
- U10 Trailer socket
- 50 Earth point, on left in luggage compartment
- 51 Earth point, on right in luggage compartment
- B163 Positive connection 1 (15), in interior wiring harness
- B273 Positive connection (15), in main wiring harness
- B489 Connection 25 in main wiring harness
- B490 Connection 26 in main wiring harness
- B538 Connection 29 in main wiring harness
- X91 Connection 1 (communication), in optional equipment wiring harness
- * models without trailer towing attachment
- ** models with trailer towing attachment
- # up to model year 2005
- ## from model year 2006
- ### from August 2007
- ◆ Relay and fuse carrier right in luggage compartment
- ◆◆ Relay and fuse carrier behind left dash panel

ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
li	= purple
ge	= yellow
or	= orange
rs	= pink