

- ♦ Filling system => page 19-11

3 - Engine Coolant Temperature (ECT) sensor -G62-


- ♦ 15 Nm (11 ft lb)

- ♦ Checking => Repair Manual, 2.8 Liter V6 2V Fuel Injection & Ignition, Repair Group 01

4 - 10 Nm (7 ft lb)

5 - Small coolant pipe

6 - 20 Nm (15 ft lb)

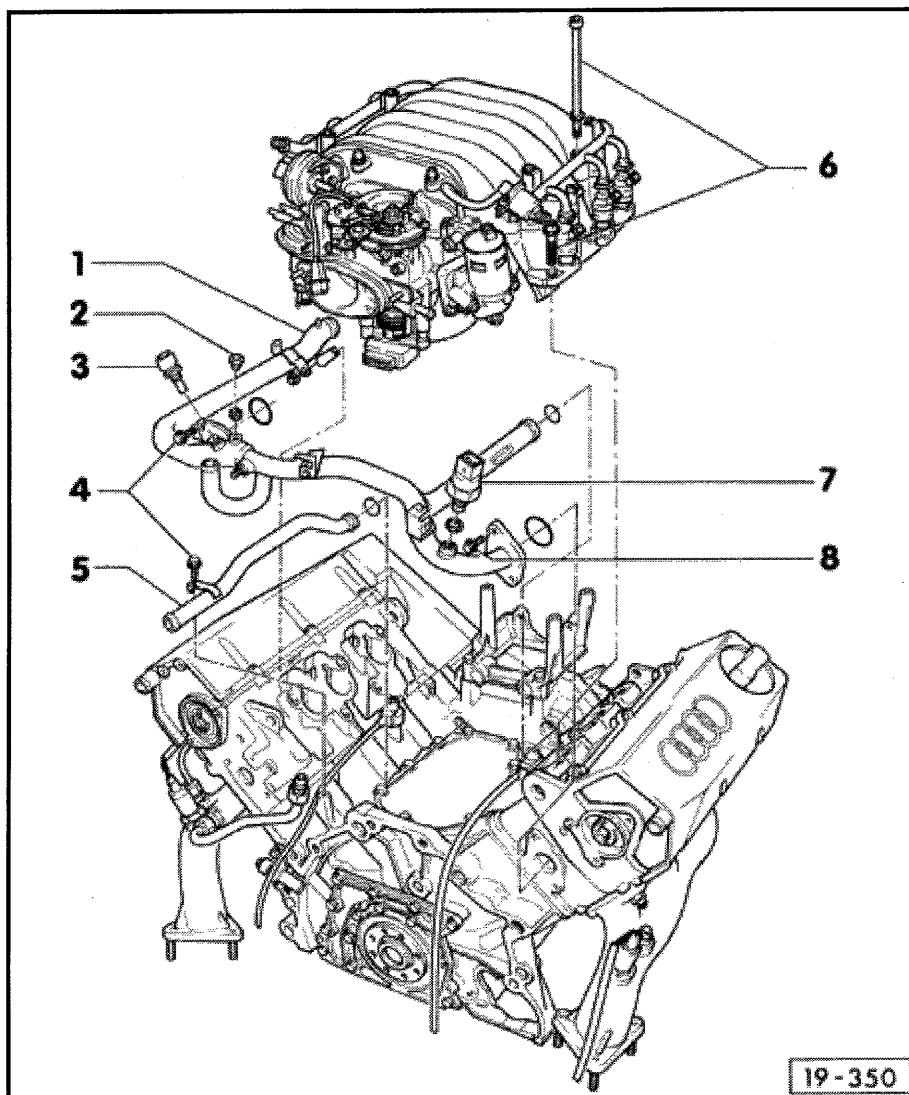

7 - Electronic Engine Coolant Temperature (ECT) thermal switch -F76-

- ♦ Checking => Repair Manual, Electrical Equipment
- ♦ Newer electronic version with 3 terminals replaces 4-terminal version; no change to