

Replacing the remote control key battery

- ▶ Pry the cover ② off of the key ① using a coin ⇒ *fig. 17*.
- ▶ Insert the new battery with the “+” facing up.
- ▶ Press the cover back onto the key until it clicks into place.



For the sake of the environment

Discharged batteries must be disposed of using methods that will not harm the environment. Do not dispose of them in household trash.



Tips

The replacement battery must meet the same specifications as the original battery in the remote control key.

Synchronizing the remote control key

The remote control key must be synchronized if the vehicle does not lock/unlock with the remote control.

- ▶ Press the remote control key button .
- ▶ Insert the key in the driver's door lock within 30 seconds ⇒ *page 36*.
- ▶ Press the button or button.

Unlocking/locking with remote control



Fig. 18 Remote control key or convenience key: button programming

- ▶ To unlock the vehicle, press the button ① ⇒ *fig. 18*.
- ▶ To lock the vehicle, press the button ② ⇒ **once**.
- ▶ To unlock the luggage compartment lid, press the button ③ briefly.

- ▶ To open* the luggage compartment lid, press and hold the button ③ for at least one second.
- ▶ To trigger the alarm, press the **PANIC** button ④. The vehicle horn and emergency flashers are activated.
- ▶ To turn off the alarm, press the **PANIC** button ④ again.

If you unlock the vehicle and do not open any of the doors, the hood, or the luggage compartment lid within 45 seconds, the vehicle automatically locks again. This feature prevents the vehicle from being accidentally left unlocked over a long period of time. This does not apply if you press and hold the button ③ for at least one second.

You can select in the Infotainment system if the entire vehicle or only the driver's door should unlock when unlocking the vehicle ⇒ *page 35*.



WARNING

Read and following all warnings ⇒ *in Description on page 31*.



Tips

- Only use the remote control key when you are within view of the vehicle.
- The vehicle can only be locked when the selector lever is in the P position.
- Do not use the remote control when you are inside the vehicle. Otherwise, you could unintentionally lock the vehicle. If you then tried to start the engine or open a door, the alarm would be triggered. If this happens, press the unlock button.
- Only use the panic function in an emergency.