


## Dust and Pollen Filter, Replacing

### Note:


- \* *The filter unit has an activated charcoal insert with integrated odor filter.*
- \* *Check fresh air intake and clean plenum chamber after replacing dust and pollen filter.*
- \* *Clean dust and pollen filter area in A/C (heater) duct before installing a new filter.*
- \* *On vehicles with drivers training equipment, you must remove the drivers training pedals if necessary (depending on version, there are service separation points on the training pedals for drivers training equipment )*

### Removing

- Remove instrument panel trim below glove compartment: ⇒ Body Interior - Repair Group 70
- Cover passenger-side floor mat in area under air conditioning unit duct for dust and pollen filter with paper.
- Remove bolts - **A** - .

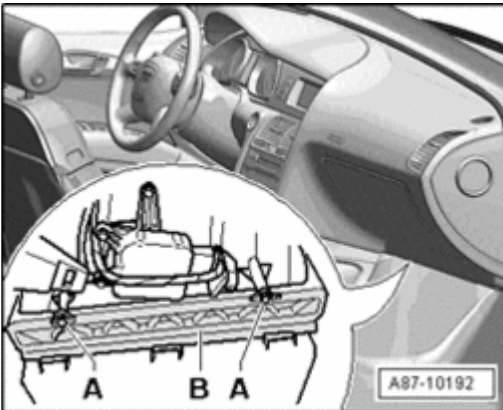

- Remove cover - **B** - .

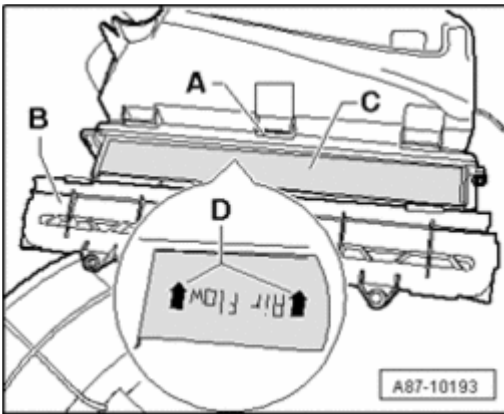

- Remove filter - **C** - from climate control installation duct - **A** - .
- Clean dust and pollen filter installation duct - **C** - in climate control - **A** - (e.g. with a standard vacuum) of leaves, dust and other contaminants.

### Installing

- Insert dust and pollen filter - **C** - in climate control duct, observing the flow-through direction (arrows on filter - **D** - point to evaporator).
- Check seal on cover - **B** - for damage.
- Install cover - **B** - , ensure it is seated correctly in mount.
- Install the rest of the parts removed in reverse order of removal.