


Fuses

Relay and fuse carrier instrument panel, center

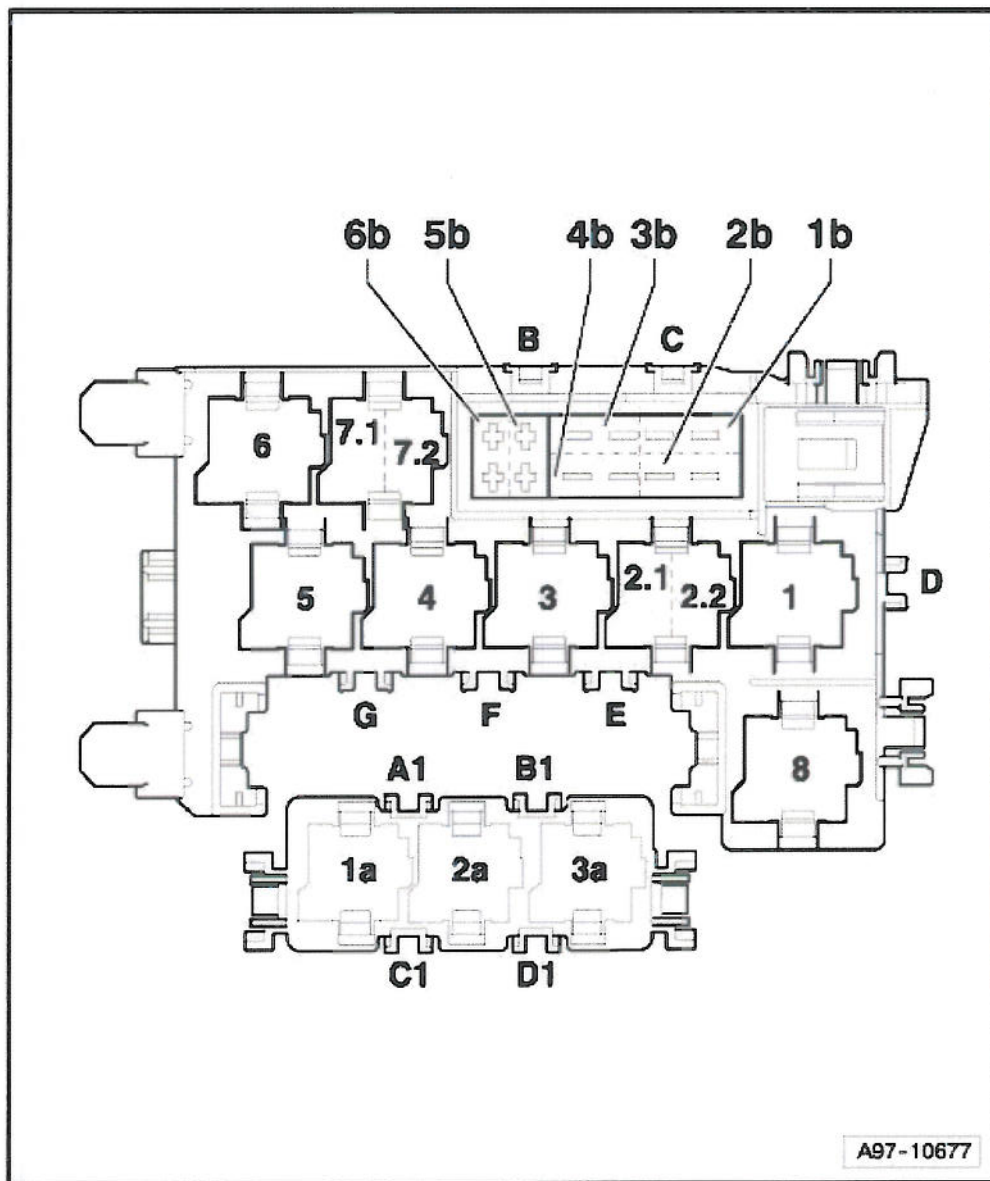

No.	Designation in Wiring Diagram	Nominal Value	Function/Component	Terminal
B	Not used			
C	Trailer Circuit Breaker -S87-	30 A	- Towing Recognition Control Module -J345- (only USA) Brake Booster (only USA)	30
D	Driver's Power Seat Adjustment Circuit Breaker 1 -S44-	30 A	- Memory Seat/Steering Column Adjustment Control Module -J136- Passenger Memory Seat Control Module -J521-	30
E	Not used			
F	Not used			
G	Not used			
1b	Fresh Air Blower Fuse 1 -S97-	40 A	- Fresh Air Blower -V2-	30
2b	ABS Control Module Fuse 1 -S123-	40 A	- ABS Control Module -J104-	30
3b	Fresh Air Blower Fuse 2 -S98-	40 A	- Rear fresh air blower -V80-	30
4b	Heated Rear Window Fuse -S41-	40 A	- Heated Rear Window -Z1-	30
5b	Rear Window Wiper Fuse -S30-	15 A	- Rear Window Wiper Motor -V12- 1)	75
6b	Fuse -S51-	5 A	- Left Washer Nozzle Heater -Z20- 1) Right Washer Nozzle Heater -Z21- 1)	75
A1	Not used			
B1	Not used			
C1	Not used			
D1	Not used			

Note:

- 1) from June 2007