




TOOLS NEEDED: Simple hand tools, depending on if you need to remove lights.

READ FIRST: This install guide will work with H8, H9, H11 bulb types. Most H8, H9, H11 kits are relatively easy to install. Usually removal of the headlight isn't necessary. If removal of the headlight assembly is necessary please refer to your car's owners manual for instructions. Note: We are using a 2008 Toyota Scion TC for our install. Depending on vehicle, removal of your headlight may differ.

DIFFICULTY: Easy     Professional Install

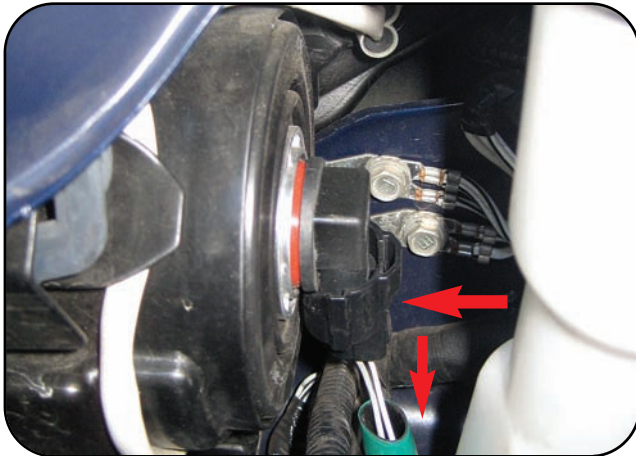

Open hood. Looking down from above into the engine bay, locate the low beam bulb. Remove retaining clip on low beam by simultaneously pushing and pulling the connector downward from the bulb.

1



Once the bulb connector is unplugged, twist OEM bulb counter clockwise to unlock the bulb from headlight housing. Once the bulb is unlocked remove gently from housing.


2





Once bulb is removed, locate your OEM bulb connector.

3

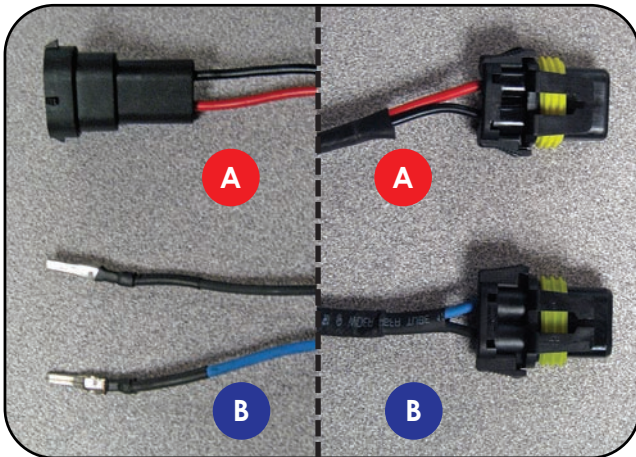


Please NOTE: Our HID kits will come with 1 of these 2 connectors (A) or (B), as shown on photo to the left. Also, note that regardless of which connector you get from us, the male 9006 end of the connector will be the same on both. See right side of the photo.

4


Tech Note:

- Positive wires are generally a lighter color such as red, blue, yellow etc.
- Ground wires are generally a darker color like black, brown.

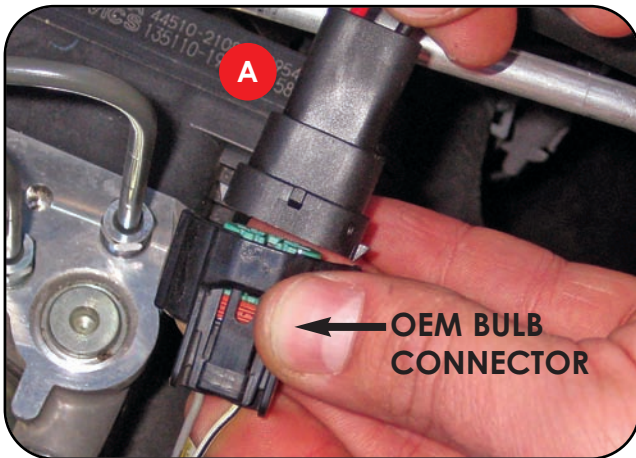

If you have the connector (A) plug it into your OEM bulb connector as shown on the photo.

5

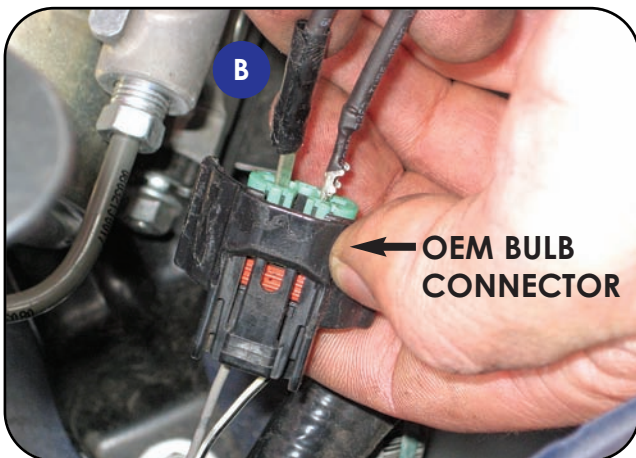

If you have the connector (B) push adapter pins into OEM bulb connector as shown on the photo.

6



With your bulb connector now connected to the adapter, plug the 9006 end into the ballast.

7



Remove the HID bulb from the protective plastic casing and screw cap. Do not touch the bulb with your bare hands. If you do, be sure to clean the bulb with rubbing alcohol prior to installation. Then Connect corresponding AMP connectors from the ballast to bulb.

8



Mount ballast with the double sided tape provided to a clean flat surface in the engine bay. Twist the HID bulb clockwise to secure it in headlight housing.

9



Slide the rubber grommet up to the bulb plug which keeps the bulb protected from the elements.

10